



## Washing Machine

User Manual



BFLB9010W

2820532603/ EN/ / 25.11.2025 20:26



## Please read this user manual first!

---

Dear Customer,

Thank you for choosing Beko product.






We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. Thus, you protect yourself and your product against possible dangers.

Keep the user manual. If you hand over the product to someone else, provide the user manual as well. Warranty terms, usage and troubleshooting methods of your product are in user manual.

### Symbols and Definitions

The following symbols are used in the user manual:

	Danger that could result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
	Recyclable materials.
	Hot surface warning.
<b>WARNING</b>	Danger that may result in property damage to the product or its environment.

## Table of Contents

<b>1 Safety Instructions</b> .....	<b>4</b>	6.6 Temperature Selection .....	26
1.1 Intended Use.....	4	6.7 Spin Speed Selection.....	26
1.2 Safety of Children, Vulnerable Persons and Pets .....	4	6.8 Auxiliary Function Selection.....	27
1.3 Electrical Safety.....	5	6.8.1 Auxiliary Functions.....	27
1.4 Handling Safety .....	6	6.8.2 Functions/Programmes Selec- ted by Pressing the Function Buttons for 3 Seconds .....	28
1.5 Installation Safety.....	6	6.9 End Time .....	28
1.6 Operational Safety.....	7	6.10 Starting the Program .....	29
1.7 Maintenance and Cleaning Safety	9	6.11 Loading Door Lock.....	30
<b>2 Important Instructions for Environ- ment</b> .....	<b>10</b>	6.12 Changing Selections After Pro- gram Starts.....	30
2.1 Compliance with WEEE Regula- tions and Waste Disposal .....	10	6.13 Cancelling the Programme .....	31
2.2 Package Information.....	10	6.14 End of Programme.....	31
<b>3 Technical Specifications</b> .....	<b>11</b>	<b>7 Maintenance and Cleaning</b> .....	<b>31</b>
<b>4 Installation</b> .....	<b>12</b>	7.1 Cleaning the Detergent Drawer .....	31
4.1 Unpacking and Transporting the Product.....	12	7.2 Cleaning the Loading Door and the Drum.....	32
4.2 Appropriate Installation Location.	12	7.3 Cleaning the Body and Control Panel.....	32
4.3 Installation of Bottom Panel Cov- ers.....	13	7.4 Cleaning the Water Intake Filters..	32
4.4 Removing Transportation Safety Bolts .....	13	7.5 Draining Remaining Water and Cleaning the Pump Filter .....	32
4.5 Connecting to Water Supply .....	13	<b>8 Troubleshooting</b> .....	<b>33</b>
4.6 Connecting the Drain Hose to the Drain .....	14		
4.7 Adjusting the Feet .....	14		
4.8 Electrical Connection .....	15		
4.9 Start Up .....	15		
<b>5 Preliminary Preparation</b> .....	<b>15</b>		
5.1 Sorting the Laundry .....	15		
5.2 Preparing Laundry for Washing....	15		
5.3 Tips for Energy and Water Saving	16		
5.4 Loading the Laundry.....	16		
5.5 Correct Load Capacity .....	16		
5.6 Using Detergent and Softener .....	16		
5.7 Tips for Efficient Washing .....	18		
5.8 Displayed Programme Duration ...	19		
<b>6 Operating the Product</b> .....	<b>19</b>		
6.1 Control Panel .....	20		
6.2 Symbols on the Display.....	21		
6.3 Programme Table.....	22		
6.4 Programme Selection .....	23		
6.5 Programmes .....	24		



## 1 Safety Instructions

---

This section contains safety instructions to help prevent personal injury or property damage. Our company cannot be held responsible for any damages that may occur if these instructions are not followed.

- Always have installation and repairs done by an authorized service.
- Use only original spare parts and accessories.
- Do not repair or replace any part of the product unless expressly stated in the user manual.
- Do not make technical changes to the product.



### 1.1 Intended Use

- This product is designed for household use. It is not intended for commercial use. Do not use the product for any other purpose.
- Use only for washing and rinsing textiles with the appropriate marking.
- This product is designed for indoor use, such as in homes and similar locations. For example;
  - Staff kitchens of stores, offices and other work environments,

- Farmhouses,
- By customers of hotels, motels and other accommodation facilities,
- Bed and breakfast establishments, hostel-like environments,
- Common areas of apartment blocks or laundries.



### 1.2 Safety of Children, Vulnerable Persons and Pets

- This product may be used by children aged 8 years and older and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children under the age of 3 should be kept away unless continuously supervised.
- Electrical products are dangerous for children and pets. Children or pets should not play with, climb on top or inside the product. Check inside the product before use.

- Use child lock to prevent children from interfering with the product.
- Do not forget to close the loading door when leaving the room where the product is located. Children and pets may get locked inside and drown.
- Children should not perform cleaning and user maintenance works without an adult's supervision.
- Keep the packaging materials away from children. Risk of injury and suffocation.
- Keep all detergents and additives used for the product out of children's reach.
- Cut the power cable and break and deactivate the locking mechanism of the loading door before disposing of the product for children's safety.

### **1.3 Electrical Safety**

- Product should be unplugged during installation, maintenance, cleaning and repair procedures. Unplug the product or turn off the fuse.
- Damaged power cables should be replaced by the authorised service in order to prevent possible danger.
- Do not tuck the power cord under the product or to the rear of the product. Do not put heavy items on the power cord. Do not bend, crush, or expose the power cable to heat sources.
- Only use the original cable. Do not use cut or damaged cables.
- Do not use an extension cord, multi-plug or adaptor to operate your product.
- Extension cords, multi-socket outlets, adapters or portable power supplies can overheat and cause a fire. Make sure not to place power sockets and portable power supplies near or behind the product.
- The plug shall be easily accessible. If this is not possible, a mechanism that meets the electrical legislation and that disconnects all terminals from the mains (fuse, switch, main switch, etc.) shall be available on the electrical installation.
- Do not touch the plug with wet hands.
- When unplugging the product, do not hold the power cord, but the plug.
- Make sure the plug is not wet, dirty or dusty.
- Never connect your product to electricity saving devices. Such systems are harmful to the product.

## 1.4 Handling Safety

- Unplug the product before moving, remove the water outlet and water main connections. Drain any water left inside the product.
- This product is heavy, do not handle it by yourself. It may cause injuries if your product falls on you. Do not hit and drop the product while carrying.
- Do not hold parts such as the laundry loading door to lift and move the product. The upper tray should be tightly fixed for moving.
- Carry the product in an upright position. If it cannot be carried upright, tilt it to the right side in frontal view.
- Make sure that the hoses as well as the power cable are not folded, pinched or crushed after the product is fitted into its place after installation or cleaning procedures.

## 1.5 Installation Safety

- Check the information in the manual and installation instructions to prepare the product for installation and make sure the electrical mains, clean water mains and water outlet are suitable. If not, call a qualified electrician and plumber to have them make the necessary arrangements. These operations are the responsibility of the customer.
- Prior to commencing the installation, be sure to switch off the fuse to deactivate the power supply for the line to which the product will be connected.
- This product is intended for use at altitudes not exceeding 2000 meters above sea level.
- Check the product for any damage before installing it.
- Always wear personal protective equipment (gloves, etc.) during product installation, maintenance and repair. There is a risk of injury.
- Injuries may occur if hands are put into uncovered slots. Close the holes of the transportation safety bolts with plastic plugs.
- Do not install or leave the appliance in areas exposed to environmental conditions like rain or sunlight.
- Do not install the product at locations where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It would create fire hazard since it cannot receive air from underneath.

- Place the product on a level and hard surface and balance with the adjustable feet.
- Connect the product to a grounding plug protected by a fuse suitable to the current values on the type label. Make sure the grounding is carried out by an expert electrician. As required by local and national regulations, do not use the product without proper grounding.
- Plug the product in a socket with voltage and frequency values suitable to those indicated on the type label.
- Do not plug the product into loose, broken, dirty, greasy, or water-damaged sockets.
- Use the new hose set provided with the product. Do not re-use old hose sets. Do not extend the hoses.
- Connect the water inlet hose directly to the water tap. The pressure from the tap should be minimum 0.1 MPa (1 bar) and maximum 1MPa (10 bars). 10 to 80 litres of water should be running from the tap in a minute in order for the product to function properly. If the water pressure is above 1 MPa (10 bars), a pressure-reducing valve should be fitted. The maximum allowed temperature is 25°C.
- It is recommended to attach a pressure reducing valve if you experience overflow from the detergent dispenser during water fill between 3.5 to 10 bars (0.35 to 1 MPa).
- Fit the end of the water discharge hose to the wastewater drain, the sink or the bathtub.
- Place the power cable and hoses in locations without risk of tripping.
- Do not install the product behind a door, a sliding door or at another location that will prevent the door from opening completely.
- If a dryer is to be placed on the product, fix with a suitable connection apparatus obtained from the authorised service.
- There is a risk of contact with electrical components when the upper tray is removed. Do not dismantle the upper tray of the product.
- Keep the appliance at least 1 cm from furniture.



## **1.6 Operational Safety**

- When you are using the product, use only detergents, softeners, and additives suitable for washing machines.

- Do not use chemical solvents on the product. These materials contain an explosion risk.
- Do not operate defective or damaged products. Unplug the product (or turn off the fuse it is connected to), turn off the water tap and call an authorised service.
- Do not place sources of ignition (burning candle, cigarettes, etc.) or sources of heat (irons, cooktops, ovens, etc.) on top of or near the product. Do not put inflammable/explosive materials near the product.
- Do not stand or climb on the product.
- Unplug the product and turn off the tap if you will not be using the product for long periods.
- Avoid opening the detergent drawer while the product is running to prevent splashes. Contact of the detergent with your skin and eyes is dangerous.
- Make sure pets do not climb inside the product. Check inside the product before use.
- Do not force open the locked loading door. The door will open once the washing is completed. If the door does not open, use the solutions for “loading door does not open” error in the Troubleshooting section.
- Do not wash items contaminated with gasoline, kerosene, benzene, reducers, alcohol or other inflammable or explosive materials and industrial chemicals.
- Do not directly use dry cleaning detergent and do not wash, rinse or spin laundry contaminated with dry cleaning detergent.
- Do not place your hands into the rotating drum. Wait until the drum no longer rotates.
- If washing laundry at high temperatures, the discharged washing water would burn your skin if in contact with your skin, for ex. when the draining hose is connected to the tap. Do not touch the discharge water.
- Take the following precautions to prevent formation of biofilm and malodours:
  - Make sure the room where the product is placed is well ventilated.
  - Wipe the door gasket and loading door glass with a dry and clean cloth at the end of the programme.

- The glass of the loading door will heat up when washing at high temperatures. To avoid burns, do not touch the loading door glass and keep children away from the product during operation.
- Before disposing of old and inoperable products:
  1. Unplug the power plug and remove it from the socket.
  2. Cut the power cable and disconnect it with the plug from the product.
  3. Break the locking mechanism of the loading door to render it inoperable.
  4. Do not allow children to play with the discarded product.
- Use a clean, dry cloth to wipe foreign material or dust from the plug ends. When cleaning the plug, do not use a wet or damp cloth. Otherwise, there is a risk of fire or electric shock.
- Do not wash the product with pressure washers, by spraying vapour, water or pouring water. There is a risk of electrocution.
- Do not use sharp or abrasive tools to clean the product. Do not use household cleaners, soap, detergent, gas, gasoline, thinner, alcohol, varnish, etc. while cleaning.
- Cleaning agents containing solvents (e.g. cleaning solvent) might reek poisonous fumes. Do not use cleaning products containing solvents.
- There may be detergent residues in the detergent drawer when you open it for cleaning.
- Do not dismantle the filter of the discharge pump while the product is running.
- The temperature in the product may rise up to 90°C. Clean the filter after the water in the product cools down in order to avoid risk of getting burnt.



## **1.7 Maintenance and Cleaning Safety**

- Before cleaning or servicing the product, unplug it or cut the power at the fuse.
- If you need to move the product for cleaning, do not pull on the loading door. The door can break and cause injury!
- Do not put hands, feet and metal objects under or behind your product. This can cause jams, and any sharp edge can cause personal injury.

## 2 Important Instructions for Environment

---

### 2.1 Compliance with WEEE Regulations and Waste Disposal

This appliance does not contain the dangerous and prohibited materials specified in the "Regulation on The Control of Waste Electrical and Electronic Equipment" published by Ministry of Environment and Urbanisation of Republic of Turkey. Complies with WEEE Regulation.



This product was manufactured from recyclable and reusable high quality parts and materials. Therefore, do not dispose of this product with other domestic wastes at the end of its life cycle. Take it to a collection point for electrical and electronic equipment. You can ask your local administration about these collection points. You can help protect the environment and natural resources by delivering the used products for recycling. Cut the power cable and break and deactivate the locking mechanism of the loading door before disposing of the product for children's safety.

---


 
 

 





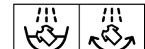
 


































### 2.2 Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

### 3 Technical Specifications

Supplier's name or commercial brand	Beko
Model name	BFLB9010W
	457100019600
Nominal Capacity (kg)	9
Maximum spin speed (cycle/min)	1400
Built-In	No
Height (cm)	84,5
Width (cm)	60
Depth (cm)	58
Single Water inlet / Double Water inlet	+ / -
 
#### Symbols Table

											
Prewash	Fast	Fast+	Extra Rinse	Extra Water	Anti Crease	Pet Hair Removal	Steam	Night Mode	Soaking	Rinse Hold	
											
AutoDose	Liquid Detergent Selection	Softener Selection	Rinse	Spin+Drain	Drain	Temperature	Spin	No Spin	Tap Water (Cold)	No Water	Time Delay
											
Door Lock	Child Lock	On/Off	Start / Pause	Soil Level	Add Garment	Downloaded Program	Wash	Ok (End)	Cancel	AntiCrease+	Drying
											
Steeping	Extra Dry	Cupboard Dry	Iron Dry	Timed Drying	Clean & Wear	Intensive	Water Mode		Water Saving	Temperature	FreshCare

## 4 Installation



Please read the "Safety Instructions" section first!



Your product automatically detects the amount of laundry placed inside when selecting a programme.

While installing the product, before the first use, calibration should be done to ensure that the laundry amount is detected in the most accurate way.

To do this, select the Drum Cleaning\* programme and cancel the spin function. Start the programme without laundry. Wait for the programme to finish, which will take about 15 minutes.

\*The programme name may vary depending on the model. For the appropriate programme selection, review the programme descriptions section.

- Preparation of the location and electrical, tap water and wastewater installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched, or crushed while pushing the product into its place after installation or cleaning procedures.
- Prior to installation, visually check if the product has any defects on it. Do not have the product installed if it is damaged. Damaged products cause risks for your safety.

### 4.1 Unpacking and Transporting the Product

#### Unpacking the Product

- Remove the cardboard box or Styrofoam packaging.
- To remove the cardboard or Styrofoam packaging underneath the product, lift the product carefully. If this is not possible, remove it by tilting it slightly to the side or by laying it on its side without damaging the product.
- Open the door and remove the inlet hose and any other accessories inside drum.

- Detach the power cable and drain hose from their fixed positions.
- Remove the transportation safety bolts. (see "Removing the Transportation Safety Bolts")

#### Transporting the Product



Read the "Transportation Safety" section first!

- Ensure the door and detergent drawer are closed.
- Install the transportation safety bolts carefully without damaging the product's drum. (see "Removing the Transportation Safety Bolts")
- Pack the product with protective packaging to prevent damage during transport.

### 4.2 Appropriate Installation Location

- Place the product on a hard, rigid and level floor. Do not place the product on surfaces such as long-pile carpets or non-slip carpets, or on excessively springy flooring such as acoustic floor coverings. Improper surfaces may cause noise and vibration problems.
- When the washing machine and the dryer are placed on top of each other, their total weight -when full- is approximately 180 kilograms. Place the product on a solid and level surface with sufficient load-carrying capacity.
- Do not place the product on the power cord.
- Do not install the product in places where the temperature drops below 0°C. This may cause damage to your product due to freezing.
- Leave a minimum space of 1 cm between the product and the furniture.
- When installing the appliance on a stepped surface, keep it away from edges.
- Do not place the product on any platform.
- Do not place or use heat sources such as cooktops, irons, ovens, heaters, etc. on the product.


### 4.3 Installation of Bottom Panel Covers



With some models, the base parts of the products are completely closed. These models do not have cap or covers.


- Cap and Covers are optional. If present, remove the packaging foam and then install the cap and covers.

#### Cover A

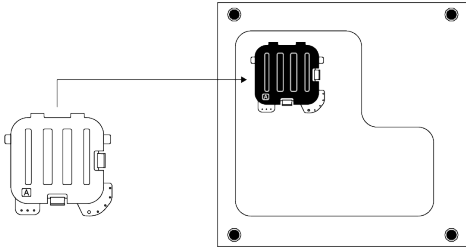


Tilt the machine back slightly. Place the tabs of Cover A against the bottom panel. Rotate the cover to complete the installation.

#### Cover B

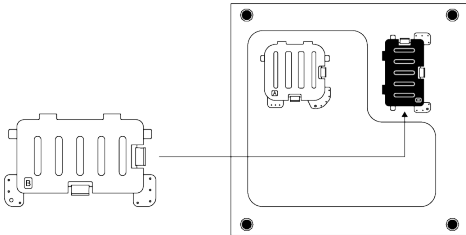

Place the tabs of Cover B against the bottom panel. Rotate the cover to complete the installation.


#### Cap

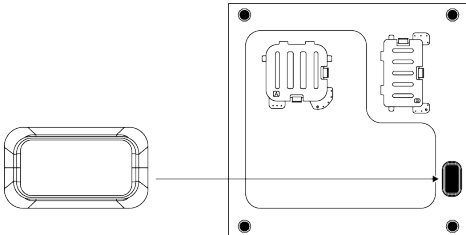

Install the cap by pushing it with your finger.

### 4.4 Removing Transportation Safety Bolts

 1. Loosen all transportation safety bolts with an appropriate wrench until they turn freely.
2. Bend the inner part by pressing it at the grip areas and pull the part out.
3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel.



#### NOTICE

Remove the transportation safety bolts before operating the product. Otherwise, the product will get damaged.



#### NOTICE

Keep the transportation safety bolts in a safe place to reuse when the product needs to be moved again in the future. Install the transportation safety bolts in reverse order of the disassembly procedure. Never move the product without the transportation safety bolts properly fixed in place.


### 4.5 Connecting to Water Supply



#### NOTICE

Models with a single water inlet should not be connected to the hot water tap. Laundry may be damaged or the product may go into protection mode and not work. Do not use old or used water inlet hoses on your new product. This may cause water leakage in your product and stains on your laundry.

1. Tighten all hose nuts by hand. Make sure to tighten all hose connections completely. Never use a tool when tightening nuts.
2. After completing hose connection, open the taps all the way and check if there is any water leakage from the connection points. In case of a leakage, turn off the tap and unscrew the nut. Check the seal and tighten the nut carefully again. To prevent possible water leaks and damages that may occur, keep the taps closed when the product is not in use.

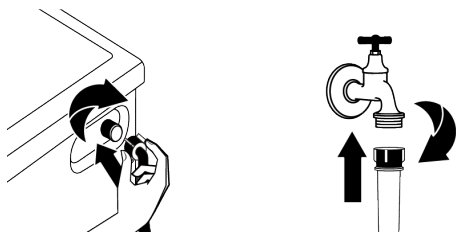


#### 4.6 Connecting the Drain Hose to the Drain

1. Attach the end of the drain hose directly to waste water drain, washbasin or bathtub.



Your house will be flooded if the water draining hose is dislocated during water draining. There is also a risk of burning due to the high washing temperatures. In order to prevent such situations and make sure that the product performs water intake and drain processes without any problem, fix the drain hose securely.

2. Connect the drain hose to a minimum height of 40 cm and a maximum height of 100 cm.
3. Installing the water draining hose at ground level or close to the floor (40 cm below) and then raising it makes water discharge difficult and the laundry may come out extremely wet. Thus, follow the heights provided in the figure.

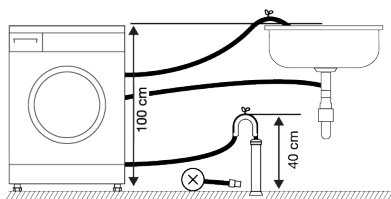

4. To prevent the waste water to go back into the product again and to ensure easy drainage, do not immerse the end of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.
5. The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the product. Otherwise, water discharge issues may emerge.
6. If the length of the hose is too short, use it by adding an original extension hose. The overall length of the hose shall not be longer than 3.2 m. To prevent water leaks, always secure the connection between the extension hose and the draining hose of the product with a suitable clamp so that it does not come off and cause leaks.


#### 4.7 Adjusting the Feet



##### NOTICE

In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Adjust the feet to ensure balance. Otherwise, the product may move from its place and cause bumping, noise and vibration problems.

1. To loosen the nuts on the feet, rotate the nuts clockwise using the hand tool.
2. Adjust the feet until the product stands level and stable. To lower the feet, rotate them counterclockwise. To raise the feet, rotate them clockwise.
3. To retighten the nuts, rotate them counterclockwise using the hand tool.

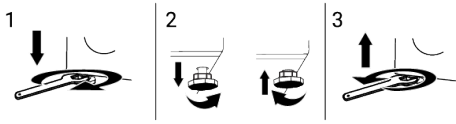

#### 4.8 Electrical Connection

Connect the product to a grounded outlet protected by a 16-amp fuse. Our company shall not be responsible for the damages that shall be incurred due to using the product without grounding according to local regulations.

- Connection must comply with national regulations.
- The electrical connection cable infrastructure of the product must be adequate and suitable for product requirements. It is recommended to use a residual current device.
- Power cable plug must be within easy reach after installation.
- If the current supply to the fuse or breaker in the house is less than 16 amp, have a qualified electrician install a 16-amp supply.
- Your mains voltage must comply with the voltage specified in the “technical specifications” section.


- Do not make connections via extension cables or multi-plugs. Overheating and burning may occur due to the connecting cable.



Damaged power cables should be replaced by the authorised service in order to prevent possible danger.

#### 4.9 Start Up

Before starting to use the product make sure that the preparations described in section “Environmental instructions” and “Installation”. To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If this programme is not available in your product, apply the method which is described in section “Cleaning the loading door and the drum”.

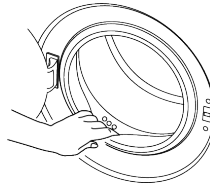

Some water has remained in the product due to the quality control processes in the production. It is not harmful for the product.

### 5 Preliminary Preparation



Please read the “Safety Instructions” section first!

#### 5.1 Sorting the Laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always observe the instructions given on the garment care labels.

#### 5.2 Preparing Laundry for Washing

- Laundry items with metal attachments such as underwiring, belt buckles or metal buttons will damage the product.

Remove the metal pieces or wash such clothes by putting them in a laundry bag or pillow case.

- Take out all items in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant’s socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove all curtain accessories such as rings, hooks, and clips to prevent damage to the curtains.

- Fasten zippers, sew loose buttons on securely, and mend rips and tears.
- Wash “Machine washable” or “Hand washable” labelled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing.
- Wash trousers and delicate laundry turned inside out.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the product. Such dusts and powders on the laundry may build up on the inner parts of the product in time and can cause damage.

### 5.3 Tips for Energy and Water Saving

The following information will help you use the product in an ecological and energy/water-saving way.

- Operate the at the maximum load capacity for the programme selected, but do not overload it. See "Programme table".
- Follow the temperature recommendations on the detergent packaging.
- Wash your lightly soiled laundry at low temperatures.
- Choose quick programmes for lightly soiled and small amounts of laundry.
- Do not use prewash or high temperatures for laundry that is not heavily dirty or stained.
- If you are going to dry your laundry in the dryer, select the highest spin speed recommended for your washing programme.
- Do not use more detergent than recommended on the detergent packaging.

### 5.4 Loading the Laundry

1. Open the loading door.
2. Put the laundry items into the product in a loose manner.

3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door lock will open once the programme is completed. Then you can open the loading door. If the door does not open, apply the solutions provided for “Loading door cannot be opened” error in the Troubleshooting section.

### 5.5 Correct Load Capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the desired washing programme. The product automatically adjusts the water amount according to the weight of the laundry put inside it.




Follow the instructions in “Programme table”. When the product is overloaded product’s washing performance will drop. Moreover, noise and vibration problems may occur.

### 5.6 Using Detergent and Softener



#### WARNING

Read the manufacturer's instructions on the packaging when using detergents, softeners, starch, bleach and decolourants, anti-lime scale and follow the dosage information provided. Use a measuring cup, if any.

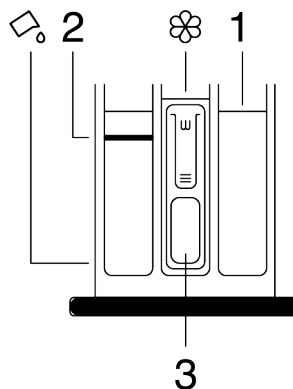

The detergent drawer comprises of three compartments:

- (1) for prewash - if your model has prewash function available,
  - (2) for main washing,
  - (3) for softener,
- (⊗) a syphon piece in the softener compartment,  
(☞) there is a liquid detergent flap for liquid detergent use in the main washing compartment.

### Detergent, Softener and Other Cleaning Agents

- Add detergent and softener before starting the washing programme.
- Do not leave the detergent drawer open when the washing programme is on.
- If you are using a programme without prewashing, do not put detergent in the prewash compartment (compartment 1).
- If your model has prewash function available - If you are using a program with prewash, start the product after adding powder detergent to the prewash and main wash compartments (compartments 1 and 2).
- If your model has prewash function available - Do not select a programme with pre-washing if you are using a detergent pod or dispensing ball. Place the detergent pod or the dispensing ball directly among the laundry in the product.
- If you are using a liquid detergent, follow the directions under "Liquid detergent use" and hinge down the liquid detergent flap.

### Choosing the Detergent type

Detergent type to be used depends on the washing programme, fabric type and colour.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) intended solely for delicate clothes and on suggested programmes.

- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens on suggested programme with special detergent made specifically for woollens.
- Please review the programme descriptions part for suggested programme for different textiles.
- All recommendations about detergents are valid for selectable temperature range of programmes.



Only detergents, softeners and additives suitable for washing machines should be used.  
Do not use soap powder.

### Adjusting the Detergent Amount

The amount of detergent depends on the amount of laundry, how soiled it is and the water hardness.

- Do not exceed the recommended dosage values on the detergent packaging in order to eliminate excessive foam and poor rinsing problems, to save money and protect the environment.
- Use less detergent for lightly soiled or small amount of laundry.

### Using Softeners

Put the softener in the softener compartment of the detergent drawer.

- Do not exceed the (>max<) level sign in the softener compartment.
- If the softener is thick, dilute with water before placing in the softener compartment.



### WARNING


Do not use liquid detergents or other materials with cleaning properties unless they are intended for use in washing machines for softening the laundry.

### Using Liquid Detergents

#### If the Product Has a Liquid Detergent Flap

- Hinge down the liquid detergent flap when you want to use liquid detergents. The flap will serve as a barrier for liquid detergent.

- Clean with water at its place or by removing from its place when it is necessary. Do not forget to place the flap in the main washing compartment (compartment 2) after cleaning.
- The flap should be up if you will use a powder detergent.

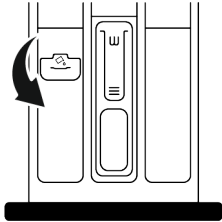

### Use of Gel and Tablet Detergents

- If the detergent is fluid and there is no liquid detergent compartment in your product, place the gel detergent in the main washing detergent compartment in first water intake. If your product has a liquid detergent compartment, fill the compartment with detergent before starting the programme.
- If the gel detergent is not fluid or is in a capsule liquid tablet, place directly inside the drum before washing.
- Put the tablet detergent in the main washing compartment (compartment 2) or directly inside the drum before washing.

### Using Starch

- Put in the liquid starch, powder starch or fabric dye in the softener compartment.
- Do not use softener and starch in the same washing programme simultaneously.

- Wipe the inside of the product with a damp and clean cloth after using starch.

### Using Anti-Limescale

- When necessary, only use anti-limescale produced for washing machines.

### Using Bleach and Decolourants

- Select a programme with pre-washing and add bleach at the start of pre-washing. Do not put detergent in the pre-wash compartment. As an alternative application, select a programme with additional rinsing and add the bleach while the product is receiving water to the detergent compartment in the first rinsing step.
- Do not mix and use bleach and detergent together.
- As bleach may cause skin irritation use only small amounts (1/2 tea cups - approximately 50 ml and rinse the laundry well.
- Do not pour bleach directly onto the laundry.
- Do not use bleach for coloured clothes.
- Select a programme with low temperature washing while using oxygen-based decolourants.
- Oxygen-based decolourants can be used together with detergents. However, if it does not have the same viscosity as the detergent, first place the detergent in compartment no. "2" in the detergent drawer and wait for the product to rinse away the detergent during water intake. Add the decolourant to the same compartment while the product continues taking in water.

## 5.7 Tips for Efficient Washing

	Clothes			
	Light Colours and Whites	Colours	Black/Dark Colours	Delicates/Woolens/Silks
	(Recommended temperature range based on soil level: 40-90 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -30 °C)

Soiling Level	<p><b>Heavily Soiled</b> (difficult stains such as grass, coffee, fruits and blood.)</p>	<p>It may be necessary to pre-treat the stains or perform prewash.</p> <p>Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.</p>	<p>Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain decolourant should be used.</p>	<p>Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for heavily soiled clothes.</p>	<p>Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.</p>
	<p><b>Normally Soiled</b> (For example, stains caused by body on collars and cuffs)</p>	<p>Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.</p>	<p>Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Detergents which do not contain decolourant should be used.</p>	<p>Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for moderately soiled clothes.</p>	<p>Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.</p>
	<p><b>Lightly Soiled</b> (No visible stains exist.)</p>	<p>Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.</p>	<p>Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain decolourant should be used.</p>	<p>Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for lightly soiled clothes.</p>	<p>Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.</p>

## 5.8 Displayed Programme Duration

You can view the programme duration on the display of your product while selecting a programme. Depending on the amount of laundry you have loaded into your product, foaming, unbalanced load conditions, fluctuations in power supply, water pressure and programme settings, the programme duration is automatically adjusted while the programme is running.


**SPECIAL CASE:** At programme start of Cottons and Cotton Eco programmes, display shows the duration of half load. It is the most common use case. After programme starts, in 20-25 minutes actual load is detected by the product. And if the detected load is higher than half load; washing programme will be adjusted accordingly and programme duration increased automatically. You can follow this change on the display.

## 6 Operating the Product



Please read the "Safety Instructions" section first!


## 6.1 Control Panel

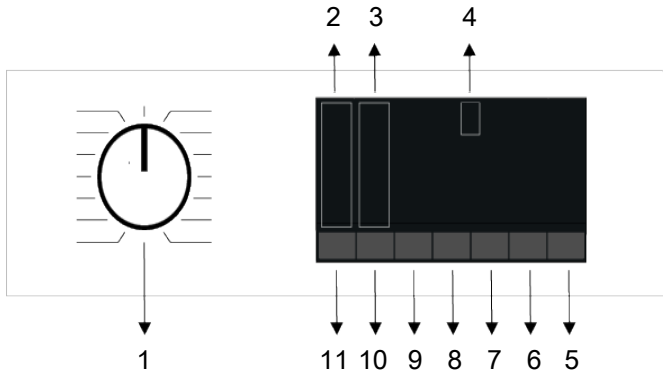

- 1 Program Selection Button
- 3 Spin Speed Indicator Lights
- 5 Start/Pause (Start 1) Button
- 7 Auxiliary Function Button 3
- 9 Auxiliary Function Button 1
- 11 Temperature Adjustment Button

- 2 Temperature Level Indicator Lights
- 4 Screen
- 6 End Time Setting (Start 2) Button
- 8 Auxiliary Function Button 2
- 10 Spin Speed Adjustment Knob

## 6.2 Symbols on the Display

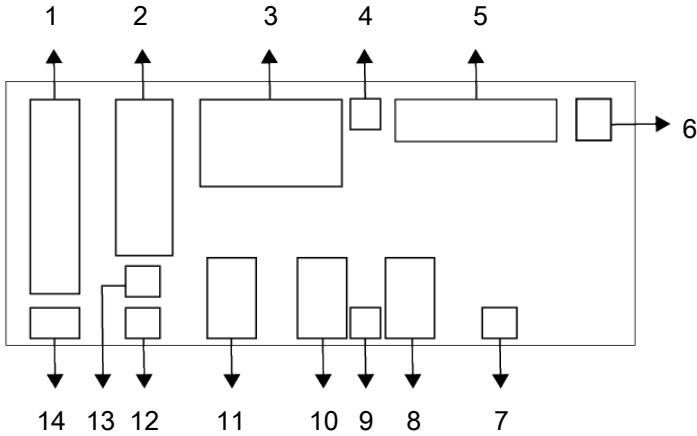

- |                                    |                                    |
|------------------------------------|------------------------------------|
| 1 Temperature Indicator            | 2 Spin Speed Indicator             |
| 3 Duration Information             | 4 Door Lock Is Engaged Symbol      |
| 5 Programme Follow-up Indicator    | 6 No Water Indicator               |
| 7 Delayed Start Enabled Indicator  | 8 Auxiliary Function Indicators 3  |
| 9 Child Lock Enabled symbol        | 10 Auxiliary Function Indicators 2 |
| 11 Auxiliary Function Indicators 1 | 12 No Spin Indicator               |
| 13 Rinse Hold Indicator            | 14 Cold Water indicator            |



The visuals used for product description in this section are schematic and may not match exactly with the features of your product.

## 6.3 Programme Table

Program						Auxiliary functions					Temperature °C
	Temperature °C	Maximum load (kg)	Water consumption (lt)	Energy consumption (kWh)	Max RPM	Fast/Intensive	Prewash	Steam	Extra Rinse	Water Saving	
Cottons	90	9,0	98,0	2,55	1400	•	•	•	•	•	Cold - 90
	60	9,0	98,0	1,52	1400	•	•	•	•	•	Cold - 90
	40	9,0	95,0	1,02	1400	•	•	•	•	•	Cold - 90
Cottons Eco	40**	9,0	92,0	0,584	1400						Cold - 40
Synthetics	60	4,0	76,0	1,08	1200	•	•	•	•	•	Cold - 60
	40	4,0	74,0	0,62	1200	•	•	•	•	•	Cold - 60
Daily/Quick/Quick 14'	90	9,0	75,0	2,19	1400	•		•	•		Cold - 90
	60	9,0	75,0	1,11	1400	•		•	•		Cold - 90
	30	9,0	75,0	0,20	1400	•		•	•		Cold - 90
Daily/Quick/Quick 14' + Fast/Intensive	30	2,0	45,0	0,10	1400	•		•	•		Cold - 90
Wool/Hand Wash	40	2,0	60,0	0,54	800				•		Cold - 40
Dark Care/Jeans	40	5,0	86,0	0,74	1200	•	•	•	*		Cold - 40
Mix	40	4,0	83,0	0,80	800	•	•	•			Cold - 40
Bedding	60	-	100,0	1,09	800			•	•		Cold - 60
Drum Clean	90	-	80,0	2,30	600			*			90
Hygiene+	90	9,0	125,0	3,00	1400			*	*		20-90
Shirts	60	4,0	70,0	1,40	800	•	•	*	•	•	Cold - 60
Steam Refresh	-	1,0	1,5	0,11	-			*			-
ColdWash	-	4,5	50,0	0,30	1400						-



### Note for test institutions:

Data required for performance tests shall be provided upon request. Requests can be e-mailed to the following address: [info.australialaundry@beko.com](mailto:info.australialaundry@beko.com)

Do not forget to provide the code, stock and serial numbers of the product to be tested in your request e-mail along with your contact information. Code, stock and serial numbers of the product is located on the type label attached to the inside of the door.

- : Selectable.
- \* : Automatically selected, cannot be cancelled.
- \*\* : Energy label programme (AS/NZS 2040)
- \*\* : Energy label programme

- : See the programme description for maximum load.



Please read Installation section of the manual before first use. The auxiliary functions in the table may vary according to the model of your product.

Water and energy consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in electric voltage.

Selection patterns for auxiliary functions can be changed by the manufacturer company. New selection patterns can be added or removed.

The spin speed of your product may vary according to the programme; this spin speed cannot exceed the max. spin speed of your product.

The amount of noise and humidity varies according to the spin speed; when the higher spin speed is selected during the spinning phase, the laundry contains less moisture but higher noise occurs at the end of the programme.



You can see the washing duration on the display of your product while selecting a programme. Depending on the amount of laundry you have loaded into your product, there may be a difference of 1-1.5 hours between the duration shown on the display and the actual duration of the wash cycle. Duration will be automatically updated soon after the washing starts.

Always select the lowest appropriate temperature. The most efficient programmes in terms of energy consumption are generally those that wash at low temperatures for a long time.

The spin speed information given at the program table indicates spin speed option shown on the control panel.

## 6.4 Programme Selection


1. According to the "Programme table", determine the programme suitable for the type, quantity and dirt level of the laundry.



Programs are limited to the highest spin speed suitable for the fabric type.

When choosing the program you will use, always take into consideration the fabric type, color, degree of soiling and allowed water temperature.

2. Select the desired program using the Program Selection button.

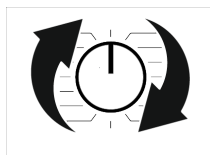

## 6.5 Programmes

### • EnergySpin

It uses your detergent more effectively with high mechanical action during washing. This way, it maintains your washing quality without the need for prolonged heating of your laundry, reducing your energy consumption.

This technology is used in programs that include symbols, bold serigraphy printing or coloring displayed on the panel.

### • Cottons Eco

Use to wash your normally soiled, durable cotton and linen laundry. Although it washes longer than all other programmes, it provides high energy and water savings. Actual water temperature may be different from the stated wash temperature. When you load the machine with less laundry (e.g. ½ capacity or less), periods in programme stages may automatically get shorter. In this case, energy and water consumption will decrease.

Normally soiled laundry may be washed with reduced amount of detergent to save energy and protect the environment.

### • Cottons

You can wash your durable cotton laundry (sheets, bedlinen, towels, bathrobes, underwear etc.) in this programme. When the quick wash function button is pressed, programme duration becomes notably shorter but effective washing performance is ensured with intense washing movements. If the quick wash function is not selected, effective washing and rinsing performance is ensured for your heavily soiled laundry.

### • Synthetics

Use this programme to wash your clothes such as t-shirts, blouses, synthetic/cotton-blend fabrics etc. The quick wash function shortens the programme duration significantly and ensures effective washing performance for lightly-soiled laundry. The quick wash function is not suitable for heavily-soiled laundry.

If your product does not have a specific curtains programme, you can use this programme. Wash your curtains at 40 °C maximum and with a spin speed up to 800 rpm.

### • Wool/Hand Wash

Use to wash your woollen/delicate laundry. Select the appropriate temperature complying with the tag of your clothes. Your laundry will be washed with a very gentle washing action in order not to damage the clothes.

### • Hygiene+

Applying a steam step at the beginning of the programme allows to soften the dirt easily.

Use this programme for your laundry (baby clothes, bed sheets, bedlinen, underwear, etc. cotton items) that requires an anti-allergic and hygienic washing at high temperature with intensive and long washing cycle. The high level of hygiene is ensured thanks to the steam application before the programme, long heating duration and additional rinsing step.

### • Bedding

Use this programme to wash your fibre duvets that bear "machine washable" tag. Check that you have loaded the duvet correctly in order not to damage the machine and the duvet. Remove the duvet cover before loading the duvet into the machine. Fold the duvet into two and load it into the machine. Load the duvet into the machine while paying attention that it will not contact the door gasket or the glass.

Besides, use this programme to wash your coats, vest, jackets etc. containing feathers with a "machine washable" label on them.



Do not load more than 1 double fibre duvet (200 x 200 cm).

Do not wash your duvets, pillows and etc. that contain cotton filling in the machine.



Do not use the washing machine to wash materials such as carpets, rugs etc. Otherwise, your machine may be damaged permanently.

### • Spin+Drain

You can use this program to remove the water on the garment/inside the product.

### • Rinse

Use when you want to rinse or starch separately.

### • Steam Refresh

Use this programme to reduce the creases and ironing times of a small amount of unspotted cotton, synthetic or mixed laundry.



This is not a washing programme. Do not add chemicals such as detergent, bleach, stain remover, etc. to the detergent drawer during this program.

### • Shirts

This programme is used to wash the shirts made from cotton, synthetic and synthetic blended fabrics altogether. It reduces wrinkles. Steam is applied at the end of the programme to help the wrinkle reducing function. The special spin profile and steam applied at the end of the programme reduce the wrinkles on your shirts. When the quick wash function is selected, the Pre-treatment algorithm is executed.

- Apply the pre-treatment chemical on your garments directly or add it together with the detergent in the powder detergent compartment. Thus, you can obtain the same performance as you obtain with normal washing in a much shorter period of time. Usage life of your shirts increases. Do not use pre-wash detergent if you are planning to use delay function of your product. Prewash detergent may pour out on your clothes and cause stains.

\*\* It is recommended to operate the cycle with no more than 6 shirts to minimize wrinkles in your shirts using this cycle. When washing more than 6 shirts, there may be differences on the wrinkle levels and humidity on shirts at the end of cycle.

### • Daily/Quick/Quick 14'

Use this programme to wash your lightly soiled or unspotted cotton clothes in a short time but not for towels or heavy cottons. The programme duration can be reduced down to 14 minutes when the quick wash function is selected. When the quick wash function is selected, maximum 2 (two) kg of laundry must be washed.

### • Dark Care/Jeans

Use this programme to protect the colour of your dark-coloured garments or jeans. It performs high performance washing with special drum movement even if the temperature is low. It is recommended to use liquid detergent or woollen shampoo for dark coloured laundry. Do not wash your delicate clothes containing wool or etc.

### • Drum Clean

Regularly clean (once every 1 to 2 months) the drum for ensuring the required hygiene. Steam is applied before the programme to soften the residues in the drum. Turn on the programme when the product is completely empty. For better results, use powder anti-limescale (drum cleaning materials) suitable for washing machines when the powder detergent function is selected. Leave the loading door half closed after the programme ends for the inside of the product to dry.



This is not a washing programme. This is a maintenance programme. Do not turn this programme on when there is something inside the product. When you attempt to operate, the product automatically senses that there is load inside, and may quit or resume the programme as per the model of your product. An effective cleaning is not achieved if the programme is resumed.


### • Mix

Use to wash your cotton and synthetic laundry items together without sorting them.

## • ColdWash

Use to wash your medium dirty and durable cotton/synthetic laundry. Thanks to the washing algorithm specially developed for the program, effective washing is ensured without exposing the laundry to high temperatures.

## 6.6 Temperature Selection

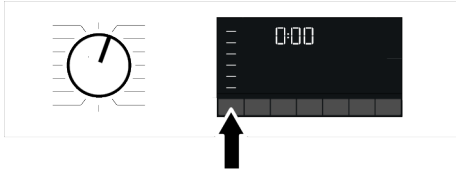

Whenever a new programme is selected, the recommended temperature for the programme appears on the temperature indicator. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current programme.

Press the Temperature Adjustment button to change the temperature. Temperature decreases gradually.




No change can be made in programmes where temperature adjustment is not allowed.

You can also change the temperature after the washing starts. This change can be made if the only washing steps allow it.





If you scroll to cold wash option and press Temperature Adjustment button again, the recommended maximum temperature for the selected programme appears on the display. Press the Temperature Adjustment button again to decrease the temperature.
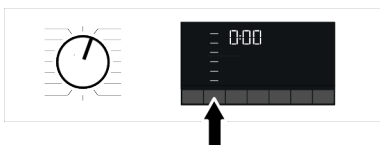
## 6.7 Spin Speed Selection



When a new program is selected, the recommended spin speed for the selected program appears in the Spin Speed indicator. It is possible that the recommended spin speed is not the highest spin speed that can be selected for the current program.

To change the spin speed, press the Spin Speed Adjustment button. The spin speed decreases in stages.

The options "Soak"  and "No Spin"  will then appear on the screen, depending on the product model.

If you are not going to empty the machine immediately after the end of the program, you can use the Soak function to keep your laundry in the final rinse water to prevent them from wrinkling in a dry environment. This function keeps your laundry in the final rinse water. If you want to spin after the rinse hold function:

- Adjust the Spin Speed setting.
- Press the Start/Pause button (Start 1), then press the End Time Set button (Start 2). The programme continues where it left off. The machine drains the water and spins the laundry.

If you want to drain the water without spinning at the end of the program, you can use the No Spin function.



No changes can be made in programs that do not allow spin speed.

If the washing steps allow it, you can change the spin speed after the wash has started. If the steps do not allow it, no changes can be made.

### Soaking


If you are not going to empty the machine immediately after the end of the program, you can leave your laundry soaking in the final rinse water to prevent them from wrinkling in a dry environment.

If you want to drain the water without spinning your laundry after this process, press the Start/Pause (Start 1) button and then the End Time Adjustment (Start 2) button.

The program will continue from where it left off and will be completed after draining the water.

If you want to spin laundry that you've left soaking in water, set the Spin speed, then press the Start/Pause (Start 1) button and then the End Time Adjustment (Start 2) button. The program will continue where it left off. The water will be drained, the laundry will be spun, and the program will end.

## 6.8 Auxiliary Function Selection

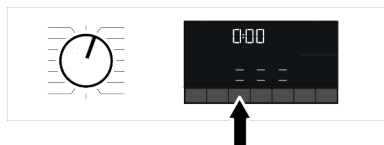

Before starting the program, select the desired auxiliary functions. When a program is selected, the icons for the selected auxiliary function symbol will light up.



When an auxiliary function button that cannot be selected with the current program is pressed, the washing machine emits a warning sound.

Some functions cannot be selected simultaneously. If a second auxiliary function that is incompatible with the first selected auxiliary function is selected before starting the machine, the first selected function will be canceled and the last selected auxiliary function will remain selected.

An auxiliary function that is not compatible with the program cannot be selected.

Some programs have auxiliary functions that must work together.

These functions cannot be disabled.

### 6.8.1 Auxiliary Functions

#### • Fast/Intensive

You can shorten or extend the programme duration with this function. Depending on the programme selection, there may be dif-

ferences in time increases and decreases. In case the FAST or INTENSIVE LED is not lit, the appropriate programme duration is shown for your normally soiled clothes/laundry.

Depending on the programme selection, the Intensive feature can be selected automatically. In this case, the Intensive LED on the panel will be lit. You can use the Intensive selection to achieve a better washing performance when washing heavily soiled laundry.

You can reduce the time for your lightly soiled laundry by pressing the Fast/Intensive button in the programmes which come with intense being selected. When you press the button once, the LED will turn off and you will reach the appropriate programme duration for your normally soiled clothes/laundry. When you press the same button a second time, the fast LED will light up, the time will decrease a little and it will show the minimum programme duration, which is suitable for your less soiled laundry. The duration of programmes may shorten by 50% when this function is selected. Thanks to optimized washing steps, high mechanical agility and optimal water consumption, high washing performance is achieved despite the shorter duration.

#### • Steam

This function helps to reduce the creases in your cotton, synthetic and mixed clothes, shorten the ironing time and remove the dirt by softening.

\* Under conditions where the steam function is applied at the end of the programme, your laundry may be warmer at the end of the washing. This is expected within the programme working conditions.



When you activate the steam function, do not use liquid detergent if there is no liquid container or liquid detergent dosing feature. There is the risk of staining of the clothes.

### • **Water Mode**

This auxiliary function key allows you to select the additional functions of Water Saving, Pre-Wash, and Extra Rinse or Extra water depending on the model of your machine. You can find detailed information about the selection in the description of the respective auxiliary function.

### • **Water Saving**

This function is selected by pressing the Water Adjustment auxiliary function button once. The Water Saving symbol lights up in selectable programs.

This function is designed for lightly soiled laundry that requires a smaller amount of detergent (See "Proper Washing Tips"). It provides an environmentally friendly wash by reducing the amount of water without compromising washing performance.

### • **Extra Rinse**

This function is selected by pressing the Water Adjustment button twice in programs where the Water Saving auxiliary function is selectable, or by pressing the Water Adjustment button once in programs where the Water Saving auxiliary function is not selectable. The Extra Rinse symbol will illuminate in selectable programs.

This function allows the machine to perform an additional rinse after the main wash. This way, you can reduce the risk of sensitive skin (baby skin, allergic skin, etc.) being affected by the small amount of detergent that may remain in the laundry.

## **6.8.2 Functions/Programmes Selected by Pressing the Function Buttons for 3 Seconds**

### • **Prewash**

This function can be selected by pressing and holding the related auxiliary function button for 3 seconds.

A Prewash is only worthwhile for heavily soiled laundry. Not using the Prewash will save energy, water, detergent and time.

### • **Child Lock**

Use Child Lock function to prevent children from tampering with the product. Thus you can avoid any changes in a running programme.



You can switch on and off the product with On / Off button when the Child Lock is active. When you switch on the product again, programme will resume from where it has stopped.

When the Child Lock is enabled, an audio warning will be given if the buttons are pressed. Audio warning will be cancelled if the buttons are pressed five times consecutively.

### **To activate the child lock:**

Press and hold the related auxiliary function button for 3 seconds. After the countdown as "3-2-1" on the display is over, Child Lock symbol appears on the display. When this warning is displayed, you can release the Auxiliary Function button 3.

### **To deactivate the child lock:**

Press and hold the related auxiliary function button for 3 seconds. After the countdown as "3-2-1" on the display is over, Child Lock symbol disappears.


## **6.9 End Time**

### **Time display**



When the end time function is selected, the time remaining until the program starts is displayed in hour format such as 1h, 2h, and the time remaining for the program to be completed after it starts is displayed in hour and minute format such as 01:30.

**i** Programme duration may vary depending on water pressure, water hardness and temperature, ambient temperature, laundry type and amount, auxiliary function selection and changes in mains voltage. After the end time function is activated, the machine goes into standby mode and some LEDs on the display are turned off. If any user input occurs, the LEDs will turn back on.

The program's end time can be set for up to 24 hours using the End Time Adjustment function. The time displayed after pressing the End Time button is the estimated end time of the program. If the End Time is set, the End Time indicator will illuminate.

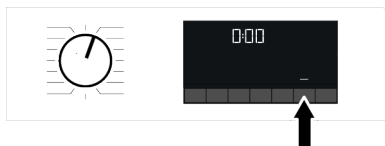

In order for the End Time function to be activated and the program to end at the end of the specified time, after the time setting, the Start/Pause (Start 1) button must be pressed and then the End Time Setting (Start 2) button must be pressed.

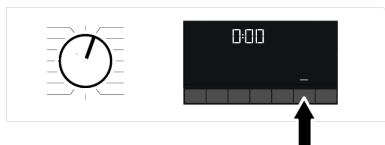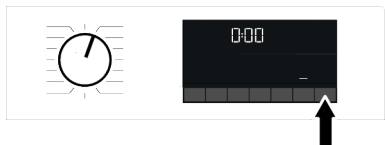

If you want to cancel the End Time function, turn the knob to the on or off position.



**i** When you activate the End Time function, do not add liquid detergent to powder detergent compartment no. 2. There is a risk of stains on the laundry.

- Open the loading door, place the laundry and add detergent etc.
- Select the washing program, temperature, spin speed and auxiliary functions if necessary.
- Press the End Time button to set the desired end time. The End Time indicator will light up.
- Press the Start/Pause button (Start 1), then press the End Time Set button (Start 2). The countdown begins.

**i** Additional laundry can be added to the machine during the End Time countdown. At the end of the countdown, the End Time indicator turns off, washing begins, and the duration of the selected program is displayed.

## 6.10 Starting the Program

- To start the program, press the Start/Pause (Start 1) button for about 1 second. The Start/Pause LED and the Door Lock LED will begin to flash. Then press the End Time Setting (Start 2) button.

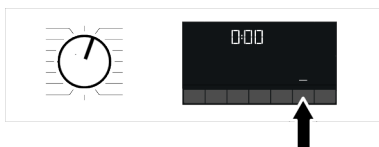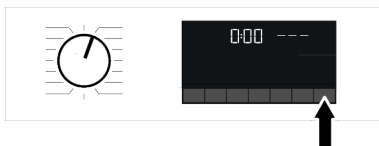

- The Start/Pause button's dim light now glows constantly, indicating that the program has started.
- The loading door is locked. After the loading door is locked, the door lock symbol appears on the screen.
- The program follow-up indicator lights on the screen show the current program step.

## 6.11 Loading Door Lock

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable.

"Door Locked" symbol appears on the display when the loading door is locked.



**Opening the loading door in case of power failure:**




In case of power failure, you can use the loading door emergency handle under the pump filter cap to open the loading door manually.




To avoid any water overflow before opening the loading door, make sure there is no water left inside the product.

1. Turn off and unplug the product.
2. Open the pump filter lid.

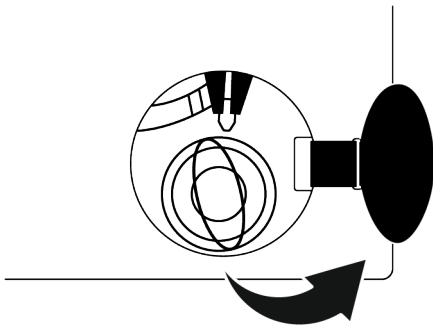


3. Pull down the loading door emergency handle with a tool and release. Then open the loading door.
4. If the loading door does not open then repeat the previous step.

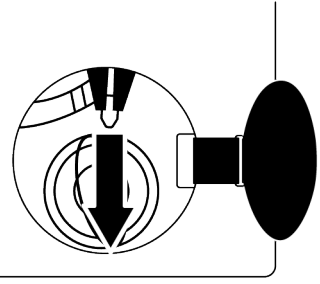

## 6.12 Changing Selections After Program Starts

**Adding laundry after the program has started:**

When you press the Start/Pause button, if the water level in the machine is appropriate, the door lock is deactivated and the door opens to allow you to add laundry. When the door lock is deactivated, the door lock symbol disappears from the display. After adding laundry, close the door and press the Start/Pause (Start 1) button and then the End Time Setting (Start 2) button to continue washing.

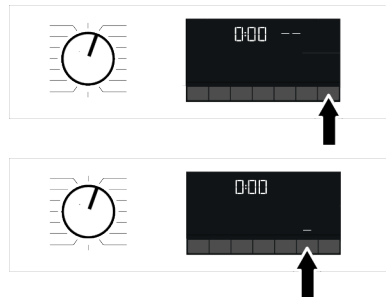


If the water level in the machine is insufficient when you press the Start/Pause button, the door lock cannot be deactivated and the door lock symbol on the display will continue to appear.



If the water temperature inside the machine is above 50°C, you cannot disable the door lock for safety reasons (even if the water level is suitable).

### Putting the machine into pause state:

Press and hold the Start/Pause button for about 1 second to put the machine into pause mode. The pause symbol will flash on the display.

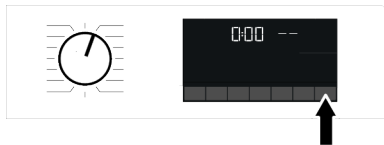

### Changing the program selection after the program has started:

If Child Lock is not enabled, the program can be changed while the current program is running. This action will cancel the current program.



The selected program starts over.

### Changing auxiliary function, speed and temperature settings:

Depending on the step the program has reached, you can disable or enable auxiliary functions. See "Auxiliary function selection."

You can also change the spin speed and temperature settings. See "Spin speed selection" and "Temperature selection."



If the water temperature inside the machine is high or the water level is above the cover line, the loading door will not open.

## 7 Maintenance and Cleaning



Please read the "Safety Instructions" section first!

Service life of your product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

### 7.1 Cleaning the Detergent Drawer

Clean the detergent drawer at regular intervals (once every 4 to 5 wash) as mentioned below to prevent accumulation of powder detergent.

## 6.13 Cancelling the Programme

The programme is cancelled when programme selection knob is turned to a different programme or product is turned off and on again using the programme selection knob.



If you turn the programme selection knob when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first.

If you want to open the loading door after you have cancelled the programme but if it is not possible to open the loading door since the water level in the product is above the loading door baseline, then turn the Programme Selection knob to Pump+Spin programme and drain the water in the product.


## 6.14 End of Programme

End symbol appears on the display when the programme is completed.

If you do not press any button for 10 minutes, the product will switch to OFF mode. Display and all indicators are turned off.

Completed programme steps will be displayed if you press On/Off button.

Clean the syphon if excess amounts of water and fabric softener mixture remains in the softener compartment.

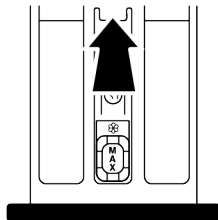

1. Press the marked part of the syphon within the softener compartment and then pull the drawer towards yourself to take it out.
2. Lift and remove the syphon from behind as shown.
3. Rinse drawer and syphon in the sink with plenty of warm water. Use gloves or suitable brush to prevent contact of residues in the drawer with your skin.
4. Firmly fit the syphon and the drawer back after cleaning.


## 7.2 Cleaning the Loading Door and the Drum

For products with drum cleaning programme, please see the Operating the product section.



Repeat Drum Cleaning process in every 2 months.

**NOTICE:** Use an anti-limescale suitable for the washing machines.

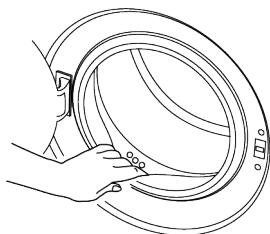

After every washing make sure that no foreign substance is left in the product. If the holes on the door gasket shown in the figure is blocked, open the holes using a toothpick.

Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel.

Never use steel wool or wire wool. These will damage the painted, chrome coated and plastic surfaces.


We recommend you to wipe the door gasket with a dry and clean cloth at the end of the programme. This will remove residues on the door gasket in your product and prevent formation of malodours.

## 7.3 Cleaning the Body and Control Panel

Wipe the body of the product with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth. Use only a soft and damp cloth to clean the control panel. Do not use cleaning products that contain bleach

## 7.4 Cleaning the Water Intake Filters

There is a filter at the end of each water intake valve at the rear of the product and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the product. Filters should be cleaned if they are dirty.

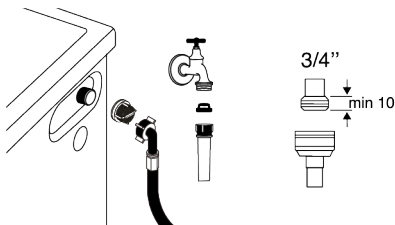

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves and clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully and tighten their nuts by hand.

## 7.5 Draining Remaining Water and Cleaning the Pump Filter

The filter system in your product prevents solid items such as buttons, coins and fabric fibres clogging the pump impeller during draining of washing water. Thus, the water will be drained without any problem and the service life of the pump will extend.

If the product fails to drain water inside it, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the product (e.g., when moving to another house) water should be drained completely.



**NOTE:**

Foreign substances left in the pump filter may damage your product or may cause noise problem.

If you live in areas prone to frost, remember to turn off the water tap, disconnect the main hose, and drain the water from the product when it's not in use.

After each use, turn off the tap to which the mains hose is connected.


**In order to clean the dirty filter and drain the water:**

1. Unplug the product to cut off the supply power.



Temperature of the water inside the product may rise up to 90 °C. To avoid the risk of scalding, clean the filter after the water inside the product is cooled down.

2. Open the filter cover.

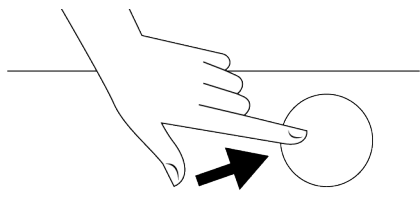


## 8 Troubleshooting



Read the "Safety Instructions" section first!

3. Follow the below procedures in order to drain water.

**If the product has an emergency water draining hose, in order to drain the water:**

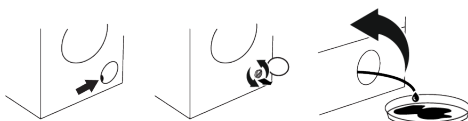

- Pull the emergency draining hose out of its seat.
- Place the end of the hose in a large container. Drain the water into the container by pulling out the plug at the end of the hose. When the container is filled, close the end of the hose with the plug. Drain all water by repeating the procedure specified above after draining the container.
- When the water drain is finished, close the end with the plug again and fix the hose in its place.
- Unscrew the pump filter.
  1. Clean any residues inside the filter as well as fibres, if any, around the pump impeller region.
  2. Replace the filter.
  3. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.

**The program does not start after closing the machine door.**

- The Start / Pause (Start 1) button and then the End Time Setting (Start 2) button may not have been pressed. >>>

Press the Start / Pause (Start 1) button and then the End Time Setting (Start 2) button.

- In case of overload, the door may be difficult to close. >>> Reduce the laundry and make sure the door closes properly.

**The program cannot be started or the program selection cannot be made.**

- The product may have switched to self-protection due to infrastructure problems (mains voltage, water pressure, etc.). >>> Depending on the product model, to cancel the program, select another program by turning the Program Selection knob or pressing and holding the On/Off button for 3 seconds. The previous program will be canceled. See.Cancelling the Programme [▶ 31]

**There is water in the product.**

- Due to quality control procedures during production, some water may remain inside the product. >>> This is not a malfunction, water does not harm the product.

**The product does not absorb water.**

- The tap may be closed. >>> Open the taps.
- The water inlet hose may be kinked. >>> Straighten the hose.
- The water inlet filter may be clogged. >>> Clean the filter.
- The loading door may not be closed. >>> Close the door.

**The product does not drain water.**

- The water drain hose may be clogged or kinked. >>> Clean or straighten the hose.
- The pump filter may be clogged. >>> Clean the pump filter.

**The product vibrates or makes noise.**

- The product may be standing unstable. >>> Balance the product by adjusting its feet.
- A hard object may have gotten stuck in the pump filter. >>> Clean the pump filter.
- Transportation safety bolts may not have been removed. >>> Remove the transportation safety bolts.

- The amount of laundry in the product may be less. >>> Load more laundry into the product.
- Excessive laundry may have been loaded into the product. >>> Remove some of the laundry inside the product or straighten the laundry with your hand and distribute it evenly inside the product.
- The product may be resting on a hard surface. >>> Check that the product is not resting on anything.

**Water is coming from the bottom of the product.**

- The water drain hose may be clogged or kinked. >>> Clean or straighten the hose.
- The pump filter may be clogged. >>> Clean the pump filter.

**The product stopped working after a while after the program started.**

- The machine may have stopped for a while due to low voltage. >>> When the voltage returns to normal, the product will continue operating from where it left off.

**The product directly discharges the water it takes in.**

- The drain hose may not be at sufficient height. >>> Connect the drain hose as described in the user manual.

**No water is visible in the product during washing.**

- Water is in the invisible part of the product. >>> This is not a malfunction.

**The loading door does not open.**

- The door lock is activated due to the water level in the product. >>> Drain the water by running the Pump or Spin program.
- The product may be heating the water or in the spinning phase. >>> Wait for the program to finish.
- The front cover may remain attached due to pressure on it. >>> The front cover is released from its attached position and opened by pushing and pulling the handle.

- In cases where there is no electricity, the loading door of the product will not open. >>> To open the loading door of the product, open the pump filter cover and pull down the loading door emergency release lever located behind it. See>Loading Door Lock [► 30]

**Washing takes longer than stated in the manual. (\*)**

- Water pressure may be low. >>> The product waits until it receives sufficient water to prevent a decrease in washing quality due to reduced incoming water volume. Therefore, washing time is extended.
- The voltage may be low. >>> When the voltage is low, the washing time is extended to prevent loss of washing quality.
- The water inlet temperature may be low. >>> In cold seasons, the time required to heat the water is extended. Furthermore, the washing time is extended to prevent loss of washing quality.
- The number of rinses and/or the amount of rinse water may have increased. >>> When the product needs to rinse better, it increases the amount of rinse water and adds another rinsing step if necessary.
- Excessive foam may have formed due to excessive detergent use and the automatic foam dampening system may have been activated. >>> Use the recommended amount of detergent.

**Programme time does not count down. (On models with a display) (\*)**

- The timer may stop while water is being taken in. >>> The timer will not count down until the product has taken in enough water. To prevent a decrease in washing quality when the amount of water taken in decreases, the product will wait until the water is completely filled. The timer will then continue counting down.
- The timer may stop during the heating step. >>> The time indicator will not count down until the product reaches the selected temperature.

- The timer may stop during the spinning step. >>> The automatic unbalanced load detection system may have been activated due to the unbalanced distribution of the laundry inside the product.

**The program time does not count down. (\*)**

- The laundry may have created an imbalance in the product. >>> Due to the unbalanced distribution of the laundry inside the product, the automatic unbalanced load detection system may have been activated.

**The product does not pass the squeezing step. (\*)**

- The laundry may have created an imbalance in the product. >>> Due to the unbalanced distribution of the laundry inside the product, the automatic unbalanced load detection system may have been activated.
- The spin cycle may not have been completed because the water inside the product could not be drained. >>> Check the filter and drain hose.
- Excessive foam may have formed due to excessive detergent use and the automatic foam dampening system may have been activated. >>> Use the recommended amount of detergent.

**Washing performance is poor: There is graying. (\*\*)**

- Insufficient amount of detergent may have been used for a long time. >>> Use the recommended amount of detergent according to water hardness and laundry.
- Washing may have been done at low temperature for a long time. >>> Select the appropriate temperature for the fabric being washed.
- In hard water, not enough detergent may have been used. >>> If the water is hard, not using enough detergent will cause dirt on the laundry to stick, causing it to turn gray over time. Once graying occurs, it is difficult to remove. Use the recommended amount of detergent based on water hardness and the laundry.

- Too much detergent may have been used. >>> Use the recommended amount of detergent according to water hardness and laundry.

**Washing performance was poor: Stains did not come out or laundry did not become whiter. (\*\*)**

- Not enough detergent may have been used. >>> Use the recommended amount of detergent according to water hardness and laundry.
- Excessive laundry might have been loaded. >>> Do not overload the product. Load the amount of laundry recommended in the "Programme table" section.
- Wrong programme and temperature may have been selected. >>> Select the programme and temperature appropriate for the laundry being washed.
- The wrong detergent may have been used. >>> Use original detergent suitable for the product.
- Too much detergent may have been used. >>> Put the detergent in the correct compartment. Do not mix bleach and detergent.

**Washing performance is poor: Oily stains appeared on the laundry. (\*\*)**

- Regular boiler cleaning may not have been performed. >>> Clean the boiler regularly. For this procedure, see: Cleaning the Loading Door and the Drum [► 32]

**Washing performance is poor: Laundry smells bad. (\*\*)**

- Continuous washing at low temperatures and/or in short programs can cause odors and bacteria to build up in the drum. >>> Leave the detergent drawer and loading door ajar after each wash. This prevents the creation of a humid environment conducive to bacteria.

**The color of the laundry has faded. (\*\*)**

- Excessive laundry may have been loaded. >>> Do not overload the product.

- The detergent used may have become damp. >>> Store detergents in a closed container in a moisture-free environment and do not expose them to excessive heat.
- A high temperature may have been selected. >>> Select a programme and temperature appropriate for the type and dirt of the laundry.

**It does not rinse well.**

- The amount, brand, or storage conditions of the detergent used are not suitable. >>> Use a detergent suitable for your washing machine and laundry. Store detergents in a dry, sealed container in a dry environment and avoid exposing them to excessive heat.
- Detergent may have been put into the wrong compartment. >>> If detergent is put into the prewash compartment even though Prewash is not selected, the product may take up this detergent during the rinsing or softener step. Put the detergent into the correct compartment.
- The pump filter may be clogged. >>> Check the filter.
- The drain hose may be kinked. >>> Check the drain hose.

**The laundry became hard after washing. (\*\*)**

- Not enough detergent may have been used. >>> Using an inappropriate amount of detergent for water hardness will cause laundry to harden over time. Use an appropriate amount of detergent for water hardness.
- Detergent may have been put into the wrong compartment. >>> If detergent is put into the prewash compartment even though Prewash is not selected, the product may take up this detergent during the rinsing or softener step. Put the detergent into the correct compartment.
- Detergent and softener may be mixed. >>> Do not mix softener with detergent. Wash and clean the drawer with hot water.

### **The laundry does not smell of fabric softener. (\*\*)**

- Detergent may have been placed in the wrong compartment. >>> If detergent is placed in the prewash compartment even though Prewash is not selected, the product may take this detergent during the rinsing or softener steps. Wash and clean the drawer with hot water. Place the detergent in the correct compartment.
- Detergent and softener may be mixed. >>> Do not mix softener with detergent. Wash and clean the drawer with hot water.

### **There is detergent residue in the drawer. (\*\*)**

- Detergent may have been added to the drawer while it was wet. >>> Dry the drawer before adding detergent.
- The detergent may have become damp. >>> Store detergents in a closed container in a moisture-free environment and do not expose them to excessive heat.
- Water pressure may be low. >>> Check the water pressure.
- The detergent in the main wash compartment may have gotten wet while taking in the prewash water. There may be a blockage in the holes of the detergent compartment. >>> Check the holes and clean any blockages.
- There may be a problem with the detergent dispenser valves. >>> Call the Authorized Service.
- Detergent and softener may be mixed. >>> Do not mix softener with detergent. Wash and clean the drawer with hot water.
- Regular boiler cleaning may not have been performed. >>> Clean the boiler regularly. For this procedure, see [Cleaning the Loading Door and the Drum](#) [► 32]

### **A lot of foam forms inside the product. (\*\*)**

- You may be using detergents that are not suitable for your washing machine. >>> Use detergents that are suitable for your washing machine.

- Excessive amount of detergent may have been used. >>> Use only the amount of detergent needed.
- The detergent may have been stored in poor conditions. >>> Store the detergent in a closed container in a moisture-free environment. Do not store in extremely hot environments.
- Perforated laundry such as tulle foams a lot due to their structure. >>> Use a small amount of detergent for these types of laundry.
- Detergent may have been put into the wrong compartment. >>> Make sure you put the detergent into the correct compartment.
- The product may be taking in the softener prematurely. >>> There may be a problem with the valves or the detergent drawer. Call the Authorized Service.

### **Suds are overflowing from the detergent drawer.**

- Too much detergent may have been used. >>> Mix 1 tablespoon of softener with ½ liter of water and pour it into the main wash compartment of the detergent drawer. >>> Add the appropriate amount of detergent to the product according to the program and maximum load stated in the "Program table" section. When using additional chemicals (stain removers, bleach, etc.), reduce the amount of detergent.

### **The laundry remains wet at the end of the program. (\*)**

- Excessive foam may have formed due to excessive detergent use and the automatic foam dampening system may have been activated. >>> Use the recommended amount of detergent.
- (\*) When the laundry is not well distributed inside the product, the product does not proceed to the spinning step to prevent damage to itself and the environment. Arrange the laundry and spin again.

(\*\*) Regular boiler cleaning may not have been performed. Clean the boiler regularly. See.Cleaning the Loading Door and the Drum [► 32]



If you cannot resolve the problem despite following the instructions in this section, contact the dealer or an Authorized Service Center where you purchased the product. Never attempt to repair a malfunctioning product yourself.

---



