

# Steam Iron

## User Manual



SIM7124B

EN

01M-8816423200-2619-01

**beko**

# Please read this user manual first!

Dear Customers,

Thank you for selecting a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

## Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



**WARNING:** Warnings for dangerous situations concerning the safety of life and property.



**WARNING:** Warning for hot surfaces.



Risk or burning and scalding due to steam.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

Conforms to the WEEE Directive.



It does not contain PCB.

## CONTENTS

---

**ENGLISH**                      **4-16**

---

# 1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

## 1.1 General safety

- This appliance complies with the international safety standards.
- This appliance may be used by children who are at the age of 8 or over and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance. Cleaning and user maintenance procedures should not be performed by children unless they are controlled by their elders.

# 1 Important instructions for safety and environment

- Do not leave the product unattended while it is plugged in.
- Unplug the product before filling the water reservoir with water.
- Operate and store the appliance on a stable surface.
- When the appliance is placed on its base plate, ensure that the surface beneath the plate is level.
- Do not use the appliance if the power cable or the appliance itself is damaged. Contact an authorised service.
- If the appliance is dropped or leaks water or has other failures, contact the authorised service. Do not use the appliance until it is repaired.
- When the appliance is not in use or left to cool down keep the appliance and power cable out of reach of children under 8 years old.
- The appliance is not suitable for using outdoors.

# 1 Important instructions for safety and environment

- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- The mains supply of the appliance must be secured with a minimum 16 A fuse.
- Use the appliance with a grounded outlet only.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning it.
- Do not wrap the cable around the appliance.
- Do not touch the appliance or its plug with wet or damp hands when the appliance is plugged in.

# 1 Important instructions for safety and environment

- The soleplate and its surrounding area can be extremely hot. Contacting hot surfaces may cause burns. Therefore while or just after using the appliance, pay attention not to touch the hot surfaces.
- Never use the appliance in or near to combustible or inflammable places and materials.
- If you keep the packaging materials, store them out of the reach of children.
- For detailed information on cleaning the appliance, please refer to the section Cleaning and maintenance.

# 1 Important instructions for safety and environment

## 1.2 Compliance with WEEE Directive and Disposing of the Waste Product

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

## 1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## 1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



## 2 Your iron

### 2.1 Overview



1. Power cable
2. Iron base plate
3. Temperature adjustment knob
4. Soleplate
5. Water spray nozzle
6. Water refill lid
7. Steam setting and lime removal button
8. Water spraying button
9. Shock steam button
10. Thermostat indicator and Auto-Off light

### 2.2 Technical data

**Voltage:** 220-240V~ 50-60Hz

**Power consumption:**  
2020-2400 W

**Shock steam amount:**  
up to 150 g/min

**Insulation class:** I

Technical and design modification rights are reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

## 3 Operation

### 3.1 Intended use

This appliance is intended only for household use and ironing; it is not suitable for professional use.

### 3.2 Initial use

Prior to initial use, fill twice (see 3.3) and vaporize to remove the manufacturing residues (see 3.6). Meanwhile, use shock steam button (9) frequently.



You can smell a mild odour or see white sediments coming out of the soleplate (4) holes. After performing vaporizing process twice, such odours and sediments will disappear. Also water droplets may form within the water reservoir; this is normal.

### 3.3 Refilling the water reservoir

1. Unplug the appliance.
2. Steam setting button (7) off Set to "X" position.

3. Fill the water cup provided with the appliance.
4. Open the water refill lid (6) and fill the appliance with water up to MAX level.
5. Close the water refill lid (6).



Your appliance is designed for use with tap water. If your tap water is excessively hard, we recommend you to use a mixture of tap water with potable water.

### 3.4 Setting the temperature

1. After the appliance is plugged in, set the temperature according to the type of your fabric by turning the temperature setting knob (3) in clockwise direction (see. 3.5).
  - Thermostat indicator light (10) will light up.
2. When the appliance reaches the set temperature, thermostat indicator light (10) will turn off and the appliance is ready to use.

## 3 Operation

### 3.5 Temperature and steam settings table

When setting the temperature of the appliance, consider the following table.

Fabric Type	Temperature Setting	Steam Setting
Synthetic	•	Without steam
Silk	•	Without steam
Woolen	••	Without steam
Cotton	•••	With steam
Linen - Jean	Max	With steam



**WARNING:** Before ironing first check the label of the garment.




If you don't know the fabric of your garment, first iron an invisible part of your garment and determine a correct ironing temperature for it.



In order to prevent the bright stains that may form on the synthetic fabrics such as silk, iron on the reverse side of the fabric. Do not use the water spraying feature in order to prevent the stain formation.

### 3.6 Steam ironing

1. Fill the water reservoir (see 3.3).
2. Set the appropriate temperature with the temperature setting knob (see 3.5).
3. Set the steam setting button (7) to “” position.
4. After the thermostat indicator light (10) switches off you can start steam ironing.

## 3 Operation

### 3.7 Shock steam



When you start to iron, shock steam may not emit in your first couple of presses. In order to obtain shock steam, the temperature setting knob (3) should be at or above the "•••" level.

1. Fill the water reservoir (see. 3.3).
2. Set the temperature setting knob (3) to max. position by turning it in the clockwise direction.
  - Thermostat indicator light (10) will light up.
3. When the appliance reaches the set temperature, thermostat indicator light (10) will turn off.
4. After the thermostat indicator light (10) turns off, you can iron the garments with the powerful steam by pressing the shock steam button (9).



**WARNING:** If this process is maintained for a prolonged time water may come through the soleplate (4) together with steam.



In order to maintain ideal shock steam quality, set the steam setting button (7) to the OFF "X" position.



**WARNING:** In order to use the shock steam feature the thermostat indicator light (10) should be turned off.

### 3.8 Vertical steam

You can also use the shock steam in upright position (see. 3.7). By pressing the shock steam button (9), you can iron your curtains and your garments on the hanger with the steam you will get by pressing the shock steam button. Hold the appliance 15-30 cm away from the garment and curtains.

## 3 Operation



**WARNING:** During the ironing if the thermostat indicator light (10) turns on, before proceeding with the shock steam process wait for the light to turn off.



**WARNING:** Never direct this steam to people or pets.

### 3.9 Spraying water

1. Fill the water reservoir (see. 3.3).
2. Set the temperature (see. 3.5).
3. Press the water spraying button (8) to spray water.



You can easily remove creases using the water spraying feature.

### 3.10 Dry ironing

In order to make dry ironing, set the steam setting button (7) to the OFF "☒" position.



Having water in the appliance would be advantageous; you may use the water spraying button (8) when necessary.

### 3.11 Automatic Shutdown (Auto-Off)

- If the appliance is hold stationary for 30 seconds while in horizontal position, it will be automatically turned off.
- If the appliance is hold stationary for 7-10 minutes while in upright position, it will be automatically turned off.
- If the appliance is hold stationary for 30 seconds while in a leaned (right or left) position, it will be automatically turned off.



In case of automatic turn off the auto-off light (10) flashes.

- If the appliance is moved in horizontal position it will be turned on.



It may take 60 seconds for the soleplate (4) to reach the previously set temperature.

## 4 Cleaning and maintenance

### 4.1 Cleaning



**WARNING:** When you are finished with ironing, unplug the appliance. You can drain the water in the reservoir by opening the refill lid (6) and tilting the iron to the front.

1. Unplug the appliance before cleaning.
2. Wait for the appliance to cool down completely.
3. Use a slightly damp cloth to clean the outer surface of the appliance. Then dry it thoroughly.
4. Wipe the sediments and residues on the soleplate (4) with a slightly damp cloth and soft, nonabrasive liquid cleaner as necessary.



**WARNING:** Do not use gasoline, solvent and abrasive cleaning agents or hard brush to clean the appliance.

### 4.2 Lime removal (Self-Clean)

Lime removal function cleans the lime particles accumulated in the steam generator reservoir of the appliance.

Use this function once in every 2 to 3 weeks. If the tap water is very hard (if lime particles fall down from the soleplate (4) of the appliance), use the lime removal function more frequently.

1. Unplug the appliance.
2. Refill the appliance with water (see. 3.3).
3. Steam setting button (7) off Set to "☒" position."
4. Plug in the appliance and set the temperature setting knob (2) to max. position by turning it in the clockwise direction.
5. When the thermostat indicator light (10) turns off, unplug the appliance.
6. Keep the iron in horizontal position over the sink and hold the lime removal button (7) at self-clean "☒" position and shake the iron. Continue until the water in the reservoir is depleted.

## 4 Cleaning and maintenance



It may take some time for the water to drip from the holes of the soleplate.

7. After the reservoir becomes fully empty, release the lime removal button (7).
8. If there is still sediment, repeat this process.
9. Following the lime removal process, let the appliance cool in upright position. After the appliance cools down, wipe off the soleplate (4) with a cloth.

### 4.3 Storage

If you do not intend to use the appliance for a long time, store it carefully.

- Before lifting the appliance unplug it and then let it cool completely.
- Empty the water reservoir.
- Keep the appliance and its accessories in their original packages.
- Store it in a cool, dry place.
- Always keep the appliance out of the reach of children.

### 4.4 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage.

## 5 Troubleshooting

Although the appliance is plugged in, soleplate (4) does not heat up.

The appliance may be connected improperly. >>> Check the plug and power cable (1) of the appliance. Temperature setting knob (3) may be at the Min. position. >>> Turn the temperature setting knob in the clockwise direction up to the steam sign.

The appliance does not generate steam.

The water reservoir may not have enough water. >>> Fill the water reservoir with water up to Max level (see. 3.3).

Steam setting button (7) may be at without-steam position. >>> Switch the steam setting button to the steam position (see. 3.6).

Shock Steam - Vertical Steam does not function.

These functions may have been used too frequently in a very short period of time. >>> Keep ironing at a horizontal position and wait for a while before using the shock steam function again. >>>

Soleplate (4) may not be hot enough. Turn the temperature setting knob (3) in the clockwise direction up to the steam sign. Seat the appliance in a vertical position and wait for the soleplate to heat up.

Water drops fall down onto the fabric during ironing.

You may not have securely closed the water refill lid (6). >>> Close the water refill lid securely.

You may be using the shock steam at temperature level • or ••.

>>> Increase the temperature level (see. 3.7).

During ironing, sediments and residues fall down from the soleplate (4).

If the water you use for your appliance is too hard, such sediments may form. >>> Use the self-clean function for once or a few times (see. 4.2). For the subsequent ironings fill the water reservoir of the appliance with a mixture of tap water and potable water.

The appliance drops water after it cools down or stored.

You may have left the appliance on a horizontal position while there is water in its reservoir. >>> Empty the water reservoir.

Stains at the soleplate (4).

Wet garments might have been ironed and the soleplate (4) has had lime stains. >>> After the appliance cools enough, wipe the soleplate with a microfiber knitted or cotton cloth soaked in vinegar.



# ORIGINAL MANUFACTURER'S WARRANTY ADVICE FORM

## BEKO SMALL DOMESTIC APPLIANCE

**12 months warranty, full parts and labour warranty only.**

### WARRANTY CONDITIONS

The following conditions apply only in relations to the warranty expressly given on this Warranty Advice Form supplied with the product. This warranty only applies to appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict or modify in any way) other rights and remedies under a law to which the appliances relate, including any non-excludable statutory guarantees in Australia and New Zealand. It applies to the original purchaser and for appliances used in domestic applications only.

- This warranty does not apply:
  - if the identification number attached to the appliance has been altered, rendered illegible or removed;
  - to light globes;
  - to paint and vitreous enamel finishes and glass;
  - to surfaces damaged by use of aerosols or cleaners;
  - if the appliance has been –
    - subject to misuse, abuse, negligence, accident, fire or floods;
    - connected or improper, inadequate or faulty electricity, gas, water or drainage services or intake or exhaust ducts or flues, or operated using incorrect or contaminated fuels or lubricants;
    - installed, maintained or operated otherwise than in accordance with the instructions furnished by Beko including the improper use of detergents, bleaches, cleaners or other additives;
    - damaged by foreign objects in the appliance;
    - serviced, repaired or altered otherwise than by Beko authorised service agents of Beko, or using other than Beko approved replacement parts.
- The purchaser shall be responsible for any expenses involved in making the appliances readily accessible for servicing, the purchaser shall be responsible for any costs of transporting the appliance or parts thereof to and from the nearest Beko authorised service agent.
- This warranty is the only expressed warranty given by Beko.
- Beko reserves the right to determine whether or not the fault is caused by faulty workmanship or material or that any part is defective.
- Where permitted by law, this warranty shall not apply to loss suffered through or resulting from the non-operation or the ineffective operation of the appliance or any part of the appliance.
- The purchaser must produce proof of the date of purchase together with this Warranty Advice Form when making a claim.
- Subject to your statutory rights as to the merchantable quality of the product or accessory. In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e., 12 months from the original purchase date.
- Australia: For Appliances and services provided by Beko in Australia, Beko goods come with a guarantee by Beko that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the Australian Consumer Law.
- New Zealand: For Appliances and services provided by Beko in New Zealand, the Appliances come with a guarantee by Beko pursuant to the provisions of the Consumer Guarantees Act, the Sales of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

These Warranty Conditions supersedes and excludes all other representations, conditions and warranties, except those implied by legislation previously referred to.

