


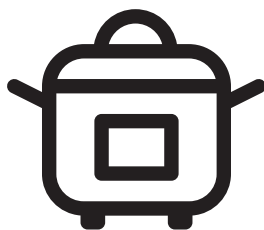

Hot Air Fryer

User Manual



FRL 3374 B

EN



01M-8919403200-1325-02

Please read this guide first!

Dear Customer,

Thank you for choosing a Beko product. We would like you to achieve the optimal efficiency from this high quality product which has been manufactured with the state of the art technology. Please make sure you read and understand this guide and supplementary documentation fully before use and keep it as a reference. Include this guide with the unit if you hand it over to someone else. Observe all warnings and information herein and follow the instructions.

Keep in mind that this user guide may apply to several product models. The guide clearly indicates any variations of different models.

Symbols and their meanings

Following symbols have been used throughout this guide:



Important information and helpful advice on using the device.



WARNING: Warnings about dangerous situations related to life and property safety.



Suitable for contact with food.



Do not immerse the appliance, the power cord or the plug in water or in any other liquids.



WARNING: Warning about hot surfaces.

This section contains safety instructions to prevent hazards that can result in injury or property damage.

Failure to follow these instructions will void any warranty.

1.1 General safety

- This appliance complies with international safety standards.
- This appliance is intended for home use and food preparation only, it is not suitable for professional use.
- This appliance cannot be used by children between the ages 0-8. The appliance can only be used by children aged 8 and over, provided that they are under constant surveillance. This appliance may be used by people who have limited physical, auditory or mental skills, or lack of experience and knowledge, if they are provided with supervision or information about the safe use and hazards encountered.
- This product is not designed for commercial use, it is intended for use at home and in applications as follows:
 - In the staff kitchens of the stores, offices and other working environments,
 - In farm houses,
 - By customers in hotels, motels or other accommodation facilities;
 - In hostels, or similar environments.
- Bedrooms and breakfast locations
- Children being supervised not to play with the appliance.
- Children should not do cleaning and user maintenance unless an adult supervises them.
- Keep the product and the product cable out of the reach of children under the age of 8.
- Position the handles of the cooking appliances (if any) so that hot liquids do not spill and place them securely.

- Make sure that the voltage indicated on the appliance is the same as the mains voltage in your home.
- Use the appliance in a grounding plug.
- Do not use the appliance with an extension cord.
- Do not place your appliance on or near heat sources such as ovens and stoves.
- To prevent damage to the power cord, prevent it from being pinched, crimped or rubbed against sharp edges.
- Do not unplug the appliance by pulling on the cord.
- Do not immerse the appliance or its power cord in water.
- Do not leave the appliance unattended while it is plugged in.
- Do not disassemble the appliance.
- Use only original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning and dry all parts completely after cleaning.
- Clean the appliance in accordance with the instructions in the Cleaning and Maintenance section.
- Do not put large pieces of food in the appliance as it may cause a fire.
- Do not touch the plug of the appliance while your hands are damp or wet.
- Do not use the appliance in humid environments.
- Do not move the appliance while it is in use and the oil inside is hot.
- Do not use the appliance in or near explosive or flammable environments and substances.
- To avoid the risk of burns, do not touch hot surfaces.
- Let the appliance cool down in a safe place out of the reach of children.
- Do not block the air inlet and air outlet openings while the appliance is operating.
- Do not lean over while the appliance is in use. Hot air rises from the appliance

1 Important safety and environmental instructions

during use!

- The appliance becomes hot during use. To avoid the risk of burns, do not touch hot surfaces.
- Make sure that the room is adequately ventilated during use.
- In case of fire, unplug the appliance.
- Do not pour water on the appliance, as it may cause electric shock hazard.
- Do not operate the appliance with an external timer or a separate remote control system.
- Only use metal kitchenware with insulated handles with the appliance.
- Do not put anything on the appliance while it is operating or hot.
- Turn the indicator button off to disconnect. Then unplug the appliance.
- If you keep the packaging materials, keep them out of the reach of children.
- If the power cord is damaged, it must be replaced

by the manufacturer, its service agent or similarly qualified persons to avoid potential hazards.

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1 Important safety and environmental instructions

1.3 Compliance with RoHS Directive


The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Less Oil Cooker

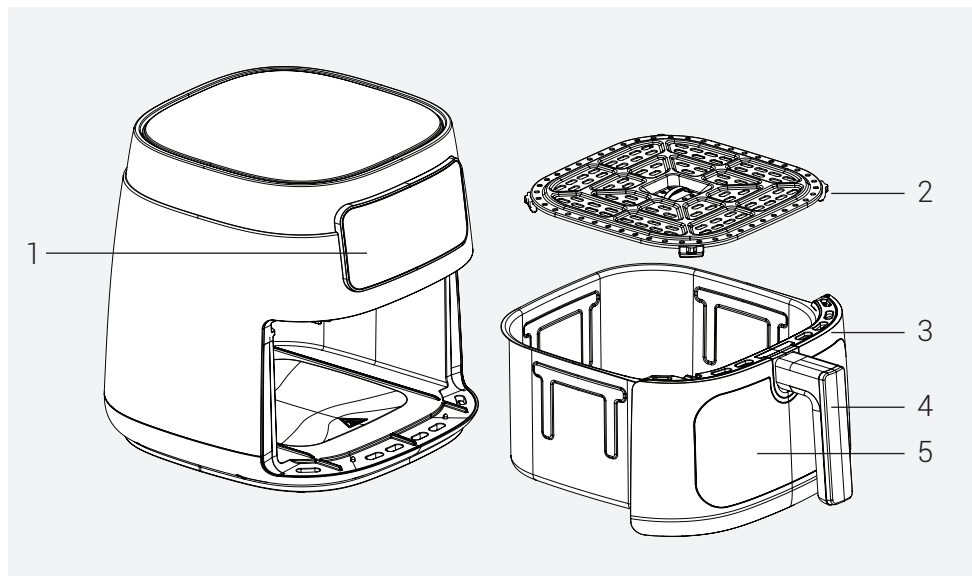

1. Digital control panel
2. Cooking grid
3. Removable cooking basket
4. Handle
5. Illuminated traceable cooking chamber

Technical data

Power Source	220-240V~, 50-60Hz
Power Consumption	1750 W

Signs on the appliance and values specified by the documents provided along with the product have been obtained under laboratory conditions in accordance with the related standards. The values may vary based on use of the appliance and ambient conditions. Power values have been tested in the voltage of 230 V.


3 Usage

3 Intended use


- The appliance is intended for home use only and is not suitable for professional use.
- When you use the appliance for the first time, there may be a slight emission of smoke. This is normal.

3.1 Preparing the appliance for use


- Use the appliance in an upright position on a stable, level, clean, dry and non-slip surface.

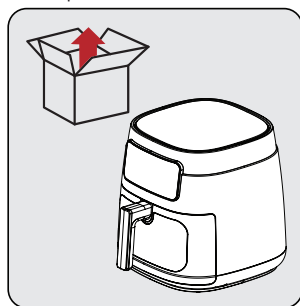

Before using the appliance for the first time, remove the packaging materials and place the appliance in a flat and clean area.

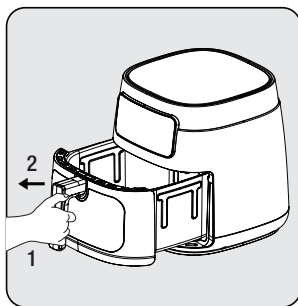


Grab the handle (4) firmly to release the removable cooking basket (3); then, take the drawer out of its housing.

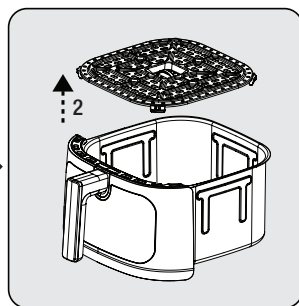


Place the drawer on a flat surface to detach the cooking grid (2) from the drawer. Remove the cooking grid (2) by lifting it from the drawer.



Clean the cooking grid (2) and the removable cooking basket (3) with warm soapy water, then dry the appliance's outer surface and the parts you have washed thoroughly.

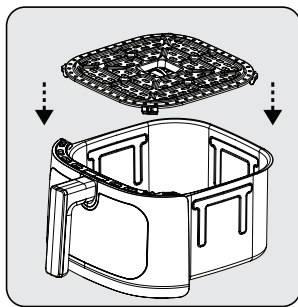

There are 2 notches on both sides of the handle. Seat the basket in its housing by aligning the tabs into the notches on the top of the basket drawer.

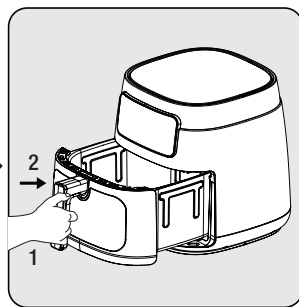


Attach the drawer to the appliance after cleaning all parts. The appliance is ready for use.



- For the first use, set the product to the highest temperature and run it for about 10 minutes without adding any food.
- Never use the basket drawer (6) without the removable cooking grid (2).


3.2 Control panel and LED display:

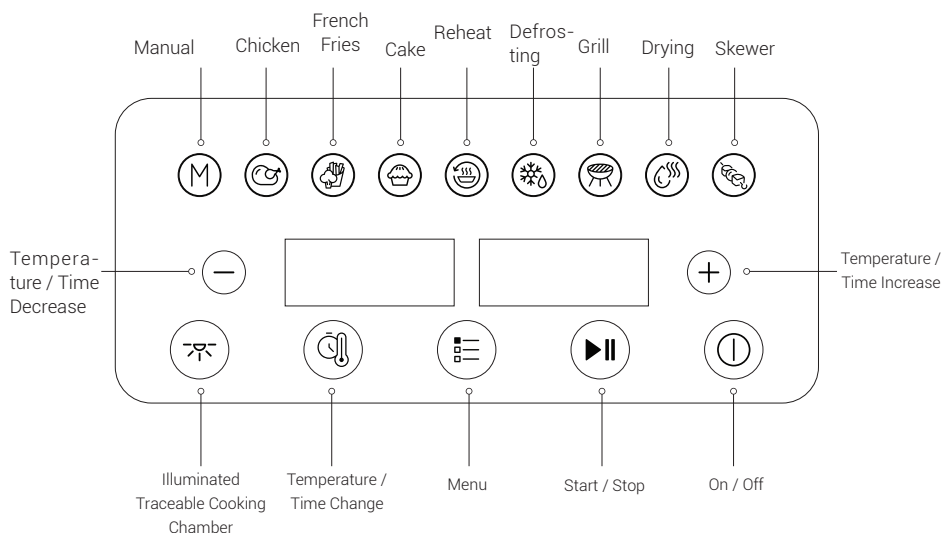

- Press “Menu [Menu icon]” symbol until finding the desired program to select a program. When the desired program is found, the light of the program will blink, press “Start [Start icon]” symbol to start the program.
- When “End” appears on the display, the cooking process is completed, and the cooking basket must be removed.
- Display shuts down, when the cooking basket is taken out of the appliance. Appliance resumes, when the cooking basket is put back.

3 Usage

3.3 Warnings before first use

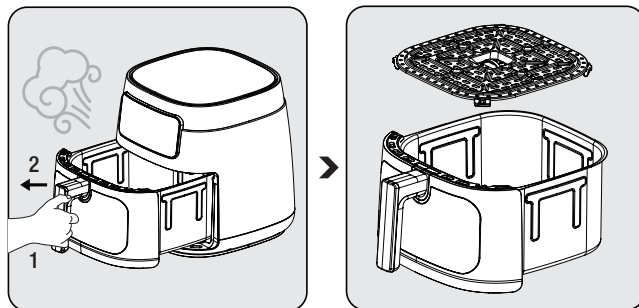

When the removable cooking basket (3) is pulled back while the appliance is operating, hot steam will emanate from the air outlet and the top of the basket. Therefore, be careful not to get burned by the high-temperature steam.

While using the cooking grid (2) and basket drawer (3) at higher temperatures, be careful not to make a direct contact with them.

3.4 Operation

3.4.1 Selecting and starting a program




The display shows the automatically set temperatures and times according to the selected cooking functions. You can change these temperatures and times as desired.




Press the shutdown symbol if you want to switch to a different program after the product is started. Afterwards, press "Menu"  to select the desired program.

3 Usage

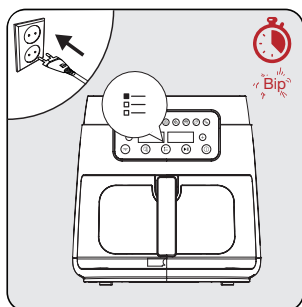

Plug the product in and press the on/off symbol once. The entire selection display will appear. Press the "Menu" symbol until you reach the function you want to select.

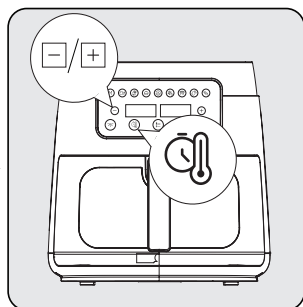


Press the "Temperature / Time" change symbol. The temperature will flash on the display. Replace with the desired temperature "+" or "-" symbols. When you press the "Temperature / Time" symbol again, the time will flash on the display. Set the cooking time with the "+" or "-" symbols".




Press the "Start/Stop" symbol and start the device. Place the food you want to cook in the cooking basket of the product. When you place the cooking basket in its place, the time you set will be seen on the display, excluding the preheating time, and the time will start to count down.

3.4.2 Temperature and time setting

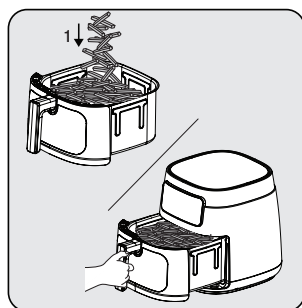

Press the "Temperature / Time" symbol to set the temperature and time. Afterwards, press "-" or "+" symbol to set the necessary temperature and time. Press the "Start" symbol to start.

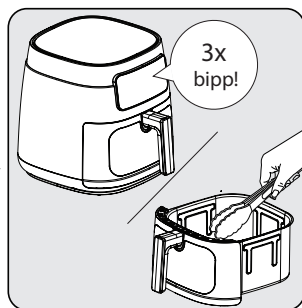

When half of the set time of the program is reached, at this point, the basket drawer (3) can be removed, and you can turn the food with an auxiliary tool (tongs, etc.).

3 Usage




- The cooking grid is made of high-temperature resistant silicone material that can be used for cooking food. It essentially prevents the basket lining from being scratched. Therefore, make sure that it does not come off during cooking.
- Be aware of hot steam that may be outlet while pulling the basket drawer (3) out and do not touch with your bare hands, because it is highly hot.
- When removing cooked food, use a tool (tongs, etc.) that will not damage the inner surface of the appliance.

3.5. Cooking


- Blend food with oil before placing it in the removable cooking basket (3).




Please do not hold the basket drawer (3) and the removable cooking grid (2) with anything other than the handle while they are hot.

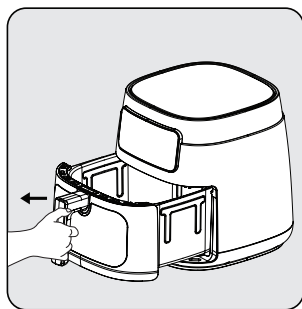

Grasp the handle firmly to open the basket drawer (3); then remove the drawer from the machine and place it on a flat, clean surface.

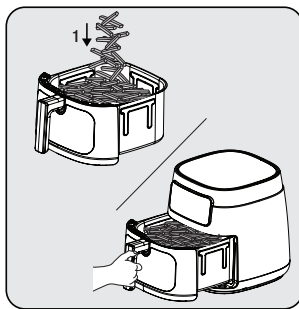


Place foods in the cooking basket (3). Then attach the basket to the appliance and make sure it fits completely.

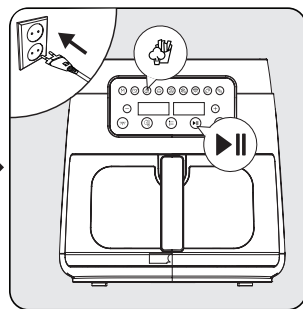


Plug your appliance in and select the desired cooking program. Then, start the cooking process.


3 Usage

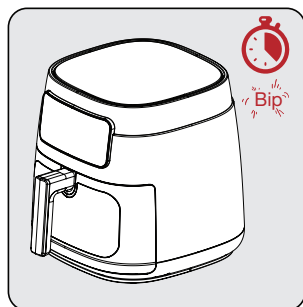


Warning sound will be heard when the set time is up and your appliance turns off automatically. When the cooking program is completed, an "End" notification appears on the display. This expression indicates that the food program is finished.

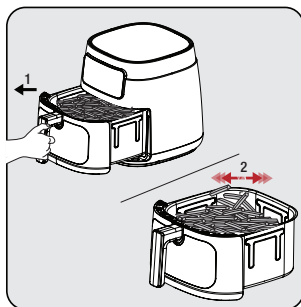

Take the removable cooking basket (3) out and check the food, whether it is fried or frozen or not. If it requires additional cooking time, you can prolong the cooking time a little bit more.

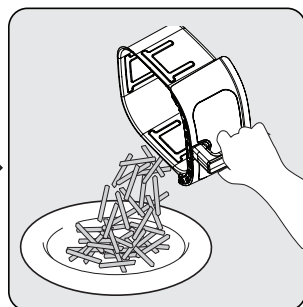

After the process is completed, pour the ingredients in the basket into a bowl or plate.

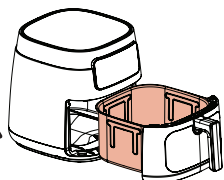

Avoid contact of the cooking basket with the outer surface of the appliance, since surface of the cooking basket (5) will be hot during and after cooking.



- Let the foods rest for 5-10 seconds before removing them from the removable cooking basket (5).
- Use tongs to take large or soft foods out of the basket not to cause any damage on the interior surface of the appliance.
- When one batch is ready, the appliance is immediately ready for another batch.



Note that the device can become very hot during the turning process.

4 Cooking time

The following table gives an overview of cooking times for different foods. Cooking time varies based on thickness and texture of foods. The recommended times and quantities should be regarded as approximate.


Perform a pre-heating process until the appliance reaches up to the recommended temperature specified in the table before cooking process to achieve successful results.

PROGRAM	FOOD	AMOUNT	SYMBOL	TEMPERATURE	TIME (min.) INTERVAL	BLENDING / SHAKING
DEFROSTING				80 °C	13-17 min.	2
FRENCH FRIES	Frozen Potato	500 g		200 °C	15-20 min.	4
CHICKEN	Chicken Thigh	450 g		200 °C	20 minutes	2
GRILL	Burger in Rolls	500 g		190 °C	15 min.	2
SKEWER	Chicken Skewer	500 g		180 °C	15-20 min.	4
CAKE	Muffin	6 mini muffin cups		160 °C	20 minutes	X
DRYING				70 °C	60-140 min.	X


5 Cleaning and maintenance

5.1 Cleaning


i Never use gasoline, solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.

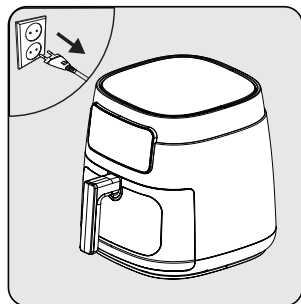


Switch off the appliance and disconnect it from the power supply.

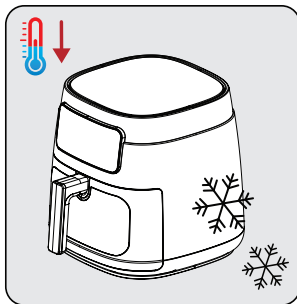


Allow the appliance to cool down completely.

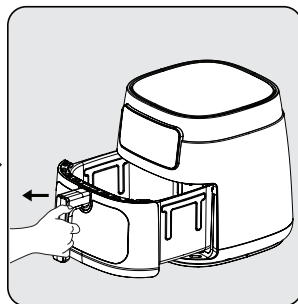


Remove the cooking basket (3) from the drawer.

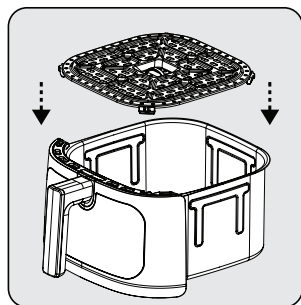

Remove the cooking grid (2) from the basket by grasping its handle and pulling it upwards.

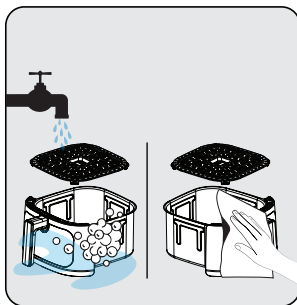

Clean the cooking basket (3) and the cooking grid (2) with warm soapy water and then dry them thoroughly.

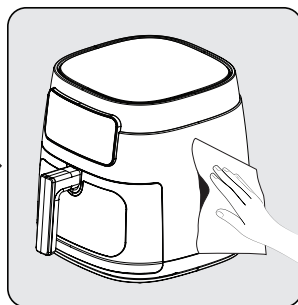

Clean the outside of the appliance with a damp cloth. Dry the outside of the appliance completely.

i Always keep the base of the removable cooking basket (3) and the cooking grid (2) clean to prevent the accumulation of foreign substances.

5 Cleaning and maintenance

5.2 Storage

- If you do not intend to use the appliance for a longer period of time, store it carefully.
- Unplug the appliance and let it cool down before putting it away.
- Store the appliance in a cool and dry place.
- Keep the appliance and the cable out of the reach of children.

5.3 Transport and shipping

- Transport the appliance in its original packaging during handling and transport. The packaging protects the appliance from physical damage.
- Do not place heavy objects on the appliance or its packaging. The appliance may get damaged.
- If the appliance is dropped, it may stop working or permanent damage may occur.

6 Troubleshooting

	The problem	Cause	Solution
1	Appliance inoperative	Power outages	Check the power supply and make sure there is power
		No power or poor contact at the power outlet	
		Mismatch of the power supply voltage with the nominal voltage of appliance	
2	The food is insufficiently cooked/burnt	The cooking time is not correct	Combine recipes and your personal experience to adjust preparation and timing
3	Smoke during first use	Rust-preventive oil remaining on the heater of appliance	Set the temperature at maximum and perform a pre-heating fro 10-15 minutes to remove rust-preventive oil on the heat of appliance
4	Strange smell	Foreign object on cooking basket, basket drawer and heater	Remove the foreign object
5	E2	NTC shorted, Parts Defective	Send to service for repair
6	E4	NTC shorted, Parts Defective	
Contact our authorised service for repair, in case the problem cannot be solved after performing the above-mentioned supervision.			



55 Blanck Street, Ormeau Q 4208
P O Box 354, Ormeau Q 4208
p : 5549 3146 f : 5549 3546
ABN : 49 152 055 162

ORIGINAL MANUFACTURER'S WARRANTY ADVICE FORM

24 months warranty, full parts and labour warranty only.

WARRANTY CONDITIONS

The following conditions apply only in relations to the warranty expressly given on this Warranty Advice Form supplied with the product. This warranty only applies to appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict or modify in any way) other rights and remedies under a law to which the appliances relate, including any non-excludable statutory guarantees in Australia and New Zealand. It applies to the original purchaser and for appliances used in domestic applications only.

1. This warranty does not apply:
 - (a) if the identification number attached to the appliance has been altered, rendered illegible or removed;
 - (b) to light globes;
 - (c) to paint and vitreous enamel finishes and glass;
 - (d) to surfaces damaged by use of aerosols or cleaners;
 - (e) if the appliance has been –
 - (i) subject to misuse, abuse, negligence, accident, fire or floods;
 - (ii) connected or improper, inadequate or faulty electricity, gas, water or drainage services or intake or exhaust ducts or flues, or operated using incorrect or contaminated fuels or lubricants;
 - (iii) installed, maintained or operated otherwise than in accordance with the instructions furnished by Beko including the improper use of detergents, bleaches, cleaners or other additives;
 - (iv) damaged by foreign objects in the appliance;
 - (v) serviced, repaired or altered otherwise than by Beko authorised service agents of Beko, or using other than Beko approved replacement parts.
2. The purchaser shall be responsible for any expenses involved in making the appliances readily accessible for servicing, the purchaser shall be responsible for any costs of transporting the appliance or parts thereof to and from the nearest Beko authorised service agent.
3. This warranty is the only expressed warranty given by Beko.
4. Beko reserves the right to determine whether or not the fault is caused by faulty workmanship or material or that any part is defective.
5. Where permitted by law, this warranty shall not apply to loss suffered through or resulting from the non-operation or the ineffective operation of the appliance or any part of the appliance.
6. The purchaser must produce proof of the date of purchase together with this Warranty Advice Form when making a claim.
7. Subject to your statutory rights as to the merchantable quality of the product or accessory. In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e., 24 months from the original purchase date.
8. Australia: For Appliances and services provided by Beko in Australia, Beko goods come with a guarantee by Beko that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the Australian Consumer Law.
9. New Zealand: For Appliances and services provided by Beko in New Zealand, the Appliances come with a guarantee by Beko pursuant to the provisions of the Consumer Guarantees Act, the Sales of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

These Warranty Conditions supersedes and excludes all other representations, conditions and warranties, except those implied by legislation previously referred to.

For Service or Spare Parts:

Aust 1300 282 356

NZ 0800 692 356

Beko A&NZ Pty Ltd
55 Blanck Street , Ormeau QLD,
4208 AUSTRALIA
www.beko.com.au