


Power Blender

User Manual

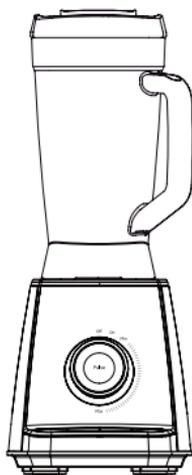

TBS3164X

EN

01M-8813583200-1318-01

beko

Please read this manual first!

Dear Valued Customer,

Thank you for preferring this Beko appliance. We hope that you get the best results from your appliance which has been manufactured with high quality and state-of-the-art technology. For this reason, please read this user manual and all other provided documents carefully before using the appliance and keep it as a reference for future use. If you hand over the appliance to someone else, give the user manual as well. Follow the instructions by paying attention to all the information and warnings in the user manual.

Meanings of the symbols

Following symbols are used in various sections of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Suitable for contact with food.



Do not immerse the appliance, the power cable, or the power plug in water or any other liquid.



Protection class for electric shock.




This product has been produced in environmentally-friendly, state-of-the-art facilities.

Conforms to the WEEE Directive.



Made in P.R.C.

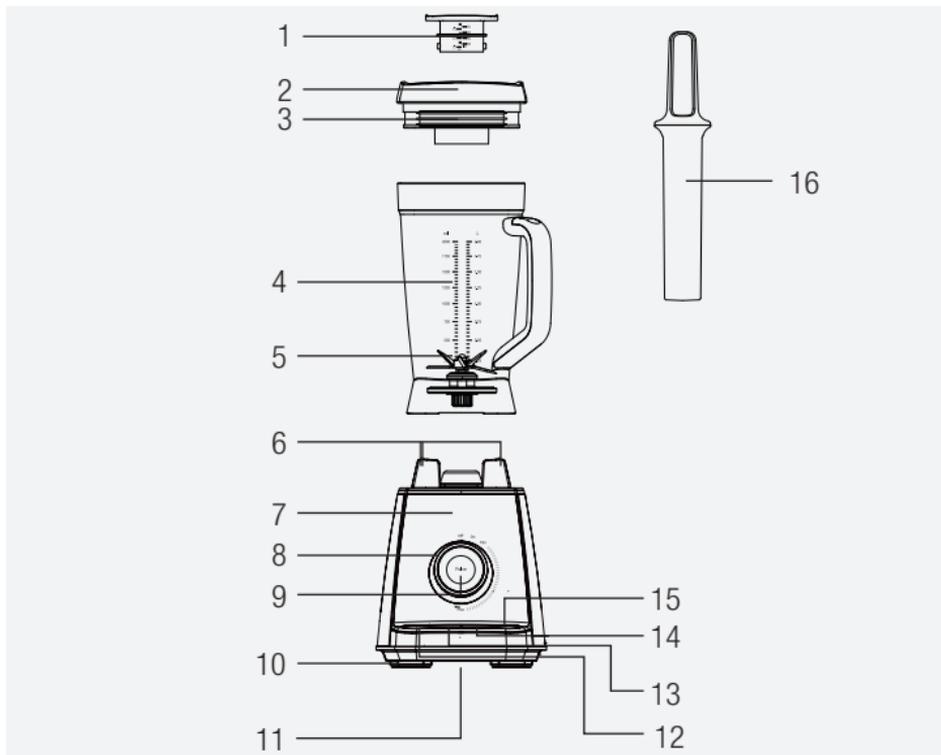

- | | |
|---|------------------------|
| 1. Measuring cap | 10. Non-slip feet |
| 2. Lid | 11. Cable winding bay |
| 3. Leak-proof gasket | 12. Smoothie button |
| 4. Measuring jug | 13. Ice button |
| 5. Blending shaft | 14. Sauce button |
| 6. Jug placement feet | 15. Auto clean button |
| 7. Motor unit | 16. Blending accessory |
| 8. On(I) / OFF(O) Speed adjustment knob | |
| 9. Pulse button | |

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

In case of lose, break or need replacement for the parts below:

- Jug with top cover - complete set (2,3,4)
- Plunger - black part that you use to shovel fruits/veggies in to the jug from top cover hole (1)
- Set of 4 rubber feet (10)

Technical data

Voltage: 220-240V~ 50-60 Hz

Power consumption:
1600 W

Rights to make technical and design changes are reserved.

CONTENTS

Technical data.....4

1 Important safety and environmental instructions 6

1.1 General safety.....6

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:9

1.3 Compliance with RoHS Directive.....10

1.4 Package information.....10

1.5 Plug Wiring11

2 Use 12

2.1 Initial use.....12

2.2 Operation12

2.3 "Pulse" position.....15

2.4 Blending accessory15

2.5 Motor protection16

3 Cleaning and care 18

3.1 Cleaning.....18

3.2 Storage19

3.3 Handling and transportation19

1 Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or material damage.

Failure to follow these instructions voids any granted warranty.

1.1 General safety

- Read all instructions.
- This appliance may be used by people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.

1 Important safety and environmental instructions

- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- Do not attempt to dismantle the appliance.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- Do not use the device for hot food.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cable.
- Do not touch the plug of the appliance with damp or wet hands.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Hold the blending shaft of the appliance carefully during transportation and cleaning.
- Never touch blades while using the appliance. There is the possibility of injury due to incorrect usage.
- Avoid contacting moving parts.

1 Important safety and environmental instructions

- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running
- Blades are sharp. Handle carefully.
- Always operate blender with cover in place.
- Do not blend hot liquids.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.

1 Important safety and environmental instructions

- Do not immerse the appliance, the power cable, or the power plug in water or any other liquid.
- If you keep the packaging materials, store them out of the reach of children.
- Children shall not use the appliance. Keep the appliance out of the reach of children.
- **SAVE THESE INSTRUCTIONS**

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1 Important safety and environmental instructions

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.


1 Important safety and environmental instructions

1.5 Plug Wiring

The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

Fiting a different plug

- As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:
- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line
- With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

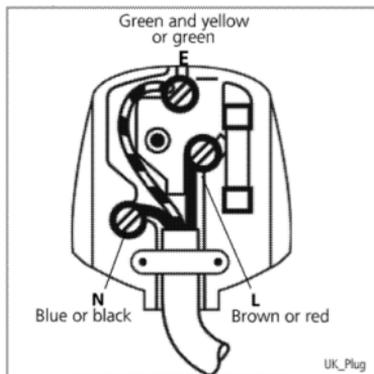

2 Use

2.1 Initial use

Clean the parts of the appliance prior to initial use (see 3.1).

2.2 Operation



WARNING: Do not operate the appliance when empty.



Maximum temperature allowed inside the appliance is 60°C.



Place your appliance on a solid and flat surface.



Put the ingredient you want to process into the jug (4) and place the lid (2) on it.



Place the measuring cap (1) on the lid (2) so that the tab on it seats on the slots of the lid, turn it to the "Lock" position and secure.



Put soft foods or liquids before adding hard foods or ice.




2 Use

i Adding some water into the appliance will allow it run smoothly (e.g. 40ml water for 60gr solid food). Add the water before the ingredients.

i If you want to add food into the jug (4) during the blending process, use the measuring cap (1) inlet. Raise this cap and feed the food in through this opening.



WARNING: Do not insert any foreign objects into the jug (4) when the appliance is in use.

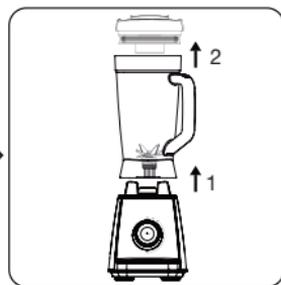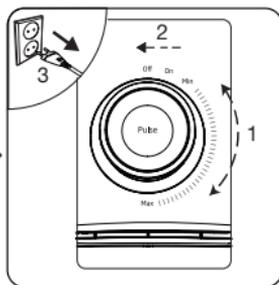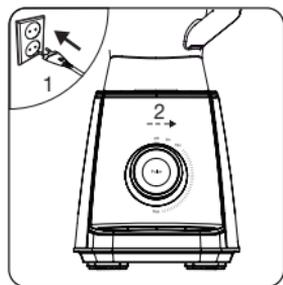

Plug in the appliance and rotate the ON/OFF button (8) to ON (I) position.

Process the ingredients at the desired speed using the speed adjustment knob (8). When the process is complete, rotate the ON/OFF button (8) OFF (O) position and unplug the appliance.

Pull up the jug (4) without turning it to remove it from the motor unit (7). Open the lid (2) and take out the food.

2 Use



You can use the measuring cap (1) or the measuring cap inlet to add ingredients into the jug (4) during the process. To remove the measuring cap, slightly turn it to the "Open" direction and pull gently.



WARNING: Gradually increase the speed of the appliance. Do not operate it at the highest speed suddenly. Otherwise the motor may overheat.




WARNING: Do not run the appliance continuously for more than 2 minutes. Let it cool for 5 minutes before operating it again.

2 Use

2.2.1 Automatic programs

The appliance is equipped with three automatic programs that you can use: Smoothie (12), Ice (13), Sauce (14) and Auto Clean (15).

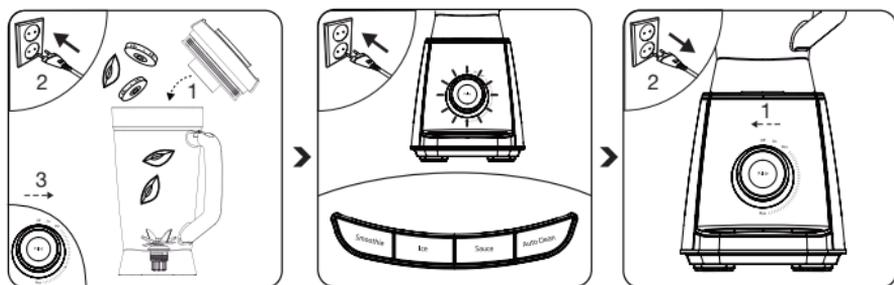

Put the ingredients in the jug (4) and close the lid (2). Rotate the ON/OFF button (8) to ON (I) position.

Select the desired automatic program. The selected program will turn on and the program will start to operate at different speeds. It will stop about 26 or 42 seconds later. The light will blink.

When the process is complete, rotate the ON/OFF knob (8) to OFF (O) position and unplug the appliance.

2.3 "Pulse" position

Press "Pulse" (9) while the speed adjustment knob (9) is in ON (I) position for mixing with high-speed short pulses. The appliance will stop when you release the button.

2.4 Blending accessory

You can use this accessory to put in the jug (4) the ingredients that remain on the sides and have not been blended in the blending process.

2 Use



WARNING: Make sure that the appliance is in OFF (8) OFF (0) position and at full stop while using the blending accessory (16).




If you want to stop the appliance at any time during the operation, rotate the ON/OFF button (8) to OFF (0) position.

2.5 Motor protection

Automatic motor protection will get activated and stop the appliance when the appliance overheats. In this case;

1. Rotate the ON/OFF button (8) to OFF (0) position.
2. Unplug the appliance.
3. Let it cool for 15-20 minutes.
4. Pull up and remove the jug (4).
5. Turn the motor unit (7) upside down and press the "Reset" button on the bottom side of it.

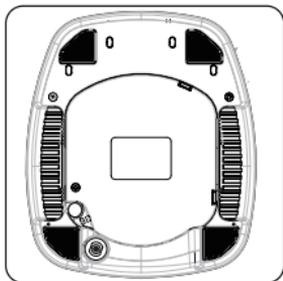

2 Use



If the "Reset" button does not work, let the appliance cool for a bit longer time and try again.


After using the "Reset" button, you can set up and resume using the appliance again.

3 Cleaning and care

3.1 Cleaning



Add 1 or 1 ½ cups of lukewarm water and some drops of dish-washing liquid into the jug (4) and use Auto Clean program to operate it for 26 seconds.

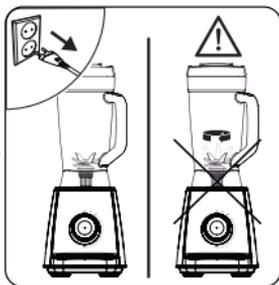

Unplug the appliance before cleaning. Wait for the accessories used to stop completely.



Pull up the jug (4) to remove it from the motor unit (7).



Then rinse it.



You can wash the jug (4) and the caps/lids (2) in your dishwasher. It is recommended to clean the appliance immediately after using.

3 Cleaning and care



WARNING: Do not immerse the motor unit (7) in water. You can wipe it with a damp cloth.

3.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance and wait for it to cool completely before storing it.
- Keep the appliance and its accessories in their original packages.
- Store it in a cool, dry place.
- Always keep the appliance out of the reach of children.

3.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or on the packaging. The appliance may get damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

Product Guarantee

12 months breakdown and repair guarantee

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexpert installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

How to obtain after sales service, help or general advice

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.

Model number	Serial number	Purchased from	Date of purchase

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland: **0333 207 9710**

Republic of Ireland: **01 862 3411**

You can also contact us through our website: **www.beko.co.uk**

