



Quick Guide

Operating the product

 Read "Safety Instructions" section first!

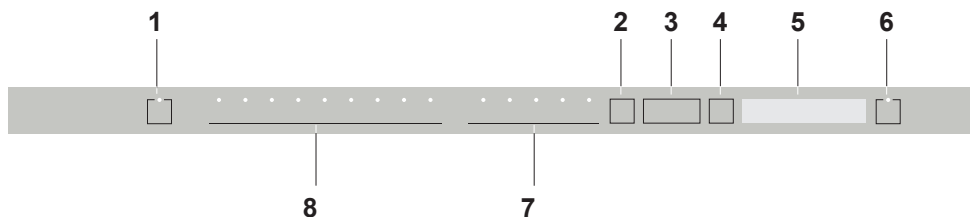

1. On / Off Key
2. Menu Key
3. Time Delay Selection
/ Menu Direction Selection Keys
4. Selection / Confirmation Key
5. Display
6. Start / Pause / Cancel Key
7. Function Selection Keys
 - F1 Hygiene Intense function
 - F2 SteamGloss Function
 - F3 Super Rinse Function
 - F4 Half Load function
8. Programme Selection Keys

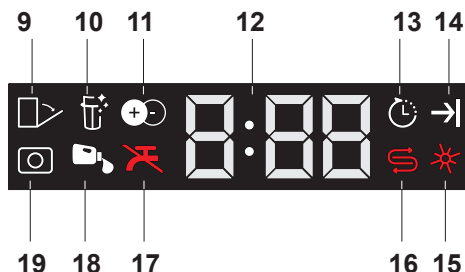

9. Auto Door Open Indicator (depends on the model)
10. Filter Cleaning Function Indicator (depends on the model)
11. IonFresh Function Indicator (depends on the model)
12. Delay Time / Programme Time Indicator
13. Delayed Start Indicator
14. End of Programme Indicator
15. Rinse Aid Indicator
16. Salt Indicator
17. Water Cut-off Indicator
18. Liquid Detergent Dosing Indicator (depends on the model)
19. Tablet Detergent Indicator (depends on the model)

Programme Data and Average Consumption Values Table						
Programme number	1	2	3	4	5	6
Programme name	Auto	Intensive	Eco *	Delicate	Quick & Clean (#)	Mini (#)
Cleaning temperature	40-65 °C	70 °C	50 °C	40 °C	70 °C	35 °C
Degrees of Soiling	Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes.	Suitable for heavily soiled dishes, pots and pans.	Suitable for washing dishes with normal amount of soil. It is the most efficient program in terms of combined power and water consumption. This is used for assessing the compliance with EU's eco-design directive.	Special programme for gentle cleaning of delicate glassware.	Daily washing programme at which the medium soiled dishes that are kept waiting are cleaned in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.
Prewash Wash Dry	Medium to high	High	Medium	Low	Medium	Low
	+	+	+	+	-	-
	+	+	+	+	+	+
	+	+	+	+	+	-
Duration (min)	145-193	143	245	135	90	30
Water (l)	10,8-14,1	15,4	9,9	13,9	10,6	10,6
Energy (kWh)	0,90-1,45	1,65	0,861	1,26	1,2	0,8
Selectable functions	T, E, R, Z, H, M, K	T, E, Y, F, R, U, H, K	T, E, Y, F, S, R, U, H, K	T, E, Y, F, R, K	T, E, R, B, H, M, K	T, E

Loading Capacity: 15

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. * Reference programme for testing institutes. The tests in accordance with EN 50242/60438 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50°C programme are indicative only. (#) Additional functions might cause changes in programme durations.

Quick Guide

Adjusting the water softening system

Washing, rinsing and drying performance of your dishwasher will improve when the water softening system is adjusted correctly.

To adjust the system, first learn the water hardness in your region and adjust as indicated below.

- Unpack the test strip.
 - Open the tap and let the water flow for approx. 1 minute.
 - Dip in the test strip into the water for 1 second.
 - Take out the strip from the water and shake it.
 - Wait for 1 minute.
 - Make the necessary adjustment according to the test strip.
- | Level 0 |  |
|---------|--|
| Level 1 |  |
| Level 2 |  |
| Level 3 |  |
| Level 4 |  |
| Level 5 |  |


After detecting the water hardness:

1. After switching on your machine, press and hold the Menu key for 3 seconds.
1. Some models require pressing Menu key once to enter settings menu
2. Using <- and >+> keys, proceed until the water hardness setting indicator becomes on ("r" position will be displayed).
3. Using the Selection key, adjust water hardness level according to the hardness of the supply water. For correct setting please see "Water hardness level setting table".
4. Press On / Off key to save the setting.

Water hardness level adjustment table

Hardness Level	English Water Hardness °dE	German Water Hardness °dH	French* Water Hardness °dF	Water Hardness Level Indicator
Level 0 	0-5	0-4	0-8	Press the Selection key to switch the water hardness level to position 1. (r1)
Level 1 	6-9	5-7	9-13	
Level 2 	10-15	8-12	14-22	Press the Selection key to switch the water hardness level to position 2. (r2)
Level 3 	16-19	13-15	23-27	Press the Selection key to switch the water hardness level to position 3. (r3)
Level 4 	20-24	16-19	28-34	Press the Selection key to switch the water hardness level to position 4. (r4)
Level 5 	25-62	20-50	35-90	Press the Selection key to switch the water hardness level to position 5. (r5)

Mechanical Glass Care Function Adjustment:

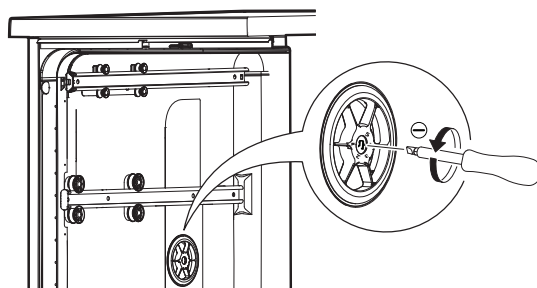

Glass care function adjustment is used to adjust the water hardness level of presoftened wash water inside the dishwasher. The adjustment needs to be made according to the water hardness adjustment level. Adjustment is done with the help of a wide and flat screwdriver. The screwdriver is used to turn the Mechanical glass care adjustment switch. Just position the Mechanical

switch to the position same as the water hardness setting level.

For example


Adjust the Mechanical Glass Care adjustment switch to position 3 for water hardness level "r3"

Adjust the Mechanical Glass Care adjustment switch to position 4 for water hardness level "r4"

Level 0



 Level 1



Level 2





Level 3



Level 4



Level 5

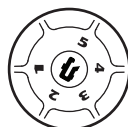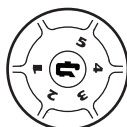

- If the hardness level of the water that you use is above 50°dH or if you are using well water, then it is recommended to use filter and water purification devices.
- If the hardness level of the water that you use is below 7°dH, there is no need to use salt in your dishwasher. In this case, the Salt Indicator light on the control panel of your dishwasher will light continuously.
- If the water hardness is set to level 1, the Salt Indicator will light continuously although it is not necessary to use salt. If you use salt under this condition, salt will not be consumed and the lamp will not illuminate.

i When moving, you will need to set the water hardness level of your dishwasher again according to the information above, depending on the water hardness of the place you have moved to. If the water hardness level of your machine is adjusted previously, your machine will display the most recent hardness level adjustment.