


# Dryer

## User Manual

### Pesukuivati Kasutusjuhend

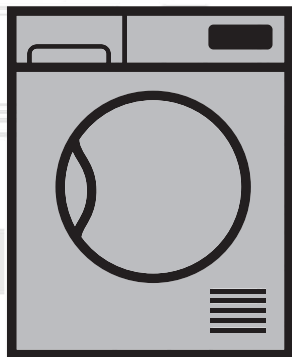

DS 7433 PA0

EN | ET

2960312260\_EN/110719.0937


**beko**

# Please read this user manual first!

Dear Customer,





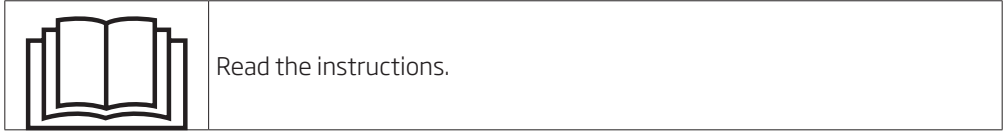

Thank you for preferring a Beko product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Use this user manual for the model indicated on the cover page.



## Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning against electric shock.
	Warning against hot surfaces.
	Warning against fire hazard.
	Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.



This product was manufactured using the latest technology in environmentally friendly conditions.

# 1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

## 1.1 General safety

- The dryer can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dryer and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dryer.
- Always have the installation and repairing procedures carried out by the **Authorized Service**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Never wash the dryer by spraying or pouring water onto it! There is the risk of electric shock!

# Important instructions for safety and environment

## 1.1.1 Electrical safety



Electrical safety instructions should be followed while electrical connection is made during the installation.



The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.

- Connect the dryer to a grounded outlet protected by a fuse at the value specified on the type label. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the dryer is used without grounding in accordance with the local regulations.
- The voltage and allowed fuse protection is stated on the type label plate.
- The voltage specified on the type label must be equal to your mains voltage.
- Unplug the dryer when it is not in use.
- Unplug the dryer from the mains during installation, maintenance, cleaning and repair works.
- Do not touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be easily accessible after installation.



Damaged mains cable should be changed notifying the Authorized Service.

# Important instructions for safety and environment



If the dryer is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!

## 1.1.2 Product safety



Ensure that the air inlet of the dryer is open and it is well-ventilated.

Product contains R290 refrigerant.

R290 is an environment-friendly, but flammable refrigerant.

Keep the product away from potential heat sources that may cause it to ignite.



Superheating of the clothes inside of the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running, this concentration of heat can cause self-combustion and fire so always activate the ventilation programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.

# Important instructions for safety and environment



## **Points to be taken into consideration for fire hazard:**

Below specified laundry or items must not be dried in the dryer considering fire hazard.

- Unwashed laundry items
- Items soiled with oil, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin or paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

For this reason especially the items containing the above specified stains must be washed very well, to do this use adequate detergent and choose a high washing temperature.



## **Below specified laundry or items must not be dried in the dryer due to the fire hazard:**

- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads.

- Clothing cleaned with industrial chemicals.

Items such as lighter, match, coins, metal parts, needle etc. may damage the drum set or may lead to functional problems. Therefore check all the laundry that you will load into your dryer.

Never stop your dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to dissipate the heat.

# Important instructions for safety and environment



Clothes that are washed inadequately may ignite on their own and even may ignite after drying ends.

- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.



Underwear that contains metal reinforcements should not be dried in the dryer. Dryer may be damaged if metal reinforcements come loose and break off during drying.



Use softeners and similar products in accordance with the instructions of their manufacturers.



Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.

- Never attempt to repair the dryer by yourself. Do not perform any repair or replacement procedures on the product even if you know or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Install your dryer at places suitable for home use. (Bathroom, closed balcony, garage etc.)
- Make sure that pets do not enter the dryer. Check the inside of the dryer before operating it.
- Do not lean on the loading door of your dryer when it is open, otherwise it may fall over.

# Important instructions for safety and environment

- The lint must not be allowed to accumulate around the tumble dryer
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

## 1.2 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fitting device must be installed by the authorized service agent.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!



Washing machine cannot be placed on the dryer. Pay attention to the above warnings during the installation on your washing machine.

Installation Table for Washing Machine and Dryer

Dryer Depth	Washing Machine Depth			
	62 cm	60 cm	54 cm	< 50 cm
54 cm	Can be installed			Cannot be installed
60 cm	Can be installed		Cannot be installed	



# Important instructions for safety and environment

## 1.3 Intended use

- Dryer has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dryer only for drying laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of the dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the dryer properly.

## 1.4 Child safety

- Packaging materials are dangerous for the children. Keep packaging materials away from children.
- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dryer. Use the child-proof lock in order to prevent the children to tamper with the dryer.

 


Child-proof lock is on the control panel. **(See Child lock)**

- Keep loading door closed even when the dryer is not in use.

# Important instructions for safety and environment

## 1.5 Compliance with the WEEE regulation and disposing of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been

manufactured with high quality parts and materials which can be reused and are suitable for recycling.

Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.



R290 is an flammable refrigerant. Thus, ensure that the system and the pipes are not harmed during operation and handling.

Keep the product away from potential heat sources that may cause it to ignite in case of damage.

Do not dispose of the product by putting it in fire.

## 1.6 Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## 1.7 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

# Important instructions for safety and environment

## 1.8 Technical Specifications

EN




Height (Min. / Max.)	84,6 cm / 86,6 cm*
Width	59,7 cm
Depth	58,9 cm
Capacity (max.)	7 kg**
Net weight ( $\pm$ 4 kg)	44 kg
Voltage	See type label***
Rated power input	
Model code	

\* Min. height: Height with adjustable feet are closed.

Max. height: Height with adjustable feet are opened maximum.


\*\* Dry laundry weight before washing.

\*\*\* Type label is located behind the loading door.

	Technical specifications of the dryer are subject to specification without notice to improve the quality of the product.
	Figures in this manual are schematic and may not match the product exactly.
	Values stated on markers on the dryer or in the other published documentation accompanying with the dryer are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the dryer, these values may vary.

## 2 Your Dryer

### 2.1 Package Contents

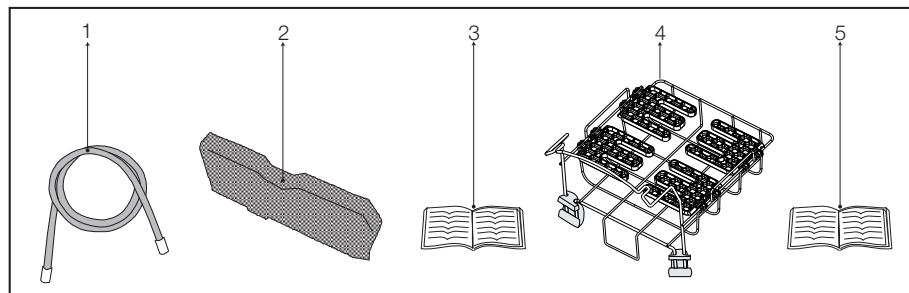

1. Water drain hose \*
2. Filter drawer spare sponge\*
3. User Manual
4. Drying basket\*
5. Drying basket user manual\*

\*It can be supplied with your machine depending on its model.

### 3 Installation

Before calling the nearest Authorized Service for the installation of the dryer, ensure that electrical installation and water drain is appropriate referring to the user's manual. If they are not suitable, contact a qualified electrician and technician to make necessary arrangements.



Preparation of the dryer's location as well as the electrical and waste water installations is under customer's responsibility.



Prior to installation, visually check if the dryer has any defects on it. If the dryer is damaged, do not have it installed. Damaged products cause risks for your safety.



Let your dryer wait for 12 hours before starting to use it.

#### 3.1 Appropriate installation location

Install the dryer on a stable and level surface. Dryer is heavy. Do not move it by yourself.

- Operate your dryer in a well ventilated, dust-free environment.
- The gap between the dryer and the surface should not be reduced by the materials such as carpet, wood and tape.
- Do not cover the ventilation grills of the dryer.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Once the dryer is installed, it should stay at the same place where its connections have been made. When installing the dryer, make sure that its rear wall does not touch anywhere (tap, socket, etc.).
- Place the dryer at least 1 cm away from the edges of other furniture.
- Your dryer can be operated at temperatures between +5°C and +35°C. If the operating conditions fall outside of this range, operation of the dryer will be adversely affected and it can get damaged.
- The rear surface of the tumble dryer shall be placed against a wall.



Do not place the dryer on the power cable.

**\* Ignore following warning if your product's system does not contains R290.**




Dryer contains R290 refrigerant.\* R290 is an environment-friendly, but flammable refrigerant.\* Ensure that the air inlet of the dryer is open and it is well-ventilated.\* Keep potential flame sources away from the dryer.\*

#### 3.2 Removing the transportation safety assembly



Remove the transportation safety assembly before using the dryer for the first time.

- Open the loading door.
- There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with **XX XX**.
- Pull the nylon towards yourself and remove the transportation safety assembly.

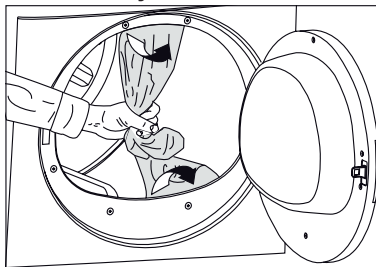

Check that no part of the transportation safety assembly remains inside the drum.


## Installation

### 3.3 Connecting to the drain

In products equipped with condenser unit, water accumulates in the water tank during the drying cycle. You should drain accumulated water after each drying cycle. You can directly drain accumulated water through the water drain hose supplied with the product instead of periodically draining the water collected in the water tank.

### Connecting the water drain hose

- 1-2** Pull hose at the behind of the dryer by hand in order to disconnect it from where it is connected. Do not use any tools to remove the hose.
- 3** Connect one end of the drain hose supplied with the dryer to the connection point from where you removed the hose of the product in previous step.
- 4** Connect the other end of the drain hose directly to the wastewater drain or to the washbasin.

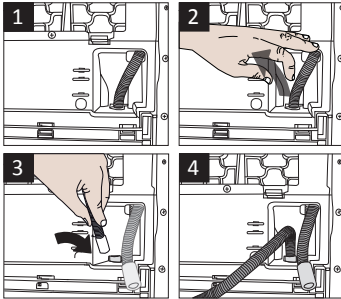

Hose connection should be made in a safe manner. Your drain house will be flooded if the hose comes out of its housing during water discharge.




Water drain hose should be attached to a height of maximum 80 cm.



Make sure that the water drain hose is not stepped on and it is not folded between the drain and the machine.

### 3.4 Adjusting the feet

- In order to ensure that the dryer operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet.
- Turn the feet to left or right until the dryer stands level and firmly.

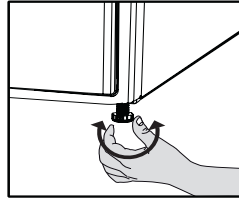

Never unscrew the adjustable feet from their housings.

### 3.5 Electrical connection

For specific instructions for electrical connection required during installation (see **1.1.1 Electrical Safety**)

## Installation

### 3.6 Transportation of the dryer

Unplug the dryer before transporting it. Drain all water that has remained in the dryer. If direct water drain connection is made, then remove the hose connections.




We recommend carrying the dryer in upright position. If it is not possible to carry the machine in the upright position, we recommend carrying it by tilting towards the right side when looked from the front.

### 3.7 Warnings about sounds



It is normal to hear a metallic noise from the compressor sometimes during operation.

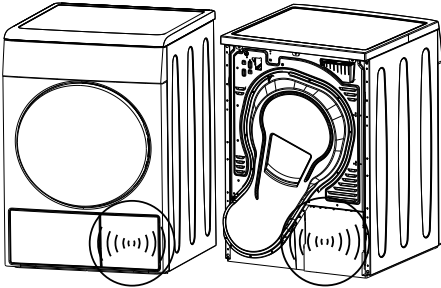

Water collected during operation is pumped to water tank. It is normal to hear pumping noise during this process.

### 3.8 Changing the illumination lamp

In case an illumination lamp is used in your laundry dryer. To change the Bulb/LED used for illumination of your tumble dryer, call your Authorized Service. The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place laundry in the tumble dryer in a comfortable way. The lamps used in this appliance have to withstand extreme physical conditions such as vibrations and temperatures above 50 °C

## 4 Preparation

### 4.1 Laundry suitable for drying in the dryer

Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS																						
	Drying Symbols		Suitable for dryer		No Iron		Sensitive / Delicate dry		Do not dry with dryer		Do not dry		Do not dry-clean									
	Drying Settings		At any temperature		At high temperature		At medium temperature		At low temperature		Without heating		Hang to dry		Lay to dry		Hang wet to dry		Lay in shadow to dry		Dry-cleanable	
			Iron -																			
IRON	Dry or Steam		Iron at high temperature	Iron at medium temperature	Iron at low temperature																	
	Maximum temperature		200 °C	150 °C	110 °C																	

### 4.2 Laundry not suitable for drying in the dryer



Delicate embroidered fabrics, woollen, silk garments, delicate and valuable fabrics, airtight items and tulle curtains are not suitable for machine drying.

### 4.3 Preparing laundry for drying

- Laundry may be tangled with each other after washing. Separate the laundry items before placing them into the dryer.
- Dry garments having metal accessories such as zippers, inside out.
- Fasten the zippers, hooks and buckles and button sheets.


### 4.4 Things to be done for energy saving

Following information will help you use the dryer in an ecological and energy-efficient manner.

- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Sort out the laundry depending on their type and thickness. Dry the same type of laundry together. For example thin kitchen towels and tableclothes dries earlier than thick bathroom towels.
- Follow the instructions in the user manual for programme selection.
- Do not open the loading door of the machine during drying unless necessary. If you must open the loading door, do not keep it open for a long time.
- Do not add wet laundry while the dryer is




## Preparation

- in operation
- Clean the lint filter before or after each drying cycle.
- Clean the filter drawer periodically when there is visible air collection on it or when the symbol lights up, if there is a filter drawer cleaning warning symbol «  » available.
- Ventilate the room, where the dryer is located, well during drying.

### 4.5 Correct load capacity

Follow the instructions in the “Programme selection and consumption table”. Do not load more than the capacity values stated in the table.

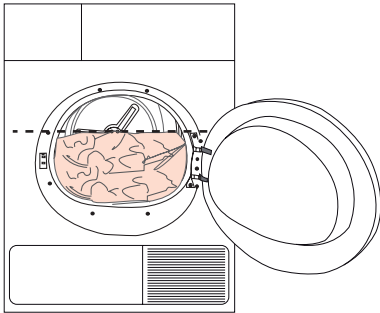

It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Following weights are given as examples.

Laundry	Approximate weights (g)*
Cotton quilt covers (double)	1500
Cotton quilt covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Blouses	150
Cotton shirts	300
Shirts	250
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

\*Dry laundry weight before washing.


## 5 Operating the product

### 5.1 Control panel

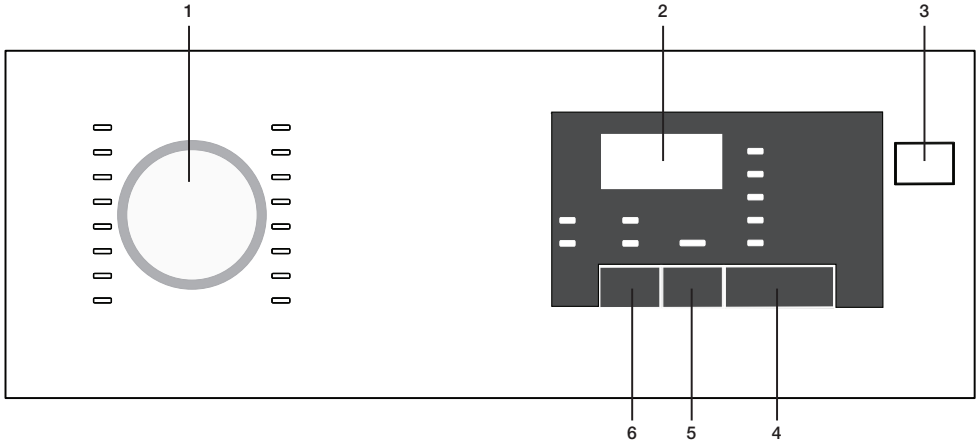

1. Program selection knob
2. Remaining duration indicator
3. On/Off button
4. Start/pause button
5. End duration button
6. Sound warning button

### 5.2 Screen symbols

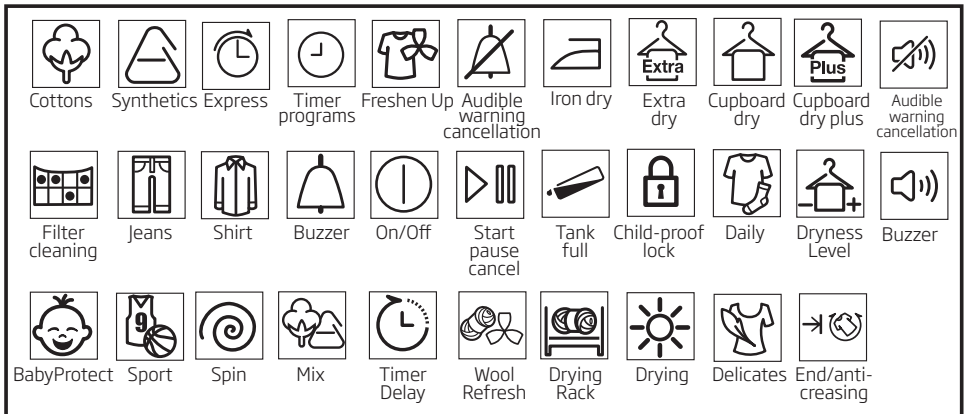

## Operating the product

### 5.3 Preparing the machine

1. Plug in the machine
2. Place laundry inside the machine.
3. Press the On/Off button.
4. When your machine turns on for the first time, it turns on with the declaration (cotton cabinet dryness) program.



Pressing the On/Off button doesn't mean the program starts. Press the Start / Pause button to start the program.

### 5.4 Program selection

1. Determine the appropriate program from the chart below containing the drying levels.
2. Select the program you desire using the Program Selection knob.

Extra Dry	Only cotton laundry is dried in normal temperature. Thick and multi-layered laundry (towels, sheets, jeans etc.) are dried so that they can be placed into wardrobe without ironing.
Cupboard dry	Normal laundry (tablecloths, underwear etc.) are dried so that they can be placed into wardrobe without ironing.
Cupboard dry +	Normal laundry (Ex: tablecloths, underwear) are again dried so that they can be placed into the wardrobe but more so than the wardrobe dryness option.
Iron Dry	Normal laundry (shirts, dresses etc) are dried ready for ironing.



For detailed program information see „Program selection and consumption table“.

### 5.5 Main programs

The main programs are given below based on fabric type.

- **Cotton**

Dry durable laundry with this program. It dries in normal temperature. Recommended for use with your cotton laundry (sheets, bed covers, towels, bathrobes etc.)

- **Synthetic**

Dry laundry that is not very durable with this program. Recommended for use with your synthetic laundry.

### 5.6 Extra programs

The following extra programs are available in the machine for special conditions.



Extra programs may vary according to the specifications of your machine.



In order to receive better results from drying machine programs, your laundry should be washed with the appropriate program in your washing machine and wringed with recommended wringing revolution..

- **Jeans**

Use to dry jeans that are wringed with high rpm in washing machine.

- **Sports**

Use to dry laundry made from synthetic, cotton or mixed fabrics.

- **Xpress**

You can use this program to dry cotton laundry that you had wringed in high rpm in your washing machine. It dries 1 kg of your Cotton laundry (3 shirts / 3 T-shirts) in 50 minutes.

- **Daily**

Program for daily drying of cotton and synthetic laundry and lasts 110 minutes.

- **Shirt**

Dries shirts more delicately and thus causes less wrinkles for easy ironing.

## Operating the product

- **BabyProtect**

Program used for baby clothing with can be dried approval on the label.



Very little dampness might remain on the shirts after the program. It is recommended that you do not leave the shirts in the drying machine.

- **Delicates**

You can dry your delicates suitable for drying or laundry that is recommended to hand wash (silk blouses, thin underwear etc.) in low temperature.



It is recommended to dry your delicates in laundry bag to prevent wrinkles and damage. When the program ends, take your laundry out of the machine immediately and hang them to prevent wrinkles.

- **Refresh**

It only performs ventilation for 10 minutes without blowing hot air. You can ventilate the cotton and linen clothing that has remained closed for a long duration and remove their odor.

- **Timed programs**

You can select the 30 mins and 45 mins time programs to achieve the desired final drying level with low temperature.









On this program, the machine dries as long as the set duration, regardless of the drying level.

## Operating the product

### 5.7 Program selection and consumption table

EN

Programs	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
Cottons / Coloreds				
 Extra dry	7	1000	% 60	185
 Cupboard dry	7	1000	% 60	174
 Iron dry	7	1000	% 60	140
Shirt	1,5	1200	% 60	60
Jeans	4	1200	%50	150
Daily	4	1200	%50	110
Sport	4	1000	%60	135
Xpress	1	1200	%50	50
Delicates	2	600	%40	70
Babyprotect	3	1000	% 60	80
Synthetics				
 Cupboard dry	3,5	800	% 40	70
 Iron dry	3,5	800	% 40	60
Energy consumption values				
Programs	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh
Cottons linen Ready to wear*	7	1000	% 60	1,68
Cottons Ready to iron	7	1000	% 60	1,3
Synthetics Ready to wear	3,5	800	% 40	0,59

 „Cotton cupboard dry programme“ used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.

\* : Energy Label standard program (EN 61121:2012) “All the filters must be cleaned prior to test series.”

All the values in the table are determined according to EN 61121:2012 standard. Consumption values may vary from the values in the table depending on laundry type, wringing revolution, ambient conditions and changes in voltage.

## Operating the product

### 5.8 Auxiliary functions

#### Sound warning cancel


Drying machine makes sound warnings when the program is completed. If you don't want sound notifications, press the "Sound Notification" button.

When you press the sound notification button it lights up, and program does not make sound notifications when completed.




#### Loading door open

Start/Pause led blinks when the loading door of the drying machine is open.


 You can select this function before or after the program starts.

### 5.9 Warning symbols

 Warning symbols may vary according to the specifications of your machine.

#### Fiber filter cleaning

When the program is completed, a warning led lights up, which indicates that the filter has to be cleaned.

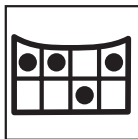

 If the filter cleaning led blinks, see the „Troubleshooting“ chapter.

#### Water tank


When the program is completed, a warning led lights up, which indicates that the water tank must be emptied.

If the water tank fills up while the program is running, warning led starts blinking and the machine goes into stand-by. In that case empty the water in the water tank and start the program by pressing the Start / Pause button. Warning led turns off and the program resumes.

### 5.10 End duration

You can delay the end duration of the program for up to 24 hours with the end duration function.

1. Open the loading door and place your laundry.
2. Select the drying program.
3. Press the end duration selection button and set the delay duration you want. End duration led lights up. (End duration moves continuously when you keep pressing the button).
4. Press the Start / Pause button. End duration countdown begins. The „:“ sign in the middle of the displayed delay duration blinks.

 You can add or remove laundry for the duration of the end duration. The duration displayed on the screen is the sum of the normal drying duration and the end duration. At the end of the countdown the end duration led turns off, drying begins and drying led lights up.

## Operating the product

### Changing the end duration

If you want to change the duration during the countdown:

1. Cancel the program by pressing the On/Off button. Turn on the drying machine again by pressing the On/Off button. When your drying machine turns on for the first time, it turns on with the declaration (cotton wardrobe dryness) program.
2. Select the program you desire using the Program Selection knob.
3. Repeat the end duration operation for the duration you want.
4. Start the program by pressing the Start / Pause button.

### Canceling the end duration function

If you want to cancel the end duration setting countdown and start the program right away:

1. Cancel the program by pressing the On/Off button. Turn on the drying machine again by pressing the On/Off button. When your drying machine turns on for the first time, it turns on with the declaration (cotton wardrobe dryness) program.
2. Select the program you desire using the Program Selection knob.
3. Start the program by pressing the Start / Pause button.

### 5.11 Starting the program

Start the program by pressing the Start / Pause button.



Start/Pause led and the Drying led light up, indicating the program started. The “.” sign in the middle of the remaining duration starts to blink.

### 5.12 Child Lock

The machine features a child lock which prevents the machine program flow from being affected when buttons are pressed during operation.

When the Child Lock is active, all buttons except for the On/Off button are deactivated. To activate the child lock, press the Sound Notification button and End Duration button simultaneously for 3 seconds.

The child lock should be deactivated to be able to start a new program after the current program ends or to be able to interfere with the current program. Keep the same buttons pressed for 3 seconds again to deactivate the child lock.

	The lock led on the screen lights up when the Child Lock is activated.
	Child Lock deactivates when the machine is turned off and on again using the On/Off button.

A warning sound is heard when any button is pressed (except for On/Off button) or the Program Selection knob is turned while the child lock is active.

### 5.13 Changing the program after it is started

After the machine starts running, you can change the program you selected to dry your laundry with a different program.

1. For example, to select Extra Dry program instead of the Iron Dryness, stop the program by pressing the Start / Pause button.
2. Turn the Program Selection knob to select the Extra Dry program.
3. Start the program by pressing the Start / Pause button.

## Operating the product

### Adding and removing laundry in stand-by mode

If you want to add or remove laundry after the drying program starts:

1. Press the Start/Pause button to take the machine into Stand-by mode. Drying operation stops.
2. Open the loading door, add or remove laundry and close the loading door.
3. Start the program by pressing the Start / Pause button.



The laundry added after the drying operation started may cause the dried laundry inside the machine to mix with the wet laundry and the laundry to remain damp after the operation ends.



Laundry adding and removing can be repeated as much as desired during drying operation. But this process would continuously interrupt the drying operation, and so would cause the program duration to lengthen and increase energy consumption. Thus, it is recommended to add laundry before the program starts.



If a new program is selected by changing the position of the program selection knob while your machine is in stand-by mode, the running program ends.



Do not contact the inner surface of the drum when adding or removing laundry during a continuing program. The drum surface is hot.

### 5.14 Canceling the program

If you want to cancel the program and end the drying operation for any reason after the machine starts running, press the On/Off button.



As it will be extremely hot inside the machine when you cancel the program while the machine is in operation; run the ventilation program to cool it down.

### 5.15 Program end

When the program ends, the Final/Wrinkle Prevention, Fiber Filter Cleaning and Water Tank Warning LEDs on the program follow up indicator light up. Loading door can be opened and machine becomes ready for a second run.

Press the On/Off button to turn off the machine.



In case the laundry is not removed after the program is completed, the wrinkle prevention program that lasts 2 hours starts in order to prevent wrinkling of the laundry that remains inside the machine.



Clean the fiber filter after each drying. (See. „Fiber filter and loading door inner surface“)



Empty the water tank after each drying. (See. „Emptying the water tank“)



## 6 Maintenance and cleaning

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

### 6.1 Cleaning Lint Filter / Loading Door Inner Surface

Lint and fiber released from the laundry to the air during the drying cycle are collected in the Lint Filter.



Such fiber and lint are generally formed during wearing and washing.







Always clean the lint filter and the inner surfaces of the loading door after each drying process.




You can clean the lint filter housing with a vacuum cleaner.

To clean the lint filter:



- Open the loading door.
- Remove the lint filter by pulling it up and open the lint filter.
- Clean lint, fiber, and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.

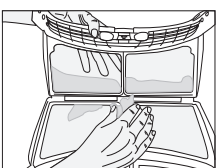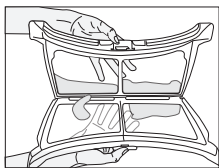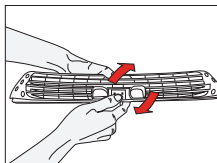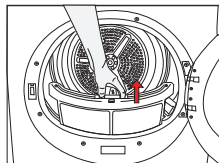

- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.

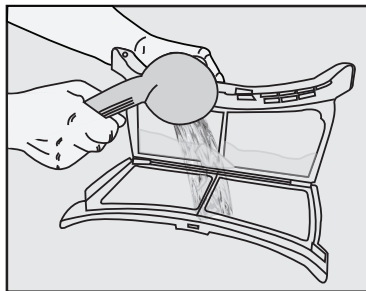

- Clean the entire inner surface of the loading door and loading door gasket with a soft damp cloth.

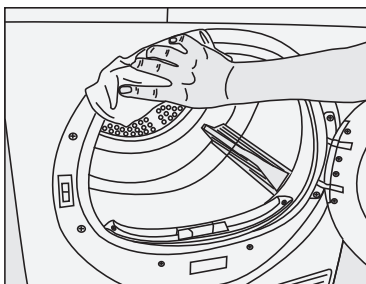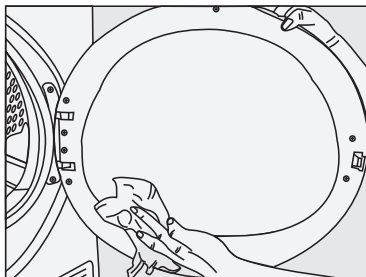

## Maintenance and cleaning

### 6.2 Cleaning the sensor

There are dampness sensors in the dryer that detect whether the laundry is dry or not. To clean the sensors:

- Open the loading door of the dryer.
- Allow the machine to cool down if it is still hot due to the drying process.
- Wipe the metal surfaces of the sensor with a soft cloth, dampened with vinegar and dry them.




Clean metal surfaces of the sensors 4 times a year.



Do not use metal tools when cleaning metal surfaces of the sensors.



Never use solvents, cleaning agents or similar substances for cleaning due to the risk of fire and explosion!

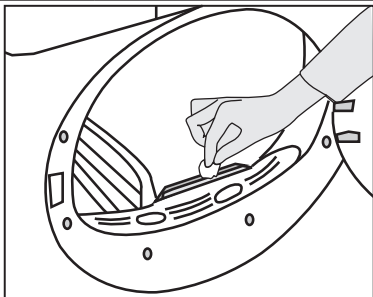

### 6.3 Draining the water tank

Dampness of the laundry is removed and condensed during drying process and the water that arise accumulates in the water tank. Drain the water tank after each drying cycle.



Condensed water is not drinkable!




Never remove the water tank when the program is running!


If you forget to drain the water tank, the machine will stop during the subsequent drying cycles when the water tank is full and the Water Tank warning symbol will flash. If this is the case, drain the water tank and press **Start / Pause** button to resume the drying cycle.

To drain the water tank:

Pull the drawer and remove the water tank carefully.

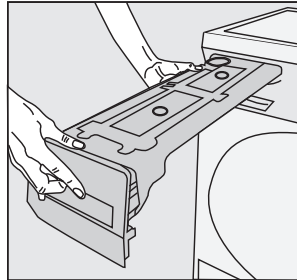

- Drain the water in the tank.

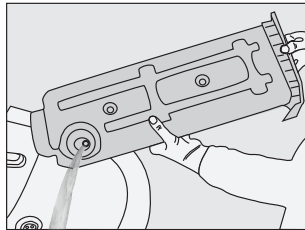


- If there is lint accumulation in the funnel of the water tank, clean it under running water.
- Place the water tank into its seat.



If the direct water draining is used as an option, there is no need to empty the water tank.

## Maintenance and cleaning


### 6.4 Cleaning the filter drawer

Lint and fiber that could not be captured by the lint filter are blocked in the filter drawer behind the kick plate. Clean the filter periodically when there is visible air collection on it or when the symbol lights up, if there is a filter drawer cleaning warning symbol «» available.


There is an one stage filter. This one stage filter is from sponge

To clean the filter drawer:


- Press the kick plate button to open the kick plate.

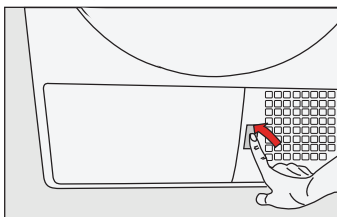


- Remove the filter drawer cover by turning it in the direction of arrow.

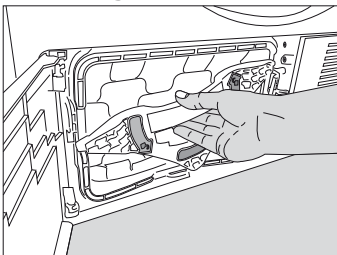


- Pull out the filter drawer.

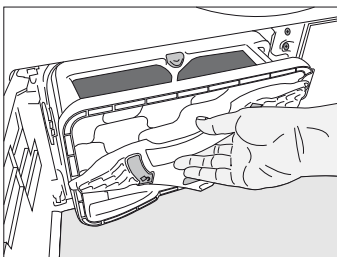

- Open the filter drawer by pressing the red button.

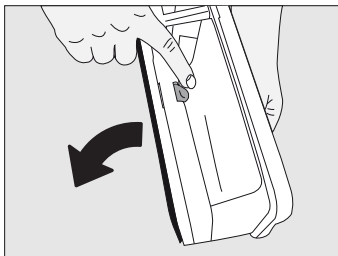

- Take out the filter drawer sponge.

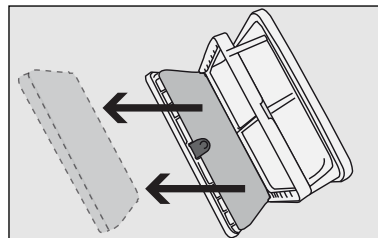


- Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water. Well-dry the sponge before storing it.




It is not necessary to clean the sponge if lint and fiber accumulation on it is not significant.

- Place the sponge back into its place.

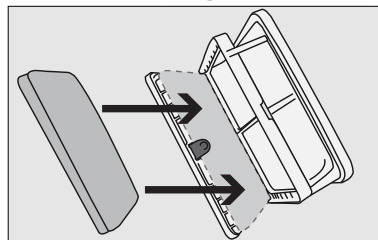


Please place the sponge carefully inside the frame of the filter cassette shown by arrows in order to avoid squeezing when filter drawer closed“:.


## Maintenance and cleaning

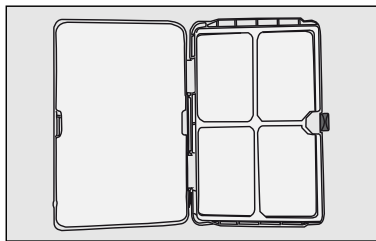


- Close the filter drawer as to lock the red button.

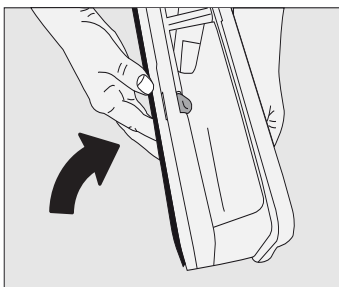

- Place the filter drawer back into its place, turn the filter drawer cover in the arrow direction and close it securely.

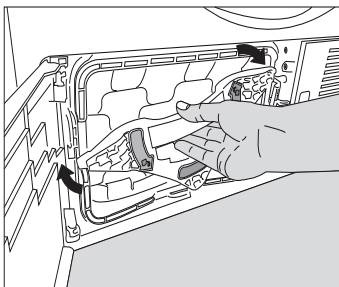

- Close the kick plate cover.

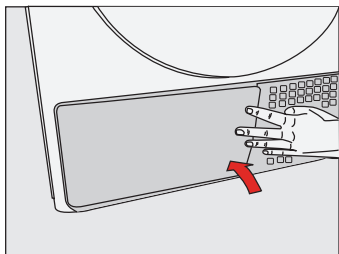



Drying without the filter drawer sponge in place will damage the machine!



A dirty lint filter and filter drawer will cause longer drying periods and higher energy consumption.

### 6.5 Cleaning the evaporator

Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner.

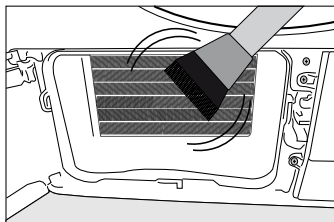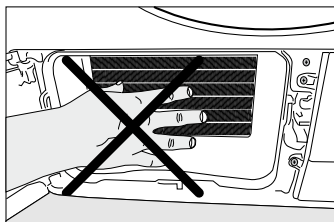

You can also clean by hand provided that you wear protective gloves. Do not attempt to clean with bare hands. Evaporator fins can harm your hand.

## 7 Troubleshooting

### Drying process takes too much time.

- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer may be blocked >>> clean the foam inside the filter drawer.
- Ventilation grids on the front side of the machine are blocked. >>> Remove the objects (if any) that block ventilation in front of the ventilation grids.
- Ventilation is not sufficient since the room where the machine is installed is very small. Open the door and window of the room to avoid the room temperature increase too much.
- Lime deposit has built up on the dampness sensor. >>> Clean the dampness sensor.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

### Laundry comes out wet at the end of drying.



After drying, the hot clothes feel damper than their actual dampness level.

- It is likely that the selected programme did not suit the laundry type. >>> Checking the care labels on clothes, select appropriate programme for the laundry type or use timer programmes in addition.
- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer may be blocked >>> clean the foam inside the filter drawer.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

### Dryer does not switch on or the programme does not start. Dryer does not start when it is set.

- It is not plugged in. >>> Make sure that the machine is plugged in.
- The loading door is ajar. >>> Make sure that the loading door is closed securely.
- Programme is not selected or the Start / Pause / Cancel button is not pressed. >>> Make sure that the programme is selected and the machine is not in Pause mode.
- Childproof Lock is activated. >>> Deactivate the Childproof Lock.

### Programme is interrupted without any cause.

- Loading door is ajar. >>> Make sure that the loading door is closed securely.
- There was a power failure. >>> Press Start / Pause / Cancel button to start the programme.
- Water tank is full. >>> Drain the water tank.

### Laundry has shrunk, become felted or deteriorated.

- A programme suitable for the laundry type is not used. >>> Check the garment tag and select a programme suitable for the fabric type.

### Drum lighting does not turn on. (On models with lamp)

- Dryer is not switched on with the On / Off button. >>> Make sure that the dryer is switched on.
- Lamp is defective. >>> Call Authorized Service Agent to have the lamp replaced.

## Troubleshooting

End/Anti-creasing symbol is on.

- Anti-creasing programme is activated in order to prevent laundry that has remained in the machine from creasing. >>> Turn off the dryer and take out the laundry.

End symbol is on.

- Programme is over. Turn off the dryer and take out the laundry.

Lint Filter Cleaning symbol is on.

- Lint filter is not cleaned. >>> Clean the lint filter.

Lint Filter Cleaning symbol is flashing.

- Filter housing is clogged with lints. >>> Clean the lint filter housing.
- A deposit has built up on the lint filter pores that may cause clogging. >>> Wash the lint filter with warm water.
- Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer.

Water leaks from the loading door

- Lint has accumulated on the inner surfaces of the loading door and on the surfaces of the loading door gasket. >>> Clean the inner surfaces of the loading door and the surfaces of the loading door gasket.

Loading door opens spontaneously.

- Loading door is ajar. >>> Push the loading door to close until you hear a locking sound.

Water Tank warning symbol is on/flashing.

- Water tank is full. >>> Drain the water tank.
- Water draining hose is bent. >>> If the product is connected directly to a wastewater drain, check the water drain hose.

Filter Drawer Cleaning warning symbol is flashing.

- Filter drawer is not cleaned. >>> Clean the sponge and the filter cloth in the filter drawer.



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

## PRODUCT FICHE

### Complying Commission Delegated Regulation (EU) No 392/2012

Supplier name or trademark		Beko
Model name		DS7433PA0 7188233830
Rated capacity (kg)		7.0
Type of Tumble Dryer	Air Vented	-
	Condenser	•
Energy efficiency class <sup>(1)</sup>		A++
Annual Energy Consumption (kWh) <sup>(2)</sup>		209,0
Type of Control	Automatic	•
	Non-automatic	-
Energy consumption of the standard cotton programme at full load (kWh)		1,68
Energy consumption of the standard cotton programme at partial load (kWh)		0,98
Power consumption of the off-mode for the standart cotton programme at full load, P <sub>0</sub> (W)		0,50
Power consumption of the left-on mode for the standart cotton programme at full load, P <sub>L</sub> (W)		1,00
The duration of the left on mode (min)		30
Standard cotton programme <sup>(3)</sup>		
Programme time of the standard cotton programme at full load, T <sub>dry</sub> (min)		174
Programme time of the standard cotton programme at partial load, T <sub>dry1/2</sub> (min)		107
Weighted programme time of the standard cotton programme at full and partial load (T <sub>w</sub> )		136
Condensation efficiency class <sup>(4)</sup>		B
Average condensation efficiency of the standard cotton programme at full load, C <sub>dry</sub>		86%
Average condensation efficiency of the standard cotton programme at partial load, C <sub>dry1/2</sub>		86%
Weighted condensation efficiency of the standard cotton programme at full load and partial load, C <sub>w</sub>		86%
Sound power level for the standard cotton programme at full load <sup>(5)</sup>		65
Built-in		-

• : Yes   - : No

(1) Scale from A+++ (most efficient) to D (least efficient)

(2) Energy consumption based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

(3) "Cotton cupboard dry programme" used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton

(4) Scale from G (lest efficient) to A (most efficient)

(5) Weighted average value — L<sub>WA</sub> expressed in dB(A) re 1 pW





# Palun lugege seda kasutusjuhendit!

Lugupeetud klient!

Täname, et eelistasite Beko toodet. Loodame, et teie toode, mis on valmistatud kõrgkvaliteetset ja -tehnoloogia abil, annab teile soovitud parimaid tulemusi. Enne toote kasutamist, soovime lugeda käesolevat käsiraamatut ja teisi kaasasolevaid dokumente hoolikalt. Hoidke need edaspidiseks alles. Kui annate selle toote kellelegi teisele, siis edastage ka see käsiraamat. Pöörake tähelepanu kõikidele üksikasjadele ja hoiatustele, mida on käsiraamatus täpsustatud, ja järgida seal antud juhtnööre.

Kasutage seda kasutusjuhendit mudeli jaoks, mis on esikaanel ära märgitud.



Lugege juhiseid.

## Sümbolite seletus

Selles käsiraamatus kasutatakse järgmisi tähiseid:



Oluline teave või kasulikud vihjed kasutamiseks.



Hoiatus! Ohtlik elule ja varale.



Elektrilöögioht.



Kuumad pinnad.



Tuleohtlik.



Toote pakkematerjalid on valmistatud taaskasutatavatest materjalidest vastavalt rahvusvahelistele keskkonnavalastele õigusaktidele.

Ärge visake pakendit minema koos olmejäätmete või muude jäätmetega. Viige see ettenähtud kogumispunkti, mis on kohalike omavalitsuste poolt määratud.



Toote valmistamisel on kasutatud kaasaegset keskkonnasõbralikku tehnoloogiat.

# 1 Tähtis teave seoses ohutuse ja keskkonnaga

See osa sisaldab ohutusjuhendeid, mis aitavad kaitsta isikliku vigastuse või varalise kahju tekkimise eest. Nende juhiste eiramise korral on garantii kehtetu.

## 1.1 Üldine ohutus

- Seadet võivad kasutada üle 8-aastased lapsed ja füüsilise, sensoorse või vaimse puudega või puuduvate kogemuste ja teadmistega isikud ainult siis, kui neid juhendatakse või kui nad on mõistnud seadme ohutu kasutamise põhimõtteid ning võimalikke kaasnevaid ohte. Lapsed ei tohi seadmega mängida. Lapsed ei tohi ilma järelevalveta seadet puhastada ega hooldada.
- Alla 3-aastaseid lapsi ei või seadme juurde lasta, v.a juhul kui toimub pidev järelevalve.
- Reguleeritavaid jalgu ei tohiks eemaldada. Vahet põranda ja kuivati vahel ei tohi vähendada materjalidega nagu vaip, puit ja kleeplint. See tekitab kuivatiga probleeme.
- Laske montaaž ja remont alati teostada **Ametliku Esindaja** poolt. Tootja ei vastuta volitamata isiku tegevusest tulenenud kahjude eest.
- Ärge peske kuivatit, pihustades seda veega, või valades sellele vett. Võite saada elektrilöögi!

### 1.1.1 Elektriohutus



Kui paigalduse käigus tehakse elektriühendusi, siis tuleb järgida elektriohutuse juhiseid.



Seadme toidet ei tohi võtta välisest toiteallikast, mis on ühendatud välise lülitusseadmega nt. taimeriga või kaitsmega, mida regulaarselt sisse ja välja lülitatakse.

## Tähtis teave seoses ohutuse ja keskkonnaga

- Ühendage kuivati maandatud pistikupessa, mis on kaitstud elektrikorgiga, mille väärtus on toodud kuivatitüübi etiketil. Maanduspaigaldus peab olema teostatud kvalifitseeritud elektriiku poolt. Meie firma ei vastuta mis tahes kahjude eest, mis tekivad, kui kuivatit on kasutatud oludes, kus maandamine ei ole kohalike seadustega kooskõlas.
- Pinge ja lubatud elektrikorgi kaitse on märgitud kuivatitüübi etiketil.
- Etiketil täpsustatud pinge peab olema võrdne vahelduvvoolu pingega.
- Kui kuivatit ei kasutata, siis võtke see pistikust välja.
- Kuivati paigaldamise, hooldamise, puhastamise ja remondi ajaks, võtke see pistikust välja.
- Ärge pistikut märgade kätega puudutage! Ärge kunagi eemaldage pistikut vooluvõrgust juhtmest tõmmates. Eemaldage pistik vooluvõrgust pistikust hoides.
- Ühendades kuivatit vooluvõrku, ärge kunagi kasutage pikendusjuhtmeid, multi-pistikuid ega adaptereid. Nii vähendate tulekahju tekkimise ja elektrilöögi võimalust.
- Peale paigaldamist peab voolupistik olema lihtsalt ligipääsetav.



Kahjustatud toitejuhe tuleb vahetada, sellest ametlikku esindajat teavitades.



Kui kuivati ei tööta korralikult, siis ei tohi seda, enne, kui see on ametliku esindaja poolt remonditud, kasutada! Elektrilöögi saamise oht!

# Tähtis teave seoses ohutuse ja keskkonnaga

## 1.1.2 Tooteohutus



Kontrollige, et kuivati õhusissevoolu ava oleks avatud ja hästi ventileeritud.

Toode sisaldab R290 külmutusainet.

R290 on keskkonnasõbralik, kuid tuleohtlik külmutusaine.

Hoidke seade kuumusallikatest, mis võiks põhjustada süttimise, eemal-



### **Tuleohutus:**

Allpool nimetatud pesu või esemeid ei tohi kuivatis kuivatada, kuna see on tuleohtlik.

- Pesemata pesu
- Esemeid, mis on määrdunud õli, atsetooni, alkoholi, kütteõli, petrooleumi, plekieemaldaja, tärpentini, parafiini või parafiini eemaldajaga, tuleb pesta kuumas vees rohke puhastusvahendiga. Alles seejärel võib neid kuivatis kuivatada.

Samal põhjusel tuleb, eriti eelnevalt nimetatud ainete plekke pesta väga hoolikalt. Selleks kasutage piisaval hulgal puhastusvahendit ja valige kõrge pesemise temperatuur.

## Tähtis teave seoses ohutuse ja keskkonnaga



### Allpool nimetatud pesu või esemeid ei tohi kuivatis tuleohutuse tagamiseks kuivatada:

- Rõivaid või patju, mida on polsterdatud vahtkummiga (vahtlateksiga), kilest dušimütse, veekindlat tekstiili, materjale, mida on kummiga tugevdatud ja vahtkummist patju.
- Rõivaid, mida on tööstuskeemiaga puhastatud. Selliseid esemeid nagu tulemasin, tikk, mündid, metallosad, nõel jne., mis võivad kahjustada trummelit või põhjustada funktsionaalseid rikkeid. Seetõttu tuleb kogu pesu enne kuivatisse panemist üle kontrollida. Ärge kunagi peatage kuivatit enne programmi lõppemist. Kui peate seda siiski tegema, siis võtke kogu pesu ruttu masinast välja ja laotage see soojuste hajutamiseks laiali.



Riided, mida pole korralikult pestud, võivad isesüttida ja seda isegi peale kuivatamise lõppemist.

- Peate tagama piisava ventilatsiooni, et vältida tagasilöögi efekti, st plahvatusohtlike gaaside kogunemist ruumi (k.a gaasid, mis väljuvad teist tüüpi kütust kasutavatest seadmetest, sh lahtine leek).



Aluspesu, mis sisaldab metallist tugevdusi, ei tohi kuivatis kuivatada. Kui metallist tugevdused kuivatamise ajal lahti tulevad või murduvad, siis võib see kuivatit kahjustada.



Kasutage pehmeid ja samalaadseid tooteid vastavalt nende tootjate juhistele.

# Tähtis teave seoses ohutuse ja keskkonnaga



Enne ja pärast igat kasutuskorda, tuleb kiudfiltrid ära puhastada. Ärge kunagi kuivatit ilma kiudfiltrita kasutage.

- Ärge kunagi proovige kuivatit ise parandada. Ärge parandage ega asendage kuivati osasid, kuigi oskate või olete suuteline seda teostama, v.a juhul, kui seda on selgelt soovitatud kasutusjuhendis või käsiraamatus. Vastasel juhul seate oma ja teiste elud ohtu.
- Kuivati paigaldamisel tuleb silmas pidada, et kuivati laadimiseks ette ei tohi jääda blokeeriv lukustatav uks, lükanduksed ega hingedega uks.
- Paigaldage oma kuivati kodus kasutamiseks sobivasse kohta. (Vannituppa, suletud rõdule, garaaži jne.)
- Veenduge, et lemmikloomad ei saa kuivatisse siseneda. Enne kuivati kasutamist, kontrollige selle sisemust.
- Kui kuivati laadimiseks on avatud, siis ärge sellele toetuge, kuna see võib ära kukkuda.
- Puuvillakiudel ei tohi lasta ümber trummelkuivati koguneda.

## 1.2 Pesumasina peale paigaldamine

- Kui kuivati pannakse pesumasina peale, siis tuleb kahe masina paigaldamisel kasutada fikseerimiseadet. Selle peab paigaldama ametlik esindaja.
- Kui kuivati ja pesumasin on üksteise peal, siis nende kogukaal (täiskoormusel) ulatub u 180 kilogrammini. Paigaldage seadmed kindlale põrandapinnale, millel on piisav kandevõime!



Pesumasinat ei tohi kuivati peale asetada. Pesumasina paigaldamisel, pöörake tähelepanu eespool nimetatud hoiatustele.

# Tähtis teave seoses ohutuse ja keskkonnaga

## Pesumasina ja kuivati paigaldustabel

Kuivati sügavus	Pesumasina sügavus			
	62 cm	60 cm	54 cm	< 50 cm
54 cm	Saab paigaldada			Ei saa paigaldada
60 cm	Saab paigaldada		Ei saa paigaldada	

### 1.3 Kasutamine

- Kuivati on mõeldud koduseks kasutamiseks. See ei sobi kasutamiseks ärilisel eesmärgil ja seda ei tohi kasutada muul otstarbel.
- Kasutage kuivatit ainult vastavalt tähistatud pesu kuivatamiseks.
- Tootja loobub igasugusest vastutusest, mis on tekkinud seoses vale kasutamise või transpordiga.
- Teie kuivati tööiga on 10 aastat. Selle aja jooksul on tagatud originaalsete varuosade kättesaadavus, et kuivati saaks korralikult töötada.

### 1.4 Laste turvalisus

- Pakkematerjalid on lastele ohtlikud. Hoidke pakkematerjalid lastest eemal.
- Elektriseadmed on lastele ohtlikud. Kui seade töötab, siis hoidke lapsed sellest eemal. Lapsed ei tohi kuivatiga mängida. Kasutage lapselukku, et lapsed kuivatiga mängida ei saaks.



Lapselukk asub juhtpaneelil. **(Vt Lapselukk)**

- Hoidke laadimisuks suletuna ka siis, kui kuivatit ei kasutata.

# Tähtis teave seoses ohutuse ja keskkonnaga

## 1.5 Vastavus WEEE direktiiviga ja jäätmete kõrvaldamine



Antud toode vastab EL WEEE direktiivile (2012/19/EL). Toode kannab elektrooniliste ja elektriliste seadmete jäätmete klassifikatsioonisümbolit (WEEE).

Toode on valmistatud kvaliteetsetest osadest ja materjalidest, mida saab taaskasutada ja on sobivad ümbertöötlemiseks. Seadet ei tohi selle kasutuse lõppedes utiliseerida koos tavaliste majapidamise jäätmetega. Viige kuivati elektrooniliste ja elektriliste seadmete kogumiskohta. Kogumispunktide kohta saate lisateavet oma kohalikust omavalitsusest.



R290 on tuleohtlik külmutusaine. Veenduge, et torustik ja süsteem ei oleks töötamise või paigaldamise ajal saanud vigastada. Hoidke seade kuumusallikatest, mis võiks rikke korral põhjustada süttimise, eemal-  
Ärge visake toodet hävitamiseks lõkkesse.

## 1.6 Vastavus RoHS direktiiviga:

Antud toode vastab EL RoHS direktiivile (2011/65/EL). Toode ei sisalda direktiivis märgitud kahjulikke ja keelatud materjale.

## 1.7 Pakkeinfo

Toote pakkematerjalid on valmistatud taaskasutatavatest materjalidest vastavalt rahvusvahelistele keskkonnaalastele õigusaktidele. Ärge utiliseerige pakkematerjale koos olme- ja muu prüügiga. Viige need kohaliku omavalitsuse poolt ettenähtud pakkematerjalide kogumispunkti.



# Tähtis teave seoses ohutuse ja keskkonnaga

## 1.8 Tehnilised andmed

ET

Kõrgus (reguleeritav)	84,6 cm / 86,6 cm*
Laius	59,7 cm
Sügavus	58,9 cm
Mahutavus (maksimaalne)	7 kg**
Netokaal ( $\pm$ 4 kg)	44 kg
Pinge	Vt andmesilti***
Nominaalne sisendvõimsus	
Mudeli kood	

\* Minimaalne kõrgus: Kõrgus reguleeritavate jalgadega on lõplik.

Maksimaalne kõrgus: Kõrgus reguleeritavate jalgadega on avatud maksimaalselt.

\*\* Kuiva pesu kaal enne pesemist.

\*\*\* Kuivatitüübi silt asub laadimisukse taga.



Kuivati tehnilised näitajad on esitatud tingimusel, et need ei paranda, ilma sellest teavitamata, toote kvaliteeti.




Selles käsiraamatus olevad arvnäitajad on skemaatilised ega pruugi tootega ühtida.



Kuivatil olevad tähised või muudes kuivatiga kaasas olevates dokumentides toodud väärtused on saadud laborist ja vastavuses asjakohaste standarditega. Sõltuvalt kuivati töö- ja keskkonnatingimustest, võivad need väärtused erineda.

## 2 Teie kuivati

### 2.1 Pakendi sisu

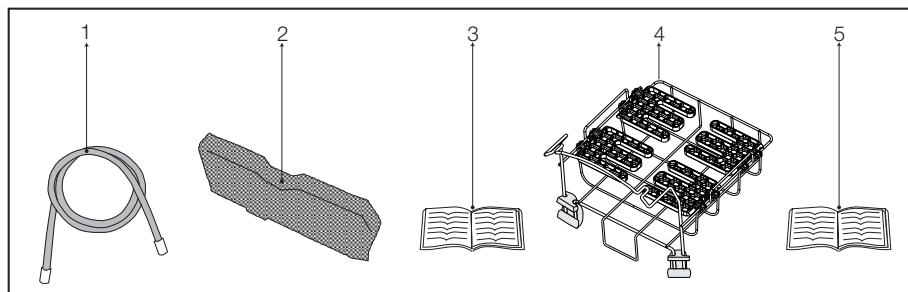

1. Vee väljalaskevoolik\*
2. Filtrisahtli tagavara käsn\*
3. Kasutusjuhend
4. Kuivatamiskorv\*
5. Kuivatamiskorvi kasutusjuhend\*

\*Teie masinat on võimalik varustada olenevalt mudelist.

## 3 Paigaldamine

Enne lähima ametliku esindajaga kuivati paigaldamise osas ühenduse võtmist, veenduge, et elektripaigaldis ja vee äravool on kasutusjuhendiga vastavuses. Kui need ei ole sobivad, siis pöörduge kvalifitseeritud elektri- ja tehniku poole.



Kuivati asukoha ettevalmistamise ning elektri- ja äravooluühenduse eest vastutab klient.



Enne paigaldamist kontrollige visuaalselt, kas kuivatil esineb võimalikke defekte. Kui kuivati on kahjustatud, siis ärge seda paigaldage. Kahjustatud seadme kasutamine on ohtlik.



Enne kuivati kasutamist, laske sellel 12 tundi seista.

### 3.1 Sobiv paigalduskoht

- Paigaldage kuivati stabiilsele ja ühtlasele tasapinnale.
- Kuivati on raske. Ärge seda üksinda liigutage.
- Kasutage kuivatit hästi ventileeritud ja tolmuvabas keskkonnas.
- Vahet pöranda ja kuivati vahel ei tohi vähendada materjalidega nagu vaip, puit ja kleeplint.
- Ärge kuivati ventilatsiooniavasid katke.
- Kuivati paigaldamisel tuleb silmas pidada, et kuivati laadimiskusse ette ei tohi jääda blokeeriv lukustatav uks, lükandused ega hingedega uks.
- Peale kuivati paigaldamist, peaks see jääma kohale, kus ühendused on tehtud. Kuivati paigaldamisel veenduge, et selle tagumine sein ei puutu millegagi kokku (kraan, pistikupesa jne).
- Paigaldage kuivati muu mööbli servadest vähemalt 1 cm kaugusele.
- Teie kuivati töötab temperatuuril +5°C kuni +35°C. Kui töötingimused jäävad sellest vahemikust väljapoole, siis see mõjutab kuivati kasutamist ja kuivati saab kahjustada.
- Kuivati tagumine pool tuleb paigutada vastu seina.



Ärge asetage kuivatit toitejuhtmele!

### \* Kui teie toode ei sisalda R290 ainet, ignoreerige alljärgnevat hoiatust




Toode sisaldab R290 külmutusainet.\*  
R290 on keskkonnasõbralik, kuid tuleohtlik külmutusaine.\*  
Kontrollige, et kuivati õhusisesevoolu ava oleks avatud ja hästi ventileeritud.\*  
Hoidke seadmest lahtine tuli eemal.\*

### 3.2 Transpordikaitsmete eemaldamine



Enne kuivati esmakordset kasutamist, eemaldage transpordikaitsmed.

- Avage laadimiskuss.
- Trumliis asub nailonist kott vahetpolüstürooliga. Hoidke seda kohast, mis on märgistatud **XX XX**ga.
- Tõmmake nailonit enda poole ja eemaldage transpordikaitsmed.

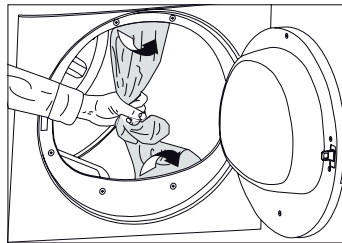

Kontrollige, et ühtki transpordikaitsmete osa trumliisse ei jääks.



### 3.3 Äravooluühendus

Seadmetel, mis on varustatud kondensaatoriga, koguneb vesi kuivatamise tsükli ajal veepaaki. Kogunenud vesi tuleb pärast igit kuivatustsükli ära nõrutada. Võite kogunenud vee nõrutada komplektis oleva vee väljalaskevooliku kaudu, ilma et peaksite perioodiliselt veepaaki tühjendama.

# Paigaldamine

## Vee väljalaskevooliku ühendamine

- 1-2 Tõmmake voolik kuivati tagant, kuhu see on kinnitatud, käsitsi välja. Ärge vooliku eemaldamiseks tööriistu kasutage.
- 3 Ühendage kuivatiga kaasas oleva väljalaskevooliku üks ots liitumispunktiga, kust eelmisel etapil vooliku eemaldasite.
- 4 Ühendage vooliku teine ots reovee äravoolu või kraanikausiga.

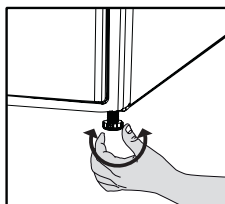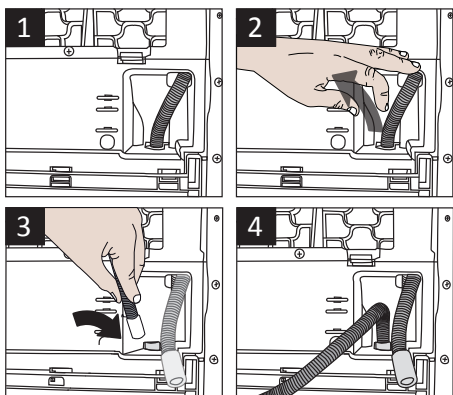

Ärge kunagi keerake reguleeritavaid jalgu oma korpustest välja.

## 3.5 Elektriühendus

Täpsemate vajalike elektriühenduse juhiste kohta paigaldustööde ajal (vt 1.1.1 Elektriohutus)

## 3.6 Kuivati transport

Enne kuivati transportimist, võtke see kontaktist välja.

Laske kuivatisse kogunenud veel välja valguda.

Kui on tehtud otsene vee äravooluühendus, siis eemaldage voolikuga ühendused.




Soovitame kanda kuivatit püstises asendis. Kui ei ole võimalik kuivatit püstises asendis kanda, siis soovitame seda kanda paremale poole (eestpoolt vaadates) kallutades.

## 3.7 Hoiatushelid



Töötamise ajal on normaalne, kui kuulete kompressorist mõnikord metalseid helisid.

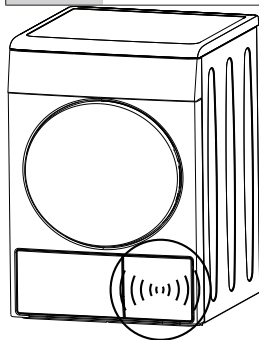

Vooliku ühendused tuleks teostada ohutult. Kui voolik vee väljavoolu ajal lahti tuleb, siis tekib uputus.



Vee väljalaskevoolik peaks olema kinnitatud maksimaalselt 80 cm kõrgusele.



Veenduge, et vee väljalaskevoolikule ei saaks peale astuda. Samuti ei tohi voolik olla volditud äravoolukoha ja masina vahele.


## 3.4 Jalgade reguleerimine

- Et kuivati töötaks vaiksemalt ja vibreerimata, siis peab kuivati seisma ühetasasel pinnal ja tasakaalustatud jalgadel. Tasakaalustage masinat, reguleerides selle jalgu.
- Pöörake jalgu vasakule või paremale, kuni kuivati seisab ühetasaselt ja kindlalt.

## Paigaldamine



Töötamise ajal kogutud vesi pumbatakse veepaaki. Selle protsessi käigus on tavaline, kui kuulete pumpamise müra.

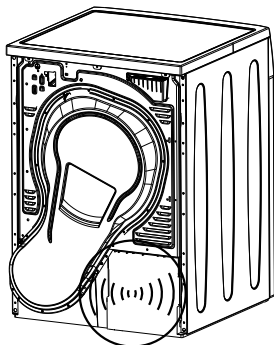

### 3.8 Valgustuslambi vahetamine

Juhul kui lampi kuivatis kasutatakse.

Kuivatis kasutatava pirni/LED-valgusti vahetamiseks, võtke ühendust ametliku esindajaga.

Lamp(bid), mida selles seadmes kasutatakse, ei sobi majapidamisruumide valgustamiseks. Selle lambi eesmärgiks on aidata kasutajal pesu mugavalt kuivatisse panna. Selles seadmes kasutatavad lambid peavad taluma äärmuslikke füüsilisi tingimusi, nagu vibratsioon ja temperatuurid üle 50°C.

## 4 Ettevalmistamine

### 4.1 Kuivatis kuivatamiseks sobiv pesu

Järgige alati rõivaste siltidel olevaid juhiseid. Kuivatage ainult pesu, mille sildil on näidatud, et see sobib kuivatis kuivatamiseks, ning veenduge, et olete valinud sobiva programmi.

PESUPESEMISE TÄHISED											
	Kuivatamise tähised	Sobib kuivatamiseks kuivatis	Mitte triikida	Örnkuivatus	Mitte kuivatada kuivatis	Mitte kuivatada	Ei sobi keemiliseks puhastamiseks				
	Kuivatamistingimused	Mis tahes temperatuuril	Kõrgel temperatuuril	Keskmisel temperatuuril	Madalal temperatuuril	Ilma kuumutuseta	Kuivatada rippuvas asendis	Kuivatada horisontaalselt	Riputada kuivama määrgalt	Kuivatada horisontaalselt varjus	Keemiline puhastus
	Triikimine			Triikida kõrge temperatuuril	Triikida keskmisel temperatuuril	Triikida madalal temperatuuril			Mitte triikida	Triikida ilma auruta	
	Kuivalt või auruga										
	Maksimaalne temperatuur			200 °C	150 °C	110 °C					

### 4.2 Pesu, mis ei sobi kuivatis kuivatamiseks



Õrnad tikitud kangad, villased esemed, siidist rõivad, õrnad ja väärtuslikud kangad, õhukindlad esemed ja tüllkardinad ei sobi masinas kuivatamiseks.

### 4.3 Ettevalmistused pesu kuivatamiseks

Pärast pesemist, võib pesu olla omavahel sassis. Eraldage pesu enne kuivatisse panemist.


- Kuivatage esemeid, millel on metallist lisaseadmeid (nt tõmblukud), tagurpidi.
- Kinnitage tõmblukud, konksud ja haagid ning pange nõobid kinni.

### 4.4 Energia säästmine

Järgmine teave aitab teil kasutada kuivatit ökoloogilisel ja energiat säästval viisil.

- Pesu pestes, tsentrifuugige seda suurimal võimalikul kiirusel. Sellega kaasneb lühem kuivatamise aeg ja vähenev energiakulu.
- Sorteeri pesu sõltuvalt tüübist ja paksusest. Kuivatage sama tüüpi pesu koos. Näiteks õhukesed köögirätikud ja laualinad kuivad kiiremini kui paksud vannilinad.
- Programmi valikul järgige kasutusjuhendit.
- Kuivatamise ajal ärge ilma vajaduseta laadimisust avage. Kui teil tuleb laadimisuks siiski avada, siis ärge seda pikka aega lahti hoidke.
- Ärge kuivatit töötamise ajal märga pesu lisage.
- Puhastage kiudfiltrit enne või pärast igat kuivatustsükli.
- Puhastage filtrit perioodiliselt, kui on silmaganähhtavat mustust või


## Ettevalmistamine

hakkab vastav sümbol põlema, kui seade on varustatud filtrisahtli puhastussümboliga «».

- Õhutage kuivatamise ajal tuba, kus kuivati asub.

### 4.5 Õige kandevõime

Järgige juhiseid osas "Programmi valik ja tarbimise tabel". Ärge pange masinasse rohkem, kui on tabelis võimsuse väärtuseks märgitud.

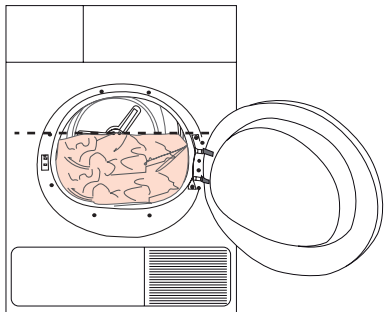

Ei ole soovitatav panna masinasse rohkem pesu, kui on näidatud alloleval joonisel. Kui masin on ülekoormatud, siis kuivatamise tulemused halvenevad. Lisaks võivad kuivati ja pesu kahjustusi saada.


Järgmised kaalud on esitatud näidetena.

Pesu	Ligikaudne kaal (g)*
Puuvillased tekikotid (kahekohalised)	1500
Puuvillased tekikotid (ühekohalised)	1000
Voodilina (kahekohalised)	500
Voodilina (ühekohalised)	350
Suured laualina	700
Väikesed laualina	250
Salvrätikud	100
Vannilina	700
Käterätikud	350
Pluusid	150
Puuvillased särgid	300
Särgid	250
Puuvillased kleidid	500
Kleidid	350
Teksased	700
Taskurätikud (10 tk)	100
T-särgid	125

\*Kuiva pesu kaal enne pesemist.

## 5 Toote kasutamine

### 5.1 Juhtpaneel

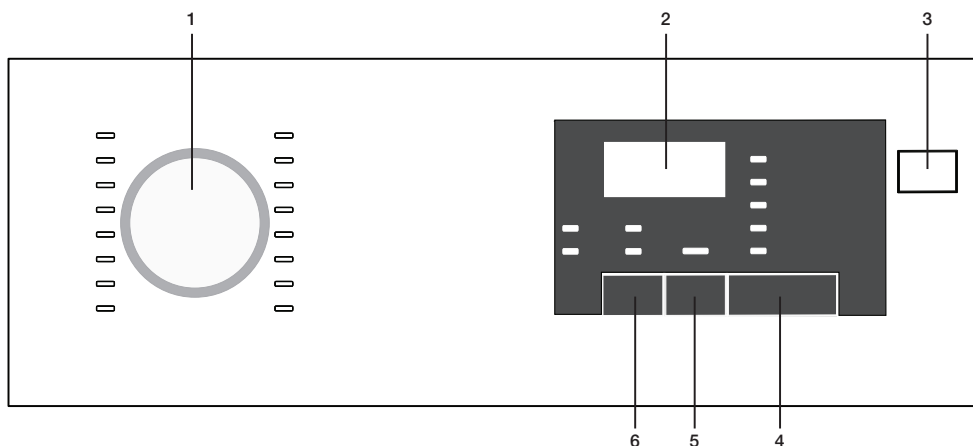

1. Programmi valimise nupp
2. Järelejäänud kestuse indikaator
3. Nupp ON/OFF (Sees/Väljas)
4. Nupp START/PAUSE (Alusta/Peata)
5. Nupp END DURATION (Lõpp/Kestus)
6. Nupp Hoiatusheli

### 5.2 Ekraani sümbolid





# Toote kasutamine

## 5.3 Masina ettevalmistamine

1. Ühendage masin pistikusse.
2. Pange pesu masinasse.
3. Vajutage nupule ON/OFF (Sees/Väljas).
4. Kui masina esimest korda sisse lülitate, siis lülitub see automaatselt programmile Puuvillane Kapikuiv Pesu.



ON/OFF (Sees/Väljas) nupule vajutamine ei tähenda programmi alustamist. Programmi alustamiseks, vajutage nupule START/PAUS (Alusta/Peata).

## 5.4 Programmi valimine

1. Sobiva programmi leidmiseks, vaadake allpool toodud kuivatamistasete tabelit.
2. Valige soovitud programm, kasutades nuppu Programmi Valimine.

Ekstra kuiv	Normaalsel temperatuuril kuivatatakse ainult puuvillast pesu. Paks ja mitmekihiline pesu (käterätikud, linad, teksased jne) kuivatatakse nii, et selle saab triikimata kappi panna.
Kapikuiv	Tavaline pesu (laudlinad, aluspesu jne) kuivatatakse nii, et selle saab triikimata kappi panna.
Kapikuiv Pluss	Tavaline pesu (laudlinad, aluspesu jne) on kuivatatud nii, et selle saab kohe kappi panna, kuid kuivatatakse rohkem kui Kapikuiva programmi korral.
Triikimiskuiv	Tavaline pesu (särgid, kleidid jne) kuivatatakse nii, et see on valmis triikimiseks.



Detailsema info saamiseks, vt "Programmi valik ja tarbimise tabel".

## 5.5 Põhiprogrammid

Põhiprogrammid on esitatud allpool riidetüüpe arvestades.

### • Puuvillane

Selle programmiga kuivatage vastupidavat pesu. See kuivatab tavatemperatuuril. Sobib puuvillasele pesule (linad, voodiriideid, rätikud, hommikumantlid jms).

### • Sünteetiline

Selle programmiga kuivatage pesu, mis ei ole väga vastupidav. Sobib sünteetilisele pesule.

## 5.6 Lisaprogrammid

Järgmised lisaprogrammid on saadaval vaid eritingimustega masinatele.



Lisaprogrammid võivad teie masina spetsifikatsioonidest erineda.



Et saada kuivatis programmide abil paremaid kuivatustulemusi, tuleks pesu ka pesumasinas pesta ja väänata sobiva programmiga.

### • Teksased

Kuivatage teksaseid, mis on väänatud pesumasinas kõrge rpm juures.

### • Sport

Kuivatage pesu, mis on valmistatud sünteetilisest, puuvillast või segatüüpi kangast.

### • Xpress

Võite seda programmi kasutada puuvillase pesu, mis on eelnevalt väänatud pesumasinas kõrge rpm juures, kuivatamiseks. See kuivatab 1 kg puuvillast pesu (3 särki / 3 T-särki) 50 minutiga.

### • Igapäevane

Igapäevane programm on puuvillase ja sünteetilise pesu kuivatamiseks ja kestab 110 minutit.

### • Särk

Kuivatab särke õrnemalt, mistõttu tekitab vähem kortse ja on lihtsam triikida.

### • Beebipesu

Programm beebi riiete, mille sildil on kuivatamist lubav tähis, kuivatamiseks.



Pärast programmi lõppemist, võivad särgid olla veidi niisked. On soovitatav, et särke ei jäeta kuivatisse.

## Toote kasutamine

- **Õrn**

Võite kuivatada delikaatset pesu, mida võib kuivatis kuivatada, või pesu, mida soovitatakse käsitsi pesta (siidpluusid, õhuke aluspesu jne) madalal temperatuuril.



Vältimaks kortse ja kahjustusi, on soovitatav, et kuivatate oma delikaatset pesu pesukotis. Programmi lõppedes, võtke pesu masinast välja ja riputage see koheselt, et ei tekiks kortse.

- **Värskendav**

See programm tuulutab 10 minutit ilma sooja õhuta. Võite tuulutada puuvillast ja linast pesu, mis on seisnud pikka aega suletud tingimustes, et eemaldada kopituslõhna.

- **Ajastatud programmid**






Saate valida 30 min ja 45 min pikkused programmid, et saavutada soovitud kuivatamise taset madalal temperatuuril.




Selles programmis kuivatab masin valitud aja jooksul, sõltumata kuivatamise tasemest.

# Toote kasutamine

## 5.7 Programmi valik ja tarbimise tabel

ET				
Programmid	Mahutavus (kg)	Pesumasina tsentri-fuugi kiirus (p/min)	Ligikaudne järelejäänud niiskuse kogus	Kuivamisaeg (minutit)
Puuvillane / Värviline				
 Ekstra kuiv	7	1000	% 60	185
 Kapikuiv	7	1000	% 60	174
 Triikimiskuiv	7	1000	% 60	140
Särk	1,5	1200	% 60	60
Teksased	4	1200	%50	150
Igapäevane	4	1200	%50	110
Sport	4	1000	%60	135
Xpress	1	1200	%50	50
Õrn	2	600	%40	70
Beebipesu	3	1000	% 60	80
Sünteeiline pesu				
 Kapikuiv	3,5	800	% 40	70
 Triikimiskuiv	3,5	800	% 40	60
Energiakulu				
Programmas	Mahutavus (kg)	Pesumasina tsentri-fuugi kiirus (p/min)	Ligikaudne järelejäänud niiskuse kogus	Energiakulu kWh
Puuvillane pesu / Kandmisvalmis*	7	1000	% 60	1,68
Puuvillane / Triikimisvalmis	7	1000	% 60	1,3
Sünteeiline / Kandmisvalmis	3,5	800	% 40	0,59

 „Puuvilla kappkuivatus programm“ kasutatav täis ja osalisel koormusel, on standard kuivatusprogramm, millele info andmeplaadil ja toote infolehel viitab, programm sobib tavalise puuvillase märja pesu kuivatamiseks ning tegemist on kõige energiasäästlikuma programmiga puuvillase pesu kuivatamiseks.

\* : Energiatarbimise märgistuse standard programm (EN 61121: 2012). Kõik filtrid tuleb enne katsete seeriat puhastada.Kõik tabelis olevad väärtused on määratletud vastavalt EN 61121:2012 standardile. Tarbimise väärtused võivad erineda tabeli väärtustest. Seda sõltuvalt pesu tüübist, pesumasinas väänamisest, keskkonningimustest ja elektri pingemuutusest.

## Toote kasutamine

### 5.8 Lisafunktsioonid

#### Lõppemise helihoiatus

Kuivati teeb programmi lõppedes helihoiatusi. Kui te ei soovi helihoiatusi, siis vajutage nuppu SOUND NOTIFICATION (Heliteade). Kui vajutate Heliteate nupule, siis süttib see põlema ja programmi lõppedes helihoiatust ei tule.



Saate valida selle funktsiooni enne või pärast programmi algust.


### 5.9 Hoiatussümbolid



Hoiatussümbolid võivad erinevate kuivatimudelite osas erineda.

#### Kuidfiltrit puhastamine

Programmi lõppedes süttib hoiatustuli, mis näitab, et filtrit tuleb puhastada.

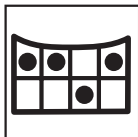

Kui peale filtrit puhastamist hoiatustuli edasi vilgub, siis vaadake peatükki "Tõrkeotsing".

#### Veepaak

Programmi lõppedes süttib hoiatustuli, mis näitab, et veepaaki tuleb tühjendada. Kui veepaak programmi kestel täitub, siis hakkab hoiatustuli vilkuma ja masin läheb ooterežiimile. Sellisel juhul tühjendage veepaak veest ja käivitage programm, vajutades nupule START/PAUSE (Alusta/Peata). Hoiatustuli kustub ja programm jätkub.



#### Laadimisüks on lahti

Kui laadimisüks on lahti, siis vilgub tuli START/PAUSE (Alusta/Peata).

### 5.10 Lõpu edasilükkamine

Lõpu edasilükkamise funktsiooniga saate lükata programmi lõppu edasi kuni 24 tundi.

1. Avage laadimisüks ja pange pesu masinasse.
2. Valige kuivatamise programm.
3. Vajutage nupule Lõpu Edasilükkamine ja valige soovitud viivitusae. Süttib tuli Lõpu Edasilükkamine. (Lõpu edasilükkamise aeg liigub nupule vajutades edasi).
4. Vajutage nupule START/PAUSE (Alusta/Peata). Algab lõpu edasilükkamise pöördloendus. Vilkuma hakkab ":" märk, mis asub keset kuvatud edasilükkamise kestuse aega.



Lõpu edasilükkamise ajal saate pesu lisada või eemaldada. Edasilükkamise aeg, mida ekraanil näidatakse, on tavalise kuivatamisaja ja lõpu edasilükkamise aja summa. Kui lõpu edasilükkamise pöördloendus on lõppenud, siis Lõpu edasilükkamise tuli kustub. Hakkab kuivatamine ja süttib kuivatamiset sümboliseeriv tuli.

#### Edasilükkamise aja muutmine

Kui soovite pöördloenduse ajal edasilükkamise aega muuta, siis:

1. Tühistage programm, vajutades nupule ON/OFF (Sees/Väljas). Lülitage kuivatusmasin taas sisse, vajutades nupule ON/OFF (Sees/Väljas). Kui kuivati esimest korda sisse lülitub, siis hakkab automaatselt tööle programm Puuvillane Kapikuiv Pesu.
2. Valige soovitud programm, kasutades nuppu Programmi Valimine.
3. Korrake lõpu edasilükkamise protseduuri.
4. Programmi käivitamiseks, vajutage nupule START/PAUSE (Alusta/Peata).

# Toote kasutamine

## Lõpu edasilükkamise funktsiooni tühistamine

Kui soovite lõpu edasilükkamise funktsiooni tühistada ja programmi koheselt käivitada, siis:

1. Tühistage programm, vajutades nupule ON/OFF (Sees/Väljas). Lülitage kuivati taas sisse, vajutades nupule ON/OFF (Sees/Väljas). Kui kuivati esimest korda sisse lülitub, siis hakkab automaatselt tööle programm Puuvillane Kapikuiv Pesu.
2. Valige soovitud programm, kasutades nuppu Programmi Valimine.
3. Programmi käivitamiseks, vajutage nupule START/PAUSE (Alusta/Peata).

## 5.11 Programmi käivitamine

Programmi käivitamiseks, vajutage nupule START/PAUSE (Alusta/Peata).

Süttivad START/PAUSE (Alusta/Peata) ja kuivatamist märkivad tuled, mis viitavad programmi algamisele. Vilkuma hakkab " : " märk, mis asub keset allesjäänud kestuse aega.

## 5.12 Lapselukk

Masinal on lapselukk, tänu millele nuppudele vajutamine programmi kulgemist ei mõjuta.

Kui Lapselukk on aktiivne, siis ei toimi ükski nupp, välja arvatud ON/OFF (Sees/Väljas) nupp.

Lapseluku aktiveerimiseks, vajutage korraga nuppudele SOUND NOTIFICATION (Heliteade) ja END DURATION (Lõpuaja Edasilükkamine) ning hoidke neid 3 sekundit all.

Lapselukk tuleb deaktiveerida, kui soovite alustada uue programmiga, peale praeguse programmi lõppemist, või kui soovite sekkuda praeguse programmi tegevusse. Lapseluku deaktiveerimiseks, vajutage korraga samadele nuppudele ja hoidke neid all 3 sekundit.



Kui lapselukk on aktiveeritud, siis süttib ekraanil luku tähis.



Lapselukk deaktiveerub, kui masin on ON/OFF (Sees/Väljas) nupu kaudu välja ja sisse lülitatud.

Kui lapselukk on aktiivne ja samal ajal vajutatakse ükskõik millisele nupule (v.a ON/OFF (Sees/Väljas) nupule) või kui keeratakse Programmi Valimise nuppu, siis kostub hoia-tusheli.

## 5.13 Programmi muutmine pärast selle käivitamist

Pärast masina käivitumist, saate valitud programmi muuta.

1. Näiteks, et valida Triikimiskuiva programmi asemel Ekstra Kuiv, vajutage praeguse programmi peatamiseks nupule START/PAUSE (Alusta/Peata).
2. Pöörake Programmi Valimise nuppu, et valida programm Ekstra Kuiv.
3. Programmi käivitamiseks, vajutage nupule START/PAUSE (Alusta/Peata).

## Ooterežiimil saate pesu lisada ja eemaldada.

Kui soovite pesu lisada või eemaldada pärast kuivatamise programmi algamist, siis:

1. Vajutage nupule START/PAUSE (Alusta/Peata), et masin läheks ooterežiimile. Kuivatamine lõppeb.
2. Avage laadimisuks, lisage või eemaldage pesu ja sulgege laadimisuks.
3. Programmi käivitamiseks, vajutage nupule START/PAUSE (Alusta/Peata).



Kui lisate pesu kuivatamisprotsessi kestel, siis juba masinas kuivatatud pesu seguneb märja pesuga ja pesu võib pärast programmi lõppemist olla niiske.



Pesu kuivatamise ajal võite pesu lisada ja eemaldada nii palju kui soovite. See aga katkestab kuivatamisprotsessi ja kuivatamine võib võtta kauem aega ning võib kasvada ka energiakulu. Seega on soovitatav lisada pesu enne programmi algust.



Kui uus programm on valitud, muudetes Programmi Valimise nuppu, samal ajal kui masin on ooterežiimil, siis töötav programm lõpetab tegevuse.

## Toote kasutamine



Ärge programmi kestel pesu lisamisel või eemaldamisel trumli sisepinda puudutage. Trumli pind on kuum.

### 5.14 Programmi tühistamine

Kui soovite programmi tühistada ja kuivatamise mingil põhjusel pärast masina käivitumist lõpetada, siis vajutage nupule ON/OFF (Sees/Väljas).



Kuna masina sees on programmi tühistades masina töötamise tõttu väga kuum, siis jahutage masinat ventilatsiooni-programmi abil.

### 5.15 Programmi lõpp

Kui programm lõpeb, siis süttivad indikaatorid Lõplik/Kortsude Ennetamine, Kiudfiltri Puhastamine ja Veepaagi hoiatustuli. Võite avada laadimisukse ja masin on taas kasutusvalmis.

Masina väljalülitamiseks, vajutage nupule ON/OFF (Sees/Väljas).



Kui pesu pärast programmi lõppemist ei eemaldata, siis hakkab tööle kortsude ennetamise programm, mis kestab 2 tundi.



Pärast igat kuivatuskorda, tuleb kiudfiltrit puhastada. (Vt "Kiudfilter ja laadimisukse sisepind")



Pärast igat kuivatuskorda, tuleb veepaaki tühjendada. (Vt "Veepaagi tühjendamine")

## 6 Hooldus ja puhastamine

Kuivati korrapärasel puhastamisel pikeneb selle kasutusiga ja väheneb rikete võimalus.

### 6.1 Kiudfiltri / Laadimisukse sisepinna puhastamine

Kiud, mis pesu kuivatamise ajal vabanevad, kogunevad kiudfiltrile.



Puuvillakiude ja kiudainete vabanemine on tavaline.



Puhastage kiudfiltrit ja laadimisukse sisepinda pärast igit kuivatust protsessi.




Võite puhastada kiudfiltri filtripesa tolmuimejaga.







Kiudfiltri puhastamiseks:

- Avage laadimisukse.
- Eemaldage kiudfilter, seda üles tõmmates, ja avage see.
- Eemaldage filtrilt tolmu-, kiude- ja puuvillapundar kas käsitsi või pehme tolmulapiga.
- Sulgege kiudfilter ja pange see oma kohale tagasi.

- Pärast mõneajalist kuivati kasutamist, võib kiudfiltrile koguneda filtri ummistumist põhjustav tolmukiht. Kiudfiltri pinnale kogunenud tolmukihi eemaldamiseks, peske seda sooja veega. Enne kiudfiltri tagasi panemist, kuivatage see täielikult.

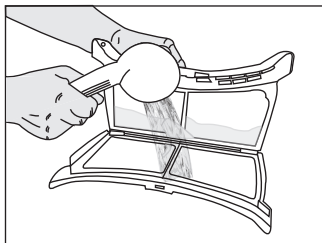

- Puhastage kogu laadimisukse sisepind ja selle tihend pehme niiske lapiga.

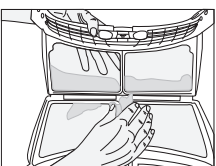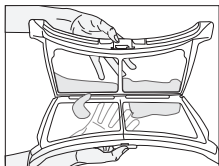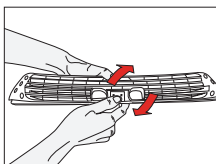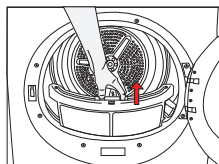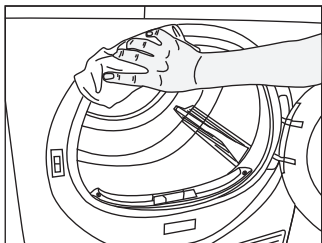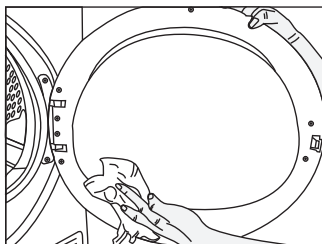

# Hooldus ja puhastamine

## 6.2 Anduri puhastamine

Kuivatis on niiskusandurid, mis märkavad, kas pesu on kuiv või mitte.

Andurite puhastamiseks:

- Avage kuivati laadimisuks.
- Kui masin on veel kuivatamisprotsessist kuum, siis laske masinal jahtuda.
- Pühkige andurite metallpindu äädikas niisutatud pehme lapiga ja kuivatage need.




Puhastage andurite metallpindu 4 korda aastas.



Ärge kasutage andurite metallpindade puhastamisel metallist tööriistu.



Ärge kasutage puhastamisel kunagi lahusteid, puhastusvahendeid või samalaadseid aineid, kuna võib tekkida tulekahju- ja plahvatusoht!

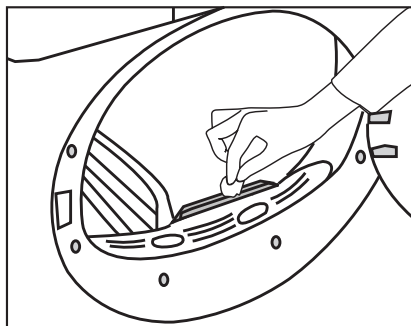

## 6.3 Veepaagi tühjendamine

Pesu kuivatamisel eemaldatakse niiskus ja vesi kondenseerub. Tekkiv vesi koguneb veepaaki. Pärast iga kuivatuskorda, tuleb veepaaki tühjendada.



Kondenseeritud vesi on joogiks kõlbmatu!




Programmi töötamise ajal ei tohi veepaaki kunagi eemaldada!


Kui unustate veepaaki tühjendada, siis masin peatub järgneval kuivatamistsükliil, kui veepaak on täis ja hakkab vilkuma Veepaagi hoiatustähis. Sellisel juhul tühjendage veepaak ja vajutage nupule **ALUSTA/PEATA** ning jätkake kuivatustsükliga.

Veepaagi tühjendamiseks:

Tõmmake sahtel lahti ja eemaldage veepaak hoolikalt.

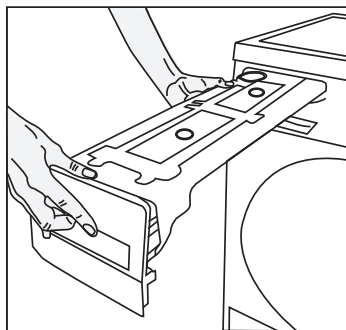

- Tühjendage veepaak.

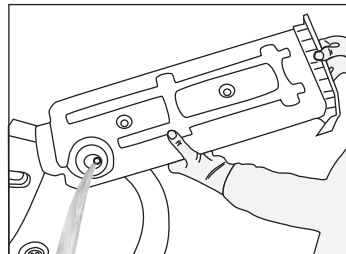

- Kui veepaagi lehrtsisse on kogunenud kiudaineid, siis puhastage see voolava vee all.
- Pange veepaak oma kohale tagasi.




Otsese veeärravoolu kasutamise korral, pole veepaaki tühjendada vaja.




# Hooldus ja puhastamine

## 6.4 Filtrisahtli puhastamine


Ebemed ja kiud, mida ebemefilter kinni pole püüdnud, kogunevad sokliplaadi taha asuvasse filtersahtlisse. Puhastage filtrit regulaarselt kui selle peale tekivad nähtavad õhumullid või filtersahtli puhastamise hoiatusmärgise «» olemasolu korral siis, kui vastav sümbol põlema läheb. Selles on ühe tasandi filter. See ühe tasandi filter on käsnyas

Filtersahtli puhastamiseks:


- Sokliplaadi avamiseks vajutage sokliplaadi nuppu.

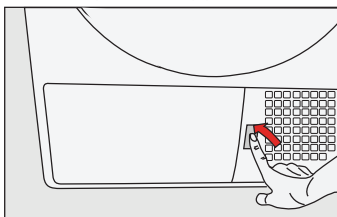


- Eemaldage filtersahtli kate, keerates seda noolega näidatud suunas.

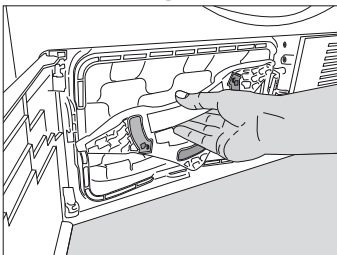


- Tõmmake filtersahtel välja.

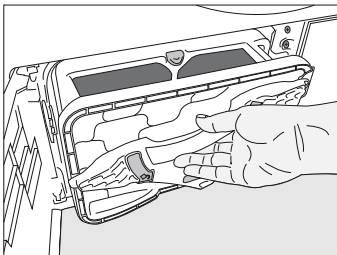

- Avage filtersahtel, vajutades punast nuppu.

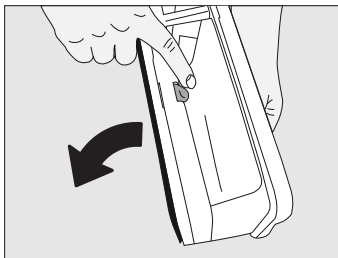

- Võtke filtersahtli käsny välja.

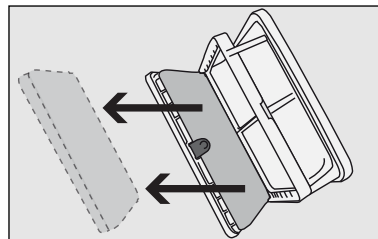


- Käsn pinnalt kiudude ja ebemete eemaldamiseks peske filtersahtli käsna käsitsi. Pärast käsna pesemist pigistage seda käte vahel ja eemaldage üleliigne vesi. Enne tagasi panemist kuivatage käsna korralikult.




Käsna ei ole vaja puhastada, kui sellele ei ole eriti palju ebemaid ja kiudusid kogunenud.

- Pange käsny oma kohale tagasi.

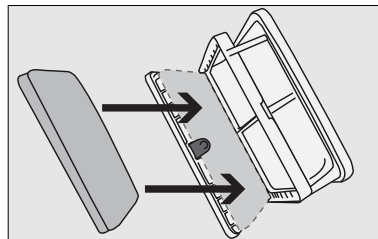


Filtri kokkusurumise vältimiseks filtersahtli sulgemisel paigutage käsny hoolikalt nooltega tähistatud filterkasseti raami sisse“:


# Hooldus ja puhastamine

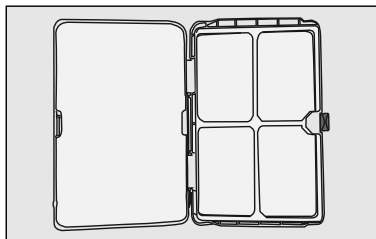


- Sulgege filtersahtel ja punane nupp lukustub.

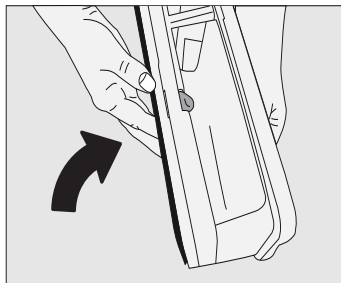

- Pange filtersahtel oma kohale tagasi, keerake filtersahtli katet noolega näidatud suunas ja sulgege see kindlalt.

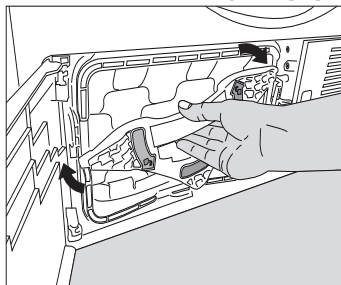

- Sulgege sokliplaadi kate.

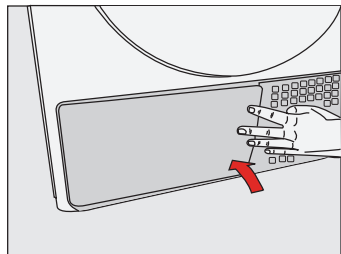



Kui filtersahtli käs on paigaldamata, kahjustab kuivatamine seadet!



Saastunud ebemefilter ja filtersahtel põhjustavad kuivatamise aja pikenedmist ja suuremat energiatarbimist.

## 6.5 Auruti puhastamine

Puhastage tolmuimejaga kiud, mis on kogunenud aurusti (asub filtrisahtli taga) ribidele.

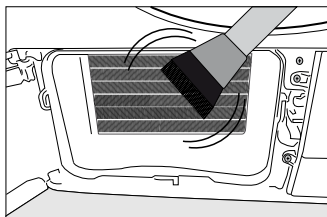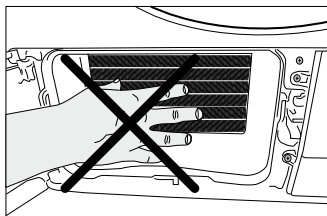

Saate puhastada ka käsitsi, tingimusel, et kannate kaitsekindaid. Ära üritage paljaste kätega puhastada. Aurusti ribad võivad teie käsi kahjustada.

## 7 Tõrkeotsing

Kuivatusprotsess võtab liiga kaua aega.

- Kiudfiltri poorid on ummistunud. >>> *Peske kiudfiltrit sooja veega.*
- Filtrisahtel on ummistunud. >>> *Puhastage filtrisahtli käsna ja filtrilappi.*
- Ventilatsioonivõred masina esiküljel on blokeeritud. >>> *Eemaldage ventilatsiooniavasid blokeerivad objektid (kui neid on).*
- Ventilatsioon ei ole piisav, kuna tuba, kuhu masin on paigaldatud, on väga väike. >>> *Avage ruumi uks ja aken, et vältida ruumi temperatuuri tõusu.*
- Niiskuse sensorile on tekkinud lubjakiht. >>> *Puhastage niiskuse sensor.*
- Masinasse on pandud liiga palju pesu. >>> *Ärge pange kuivatisse liiga palju pesu.*
- Pesu pole piisavalt tsentrifuugitud. >>> *Keerutage oma pesu pesumasinas suuremal kiirusel.*

Kuivatamise lõppedes on pesu endiselt niiske.



Pärast kuivatamist, tunduvad kuumad riided niiskemad, kui nad tegelikult on.

- On tõenäoline, et valitud programm ei sobinud sellele pesutüübile >>> *Vaadake pesul olevaid silte, valige sobiv programm või kasutage lisaks taimeriga programme.*
- Kiudfiltri poorid on ummistunud. >>> *Peske kiudfiltrit sooja veega.*
- Filtrisahtel võib olla ummistunud; puhastage filtrisahtlis asuv vaht.
- Masinasse on pandud liiga palju pesu. >>> *Ärge pange kuivatisse liiga palju pesu.*
- Pesu pole piisavalt tsentrifuugitud. >>> *Keerutage oma pesu pesumasinas suuremal kiirusel.*

Kuivati ei lülitu sisse või programm ei hakka tööle. Kuivati ei hakka peale programmi valimist tööle.

- Masin ei ole vooluvõrgus. >>> *Veenduge, et voolujuhe on vooluvõrku ühendatud.*
- Laadimisuks on lahti. >>> *Veenduge, et laadimisuks on kindlalt suletud.*
- Programm ei ole valitud või ei ole vajutatud nupule START/PAUSE/CANCEL (Alusta/Peata/Tühista). >>> *Veenduge, et programm on valitud, ja et masin ei oleks pausirežiimis.*
- Lapselukk on aktiveeritud. >>> *Deaktiveerige Lapselukk.*

Programm katkes ilma põhjuseta.

- Laadimisuks on lahti. >>> *Veenduge, et laadimisuks on kindlalt suletud.*
- Elekter läks ära. >>> *Vajutage nupule START/PAUSE/CANCEL (Alusta/Peata/Tühista)*
- Veepaak on täis. >>> *Tühjendage veepaak.*

Pesu on kokku tõmbunud, vildistunud või halvenenud.

- Pesutüübi jaoks pole kasutatud sobivat programmi. >>> *Vaadake pesul olevat silti ja valige riidetüübile sobiv programm.*

Trumli valgustus ei sütti. (Lampidega mudelite korral)

- Kuivatit ei ole nupuga ON/OFF (Sees/Väljas) sisse lülitatud. >>> *Veenduge, et kuivati on sisse lülitatud.*
- Lamp on katki. >>> *Helistage lambi asendamiseks ametlikule esindajale.*

Põleb sümbol Lõplik/Kortsumisvastane.

- Aktiveerunud on kortsumisvastane programm, et takistada masinas oleva pesu kortsumist. >>> *Lülitage kuivati välja ja võtke pesu välja.*

## Tõrkeotsing

Põleb Lõppemise sümbol.

- Programm on läbi. Lülitage kuivati välja ja võtke pesu välja.

Põleb Kiudfiltri Puhastamise sümbol.

- Kiudfilter vajab puhastamist. >>> *Puhastage kiudfilter.*

Vilgub Kiudfiltri Puhastamise sümbol.

- Filtripesa on kiududega ummistunud. >>> *Puhastage kiudfiltri filtripesa.*
- Kiudfiltri pooridele on ladestunud sete, mis võib põhjustada ummistusi. >>> *Peske kiudfiltrit sooja veega.*
- Filtrisahtel on ummistunud. >>> *Puhastage filtrisahtli käsna ja filtrilappi.*

Laadimisukse vahelt lekib vett.

- Laadimisukse sisepinnale ja selle tihendile on kogunenud kiud. >>> *Puhastage laadimisukse sisepind ja selle tihend.*

Laadimisuks avaneb spontaanselt.

- Laadimisuks on lahti. >>> *Lükake laadimisuks kinni, kuni kuulete luku sulgemise heli.*

Põleb/vilgub Veepaagi hoiatussümbol.

- Veepaak on täis. >>> *Tühjendage veepaak.*
- Vee väljalaskevoolik on väändunud. >>> *Kui masin on ühendatud otse reovee äravooluga, kontrollige vee väljalaskevoolikut.*

Vilgub Filtrisahtli Puhastamise hoiatustuli.

- Filtrisahtel vajab puhastamist. >>> *Puhastage filtrisahtli käsna ja filtrilapp.*



Kui te ei saa riket kõrvaldada, kuigi järgsite käesolevaid juhised, siis konsulteerige oma edasimüüja või ametliku esindajaga. Ärge kunagi proovige rikkis masinat ise remontida.

## TOOTE ANDMELEHT

Vastab Komisjoni delegeeritud määrusele (EL) Nr. 392/2012

Tarnija nimi või kaubamärk		Beko
Mudeli nimi		DS7433PA0 7188233830
Nimimahutavus (kg)		7.0
Trummelkuivati tüüp	Ventileeriv	-
	Kondensaator	•
Energiaühikuse klass <sup>(1)</sup>		A++
Aastane energiatarve (kWh) <sup>(2)</sup>		209,0
Juhtimise tüüp	Automaatne	•
	Mitteautomaatne	-
Energiaikulu standard puuvillaprogrammiga täiskoormusel (kWh)		1,68
Energiaikulu standard puuvillaprogrammiga osakoormusel (kWh)		0,98
Energiaikulu väljas-režiimil standard puuvillaprogrammiga täiskoormusel, P <sub>0</sub> (W)		0,50
Energiaikulu sisse jäetud režiimil standard puuvillaprogrammiga täiskoormusel, P <sub>L</sub> (W)		1,00
Sisse jäetud režiimi kestus (min)		30
Standard puuvillaprogramm <sup>(3)</sup>		
Programmi aeg standard puuvillaprogrammiga täiskoormusel, T <sub>day</sub> (min)		174
Programmi aeg standard puuvillaprogrammiga osakoormusel, T <sub>day1/2</sub> (min)		107
Kaalutud programmi aeg standard puuvillaprogrammiga täis- ja osakoormusel (T <sub>1</sub> )		136
Kondenseerivuse efektiivsuse klass <sup>(4)</sup>		B
Standard puuvillaprogrammi keskmine kondensatsiooni efektiivsus täiskoormusel, C <sub>day</sub>		86%
Standard puuvillaprogrammi keskmine kondensatsiooni efektiivsus osakoormusel, C <sub>day1/2</sub>		86%
Kaalutud kondenseerivuse efektiivsus standard puuvillaprogrammiga täis- ja osakoormusel, C <sub>1</sub>		86%
Müüratase standard puuvillaprogrammiga täiskoormusel <sup>(5)</sup>		65
Sisse ehitatud		-

• : Jah    - : Ei

(1) Skalaal A+++ (kõige efektiivsem) kuni D (kõige vähem efektiivsem)

(2) Energiaikulu on arvatud 160 kuivatustsükli peale standard puuvillaprogrammiga täis- ja osakoormusel ja madala võimsusega mudelite energiaikulu põhjal. Tegelik energiaikulu tsükli kohta sõltub sellest, kuidas seadet kasutatakse.


(3) "Puuvillakapi kuivatamisprogramm" mida kasutati täis- ja osakoormusel on standard kuivatamisprogramm, millele viidatakse andmesildil ja infolehel toodud andmetes, see programm on sobib tavalise märja puuvillase pesu kuivatamiseks ning see on kõige efektiivsem puuvilla kuivatamise programm energiaikulu mõistes.

(4) Skalaal G (kõige vähem efektiivne) kuni A (kõige efektiivsem)

(5) Kaalutud keskmine väärtus —L<sub>WA</sub> väljendatuna dB(A) re 1 pW





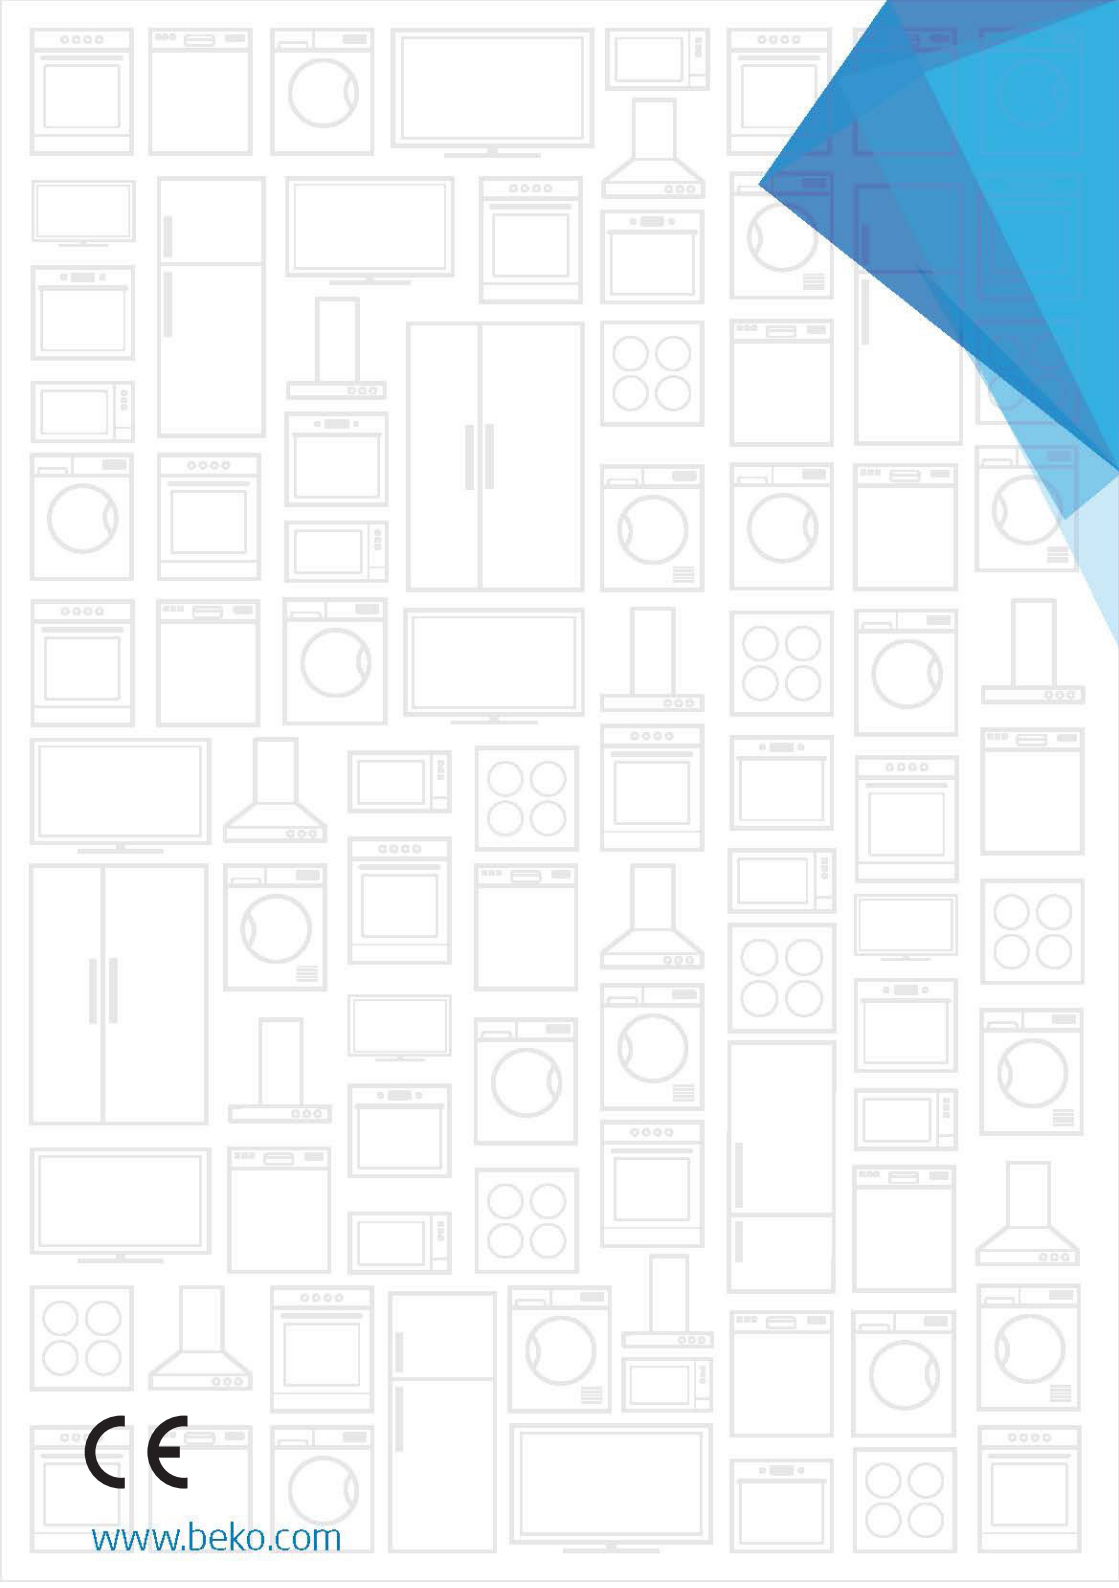

[www.beko.com](http://www.beko.com)