

מכונת כביסה מדריך למשתמש

Washing Machine User Manual



WTV 9636 XS

HE / EN

омер документа : 100320.1554/НЕ_2820528352

הוראות בטיחות 1

פרק זה מכיל הוראות בטיחות שיעזרו לך להישמר מפני סיכון לנזק גופני או לנזק לרכוש אי ציות להוראות אלה יגרור ביטול תוקף אחריות מכל סוג.

1.1 בטיחות חיים ורכוש

- אין להציב את המוצר על רצפה מכוסה בשטיח. מכיוון שהיעדר זרימת אוויר מתחתיו עלול לגרום להתחממות יתר של החלקים החשמליים, והדבר עלול לגרום לבעיות במוצר.
 - נתק את המוצר מהחשמל אם אינו בשימוש. ◄
- הקפד שפעולות ההתקנה והתיקון יבוצעו על ידי נציג שירות מוסמך. היצרן לא יישא באחריות לנזקים שעלולים להיגרם כתוצאה מפעולות שנעשו על ידי גורמים בלתי מוסמכים.
- על צינור אספקת המים וצינור הניקוז להיות מהודקים היטב ולהישאר ללא פגם. הפגם עלול לגרום לנזילת מים.
- אין לפתוח את דלת הכנסת הכביסה או להסיר את המסנן כאשר יש עדיין מים בתוך המוצר. שכן, קיימת סכנת הצפה ופגיעה ממים חמים.
- אין לפתוח בכוח את דלת הכנסת הכביסה הנעולה. הדלת תיפתח מיד לאחר סיום מחזור הכביסה. אם הדלת אינה נפתחת, השתמש בפתרונות המופיעים בפרק איתור תקלות לגבי השגיאה "דלת הכנסת הכביסה אינה נפתחת". אם פותחים בכוח את דלת הכנסת הכביסה, עלול להיגרם נזק לדלת ולמנגנון הנעילה.
- השתמש באבקות/נוזלי כביסה, מרככים ותוספים המתאימים למכונות כביסה אוטומטיות בלבד.
 - . ציית להוראות שעל תווית האריג ועל אריזת אבקת/נוזל הכביסה.
- על לחץ אספקת המים הדרוש לפעולת המכונה להיות 1-10 ברים (0.1)
 1 מגה פסקל).
- במכונה החדשה אין להשתמש בצינורות ישנים או משומשים לכניסת מים. הם עלולים להשאיר כתמים על הכביסה.

1.2 בטיחות ילדים

◄ במוצר זה יכולים להשתמש ילדים בני 8 ומעלה ובני אדם בעלי לקויות פיזיות, חישתיות או שכליות וכן אנשים חסרי מיומנויות או ניסיון, בתנאי שתהיה עליהם השגחה או שיונחו כיצד להשתמש במוצר בצורה בטוחה ומפני אילו



מוצר זה יוצר באמצעות הטכנולוגיה המתקדמת ביותר בתנאים ידידותיים לסביבה.

סכנות להישמר. אין להרשות לילדים לשחק במוצר. אין להרשות לילדים לבצע עבודות ניקוי ותחזוקה ללא השגחה. יש להרחיק מהמוצר ילדים מתחת לגיל 3, אלא אם כן הם נמצאים בהשגחה רצופה.

- חומרי האריזה עלולים להיות מסוכנים לילדים. הנח את חומרי האריזה במקום
 בטוח הרחק מהישג ידם של ילדים.
- מוצרי חשמל מסוכנים לילדים. הרחק ילדים מהמוצר כאשר הוא פועל. אל תרשה להם לשחק במוצר. השתמש בנעילת ילדים כדי למנוע את התעסקות הילדים במוצר.
- אל תשכח לסגור את דלת הכנסת הכביסה כאשר אתה יוצא מהחדר שבו ממוקם המוצר.
- אחסן את כל תכשירי הכביסה והתוספים במקום בטוח הרחק מהישג ידם של הילדים, על ידי סגירת המכסה של תא תכשירי הכביסה או על ידי אטימת אריזת תכשיר הכביסה.

1.3 בטיחות בחשמל

- אם קיימת תקלה במוצר, יש להפעילו אך ורק לאחר שתוקן על ידי נציג שירות מוסמך. קיימת סכנת התחשמלות!
- מוצר זה בנוי כך שיחדש את פעולתו לאחר הפסקת חשמל. אם ברצונך לבטל את התכנית, עיין/י בפרק "הפסקת התכנית".
- חבר את המוצר לשקע מוארק המוגן על ידי נתיך A 16. יש להקפיד על התקנת
 כבל הארקה על ידי חשמלאי מוסמך. החברה לא תישא באחריות לנזקים
 כבל הארקה עקב שימוש במוצר ללא הארקה, בהתאם לתקנות המקומיות.
- אין לשטוף את המוצר על ידי התזת מים מעליו או הרטבתו במים! קיימת סכנת התחשמלות!
- לעולם אל תיגע/י בתקע של כבל החשמל בידיים רטובות! אין להוציא את התקע מהשקע על ידי משיכת הכבל. לחץ תמיד על השקע ביד אחת ומשוך את התקע החוצה על ידי משיכה ביד השנייה.
- יש לנתק את המוצר מהחשמל במהלך פעולות התקנה, תחזוקה, ניקוי ותיקון. ◄
- אם כבל החשמל פגום, הוא יוחלף על ידי היצרן, או על ידי נציג שירות מורשה או על ידי איש מקצוע מוסמך (בעדיפות חשמלאי) או מישהו שמונה על ידי היבואן, כדי למנוע סיכונים אפשריים.

1.4 בטיחות משטחים חמים



הזכוכית של דלת הכנסת הכביסה מתחממת יתר על המידה במהלך כביסה בטמפרטורות גבוהות. לכן, אין לאפשר לילדים לגעת בזכוכית של דלת הכנסת הכביסה כשמכונת הכביסה פועלת.

WEEE תאימות להנחיית 2.1



מוצר זה מציית להנחיה WEEE של האיחוד האירופי (2012/19/EU). מכשיר זה נושא סמל מיון לפסולת של מכשירים חשמליים ואלקטרוניים (WEEE).

מוצר זה יוצר עם חלקים וחומרים באיכות גבוהה, שניתן לעשות בהם שימוש חוזר והם מתאימים למחזור. אין לסלק את פסולת המוצר ביחד עם הפסולת הביתית ופסולת מסוגים אחרים בסוף חיי השירות שלו. כך את המוצר אל מרכז האיסוף למיחזור ציוד חשמלי ואלקטרוני. היוועץ ברשויות המקומיות כדי ללמוד אודות מרכזי איסוף אלה.

תאימות להנחיית RoHS (ההנחיה להגבלת חומרים מסוכנים)

המוצר שרכשת תואם את הנחיית RoHS של האיחוד האירופי (2011/65/EU). הוא אינו מכיל חומרים מזיקים או אסורים המצוינים בהנחיה.

2.2 פרטי האריזה

חומרי האריזה של המוצר מיוצרים מחומרים ממוחזרים, בהתאם לתקנות הארציות בנושא איכות הסביבה. אין לסלק לאשפה חומרי אריזה ביחד עם אשפה ביתית או פסולת אחרת. קח אותם לנקודות האיסוף של חומרי האריזה שהקצו לשם כך הרשויות המקומיות.

שימוש מיועד 3

- י מוצר זה נועד לשימוש ביתי. הוא לא נועד למטרות מסחריות ואין להשתמש בו מעבר לשימוש שאליו הוא נועד.
 - מותר להשתמש במוצר אך ורק לכביסה ולשטיפה של כבסים המסומנים בהתאם.
 - היצרן מתנער מכל אחריות עקב שימוש או הובלה לא נכונים.
 - אורך חיי השירות של המוצר הוא 10 שנים. במהלך תקופה זו יהיו חלקי חילוף מקוריים זמינים להפעלת המכשיר בצורה נכונה.

מפרטים טכניים 4

Beko	שם הספק או סימן מסחרי
WTV 9636 XS	שם הדגם
9	יכולת נקובה (בק"ג)
1200	מהירות סחיטה מרבית (סל"ד)
לא	מובנה
84	גובה (ס״מ)
60	רוחב (ס"מ)
64	עומק (ס"מ)
-/•	נקודת כניסת מים יחידה / נקודת כניסת מים כפולה
- / •	• זמין
230 V / 50Hz	מתח חשמלי (V/Hz)
10	זרם כולל (A)
2200	הספק כולל (W)
138	קוד דגם ראשי

4.1 התקנה

- פנה לנציג שירות מוסמך הקרוב למקום מגוריך לשם התקנת המוצר.
- הכנת המיקום למתקני החשמל, מי הברז ומי השפכים במקום ההתקנה היא באחריות הלקוח.
- ודא שצינור כניסת המים, צינור פליטת המים וכבל החשמל אינם מקופלים, מעוכים ושלא מופעל עליהם לחץ בעת דחיפת המוצר למקומו לאחר פעולות ההתקנה והניקוי.
- ודא שהתקנת המוצר והחיבורים שלו לחשמל יבוצעו על ידי נציג שירות מוסמך. היצרן לא יישא
 באחריות לנזקים שעלולים להיגרם כתוצאה מפעולות שנעשו על ידי גורמים בלתי מוסמכים.
- לפני ההתקנה בדוק אם אין פגמים במוצר. אם יש, דאג שהמוצר לא יותקן. מוצרים פגומים מהווים סכנה לבטיחותך.

4.1.1 מיקום התקנה הולם

- הנח את המוצר על רצפה קשה וישרה. אין להניח אותו על שטיח עם סיבים ארוכים או על משטחים דומים אחרים.
- כאשר המייבש מונח על מכונת הכביסה, המשקל הכולל שלהם בקיבולת מגיע ל-180 ק"ג. הצב את המכונה על רצפה מוצקה וישרה בעלת די שטח לנשיאת כביסה!
 - אין להציב את המכונה על כבל החשמל.
 - אין להתקין את המקרר במקומות שבהם הטמפרטורה צונחת אל מתחת ל-0°C.
 - יש להשאיר רווח מינימאלי של ס"מ בין המכונה לרהיט שלידה.
 - אין להניח את המוצר על רצפה מדורגת קרוב לקצה או על מעמד מוגבה.

4.1.2 הסרת אביזרי הקיבוע של האריזה



הטה את המכונה לאחור כדי להסיר את אביזרי הקיבוע של האריזה. הסר את אביזרי הקיבוע של האריזה על ידי משיכת הסרט. אל תבצע פעולה זו בעצמך.

4.1.3 הסרת מנעולי ההובלה

- 1 שחרר את כל הברגים במפתח המתאים עד שתוכל לסובב אותם בחופשיות.
 - 2 הסר את בורגי הבטיחות של ההובלה על ידי סיבוב קל.
- 3 הכנס את מכסי הפלסטיק הכלולים בשקית המדריך למשתמש אל הפתחים בלוח האחורי.



\wedge	זהירות: הסר את בורגי הבטיחות של ההובלה לפני שתפעיל את מכונת הכביסה! כדי לא לגרום נזק למוצר.
	שמור את בורגי הבטיחות של ההובלה במקום בטוח, כדי שתוכל להשתמש בהם בפעם הבאה שתצטרך להעביר את מכונת הכביסה. ממקום למקום.
1	התקן את בורגי הבטיחות של הההובלה בסדר הפוך לפעולת הפירוק.
l .	אין להעביר את המוצר אם בורגי הבטיחות של ההובלה אינם מהודקים בצורה נכונה למקומם!

4.1.4 חיבור המכונה למערכת אספקת המים



על לחץ אספקת המים הדרוש לפעולת המכונה להיות 1-10 ברים (0.1 – 1 מגה פסקל). כדי שהמכונה תפעל בצורה חלקה, על קצב זרימת המים להיות 10 – 80 ליטר בדקה שיזרמו מברז פתוח לגמרי. התקן שסתום לחץ אם לחץ המים גבוה יותר.



זהירות: אין לחבר דגמים בעלי יציאת מים אחת לברז המים החמים. במקרה זה ייגרם נזק לכביסה או שהמכונה תעבור למצב הגנה ולא תפעל.

זהירות: במכונה החדשה אין להשתמש בצינורות ישנים או משומשים לכניסת מים. הם עלולים להשאיר כתמים על הכביסה.



הדק ידנית את האומים של הצינור. אין להשתמש בכלי עבודה בעת הידוק האומים.

לאחר השלמת חיבור הצינור, בדוק אם קיימות בעיות נזילה בנקודות החיבור על ידי פתיחת הברזים עד הסוף. אם קיימת נזילה, סגור את הברז והסר את האום. הדק שוב בקפידה את האום לאחר בדיקת הנזילה. כדי למנוע נזילות מים ונזקים כתוצאה מהנזילות, השאר את הברזים סגורים כשאינה משתמש במוצר.

4.1.5 חיבור צינור הניקוז למערכת הניקוז

הצמד את קצה צינור הניקוז ישירות אל מערכת הניקוז של מי השופכין, אל האסלה או אל האמבטיה.



זהירות: ביתך יוצף במים אם הצינור ייצא מהתושבת שלו במהלך פליטת המים. יתרה מכך, קיים סיכון לכוויות עקב טמפרטורות כביסה גבוהות! כדי למנוע מצבים של אי חיבור נכון ולוודא שהמים נכנסים למכונה ונפלטים ממנה ללא בעיה, קבע את צינור הניקוז בצורה בטוחה.



חבר את צינור הניקוז לגובה מינימאלי של 40 ס"מ
 ולגובה מרבי של 100 ס"מ.

•אם מרימים את צינור הניקוז לאחר שהיה מונח בגובה הרצפה או קרוב אליה (פחות מ-40 ס"מ מעל הרצפה), פליטת המים תתבצע בקושי רב יותר והכביסה עלולה לצאת רטובה מדי. פעל בהתאם לגבהים המתוארים באיור.

- כדי למנוע חזרת מים מלוכלכים אל המכונה וכדי להבטיח ניקוז קל, אין לטבול את קצה הצינור במים המלוכלכים ואין להכניס אותו לנקז יותר מ-15 ס"מ. אם הוא ארור מדי, קצר אותו.
 - אין לכופף את קצה הצינור, אין לדרוך עליו או להפעיל עליו לחץ בין הנקז לבין המכונה
- אם הצינור קצר מדי, השתמש בו על ידי הוספת צינור הארכה מקורי. אורך הצינור לא יעלה על 3.2 מ'. כדי למנוע תקלות הגורמות לנזילת מים, יש להתקין בצורה נכונה את החיבור בין צינור ההארכה מ'. כדי למנוע תקלות הגורמות לנזילת מים, יש להתקין בצורה נכונה את החיבור בין צינור מהארכה לבין צינור הניקוז של המוצר בעזרת מהדקים, כדי שהחיבור לא יתפרק ולא תהיה נזילת מים.

4.1.6 כוונון הרגליות



זהירות: כדי להבטיח שהמכונה תפעל בצורה שקטה יותר וללא רטט, יש להציבה בצורה ישרה ומאוזנת על הרגליות שלה. אזן את המכונה על ידי כוונון הרגליות. כדי שהיא לא תזוז ממקומה ותגרום לבעיות של הימחצות ורטט.

זהירות: אין להשתמש במכשירים כלשהם לשחרור אומי הנעילה, כדי לא לגרום להם נזק.

- 1 שחרר ידנית את אומי הנעילה שברגליות.
- 2 כוונן את הרגליות עד שהמכונה תעמוד בצורה ישרה ומאוזנת.
 - הדק שוב ידנית את כל אומי הנעילה.



4.1.7 חיבור לחשמל

חבר את המוצר לשקע מוארק המוגן על ידי נתיך A 16. החברה לא תישא באחריות לנזקים כלשהם שייגרמו עקב שימוש במוצר ללא הארקה, בהתאם לתקנות המקומיות.

- על החיבור להתבצע בהתאם לתקנות הארציות.
- על תקע כבל החשמל להיות נגיש בקלות לאחר ההתקנה.
- אם הערך הנוכחי של הנתיך או מפסק הזרם בבית נמוכים מ-16 אמפר, הזמן חשמלאי מוסמך להתקנת נתיך או מפסק זרם 16 אמפר.
 - על המתח המצוין בסעיף "מפרטים טכניים" להיות שווה למתח מערכת החשמל.
 - אין לבצע חיבורים בעזרת כבלים מאריכים או מפצלים.



זהירות: כבלי חשמל פגומים יוחלפו על ידי נציגי שירות מורשים.

4.1.8 שימוש ראשון



לפני שתתחיל להשתמש במוצר, ודא שנעשו כל ההכנות בהתאם להוראות המופיעות בפרקים "הוראות בטיחות חשובות והוראות חשובות להגנת הסביבה" ו"התקנה".

כדי להכין את המוצר לפעולת הכביסה, בצע את ההפעלה הראשונה בתוכנית לניקוי התוף. אם תוכנית זו אינה זמינה במכונת הכביסה שברשותך, פעל לפי השיטה המתוארת בסעיף 4.4.2.



השתמש בתכשיר למניעת אבנית המתאים למכונות כביסה.

ייתכן שנותרו מעט מים במוצר עקב תהליכי בקרת איכות במהלך הייצור. מים אלה אינם מזיקים למוצר.

4.2 הכנה

4.2.1 מיון הכביסה

- מיין את הכביסה על פי סוג הבד, צבע, דרגת הלכלוך וטמפרטורות מים מותרות.
 - ציית תמיד להוראות שעל תוויות הטיפול בבגד.

4.2.2 הכנת הבגדים לכביסה

- כבסים עם אביזרי מתכת, כמו חזיות עם פסי מתכת, אבזמי חגורות או כפתורי מתכת יגרמו נזק למכונה. הסר את חלקי המתכת או כבס בגדים עם מתכת בתוך שק בגדים או ציפית.
- רוקן את הכיסים ממטבעות, עטים ואטבי נייר, הפוך את הכיסים והברש אותם. חפצים אלה עלולים לגרום נזק למוצר או לגרום לבעיית רעש.
 - הכנס פרטי לבוש קטנים, כמו גרבי תינוקות וגרבונים לתוך שק כביסה או ציפית.
 - הכנס למכונה וילונות בלי לדחוס אותם. הסר את ווי הווילונות.
 - סגור רוכסנים, תפור כפתורים משוחררים ותקן קרעים.
 - כבס מוצרים המסומנים כ"כביסת מכונה" או כ"כביסת יד" בתוכנית המתאימה בלבד.
- אין לכבס כביסה לבנה וצבעונית יחד. אריגי כותנה חדשים בצבעים כהים מורידים צבע רב. כבס אותם בנפרד.
 - יש לטפל בכתמים עיקשים בצורה הולמת לפני הכביסה. אם אינך בטוח, ברר בחנות לניקוי יבש.
 - השתמש רק בצבעים / משני צבע ומסירי אבנית המתאימים למכנות כביסה. פעל תמיד בהתאם להוראות שבאריזה.
 - מכנסיים וכביסה עדינה יש לכבס הפוך.
 - אריגים עשויים מצמר אנגורה יש להחזיק במקפיא מספר שעות לפני הכביסה. ההקפאה תמנע התכדרויות של הצמר (pilling).
- כביסה שהתלכלכה מאוד מחומרים כמו קמח, סיד, אבקת חלב יש לנער היטב לפני הכנסתה למוצר.
 אבקות מסוגים אלה שעל הכביסה עלולות להצטבר בחלקים הפנימיים של המוצר ועם הזמן לגרום לה נזק.

4.2.3 עצות לחיסכון באנרגיה

המידע הבא יסייע לך להשתמש במוצר באופן ידידותי לסביבה ויעיל מבחינת צריכת אנרגיה.

- הפעל את המוצר בקיבולת הגבוהה ביותר המותרת לתוכנית שבחרת, אך אל תמלא אותה יתר על המידה. ראה "טבלת תוכניות וצריכה".
 - פעל תמיד בהתאם להוראות שבאריזת תכשיר הכביסה.
 - כבס קלות כביסה מלוכלכת בטמפרטורות נמוכות.
 - השתמש בתוכניות מהירות יותר לכמויות קטנות של כביסה מלוכלכת במידה קלה.
- אין להשתמש בשטיפה מוקדמת ובטמפרטורות גבוהות לכביסה שאינה מלוכלכת או מוכתמת מאוד.
 - אם אתה מתכנן לייבש את הכביסה במייבש כביסה, בחר את מהירות הסחיטה הגבוהה ביותר המומלצת בתהליך הכביסה.
 - אין להשתמש בתכשיר הכביסה בכמות רבה יותר מזו שצוינה באריזה.

4.2.4 הכנסת הכביסה למכונה

- 1. פתח את דלת הכנסת הכביסה.
- 2. הכנס את הכבסים למוצר באופן רפוי.
- 3. דחף את דלת הכנסת הכביסה עד שתיסגר בהישמע צליל נעילה. ודא שלא נלכדו פריטי כביסה בדלת. דלת הכנסת הכביסה נעולה כאשר התוכנית פועלת. נעילת הדלת תיפתח מיד לאחר סיום תוכנית הכביסה. לאחר מכן תוכל לפתוח את דלת הכנסת הכביסה. אם הדלת אינה נפתחת, השתמש בפתרונות המופיעים בפרק איתור תקלות לגבי השגיאה "דלת הכנסת הכביסה אינה נפתחת".

4.2.5 קיבולת כביסה נכונה

קיבולת הכביסה המרבית תלויה בסוג הכביסה, בדרגת הלכלוך ובתוכנית הכביסה הרצויה. המכונה מכווננת אוטומטית את כמות המים בהתאם למשקל הכביסה שהוכנסה למכונה.



אזהרה: פעל בהתאם למידע המופיע בסעיף "טבלת תוכניות וצריכה". אם המוצר מלא יתר על המידה, רמת הביצועים שלו תרד. בנוסף ייתכנו בעיות של רעש ורטט.

4.2.6 שימוש בנוזל/אבקת כביסה ומרכך



אם אתה משתמש בתכשיר כביסה, במרכך, בעמילן, בחומר צביעה, במלבין או במסיר אבנית, קרא את הוראות היצרן שבאריזת תכשיר הכביסה ופעל בהתאם למינונים המצוינים בהן. השתמש בכוס מדידה, אם קיימת.



מגירת תכשיר הכביסה בנויה משלושה תאים:

- (1) לשטיפה מוקדמת
 - (2) לכביסה עיקרית
 - (3) למרכך
- (��) בנוסף, בתא המרכך קיים סיפון.

תכשיר כביסה, מרכך וחומרי ניקוי אחרים

- הוסף תכשיר ניקוי ומרכך לפני התחלת תוכנית הכביסה.
- כאשר מחזור הכביסה בעיצומו, אין להשאיר את מכל תכשיר הכביסה פתוח!
- בעת שימוש בתוכנית ללא שטיפה מוקדמת, אין לשים תכשיר כביסה בתא השטיפה המוקדמת (תא מס' "1").
 - בתוכנית עם שטיפה מוקדמת, אין לשים נוזל כביסה בתא השטיפה המוקדמת (תא מס' "1").
- אין לבחור תוכנית עם שטיפה מוקדמת אם אתה משתמש בשקית המכילה תכשיר כביסה או בכדור המכיל תכשיר כביסה. הנח את השקית המכילה את תכשיר הכביסה או את הכדור המכיל את תכשיר הכביסה בין הכבסים במוצר.
- אם אתה משתמש בנוזל כביסה, אין לשכוח לשים את כוסית הנוזל בתוך תא הכביסה העיקרית (תא מס' "2").

בחירת סוג תכשיר הכביסה

סוג חומר הניקוי תלוי בסוג הבד ובצבעו.

- השתמש בתכשירי כביסה שונים לכביסה צבעונית ולכביסה לבנה.
- את הכביסה העדינה יש לכבס בתכשירי כביסה מיוחדים (נוזל כביסה, שמפו לצמר, וכו') המיועדים אך ורק לכביסה עדינה.
 - בכביסת בגדים בצבע כהה ושמיכות פוך, מומלץ להשתמש בנוזל כביסה.
 - כבס מוצרי צמר בתכשיר כביסה מיוחד המיוצר במיוחד למוצרי צמר.



אזהרה: השתמש אך ורק בתכשירי כביסה המיוצרים במיוחד למכונות כביסה.

אזהרה: אין להשתמש באבקת סבון.

כוונון כמות תכשיר הכביסה

כמות תכשיר הכביסה לשימוש תלוי בכמות הכביסה, בדרגת הלכלוך ובקשיות המים.

- אין לחרוג מכמויות המינון המומלצות באריזת תכשיר הכביסה, כדי למנוע בעיות של כמות קצף רבה מדי, שטיפה דלה, כדי לחסוך כסף ולבסוף, כדי להגן על הסביבה.
 - השתמש בכמות קטנה יותר של תכשיר כביסה לכמויות קטנות יותר ופחות מלוכלכות של כביסה.
 שימוש במרכני כביסה
 - שפוך/י את המרכך אל תוך תא המרכך של מגירת חומר הניקוי.
 - אין לחרוג מסימון הדרגה (> max <) שבתא המרכך.
 - אם המרכך איבד מנוזליותו, יש לדללו במים לפני שמוסיפים אותו לתא תכשיר הניקוי.



אזהרה: יש להשתמש אך ורק בנוזל כביסה או במוצרי ניקוי אחרים המרככים אריגים ומיוצרים במיוחד לשימוש במכונות כביסה לריכוך הבגדים.

שימוש בנוזלי כביסה

אם יש במכונה כוסית לנוזל כביסה:

- שים את מכל נוזל הכביסה בתא מס' "2".
- אם נוזל הכביסה איבד מנוזליותו. יש לדללו במים לפני יציקתו למכל תכשיר הכביסה.



אם מותקן במוצר חלק המיועד לנוזל הכביסה:

... כשתרצה להשתמש בנוזל כביסה, משוך את המנגנון לעברך. החלק שנופל מטה ישמש כמחסום לנוזל הכביסה. אם יש צורך, נקה את המנגנון במים כשהוא נמצא במקומו או לאחר הסרתו. אם אתה משתמש באבקת כביסה, יש לקבע את המנגנון במיקום העליון.



אם איו במכונה כוסית לנוזל כביסה:

- אין להשתמש בנוזל כביסה לשטיפה מוקדמת בתוכנית עם שטיפה מוקדמת.
- נוזל כביסה יכתים את הבגדים בעת השימוש בפונקציה 'זמן סיום' שנועדה להפעיל את התוכנית בשלב מאוחר יותר. אם בכוונתך להשתמש בפונקציה 'זמן סיום' אל תשתמש בנוזל כביסה.

שימוש בתכשיר כביסה בצורת ג'ל וטבלייה

- אם ג'ל הכביסה נוזלי ואין במוצר מכל מיוחד לנוזל כביסה, צוק את הג'ל בתא תכשיר הכביסה של הכביסה העיקרית במהלך כניסת המים למכונה בפעם הראשונה. אם המוצר שלך מצוידת בתא עבור נוזל כביסה. מלא תא זה בנוזל לפני תחילת התוכנית.
- אם ג'ל הכביסה אינו נוזלי או שהוא בצורת טבליית נוזל בכמוסה, שים אותו ישירות בתוף לפני הפעלת המכונה.
- הנח טבליית כביסה בתוך תא הכביסה העיקרית (תא מס' "2") או ישירות בתוך התוף לפני הכביסה.

שימוש בעמילו

- הוסף עמילו נוזלי, עמילו אבקתי או חומר צביעה בתא המרכך, כפי שמוסבר באריזה.
 - אין להשתמש במרכך ובעמילן ביחד באותו מחזור כביסה.
 - לאחר השימוש בעמילו נגב את חלקו הפנימי של המוצר במטלית לחה ונקייה. שימוש במסיר אבנית

אם יש צורך, השתמש במסירי אבנית המיוצרים במיוחד למכונות כביסה בלבד.

שימוש במלבינים

- בחר תוכנית עם שטיפה מוקדמת והוסף את החומר המלבין בתחילת השטיפה המוקדמת. אין לשים תכשיר כביסה בתא השטיפה המוקדמת. לחלופין, בחר תוכנית עם שטיפה נוספת והוסף את המלבין בזמן שנכנסים למוצר מים מתא תכשיר הכביסה במשך השטיפה הראשונה.
 - אין לערבב את החומר המלבין עם תכשיר הכביסה.
- השתמש בכמות קטנה בלבד (כ-50 מ"ל) של מלבין ושטוף את הבגדים היטב היטב כדי לא לגרום לגירוי בעור.
 - אין לצקת את החומר המלבין ישירות על הכביסה.
 - אל תשתמש בו בכביסת פריטים צבעוניים.
 - בעת שימוש במלבין על בסיס חמצן, בחר תוכנית כביסה בטמפרטורה נמוכה.
- ניתן להשתמש במלבין על בסיס חמצן יחד עם תכשיר הכביסה. אולם, אם סמיכותו של המלבין שונה מסמיכותו של תכשיר הכביסה, שים תחילה את תכשיר הכביסה בתא מס' "2" שבמגירת תכשיר הכביסה והמתן עד שתכשיר הכביסה יישטף בזמן שהמוצר מתמלאת במים. כשהמוצר ממשיך להתמלא במים, הוסף את המלבין לאותו תא.

4.2.7 עצות לכביסה יעילה

		בגדים							
/:	כביסה עדינר צמר/משי	שחורים/כהים	צבעוניים	בהירים ולבנים					
	(טווח הטמפרטורה) המומלץ תלוי ברמה הלכלוך: קר C°00-)	(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: קר C+40°C)	(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: קר 40°C-)	(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: 40-90°C)					
	העדף נוזלי כביסה המיוצרים במיוחד לבגדים עדינים. יש לכבס בגדי צמר ומש בתכשירי כביסה מיוחדים לצמר.	ניתן להשתמש בנוזלי כביסה המתאימים לכביסה צבעונית ולצבעים כהים במינונים המומלצים לבגדים עם לכלוך כבד.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים צבעוניים במינונים המומלצים להשתמש באבקות כביסה לניקוי כתמי טיט ולכלכוך ולכתמים הרגישים לחומרים מלבינים. יש להשתמש באבקת/נוזל כביסה אינו מכיל מלבין.	ייתכן שיהיה צורך לטפל בכתמים או לבצע שטיפה מוקדמת. ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים לבנים במינונים מומלצים לבגדים עם לכלוך כבד. מומלץ להשתמש באבקות כביסה לניקוי כתמי טיט ולכלכוך ולכתמים הרגישים לחומרים מלבינים.	לכלוך כבד (כתמים קשים כמו כתמי דשא, קפה, פירות ודם).				
	העדף נוזלי כביסה המיוצרים במיוחד לבגדים עדינים. יש לכבס בגדי צמר ומש בתכשירי כביסה מיוחדים לצמר.	ניתן להשתמש בנוזלי כביסה המתאימים לכביסה צבעונית ולצבעים כהים במינונים המומלצים לבגדים עם לכלוך רגיל.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים צבעוניים במיונים המומלצים לבגדים עם לכלוך רגיל. יש להשתמש באבקת/נוזל כביסה אינו מכיל מלבין.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים לבנים במינונים המומלצים לבגדים עם לכלוך רגיל.		רמת הלכלוך			
	העדף נוזלי כביסה המיוצרים במיוחד לבגדים עדינים. יש לכבס בגדי צמר ומש בתכשירי כביסה מיוחדים לצמר.	ניתן להשתמש בנוזלי כביסה המתאימים לכביסה צבעונית ולצבעים כהים במינונים המומלצים לבגדים עם לכלוך קל.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים צבועניים במיונים המומלצים לבגדים עם לכלוך קל. יש להשתמש באבקת/נוזל כביסה אינו מכיל מלבין.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים לבנים במינונים המומלצים לבגדים עם לכלוך קל.	לכלוך קל (לא קיימים כתמים נראים לעין)				

4.2.8 זמן התוכנית המוצגת

תוכל לראות את משך התוכנית בתצוגת המכונה בעת בחירת התוכנית. בהתאם לכמות הכביסה שהכנסת למכונה, לכמות הקצף, ואם קיימים חוסר איזון של הכביסה, תנודות באספקת החשמל, ובהתאם ללחץ המים ולהגדרות התוכנית, משך התוכנית יכוונן אוטומטית בזמן שהתוכנית פועלת. **מקרה מיוחד:** כשתוכנית הכותנה ותוכנית הכותנה החסכונית מתחילות לפעול, יופיע בתצוגה משך הזמן של חצי כמות כביסה, שהוא מצב השימוש הנפוץ ביותר. כעבור 20-25 דקות מתחילת התוכנית, המכונה מאתרת את כמות הכביסה בפועל. ואם כמות הכביסה גדולה מחצי כמות, תוכנית הכביסה תתכוונן בהתאם ומשך התוכנית יתארך אוטומטית. תוכל לעקוב אחר שינוי זה בתצוגה.

			טבלת סמלים
		<u> </u>	8
קיטור הסרת שיער של מניעת קמטים מים נוספים שטיפה חיות מחמד נוספת	דחיית שטיפה טבילה מצב לילה	רת נוזל מינון אוטומטי השריה ביסה	
	לה/כיבוי נעילת לחצנים דלת השהיית זמו		
(קרים) סחיטה	נעילה		
	\square		
שבער איז	ייבוש מתוזמן ייב		
1		דורית שטיפה שביה מצבייה קישר הסוד שיון של מדעת קשטים מים מספים שסיים. שיות שטיפה שביה מצבייה קישר הסוד שיון של מדעת קשטים מים מספים שסיים. בי בי גילת לחצנים דות הסורית זמן ללא מים מי בי ללא סודיטה שספרטורה הלכבו גילת לחצנים דות הסורית ללא מים מי בי ללא סודיטה שספרטורה בי ביש לארומן "ביש טרטין" ביש טרטין "ביש טרטין" ביש טרטין "ביש מינית קשטים	ית תוד מיסן אושמשי השיה דחיית שישיה שבילה מצבילה קיטור החת שינו של מצעת קששים מים שסיים. סימר שיבוד רפות לכלך הפעלה (הפסקה הפעלה/ביבי נעילת לחצים דלה השהיית זמן לא מים מיבר לקיים) לא סירטה שסירטרה שביד רפות לכלך הפעלה (הפסקה הפעלה/ביבי נעילת לחצים דלה השהיית זמן לא מים מיבר לקיים) בייטור סויטה שסירטרה ייברע מתחוק ייבוש להכוק "ביש לאסוק "ביש סויף" ביש מנית קשטים

6.3 הפעלת המוצר

4.3.1 לוח הבקרה



4.3.2 סמלי התצוגה



Û

העזרים החזותיים המשמשים לתיאור המכונה בסעיף זה הם איורים כלליים וייתכן שלא יתאימו באופן מדויק לתכונות המכונה שברשותך.

4.3.3 טבלת תוכניות וצריכה

פונקציית עזר											HE
טווח טמפרטורות שניתן לבחירה °C	מניעת קמטים+	שטיפה נוספת	שטיפה מוקדמת	כביסה מהירה	תוכנית אדים	מהירות מרבית***	צריכת חשמל (בקוו"ש)	צריכת מים (בליטרים)	מטען מרבי (בק״מ)		(C°) תוכנית
מי ברז-90	•	•	•	•	•	1200	2,65	98	9	90	
מי ברז-90	•	•	•	•	•	1200	1,90	98	9	60	כותנה
מי ברז-90	٠	•	•	•	•	1200	1,10	95	9	40	
מי ברז-60						1200	1,530	53,0	9	**60	כותנה חסכונית
מי ברז-60	•	•	•	•	•	1200	1,38	73	4	60	
מי ברז-60	•	•	•	•	•	1200	0,9	70	4	40	סינטטית
מי ברז-90	•	•		•	•	1200	2,30	76	9	90	
מי ברז-90	•	•		•	•	1200	1,30	76	9	60	יום יומית מהירה / מהירה קצרה ביותר
מי ברז-90	•	•		•	•	1200	0,25	76	9	30	
80-מי ברז	•	•		•	•	1200	0,15	48	2	30	יום יומית מהירה / מהירה קצרה ביותר + כביסה מהירה
40-מי ברז		•				1200	0,55	55	2	40	צמר / כביסה ביד
40-מי ברז		•				800	0,80	58	4	40	עדינה
40-מי ברז	•	*	•	•	•	1200	0,95	86	4	40	כביסה כהה / ג'ינס
40-מי ברז			•			1200	0,6	58	4	40	חיצוני / בגדי ספורט
30-60			•	•		1200	1,7	80	5	60	תוכנית לכתמים
20-90		*			*	1200	2,9	125	9	90	היגיינה+
מי ברז-60		•			•	1000	1,40	95	-	60	שמיכת פוך / הלבשה תחתונה
מי ברז-60	•	•	•	•	•	800	1,40	65	4	60	חולצות
90					*	600	2,7	80	-	90	ניקוי התוף+
						**	ניות***	רדת תוס	הוו		
40-מי ברז	•		•	•	•	800	1,00	73	4	40	כביסה מעורבת
40-מי ברז		*	•			800	0,8	90	2	40	וילונות
מי ברז-30		*				600	0,32	76	1	30	לבני נשים
40-מי ברז		*				600	0,82	65	2	40	צעצועים רכים
מי ברז-60		*			•	1000	1,20	100	4	60	מגבת

ניתנת לבחירה.

. נבחרת אוטומטית, לא ניתן לבטלה : *

. תוכנית תווית אנרגיה **

**** : אם מהירות הסחיטה המרבית של המכונה נמוכה יותר מהערך הנקוב, תוכל לבחור מהירויות רק עד מהירות הסחיטה המרבית.

.HomeWhiz בתוכניות אלה ניתן להשתמש באמצעות היישום

- בלמילוי מרבי, עיין בתיאור התוכנית.

(i)

פונקציות העזר בטבלה עשויות להשתנות בהתאם לדגם המכונה.

צריכת מים וחשמל עשויה להיות שונה, בכפוף לשינויים בלחץ המים, בקשיות המים, בטמפרטורת המים, בטמפרטורת הסביבה, בסוג הכביסה ובכמותה, בבחירת פונקציות העזר, במהירות הסחיטה ובשינויים במתח החשמל.

תוכל לראות את משך הכביסה בתצוגת המכונה בעת בחירת התוכנית. בהתאם לכמות הכביסה שהכנסת למכונה, ייתכן שיהיה הפרש של 1-1.5 שעות בין משך פעולת המכונה המוצג בתצוגה לבין משך פעולת המכונה בפועל של מחזור הכביסה. משך הפעולה יתעדכן אוטומטית זמן קצר לאחר התחלת התוכנית.

"תבניות הבחירה של פונקציות העזר יכולות להשתנות על ידי היצרן. ניתן להוסיף או להסיר תבניות בחירה חדשות." "מהירות הסחיטה של המכונה עשויה להשתנות בהתאם לתוכנית; מהירות סחיטה זו לא תעבור את מהירות הסחיטה המרבית של המכונה."

4.3.4 בחירת תוכניות

1 קבע מהי התוכנית המתאימה לסוג הכביסה, לכמותה ולרמת הלכלוך שלה בהתאם ל"טבלת התוכניות והצריכה".



התוכניות מוגבלות למהירות הסחיטה הגבוהה ביותר המתאימה לאותו סוג אריג. בעת בחירת תוכנית, תמיד קח בחשבון את סוג האריג, צבעו ודרגת הלכלוך שלו וכן את טמפרטורת המים המותרת.

בחר תמיד את הטמפרטורה הנמוכה ביותר המתאימה. טמפרטורה גבוהה יותר, פירושה צריכת חשמל גבוהה יותר.

2 בחר את התוכנית הרצויה בעזרת הכפתור בחירת התוכניות.



4.3.5 תוכניות

• כותנה חסכונית

השתמש בתוכנית זו לכביסת אריגי כותנה ופשתן עמידים עם לכלוך רגיל. על אף שזוהי תוכנית ממושכת יותר מכל התוכניות האחרות, היא מאפשרת חיסכון גדול בחשמל ומים. טמפרטורת המים בפועל עשויה להיות שונה מטמפרטורת הכביסה המצוינת. בעת הכנסת כמות כביסה קטנה יותר למכונה (½ מהקיבולת או פחות מכך), פרקי זמן בשלבי התוכנית עשויים להתקצר אוטומטית. במקרה זה, תפחת צריכת החשמל והמים והכביסה תהיה חסכונית יותר.

• כותנה

בתוכנית זו תוכל לכבס את הכביסה העמידה שלך (סדינים, מצעים, מגבות, חלוקים, פרטי הלבשה תחתונה, וכו'). כאשר לוחצים על לחצן פונקציית הכביסה המהירה, התוכנית מתקצרת במידה ניכרת, אך מובטחים ביצועי כביסה יעילים באמצעות תנועות כביסה חזקות. אם לא בוחרים בפונקציית הכביסה המהירה, מובטחים ביצועים מעולים של כביסה ושטיפה לכביסה מלוכלכת במיוחד.

• סינטטית

בתוכנית זו תוכל לכבס את הכביסה שלך (כמו חולצות, בגדים עשויים מתערובת של סיבי כותנה וסיבים סינתטיים, וכדומה). התוכנית מתקצרת במידה ניכרת, ומובטחים ביצועי כביסה ברמה גבוהה. אם לא בוחרים בפונקציית הכביסה המהירה, מובטחים ביצועים מעולים של כביסה ושטיפה לכביסה מלוכלכת במיוחד.

• צמר / כביסה ביד

השתמש בתוכנית זו לכביסה של בגדי צמר/כביסה עדינה. בחר את הטמפרטורה המתאימה התואמת את הכתוב בתווית הבגד. הכביסה תכובס בפעולת שטיפה עדינה מאוד כדי לא לגרום נזק לבגדים.

• היגיינה+

הפעלת שלב האדים בתחילת התוכנית מאפשרת לרכך בקלות את הלכלוך. השתמש בתוכנית זו לפרטי לבוש (בגדי תינוקות, סדינים, מצעי מיטה, הלבשה תחתונה וכו', פריטים מכותנה), המצריכה כביסה נוגדת אלרגיה והיגיינית בטמפרטורה גבוהות עם מחזור כביסה אינטנסיבי וארוך. רמת היגיינה גבוהה מובטחת בזכות הפעלת האדים לפני התוכנית, החימום הממושך ושלב שטיפה נוסף. • התוכנית נבדקה על ידי "הקרן הבריטית לאלרגיות

" (Allergy UK) כשהאפשרות שנבחרה היא טמפרטורה של 60°C והיא אושרה מבחינת יעילות בסילוק אלרגנים בנוסף לחיידקים ולעובש.



Allergy UK הוא המותג של האגודה הבריטית לאלרגיות. חותם האישור נוצר כדי להנחות אנשים הדורשים המלצה על מוצר, ולהסביר להם שהמוצר הקשור מגביל / מפחית / מסלק את האלרגנים או מפחית משמעותית את תכולת האלרגנים בסביבה שבה נמצאים מטופלים אלרגיים. מטרתו להבטיח שהמוצרים נבדקו מבחינה מדעית ובאופן המספק תוצאות מדידות.

• שמיכת פוך / הלבשה תחתונה

השתמש בתוכנית זו לכביסת שמיכות פוך במילוי סיבים הנושאות את התווית "לכביסה במכונת כביסה". ודא שהכנסת את שמיכת הפוך למכונה בצורה נכונה כדי לא לגרום נזק למכונה או לשמיכה. פשוט את הציפה משמיכת הפוך לפני שתכניס את השמיכה למכונה. קפל את השמיכה לשניים והכנס אותה למכונה. הכנס את השמיכה למכונה והקפד שהיא לא תבוא במגע עם המפוח או עם הזכוכית. השתמש בתוכנית זו כדי לכבס מעילים ארוכים וקצרים, אפודות, וכו', המכילים נוצות ונושאים את התווית "לכביסה במכונת כביסה".



אין להכניס למכונה יותר מאשר שמיכת פוך אחת כפולה במילוי סיבים (200 x 200 ס"מ). אין לכבס במכונת הכביסה שמיכות פוך, כריות וכדומה המכילות כותנה.

אזהרה: אין לכבס במכונה פריטים אחרים מלבד שמיכות פוך, כמו שטיחים, שטיחונים וכו'. הם עלולים לגרום למכונה נזק בלתי הפיך.

• סחיטה+ניקוז

תוכל להשתמש בפונקציה זו להסרת המים מהבגד או לניקוז המים מהמכונה.

• שטיפה

השתמש בתוכנית זו אם ברצונך לשטוף במים או לעמלן בנפרד.

• וילונות

תוכל להשתמש בתוכנית זו לכביסת מלמלות ווילונות. עקב המרקם הרשתי שלהם הגורם להיווצרות כמות קצף רבה מדי, הכנס כמות קטנה של תכשיר כביסה לתא הכביסה העיקרית. בזכות פרופיל הסחיטה המיוחד של התוכנית, מלמלות ווילונות מתקמטים פחות. אין להכניס וילונות למכונה מעבר לקיבולת המפורטת כדי שלא ייגרם להם נזק.



בתוכנית זו מומלץ להשתמש בתכשירים מיוחדים המיוצרים במיוחד לווילונות בתא המיועד לאבקת כביסה.

• חולצות

תוכנית זו משמשת לכביסה של חולצות כותנה, אריגים סינתטיים ואריגים עם תערובת של סיבים סינתטיים יחד. היא מפחיתה קמטים. כשבוחרים בפונקציה כביסה מהירה, מופעל אלגוריתם קדם טיפול.

• מרח את תכשיר קדם הטיפול ישירות על פריטי הלבוש או הוסף אותו יחד עם תכשיר הכביסה כשמתחילים להיכנס מים לתא אבקת הכביסה. באופן זה תוכל לקבל את אותם ביצועים שאתה מקבל בכביסה רגלה בפרק זמן קצר הרבה יותר. באופן זה תוכל להשתמש בחולצות שלך לפרק זמן ממושך יותר.

• יום יומית מהירה / מהירה קצרה ביותר

השתמש בתוכנית זו לכביסת בגדי כותנה עם לכלוך קל ללא כתמים בפרק זמן קצר. ניתן לקצר את אורך התוכנית ל-14 דקות כאשר בוחרים בפונקציה כביסה מהירה. כשבוחרים בפונקציה כביסה מהירה, יש לכבס לא יותר מ-2 (שני) ק"ג כביסה.

• כביסה כהה / ג'ינס

השתמש בתוכנית זו כדי להגן על הצבע של פרטי הלבוש הכהים או הג'ינס. בתוכנית זו ביצועי הכביסה גבוהים ומתבצעת תנועת תוף מיוחדת גם אם הטמפרטורה נמוכה. מומלץ להשתמש בנוזל כביסה או בשמפו צמר לכביסה צבעונית. אין לכבס פרטי לבוש עדינים המכילים צמר וכו'.

• כביסה מעורבת

קוימ אלל דחי םייטתניס םידגבו הנתוכ ידגב לש הסיבכל וז תינכותב שמתשה.

• עדינה

םייטתניס םיביס לש תבורעתמ םייושע םיגירס ומכ ךלש הנידעה הסיבכה תא סבכל לכות וז תינכותב םעבצ תאש ךידגב תא סבכ .רתוי הנידע הפיטש תלועפב סבוכת הסיבכה .םינויברג וא הנתוכ יביסו .הרק הסיבכ תורשפאה תריחב ידי לע וא תולעמ 20-ב ,רמשל ךנוצרב

• לבני נשים

תוכל להשתמש בתוכנית זו לכביסת פרטי לבוש עדינים המתאימים לכביסת יד ולפרטי הלבשה תחתונה עדינה של נשים. פרטי לבוש בכמויות קטנות יש לכבס ברשת לכביסה. ווים, כפתורים ועוד יש לכפתר וכן יש לרכוס רוכסנים.

• חיצוני / בגדי ספורט

תוכל להשתמש בתוכנית זו כדי לכבס בגדי ספורט ופרטי לבוש לבילוי בחוץ המכילים סיבים מעורבים של סיבי כותנה וסיבים סינתטיים וציפוי דוחה מים, כמו גורטקס, ועוד. תוכנית זו מבטיחה שפרטי הלבוש יכובסו בעדינות בזכות תנועות סיבוביות מיוחדות.

• תוכנית לכתמים

למכונה תוכנית מיוחדת להסרת כתמים המאפשרת את הסרתם של סוגים שונים של כתמים באופן היעיל ביותר. השתמש בתוכנית זו אך ורק לכביסה של בגדי כותנה עמידים שאינם מורידים צבע. אין לכבס בגדים או פריטים אחרים עדינים וצבעוניים. לפני הכביסה יש לבדוק את תוויות הבגד (מומלץ לחולצות כותנה, מכנסיים ארוכים וקצרים, חולצות טריקו, בגדי תינוקות, פיג'מות, סינרים, מפות שולחן, סדינים, ציפות, ציפיות, מגבות אמבטיה-חוף, מגבות קטנות, גרביים, לבני כותנה המתאימים לכביסה בטמפרטורה גבוהה ובפרק זמן ממושך). תוכל להשתמש בתוכנית אוטומטית להסרת כתמים כדי לכבס 24 סוגי כתמים המחולקים לשלוש קבוצות שונות שניתן לבחור באמצעות לחצן ההגדרה "כביסה מהירה". להלן תוכל למצוא את קבוצות הלכלוך שניתן לבחור באמצעות לחצן ההגדרה "כביסה מהירה". בהתאם לקבוצת הכתמים שנבחרה, תוכנית כביסה מיוחדת אשר על פי ישתנו משך שחיית השטיפה, פעולת הכביסה, משך הכביסה והשטיפה. להלן תוכל למצוא את קבוצות הלכלוך שניתן לבחור באמצעות לחצן ההגדרה "כביסה מחירה":

כשלוחצים על לחצן כביסה מהירה" פעמיים"	כשלוחצים על לחצן "כביסה מהירה" פעם אחת	כשלא בוחרים בפונקציית הכביסה המהירה"
תה	דם	זיעה
קפה	שוקולד	לכלוך בצווארון
מיץ פירות	רפרפת	ארוחה
קטשופ	עשב	מיונז
יין אדום	בוץ	רטבים לסלט
עמילן	ביצים	איפור
ריבה	חמאה	שמן מכונות
פחם	קארי	מזון לתינוקות

• בחר את תוכנית הכתמים.

 בחר את הכתם שברצונך לנקות על ידי איתורו בקבוצות הנ"ל ובחירת הקבוצה המתאימה עם לחצן פונקציית העזר המהירה.

• קרא בעיון את התווית שעל הבגד והקפד לבחור את הטמפרטורה ומהירות הסחיטה המתאימות.

• הורדת תוכניות

זוהי תוכנית מיוחדת המאפשרת להוריד תוכניות שונות לפי רצונך. בהתחלה קיימת תוכנית ברירת מחדל, שבאפשרותך לראות באמצעות היישום HomeWhiz. אולם, תוכל להשתמש ביישום HomeWhiz כדי לבחור תוכנית מסדרת התוכניות שהוגדרו מראש, ולאחר מכן לשנות ולהשתמש בה.



אם ברצונך להשתמש בתכונה HomeWhiz ובפונקציה שלט רחוק, עליך לבחור בתוכנית להורדה. מידע מפורט ניתן למצוא בסעיף 4.3.15 התכונה HomeWhiz והפונקציה שלט רחוק.

• םיכר םיעוצעצ

צעצועים רכים יש לכבס בתוכנית לכביסה עדינה בשל האריגים העדינים שלהם והאריג והאביזרים שהם מכילים. בזכות תנועות הכביסה העדינה ופרופיל הסחיטה שלה, תוכנית הצעצועים הרכים מגנה על הצעצועים במהלך הכביסה. מומלץ להשתמש בנוזל כביסה.



בשום פנים ואופן אין לכבס צעצועים שבירים בעלי משטח קשה.

אין לכבס צעצועים יחד עם בגדים, מאחר שהם עלולים לגרום נזק לכביסה.

• תבגמ

השתמש בתוכנית זו כדי לכבס בגדי כותנה עמידים, כמו מגבות. הכנס את המגבות למכונה והקפד שהן לא יבואו במגע עם המפוח או עם הזכוכית.

4.3.6 בחירת טמפרטורה



כאשר נבחרת תוכנית חדשה, הטמפרטורה המומלצת לתוכנית מופיעה על מחוון הטמפרטורות. ייתכן מצב שבו הטמפרטורה המומלצת אינה הטמפרטורה המרבית שניתן לבחור לתוכנית הנוכחית.

לחץ על לחצן כוונון הטמפרטורות, כדי לשנות את הטמפרטורה. הטמפרטורה תרד בהדרגה.



לא ניתן לבצע שינויים בתוכניות שבהן לא ניתן לכוונן את הטמפרטורה.

כמו כן, תוכל לשנות את הטמפרטורה לאחר שהחל מחזור הכביסה. שינוי זה ניתן לבצע אם שלבי הכביסה מאפשרים זאת. לא ניתן לבצע שינויים אם השלבים אינם מאפשרים זאת.



אם אתה גולל אל האפשרות כביסה במים קרים ולוחץ שוב על לחצן כוונון הטמפרטורות, תופיע בתצוגה הטמפרטורה המרבית המומלצת לתוכנית שנבחרה. לחץ שוב על לחצן כוונון הטמפרטורות, כדי להפחית את הטמפרטורה.

4.3.7 בחירת מהירות סחיטה



כאשר נבחרת תוכנית חדשה, מהירות הסחיטה המומלצת של התוכנית שנבחרה תוצג במחוון **מהירות הסחיטה**.



ייתכן מצב שבו מהירות הסחיטה המומלצת אינה מהירות הסחיטה שניתן לבחור לתוכנית הנוכחית.

לחץ שוב על לחצן <mark>כוונון מהירות הסחיטה</mark>, כדי לשנות את מהירות הסחיטה. מהירות הסחיטה תרד בהדרגה.

לאחר מכן יופיעו בתצוגה האפשרויות "Rinse Hold 🛱" (דחיית שטיפה) ו-"No Spin 🍘 (ללא סחיטה), בהתאם לדגם המוצר.

אם אינך מתכוון להוציא את הכביסה מהמכונה מיד לאחר סיום התוכנית, תוכל להשתמש בפונקציה **דחיית שטיפה**, כדי למנוע את התקמטות הבגדים כשאין מים במכונה.

פונקציה זו מחזיקה את הכביסה במי השטיפה הסופית.

אם ברצונך לסחוט את הכביסה לאחר השימוש בפונקציה דחיית שטיפה:

- כוונן את מהירות הסחיטה.

- לחץ על **לחצן הפעלה / הפסקה / ביטול**. התוכנית תחדש את פעולתה מהשלב שהפסיקה. המכונה תנקז את המים ותסחט את הכביסה. אם ברצונך לנקז את המים בסיום התוכנית מבלי לסחוט את הכביסה, השתמש בפונקציה No Spin (ללא סחיטה).



לא ניתן לבצע שינויים בתוכניות שבהן לא ניתן לכוונן את מהירות הסחיטה.

תוכל לשנות את מהירות הסחיטה לאחר שהחל מחזור הכביסה, אם שלבי הכביסה מאפשרים זאת. לא ניתן לבצע שינויים אם השלבים אינם מאפשרים זאת.

דחיית שטיפה

אם אינך מתכוון להוציא את הכביסה מהמכונה מיד לאחר סיום התוכנית, תוכל להשתמש בפונקציה דחיית שטיפה, כדי לשמור את הכביסה במי השטיפה הסופית ולמנוע את התקמטות הבגדים כשאין מים במכונה. לחץ על כפתור הפעלה/הפסקה לאחר תהליך זה, אם ברצונך לנקז את המים בלי לסחוט את הכביסה. התוכנית תמשיך ותסתיים לאחר ניקוז המים.

אם ברצונך לסחוט את הכביסה המוחזקת במים, כוונן את מהירות הסחיטה ולחץ על כפתור הפעלה / הפסקה.

התוכנית תחדש את פעולתה מהשלב שהפסיקה. המים ינוקזו, הכביסה תיסחט והתוכנית תסתיים.

4.3.8 בחירת פונקציית עזר



בחר את פונקציות העזר הרצויות לפני תחילת התוכנית. כאשר נבחרת תוכנית, הסמלים של סימן פונקציית העזר שנבחרת יחד איתה מוארות.



A

כאשר לוחצים על לחצן פונקציית עזר שלא ניתן לבחור עם התוכנית הנוכחית, מכונת הכביסה תשמיע צליל אזהרה.

כמו כן, מסגרות פונקציית העזר שנבחרות לתוכנית הנוכחית יישארו מוארות לאחר שהחל מחזור הכביסה.

ישנן פונקציות שלא ניתן לבחור יחד. אם בחרת פונקציית עזר שנייה העומדת בסתירה לפונקציית העזר הראשונה לפני שהמכונה התחילה לפעול, הפונקציה שנבחרה ראשונה תבוטל ופונקציית העזר השנייה שנבחרה תישאר פעילה. לדוגמה, אם ברצונך לבחור כביסה מהירה לאחר שבחרת מים נוספים, בחירת המים הנוספים תבוטל והכביסה המהירה תישאר פעילה.

לא ניתן לבחור פונקציית עזר שאינה תואמת לתוכנית. (ראה "טבלת תוכניות וצריכה")

חלק מהתוכניות כוללות פונקציות שעליהן לפעול בו זמנית. פונקציות אלה לא ניתן לבטל. מסגרת פונקציית העזר לא תאיר. רק האזור הפנימי שלה יאיר.

4.3.8.1 פונקציות עזר

• שטיפה מוקדמת

השטיפה המוקדמת כדאית רק בכביסה מלוכלכת בכבדות. אי שימוש בשטיפה מוקדמת, יביא לחיסכון באנרגיה, במים, בתכשיר כביסה ובזמן.

• כביסה מהירה

לאחר שתבחר תוכנית, תוכל ללחץ על מקש הגדרת כביסה מהירה כדי לקצר את משך התוכנית. בחלק מהתוכניות, משך התוכנית עשוי להתקצר ביותר מ-50%. למרות זאת, ביצועי הכביסה טובים בזכות האלגוריתם המשתנה.

על אף שמשך התוכנית משתנה מתוכנית לתוכנית, כשאתה לוחץ פעם אחת על מקש הכביסה המהירה, משך התוכנית מתקצר במידת מה, וכשאתה לוחץ על אותו מקש בפעם השנייה, הוא יורד למשך הזמן המינימלי. לביצועי כביסה טובים יותר, אין להשתמש במקש הגדרת הכביסה המהירה כשאתה מכבס כביסה מלוכלכת מאוד. קצר את משך התוכנית באמצעות מקש כביסה מהירה לכביסה מלוכלכת במידה בינונית וקלה.

• תוכנית אדים

השתמש בתוכנית זו כדי להפחית קמטים ולקצר זמן גיהוץ של כמות קטנה של פריטי כביסת כותנה, כביסה סינתטית או מעורבת ללא כתמים.





• תוכנית מותאמת אישית

ניתן להשתמש בפונקציית עזר זו רק עבור תוכניות של אריגי כותנה ואריגים סינתטיים יחד עם היישום HomeWhiz. לאחר הפעלת פונקציית עזר זו, תוכל להוסיף לתוכנית עד 4 שלבי שטיפת עזר. תוכל לבחור כמה תוכניות עזר ולהשתמש בהן גם אם הן אינן נמצאות במוצר. תוכל להאריך ולקצר את זמן תוכניות אריגי הכותנה והאריגים הסינתטיים בטווח בטוח.



כאשר בוחרים בפונקציית העזר המותאמת אישית של התוכנית, ביצועי הכביסה וצריכת האנרגיה יהיו שונים מהערך המוצהר.

4.3.8.2 פונקציות/תוכניות הנבחרות בלחיצה על מקשי הפונקציה במשך 3 שניות



כדי לבחור בתוכנית, לחץ על לחצן פונקציית העזר 1 והחזק אותו לחוץ במשך 3 שניות. השתמש בקביעות (פעם בחודש עד חודשיים) לניקוי התוף ולהקפדה על ההיגיינה הדרושה. מופעלים אדים לפני התחלת התוכנית כדי לרכך את השאריות בתוף. הפעל את התוכנית בזמן שהמכונה ריקה לחלוטין. לקבלת תוצאות טובות יותר, הכנס אבקה להסרת אבנית המיועדת למכונות כביסה לתא מס' "2". עם סיום התוכנית, השאר את דלת הכנסת הכביסה פתוחה מעט, כדי לאפשר לחלק הפנימי של המכונה להתייבש.



• מניעת קמטים+ "ל 🍪 א

בוחרים בפונקציה זו כאשר לוחצים על לחצן בחירת הסחיטה ומחזיקים אותו לחוץ במשך 3 שניות, ונורת המעקב של התכנית לשלב הרלוונטי נדלקת. כאשר בוחרים בפונקציה זו, התוף מסתובב עד 8 שעות כדי למנוע את התקמטות הכביסה בסוף התוכנית. תוכל לבטל את התכנית ולהוציא את הכביסה בכל עת במשך 8 שעות אלה. לחץ על מקש בחירת הפונקציות או על מקש הפעלה/כיבוי של המכונה כדי לבטל את הפונקציה. נורת המעקב אחר התכנית תישאר דולקת עד שתבוטל הפונקציה או עד לסיום שלב זה. אם לא מבטלים את הפונקציה, היא תהיה פעילה גם במחזורי הכביסה הבאים.

שטיפה נוספת ^{ייי+}

בוחרים בפונקציה זו כאשר לוחצים על לחצן פונקציית עזר 2 ומחזיקים אותו לחוץ במשך 3 שניות. פונקציה זו מאפשרת למוצר לבצע שטיפה נוספת לזו המבוצעת כבר לאחר הכביסה העיקרית. לכן, ניתן להפחית את סכנת הפגיעה בעור רגיש (תינוקות, אנשים עם אלרגיות עור שונות, וכו') משאריות מזעריות של תכשיר כביסה שנותרו על הכביסה.

נעילת מקשים ″∃∃∙

השתמש בפונקציה נעילת לחצנים כדי למנוע את התעסקות הילדים במכונה. וכך תוכל למנוע שינויים כלשהם בתוכנית פועלת.



תוכל להפעיל ולכבות את המכונה באמצעות לחצן הפעלה / כיבוי כשנעילת הילדים פעילה. כאשר אתה מפעיל שוב את המכונה, התוכנית תחדש את פעולתה מאותו השלב שבו הופסקה.

כאשר נעילת המקשים מופעלת, תישמע אזהרת שמע אם לוחצים על הלחצנים. אזהרת השמע מבוטלת אם לוחצים על הלחצנים חמש פעמים ברצף.

להפעלת נעילת המקשים:

לחץ על לחצן פונקציית העזר 3 והחזק אותו לחוץ במשך 3 שניות. עם סיום הספירה לאחור "**3-2-1"** בתצוגה, יופיע בתצוגה הסמל נעילת מקשים. בעת הצגת אזהרה זו, תוכל לשחרר את לחצן פונקציית העזר 3.

לביטול הפעלת נעילת מקשים:

לחץ על לחצן פונקציית העזר 3 והחזק אותו לחוץ במשך 3 שניות. עם סיום הספירה לאחור בתצוגה "1-2-3", ייעלם מהתצוגה הסמל נעילת מקשים.



תוכל להשתמש בפונקציית חיבור Bluetooth לחיבור המכונה שלך למכשיר החכם שלך. באופן זה תוכל להשתמש במכשיר החכם שלך כדי לקבל מידע אודות ולשלוט בה.

להפעלת חיבור Bluetooth:

לחץ על לחצן פונקציית השלט הרחוק והחזק אותו לחוץ במשך 3 שניות. הספירה לאחור "3-2-1" תוצג ולאחר מכן הסמל "Bluetooth" יופיע בתצוגה. שחרר את לחצן פונקציית השלט הרחוק. סמל ה-Bluetooth יהבהב בזמן שהמוצר מתחבר למכשיר. אם החיבור הצליח, הסמל יישאר דולק. לביטול הפעלת חיבור Bluetooth:

לחץ על לחצן פונקציית השלט הרחוק והחזק אותו לחוץ במשך 3 שניות. עם סיום הספירה לאחור בתצוגה "Bluetooth", ייעלם מהתצוגה הסמל "Bluetooth".



יש לסיים את התקנה היישום HomeWhiz כדי שחיבור ה-Bluetooth יופעל. לאחר ההתקנה, הלחיצה על לחצן פונקציית השלט הרחוק, כאשר הכפתור נמצא במצב הורדת תוכנית/שלט רחוק, תגרום להפעלה אוטומטית של חיבור ה-Bluetooth.

4.3.9 זמן סיום

תצוגת זמן

הזמן הנותר לסיום התוכנית כאשר המכונה פועלת מוצג כ-"01:30" בתבנית של שעות ודקות.



זמן התוכנית עשוי להיות שונה מהערכים המופיעים בסעיף "טבלת התוכניות והצריכה", בהתאם ללחץ המים, קשיות המים והטמפרטורה שלהם, טמפרטורת הסביבה, כמות הכביסה, סוג הכביסה, פונקציות העזר שנבחרו והשינויים במתח החשמל.

בעזרת הפונקציה <mark>זמן סיום</mark>, התחלת התוכנית עשויה להיות מושהית עד 24 שעות. לאחר לחיצה על לחצן **זמן סיום**, יוצג זמן הסיום המשוער של התוכנית. אם **זמן הסיום** מכוון, <mark>יואר מחוון</mark> זמן הסיום.



כדי שהפונקציה 'זמן סיום' תופעל והתוכנית תסתיים עם סיום הזמן שצוין, עליך ללחוץ על הלחצן **הפעלה/הפסקה** לאחר כוונון הזמן.



אם ברצונך לבטל את הפונקציה זמן סיום, סובב את הכפתור למצב הפעלה וכיבוי.



לאחר שהפעלת את הפונקציה זמן סיום, אל תוסיף נוזל כביסה לתא אבקת הכביסה מס' 2. קיים סיכון שהוא יכתים את הבגדים.

- 1 פתח את דלת הכנסת הכביסה, הכנס את הכביסה ושים תכשיר כביסה.
- 2 בחר את תוכנית הכביסה, את הטמפרטורה, את מהירות הסחיטה, ואם יש צורך, בחר את פונקציות העזר.
 - 3 הגדר את זמן הסיום על פי בחירתך בלחיצה על לחצן **זמן סיום**. מחוון **זמן סיום** יאיר.

4 לחץ על כפתור הפעלה / הפסקה. ספירת הזמן לאחור מתחילה. הסימן ":" באמצע זמן הסיום שבתצוגה יתחיל להבהב.



ניתן להוסיף למכונה עוד כביסה במהלך הספירה לאחור של זמן הסיום. עם סיום הספירה לאחור, יכבה מחוון זמן הסיום, מחזור הכביסה יתחיל ופרק הזמן של התוכנית שנבחרה יופיע בתצוגה.

עם בחירת זמן הסיום, הזמן המופיע על המסך מורכב מזמן סיום וכן ממשך התוכנית שנבחרה.

4.3.10 הפעלת התוכנית

- 1 לחץ על לחצן הפעלה / הפסקה כדי להפעיל את התוכנית.
- 2 נורת הלחצן <mark>הפעלה / הפסקה</mark> שהייתה כבויה תתחיל להאיר כעת בצורה רציפה, ובכך תציין שהתוכנית החלה.



3 דלת הכנסת הכביסה נעולה סמל הדלת הנעולה יופיע בתצוגה כאשר הדלת ננעלת.



4 מחוון מעקב תוכניות המאיר בתצוגה יראה את שלב התוכנית הנוכחי.

4.3.11 נעילת דלת הכנסת הכביסה

בדלת הכנסת הכביסה של המכונה קיימת מערכת נעילה המונעת את פתיחת דלת הכנסת הכביסה במקרים שבהם מפלס המים אינו מתאים.

הסמל "הדלת נעולה" יופיע בתצוגה כאשר הדלת ננעלת.





אם בוחרים בפונקציה שלט רחוק, הדלת תהיה נעולה. כדי לפתוח את הדלת, עליך לבטל את הפעלת הפונקציה שלט רחוק בלחיצה על לחצן השלט הרחוק או על ידי שינוי מצב התוכנית.

פתיחת דלת הכנסת הכביסה במקרה של הפסקת חשמל:



במקרה של הפסקת חשמל, תוכל להשתמש בידית החירום של דלת הכנסת הכביסה הנמצאת מתחת למכסה של מסנן המשאבה, כדי לפתוח ידנית את דלת הכנסת הכביסה.

 \wedge

אזהרה: כדי למנוע גלישת מים לפני פתיחת דלת הכנסת הכביסה, ודא שלא נשארו מים בתוך המכונה.



• נקה את מסנן המשאבה.



 משוך מטה פעם אחת את ידית החירום של דלת הכנסת הכביסה ופתח את דלת הכנסת הכביסה. לאחר פתיחת דלת הכנסת הכביסה, החזר למקומה את ידית החירום של דלת הכנסת הכביסה.

 אם דלת הכנסת הכביסה אינה נפתחת, נסה שוב על ידי משיכת הידית כלפי מטה.

4.3.12 שינוי הבחירות לאחר הפעלת הַתְוכניִת

הוספת כביסה לאחר שהתוכנית החלה 👉 + 🗄 :

אם מפלס המים במכונה מתאים כשאתה לוחץ על לחצן הפעלה/הפסקה, הפעלת נעילת הדלת תבוטל והדלת תיפתח, וכך תוכל להוסיף בגדים למכונה. סמל נעילת הדלת בתצוגה יכבה כשהפעלת נעילת הדלת תבוטל. לאחר הוספת הבגדים, סגור את הדלת ולחץ שוב על לחצן **הפעלה/הפסקה**, כדי להמשיך את מחזור הכביסה.



אם מפלס המים במכונה אינו מתאים בעת הלחיצה על לחצן הפעלה/הפסקה, לא ניתן לבטל את נעילת הדלת וסמל נעילת הדלת בתצוגה יישאר דולק.





אם טמפרטורת המים במכונה גבוה מ-50°C, לא תוכל לבטל את נעילת הדלת משיקולי בטיחות, גם אם מפלס המים מתאים.

העברת המכונה למצב הפסקה:

לחץ על לחצן הפעלה/הפסקה כדי להעביר את המכונה למצב הפסקה. סמל ההפסקה יהבהב בתצוגה.



שינוי בחירת התוכנית לאחר שהתוכנית החלה:

אם נעילת המקשים מפני ילדים מופעלת, אסור לשנות את התוכנית כאשר התוכנית הנוכחית מופעלת. פעולה זו תבטל את התוכנית הנוכחית.



התוכנית החדשה תתחיל מחדש.

שינוי פונקציית העזר, המהירות והטמפרטורה

בהתאם לשלב שאליו הגיעה התוכנית, תוכל לבטל או להפעיל את פונקציות העזר. ראה "בחירת פונקציית עזר"

כמו כן, תוכל לשנות את הגדרות המהירות והטמפרטורה. ראה "בחירת מהירות" ו"בחירת טמפרטורה".



דלת הכנסת הכביסה לא תיפתח אם טמפרטורת המים במכונה גבוהה או אם מפלס המים גבוה מקו הבסיס של דלת הכנסת הכביסה.

4.3.13 ביטול התוכנית

התוכנית מבוטלת כאשר מסובבים את כפתור בחירת התוכניות לתוכנית אחרת או כאשר מכבים את המכונה ומפעילים אותה שוב באמצעות כפתור בחירת התוכניות.



אם אתה מסובב את כפתור בחירת התוכניות כאשר נעילת המקשים בפני ילדים מופעלת, התוכנית לא תבוטל. עליך לבטל תחילה את נעילת הילדים.

אם ברצונך לפתוח את דלת הכנסת הכביסה לאחר שביטלת את התוכנית, אך אי אפשר לפתוח את דלת הכנסת הכביסה מכיוון שמפלס המים במכונה גבוה מגובה קו הבסיס של הדלת, סובב את כפתור בחירת התוכנית לתוכנית Pump+Spin (שאיבה+סחיטה) ונקז את המים שבמכונה.

4.3.14 סיום התוכנית

סימן הסיום יופיע בתצוגה עם סיום התוכנית.

אם לא תלחץ על לחצן כלשהו ב משך 10 דקות, המכונה תעבור למצב כיבוי. התצוגה וכל המחוונים יכבו.

שלבי התוכנית שהסתיימו יופיעו בתצוגה, אם תלחץ על לחצן הפעלה/כיבוי.

HomeWhiz והפונקציה שלט רחוק 4.3.15

HomeWhiz מאפשר לך להשתמש במכשיר החכם שרך כדי לבדוק את מכונת הכביסה ולקבל מידע על מצבה. היישום HomeWhiz מאפשר לך להשתמש במכשיר החכם שלך כדי לבצע הליכים שונים שאותם ניתן לבצע גם במכונה. כמו כן, ניתן להשתמש בחלק מהתכונות רק באמצעות הפונקציה HomeWhiz.

עליך להוריד את היישום HomeWhiz מחנות היישומים שבמכשיר החכם שלך כדי להשתמש בתכונה Bluetooth שבמכונה.

כדי להתקין את היישום, ודא שהמכשיר החכם שלך מחובר לאינטרנט.

אם אתה משתמש ביישום בפעם הראשונה, פעל בהתאם להוראות שעל המסך כדי להשלים את רישום חשבון המשתמש. עם סיום הליך הרישום, תוכל להשתמש בכל המוצרים הנמצאים בביתך באמצעות התכונה HomeWhiz בחשבון זה.

ביישום HomeWhiz, תוכל לגעת ב"הוסף/הסר מכשיר" כדי לראות את המוצרים מתחברים לחשבון שלך. בעמוד זה תוכל לבצע הליכי התחברות מוצרים אלה של המשתמש.





אזהרה: כל אמצעי הבטיחות המתוארים בסעיף **"הוראות בטיחות כלליות"** שמדריך למשתמש חלים גם על הפעולה מרחוק דרר הפונקציה HomeWhiz.

HomeWhiz התקנת 4.3.15.1

כדי שהיישום יפעל, יש ליצור חיבור בין המכונה לבין היישום HomeWhiz. כדי ליצור את החיבור, עליך לפעול בהתאם להוראות הליך ההתקנה שלהלן הן במכונה והן ביישום HomeWhiz.

- אם אתה מוסיף מכשיר בפעם הראשונה, לחץ על הלחצן "הוסף/הסר מכשיר" ביישום HomeWhiz.
 לאחר פעולה זו, לחץ על "לחץ כאן כדי להתקין מכשיר חדש". פעל בהתאם להוראות שלהלן ובהתאם להוראות המופיעות ביישום HomeWhiz, כדי לבצע את ההתקנה.
- כדי להתחיל בהתקנה, ודא שהמכונה כבויה. לחץ על לחצן הטמפרטורות ועל לחצן הפונקציה שלט רחוק
 בו זמנית, והחזק אותם לחוצים במשך 3 שניות, כדי להעביר את המכונה למצב התקנת HomeWhiz.



 כאשר המכשיר נמצא במצב התקנת HomeWhiz, תראה בתצוגה הנפשה, וסמל ה-Bluetooth יהבהב עד שהמכונה תתחבר למכשיר החכם. רק כפתור התוכנית יהיה פעיל במצב זה. הלחצנים האחרים לא יהיו פעילים.



- על המסך שאתה רואה ביישום, בחר את מכונת הכביסה ולחץ על הבא.
- המשך לקרוא את ההוראות שעל המסך עד ש-HomeWhiz ישאל אותך מהו המוצר שתרצה לחבר למכשיר החכם.
 - חזור ליישום HomeWhiz והמתן עד להשלמת ההתקנה. עם השלמת ההתקנה, תן שם למכונת הכביסה. כעת, תוכל ללחוץ ולראות ביישום HomeWhiz את המוצר שהוספת.

אם אינך יכול לבצע בהצלחה את ההתקנה תוך 5 דקות, מכונת הכביסה תכבה אוטומטית. במקרה זה יהיה עליך להתחיל מחדש את הליך ההתקנה. אם הבעיה נמשכת, צור קשר עם נציג שירות מורשה.

תוכל להשתמש במכונת הכביסה שלך עם יותר ממכשיר חכם אחד. לשם כך, הורד את היישום HomeWhiz גם במכשיר החכם האחר. בעת הפעלת היישום, יהיה עליך להיכנס למערכת באמצעות החשבון שיצרת קודם לכן ושחיברת למכונת הכביסה. ולא, קרא את הסעיף "התקנת מכונת כביסה המחוברת לחשבון של מישהו אחר".

 $\underline{\mathbb{N}}$

אזהרה: אתה צריך שיהיה לך חיבור לאינטרנט במכשיר החכם כדי להמשיך בהתקנת HomeWhiz. ולא, היישום HomeWhiz לא יאפשר לך לסיים בהצלחה את הליך ההתקנה. צור קשר עם ספק שירות האינטרנט שלך אם אתה נתקל בבעיות בהתחברות לאינטרנט.



ייתכן שתידרש על ידי היישום HomeWhiz להקליד את מספר המוצר המוצג על תווית המוצר. תוכל למצוא את תווית המוצר בתוך דלת המכשיר. מספר המוצר יוצג על התווית.



4.3.15.2 התקנת מכונת כביסה המחוברת לחשבון של מישהו אחר

אם מכונת הכביסה שברצונך להשתמש הוכנסה למערכת באמצעות חשבון של מישהו אחר, עליך ליצור חיבור חדש בין היישום HomeWhiz לבין מכונת הכביסה.

- הורד את היישום HomeWhiz למכשיר החכם החדש שבו ברצונך להשתמש.
 - צור חשבון חדש והיכנס לחשבון זה ביישום HomeWhiz.
- פעל בהתאם להוראות המתוארות בהתקנת HomeWhiz 4.3.15.1) התקנת HomeWhiz והמשך בהליך ההתקנה.



מאחר שהתכונה HomeWhiz והפונקציה שלט רחוק שבמכונה פועלות באמצעות חיבור דרך טכנולוגיית Bluetooth, רק יישום HomeWhiz אחד יכול לפעול באותו זמן.

4.3.15.3 פונקציית השלט הרחוק והשימוש בה

לאחר התקנת HomeWhiz, Bluetooth יפעל אוטומטית. להפעלה או ביטול הפעלה של חיבור ה-Bluetooth 3' .4.3.8.2 ויאה סעיף 4.3.8.2.

אם תכבה ותפעיל את מכונת הכביסה כאשר Bluetooth פעיל, היא תתחבר מחדש אוטומטית. במקרים שבהם מכשיר חכם מחובר עובר את הטווח, Bluetooth יכבה אוטומטית. לכן, יהיה עליך להפעיל שוב את Bluetooth, אם ברצונך להשתמש בפונקציה שלט רחוק.

תוכל לבדוק את סמל ה-Bluetooth בתצוגה כדי לעקוב אחר מצב החיבור שלך. אם הסמל דולק ברצף, יש לך חיבור Bluetooth. אם הסמל מהבהב, המוצר מנסה להתחבר. אם הסמל כבוי, אין לך חיבור.

אזהרה: אם חיבור ה-Bluetoot מופעל במוצר שלך, ניתן יהיה לבחור את הפונקציה שלט רחוק. אם לא ניתן לבחור את הפונקציה שלט רחוק, בדוק את מצב החיבור. אם לא ניתן ליצור חיבור, חזור על הגדרות ההתקנה ההתחלתיות שבמכונת הכביסה.

אזהרה: משיקולי בטיחות, דלת המוצר תישאר נעולה כאשר הפונקציה שלט רחוק מופעלת, ללא תלות במצב ההפעלה. אם ברצונך לפתוח את דלת המוצר, יהיה עליך לסובב את כפתור בחירת התוכניות או ללחוץ על מקש השלט הרחוק כדי לבטל את הפעלת הפונקציה שלט רחוק.

אם ברצונך לשלוט במכונת הכביסה מרחוק, יהיה עליך להפעיל את הפונקציה שלט רחוק בלחיצה על הלחצן שלט רחוק, כאשר כפתור התוכנית נמצא במצב הורדת תוכנית/שלט רחוק על לוח הבקרה שבמכונת הכביסה. לאחר קבלת גישה למוצר, תראה מסך הדומה לזה שלהלן.



כאשר השלט הרחוק מופעל, אתה יכול רק לבצע פעולות של ניהול, כיבוי ומעקב אחר המצב דרך מכונת הכביסה. ואת כל הפונקציות למעט נעילת מקשים ניתן לנהל דרך היישום.

תוכל לעקוב ולראות אם הפונקציה שלט רחוק פועלת או כבויה דרך מחוון הפונקציה שעל הלחצן. אם הפונקציה שלט רחוק כבויה, כל הפעולות מבוצעות על מכונת הכביסה ורק מעקב אחר המצב ניתן לבצע ביישום.

במקרה שבו לא ניתן להפעיל את הפונקציה שלט רחוק, המכונה תשמיע צליל אזהרה בעת לחיצה על הלחצן. מצב כזה יכול להתרחש כאשר המכונה מופעלת, אך אין מכשיר חכם שמחובר אליה דרך Bluetooth. דוגמאות לכך הן כאשר הגדרות Bluetooth כבויות או כאשר דלת מכונת הכביסה פתוחה. לאחר הפעלת פונקציה זו במכונת הכביסה, היא תישאר מופעלת למעט במצבים מסוימים, ותוכל לשלוט במכונת הכביסה מרחוק דרך Bluetooth.

במצבים מסוימים היא תבטל את פעולתה משיקולי בטיחות:

- כאשר עוברים על מכונת הכביסה ניתוקי חשמל.
- כאשר מסובבים כפתור של תוכנית ותוכנית אחרת נבחרת או שהמכונה כבה.

4.3.15.4 איתור תקלות

בצע את הפעולות הבאות עם יש לך בעיה בשליטה או בחיבור. צפה אם הבעיה נמשכת לאחר הפעולה שביצעת. בצעה את הפעולות הבאות אם הבעיה אינה נפתרת.

- בדוק אם המכשיר החכם שלך מחובר לרשת הביתית הרלוונטית.
 - הפעל מחדש את היישום של המוצר.
 - כבה והדלק את ה-Bluetooth דרך לוח הבקרה של המשתמש.

אם לא ניתן ליצור חיבור בתהליכים הנ"ל, חזור על הגדרות ההתקנה ההתחלתיות שבמכונת הכביסה.
 אם הבעיה נמשכת, היוועץ בנציג שירות מורשה.

4.4 תחזוקה וניקוי

חיי השירות של המוצר מתארכים ובעיות נפוצות מתמעטות אם מנקים אותו במרווחי זמן קבועים.

4.4.1 ניקוי מגירת תכשיר הניקוי



נקה את מגירת תכשיר הניקוי במרווחי זמן קבועים (כל 4-5 מחזורי כביסה), כפי שמוצג להלן, כדי למנוע הצטברות של אבקת כביסה לאורך זמן. הרם את החלק האחורי של הסיפון כדי להסיר אותו, כפי שמודגם באיור. אם כמות גדולה מהרגיל של מים ומרכך מתחילה להצטבר בתא המרכך, יש לנקות את הסיפון.

- 1 לחץ על הנקודה המקווקוות שבסיפון בתא המרכך ומשוך אותו כלפיך עד שהתא יוסר מהמכונה.
- שטוף את מגירת תכשיר הכביסה ואת הסיפון במים פושרים בכיור. כדי למנוע מגע של תכשיר הכביסה בעור, נקה אותו במברשת מתאימה ולבש כפפות.
 - 3 הכנס את המגירה למקומה לאחר הניקוי וודא שהיא מונחת בצורה נכונה.

4.4.2 ניקוי דלת הכנסת הכביסה והתוף

למוצרים בעלי תוכנית לניקוי התוף, עיין בסעיף "הפעלת המוצר - תוכניות".



חזור על תהליך ניקוי התוף פעם בחודשיים. השתמש בתכשיר למניעת אבנית המתאים למכונות כביסה.



אם החורים במפוח באיור סתומים, פתח אותם בעזרת קיסם שיניים.

לאחר הכביסה ודא שלא נותרו בתוף חלקיקים זרים.

חלקיקי מתכת זרים יגרמו לכתמי חלודה בתוף. נקה את הכתמים שעל משטח התוף בעזרת חומרי ניקוי לפלדת אל-חלד.

אין להשתמש בצמר פלדה. אלה יגרמו נזק למשטחי הצבע, הכרום והפלסטיק.

4.4.3 ניקוי גוף המכונה ולוח הבקרה

נקה את גוף המכונה במי סבון או בתכשירי ג'ל עדינים שאינם גורמים לשריטות, לפי הצורך, ויבש אותו באמצעות מטלית רכה.

השתמש אך ורק במטלית רכה ולחה לניקוי לוח הבקרה.

4.4.4 ניקוי מסנני כניסת המים.

בסוף כל שסתום לכניסת מים בחלק האחורי של המכונה נמצא מסנן כמו גם בכל צינור לכניסת מים המחובר לברז. מסננים אלה מונעים מגופים זרים ולכלוך הנמצאים במים להיכנס למכונת הכביסה. יש לנקות את המסננים בכל פעם שהם מתלכלכים.



- סגור את הברזים.
- הסר את האומים של צינורות כניסת המים כדי להגיע אל המסננים שבשסתומי כניסת המים. נקה אותם במברשת מתאימה. אם המסננים מלוכלכים מדי, הסר אותם ממקומם באמצעות צבת ונקה אותם כך.
- הוצא את המסננים בקצוות השטוחים של צינורות כניסת המים ביחד עם האטמים ונקה אותם ביסודיות במים זורמים.
 - החזר את האטמים והמסננים למקומם בזהירות והדק ידנית את האומים שלהם.

4.4.5 ניקוז מים נותרים וניקוי מסנן המשאבה

מערכת המסננים במכונה מונעת את סתימתו של מדחף המשאבה בפריטים קשיחים, כמו כפתורים, מטבעות וסיבי אריגים, במהלך פליטת מי הכביסה. באופן זה, ייפלטו המים ללא כל בעיה וחיי השירות של המשאבה יאריכו ימים.

אם המכונה אינה מצליחה לנקז את המים, מסנן המשאבה סתום. יש לנקות את המסנן בכל פעם שהוא נסתם או פעם ב-3 חודשים. יש לנקז תחילה את המים כדי לנקות את מסנן המשאבה. בנוסף, לפני הובלת המכונה (לדוגמה, מעבר דירה), וכאשר המים קופאים, ייתכן שיהיה צורך לנקז את כל המים.



זהירות: גופים זרים הנותרים במסנן המשאבה עלולים לגרום נזק למכונה לגרום לבעיות של רעש.

זהירות: אם המוצר אינו בשימוש, סגור את הברז, הסר את צינור אספקת המים ונקז את המים בתוך המכונה כדי למנוע אפשרות של קפיאה.

זהירות: לאחר כל שימוש, סגור את הברז שאליו מחובר צינור אספקת המים.

לניקוי המסנן המלוכלך ולפליטת המים:

1 נתק את המכונה מאספקת החשמל.

זהירות: טמפרטורת המים בתוך המכונה עלולים לעלות ל-2º0°. כדי למנוע סכנת כוויה, נקה את המסנן לאחר התקררות המים במכונה.





3 בצע את הפעולות הבאות כדי לנקז את המים.

המוצר מצויד בצינור חירום לניקוז מים, כדי לנקז את המים:



- משוך החוצה את צינור ניקוז החירום
- הצב מכל גדול בקצה הצינור. נקז את המים לתוך המכל על ידי הוצאת הפקק בקצה הצינור. לאחר שהמכל התמלא, חסום את פתח הצינור על ידי החזרת הפקק למקומו. לאחר שהמכל התרוקן, חזור על הפעולות הנ"ל כדי לנקז לחלוטין את המים מהמכונה. עם סיום ניקוז המים. סגור שוב את הקצה בפקק וקבע
- עם סיום ניקוז המים, סגור שוב אונ הקצה בפקק וקבע את הצינור למקומו.
 - ד סובב והסר את מסנן המשאבה.
- 4 נקה את השאריות שנותרו בתוך המסנן, אם נותרו, וכן את הסיבים שהצטברו סביב מדחף המשאבה.

ג

- 5. החזר את המסנן למקומו.
- 6. אם המסנן מורכב משני חלקים, סגור את מכסה המסנן בלחיצה על הלשונית. אם הוא מורכב מחלק אחד, הנח תחילה את הלשוניות במקומן בחלק התחתון ולאחר מכן לחץ על החלק העליון כדי לסגור אותו.

תולקת רותיא 5

בעיה	סיבה	פתרון
התוכניות אינן מתחילות לפעול לאחר	כפתור הפעלה / הפסקה / ביטול לא נלחץ.	♦ לחץ על כפתור 'הפעלה / הפסקה / ביטול'.
מונור <i>י הני לפעה לא</i> ווי סגירת דלת הכנסת הכביסה.	ייתכן שיהיה קשה לסגור את דלת הכנסת הכביסה במקרה של עומס יתר.	+ הקטן את כמות הכביסה וודא שדלת הכנסת הכביסה סגורה לחלוטין.
אין אפשרות להתחיל או לבחור את התוכנית.	המוצר עבר למצב הגנה עצמית עקב בעיית אספקה (כמו מתח קו החשמל, לחץ מים, וכו').	 לביטול התוכנית, סובב את כפתור בחירת התוכניות כדי לבחור תוכנית אחרת. התוכנית הקודמת תבוטל (ראה "ביטול תוכנית")
מים בתוך המוצר.	נותרו מעט מים במוצר עקב תהליכי בקרת איכות במהלך הייצור.	∙ זוהי אינה תקלה; המים אינם מזיקים למוצר.
המוצר אינו קולט מים.	הברז סגור.	פתח את הברזים.
•	צינור כניסת המים מכופף.	ישר את הצינור.
	מסנן כניסת המים סתום.	• נקה את המסנן.
	דלת הכנסת הכביסה אינה סגורה.	• סגור את הדלת.
המוצר אינו מנקז את	צינור הניקוז סתום או מסובב.	נקה או ישר את הצינור.
המים.	מסנן המשאבה סתום.	 נקה את מסנן המשאבה.
המוצר רוטט או	המוצר אינו עומד יציב.	יצב את המוצר על ידי כוונון הרגליות.
משמיע רעשים.	גוף קשה נכנס למסנן המשאבה.	 נקה את מסנן המשאבה.
	בורגי הבטיחות של ההובלה לא הוסרו.	 הסר את מנעולי הביטחון של ההובלה.
	כמות הכביסה במוצר קטנה מדי.	 הוסף עוד כביסה למוצר.
	הוכנסה למוצר כמות כביסה רבה מדי.	♦ הוצא כביסה מהמוצר או פזר אותה ביד כדי ליצור פיזור אחיד במוצר.
	המוצר נשען על פריט קשה.	דא שהמוצר אינו נשען על משהו.
קיימת נזילת מים	צינור הניקוז סתום או מסובב.	נקה או ישר את הצינור.
מתחתית המוצר.	מסנן המשאבה סתום.	♦ נקה את מסנן המשאבה.
המוצר עצר זמן קצר לאחר שהתוכנית החלה.	המוצר עצר זמנית עקב מתח נמוך.	♦ המוצר יחדש את פעולתו כאשר המתח יחזור לרמתו הרגילה.
המוצר ישר מנקז את המים הנכנסים לתוכו.	צינור הניקוז אינו בגובה המתאים.	♦ חבר את צינור הניקוז כפי שמתואר במדריך למשתמש.
לא ניתן לראות מים במוצר במהלך פעולת הכביסה.	המים נמצאים בחלק הנסתר של המוצר.	אזו אינה תקלה.
לא ניתן לפתוח את דלת הכנסת הכביסה.	נעילת דלת הכנסת הכביסה מופעלת בגלל גובה מפלס המים במוצר.	נקז את המים על ידי הפעלת תוכנית ♦ השאיבה או תוכנית הסחיטה.
	המוצר מחמם את המים או שהוא מבצע את מחזור הסחיטה.	♦ המתן לסיום התוכנית.
	דלת הכנסת הכביסה עלולה להיתקע בגלל הלחץ שבו היא נתונה.	♦ אחוז בידית של דלת הכנסת הכניסה, דחף ומשוך אותה כדי לשחרר ולפתוח אותה.
	אם אין חשמל, דלת הכנסת הכביסה של המוצר לא תיפתח.	 כדי לפתוח את דלת הכנסת הכביסה, פתח את מכסה מסנן המשאבה ומשוך מטה את ידית החירום הנמצאת בצידו האחורי של המכסה האמור. ראה "נעילת דלת הכנסת הכביסה"

פתרון	סיבה	בעיה
♦ המוצר ממתין עד שיתמלא בכמות נאותה של מים כדי למנוע איכות כביסה גרועה עקב כמות מים נמוכה. לכן מתארך זמן הכביסה.	לחץ המים נמוך.	משך הכביסה ארוך מהזמן המצוין במדריך למשתמש.(*)
 זמן הכביסה מתארך כדי למנוע תוצאות כביסה דלות כאשר מתח החשמל נמוך. 	המתח נמוך.	
♦ הזמן הדרוש לחימום המים מתארך בעונות קרות. כמו כן, ייתכן שזמן הכביסה יתארך כדי למנוע תוצאות כביסה גרועות.	טמפרטורת המים הנכנסים נמוכה.	
♦ המוצר מעלה את כמות מי השטיפה כאשר נדרשת שטיפה יסודית, ומוסיף שלב שטיפה נוסף במקרה הצורך.	מספר השטיפות ו/או כמות מי השטיפה עלו.	
 השתמש בכמות התכשיר המומלצת. 	קיימת כמות קצף רבה מדי ויש צורך להפעיל את מערכת ספיגת הקצף האוטומטית עקב שימוש בכמות רבה מדי של תכשיר כביסה.	
♦ מחוון קוצב הזמן לא יבצע ספירה לאחור עד שתהיה במוצר כמות מים מספקת. המוצר ימתין עד שתהיה כמות מים מספקת כדי למנוע תוצאות כביסה גרועות עקב מחסור במים. מחוון קוצב הזמן ימשיך בפעולתו לאחר מכן.	קוצב הזמן עלול לעצור במהלך כניסת המים למכונה.	לא מבוצעת ספירה לאחר בתוכנית. (בדגמים עם תצוגה) (*)
♦ מחוון קוצב הזמן לא יבצע ספירה לאחור עד שהמוצר יגיע לטמפרטורה שנבחרה.	קוצב הזמן עלול לעצור במהלך שלב חימום המים.	
♦ תפעל מערכת אוטומטית לאיתור חוסר איזון של הכביסה עקב פיזור בלתי מאוזן של הכביסה במוצר.	קוצב הזמן עלול לעצור במהלך שלב הסחיטה.	
♦ תפעל מערכת אוטומטית לאיתור חוסר איזון של הכביסה עקב פיזור בלתי מאוזן של הכביסה במוצר.	קיים במוצר חוסר איזון של הכביסה.	לא מבוצעת ספירה לאחור בתוכנית. (*)
♦ תפעל מערכת אוטומטית לאיתור חוסר איזון של הכביסה עקב פיזור בלתי מאוזן של הכביסה במוצר.	קיים במוצר חוסר איזון של הכביסה.	המוצר אינו עובר לשלב הסחיטה. (*)
 בדוק את המסנן ואת צינור הניקוז. 	המוצר לא יסחט אם המים לא ינוקזו לחלוטין.	
 + השתמש בכמות התכשיר המומלצת. 	קיימת כמות קצף רבה מדי ויש צורך להפעיל את מערכת ספיגת הקצף האוטומטית עקב שימוש בכמות רבה מדי של תכשיר כביסה.	
◆ השתמש בכמות המומלצת של תכשיר כביסה המתאים לקשיות המים ולכביסה.	במשך הזמן השתמשת בכמות קטנה מדי של תכשיר כביסה.	ביצועי הכביסה גרועים: הכביסה מקבלת צבע אפור.
♦ בחר את הטמפרטורה הנכונה עבור הכביסה.	הכביסה נעשתה בטמפרטורות נמוכות במשך זמן רב.	(**)
◆שימוש בכמות קטנה מדי של תכשיר כביסה עם מים קשים גורם ללכלוך להידבק לבגד, וכך עם הזמן הופך הבגד לאפור. קשה להיפטר מהצבע האפור לאחר שכבר נוצר. השתמש בכמות המומלצת של תכשיר כביסה המתאים לקשיות המים ולכביסה.	השתמשת בכמות קטנה מדי של תכשיר כביסה במים קשים.	
♦ השתמש בכמות המומלצת של תכשיר כביסה המתאים לקשיות המים ולכביסה.	השתמשת בכמות גדולה מדי של תכשיר כביסה.	

פתרון	סיבה	בעיה
∙ השתמש בכמות המומלצת של תכשיו כביסה המתאים לקשיות המים ולכביסה.	השתמשת בכמות קטנה מדי של תכשיר כביסה.	ביצועי הכביסה גרועים: הכתמים אינם נעלמים והכביסה אינה
∙ אין להכניס למוצר כמות רבה מדי של כביסה. השתמש בכמות המומלצת ב"טבלת תוכניות וצריכה".	הוכנסה למוצר כמות כביסה רבה מדי.	מלבינה. (**)
∙ בחר את התוכנית והטמפרטורה הנכונות עבור הכביסה.	נבחרו תוכנית וטמפרטורה לא נכונות.	
∙ השתמש בתכשיר הכביסה המקורי המתאים למוצר.	השתמשת בסוג תכשיר כביסה שאינו מתאים.	
 שים את תכשיר הכביסה בתא הנכון. אין לערבב יחד את המלבין ותכשיר הכביסה. 	השתמשת בכמות גדולה מדי של תכשיר כביסה.	
• נקה את התוף בקביעות. לביצוע הליך זה, ראה סעיף "ניקוי דלת הכנסת הכביסה והתוף".	התוף אינו מנוקה בקביעות.	ביצועי הכביסה גרועים: כתמי שמן מופיעים בכביסה. (**)
 השאר את מגירת תכשיר הכביסה ואת דלת הכנסת הכביסה של המוצר פתוחות מעט לאחר כל כביסה. באופן זה לא תיווצר סביבה לחה המועדפת על חיידקים. 	ריחות לא נעימים ושכבות של חיידקים נוצרים על התוף כתוצאה מכביסה רציפה בטמפרטורות נמוכות ו/או בתוכניות קצרות.	ביצועי הכביסה גרועים: הבגדים מדיפים ריח לא נעים. (**)
 אין להכניס למוצר כמות רבה מדי של כביסה. 	הוכנסה למכונה כמות רבה מדי של כביסה.	צבע הבגדים דהה. (**)
 החזק את תכשירי הכביסה סגורים בסביבה יבשה ואל תחשוף אותם לטמפרטורות קיצוניות. 	תכשיר הכביסה שבו השתמשת לח.	
• בחר את התוכנית והטמפרטורה הנכונות בהתאם לסוג הכביסה ולדרגו הלכלוך שלה.	נבחרה טמפרטורה גבוהה יותר.	
 השתמש בתכשיר הכביסה המתאים למכונת הכביסה שברשותך ולכביסה שלך. החזק את תכשירי הכביסה סגורים בסביבה יבשה ואל תחשוף אותם לטמפרטורות קיצוניות. 	הכמות, המותג ותנאי האחסון של תכשיר הכביסה שבו השתמשת אינם מתאימים.	מכונת הכביסה אינה שוטפת היטב את הכביסה.
• אם שמת את תכשיר הכביסה בתא השטיפה המוקדמת, על אף שמחזור השטיפה המוקדמת לא נבחר, המוצר יכול להשתמש בתכשיר כביסה זה בשלב השטיפה או המרכך. שים את תכשיר הכביסה בתא הנכון.	שמת את תכשיר הכביסה בתא הלא נכון.	
• בדוק את המסנן.		
בדוק את צינור הניקוז.	צינור הניקוז מקופל.	

פתרון	סיבה	בעיה
♦ שימוש בכמות קטנה מדי של תכשיר כביסה ביחס לקשיות המים יכול לגרום לכביסה להתקשות לאורך זמן. השתמש בכמות מתאימה של תכשיר כביסה בהתאם לקשיות המים.	השתמשת בכמות קטנה מדי של תכשיר כביסה.	הכביסה יוצאת קשה לאחר פעולת הכביסה. (**)
אם שמת את תכשיר הכביסה בתא השטיפה המוקדמת, על אף שמחזור השטיפה המוקדמת לא נבחר, המוצר יכול להשתמש בתכשיר כביסה זה בשלב השטיפה או המרכך. שים את תכשיר הכביסה בתא הנכון.	שמת את תכשיר הכביסה בתא הלא נכון.	
אין לערבב מרכך עם תכשיר כביסה. שטוף ונקה את המגירה במים חמים.	תכשיר הכביסה התערבב עם המרכך.	
• אם שמת את תכשיר הכביסה בתא השטיפה המוקדמת, על אף שמחזור השטיפה המוקדמת לא נבחר, המוצר יכול להשתמש בתכשיר כביסה זה בשלב השטיפה או המרכך. שטוף ונקה את המגירה במים חמים. שים את תכשיר הכביסה בתא הנכון.	שמת את תכשיר הכביסה בתא הלא נכון.	ריח הכביסה אינו דומה לריח המרכך. (**)
אין לערבב מרכך עם תכשיר כביסה. שטוף ונקה את המגירה במים חמים.	תכשיר הכביסה התערבב עם המרכך.	
יבש את מגירת תכשיר הכביסה לפני שתשים בה את תכשיר הכביסה.	שמת את תכשיר הכביסה במגירה רטובה.	שארית תכשיר הכביסה במגירת
♦ החזק את תכשירי הכביסה סגורים בסביבה יבשה ואל תחשוף אותם לטמפרטורות קיצוניות.	תכשיר הכביסה הפך להיות לח.	תכשיר הכביסה (**)
 בדוק את לחץ המים. 	לחץ המים נמוך.	
♦ בדוק את החורים ונקה אותם אם הם סתומים.	תכשיר הכביסה בתא הכביסה העיקרית נרטב בעת כניסת מים למכונה לצורך שטיפה מוקדמת. החורים בתא תכשיר הכביסה סתומים.	
 פנה לנציג שירות מוסמך. 	יש בעיה בשסתומי מגירת תכשיר הכביסה.	
אין לערבב מרכך עם תכשיר כביסה. שטוף ונקה את המגירה במים חמים.	תכשיר הכביסה התערבב עם המרכך.	
♦ נקה את התוף בקביעות. לביצוע הליך זה, ראה סעיף "ניקוי דלת הכנסת הכביסה והתוף".	התוף אינו מנוקה בקביעות.	
♦ השתמש בתכשירי הכביסה המתאימים למכונת הכביסה שברשותך.	השתמשת בתכשירי כביסה שאינם מתאימים למכונת הכביסה.	נוצר קצף רב מדי בתוך המוצר. (**)
♦ השתמש בכמות מספקת של תכשיר כביסה.	השתמשת בכמות גדולה מדי של תכשיר כביסה.	()
+ אחסן את תכשיר הכביסה במקום סגור ויבש. אין לאחסן אותו במקומות חמים מדי.	אחסנת את תכשיר הכביסה בתנאים בלתי הולמים.	
♦ השתמש בכמויות קטנות יותר של תכשיר כביסה לפריטים מסוג זה.	כביסה המכילה אריגים עם רשתות, כמו מלמלות כמה עלולה ליצור קצף רב מדי בגלל המרקם שלה.	
שים את תכשיר הכביסה בתא הנכון.	שמת את תכשיר הכביסה בתא הלא נכון.	
♦ ייתכן שיש בעיה בשסתומים או במגירת תכשיר הכביסה. פנה לנציג שירות מוסמך.	מרכך הכביסה נכנס למוצר מוקדם.	

בעיה	סיבה	פתרון
קצף גולש מתוך מגירת תכשיר הכביסה.	נעשה שימוש בכמות רבה מדי של תכשיר כביסה.	◆ בחש כף אחת של מרכך כביסה בתוך חצי ליטר מים וצוק את התמיסה אל תא השטיפה הראשית של מגירת תכשיר הכביסה.
		♦ הכנס למוצר תכשיר כביסה בהתאם לתוכניות ולכמויות הכביסה המרביות המצוינות ב"טבלת תוכניות וצריכה". אם אתה משתמש בחומרים כימיים נוספים (מסיר כתמים, מלבין וכדומה), הקטן את כמות תכשיר הכביסה.
הכביסה נשארת רטובה בסוף התוכנית. (*)	קיימת כמות קצף רבה מדי ויש צורך להפעיל את מערכת ספיגת הקצף האוטומטית עקב שימוש בכמות רבה מדי של תכשיר כביסה.	אהשתמש בכמות התכשיר המומלצת.

(*) המוצר אינו עובר לשלב הסחיטה כאשר הכביסה אינה מפוזרת בצורה מאוזנת בתוך התוף למניעת נזק כלשהו למוצר ולסביבתו. יש לסדר מחדש את הכביסה ולסחוט אותה שוב.

4.4.2 התוף אינו מנוקה בקביעות. נקה את התוף בקביעות. ראה 4.4.2

 \triangle

אזהרה: אם אינך יכול לפתור את הבעיה, גם לאחר שביצעת את כל הפעולות המופיעות בפרק זה, היוועץ במפיץ שלך או בסוכן שירות מוסמך. אל תנסה לתקן בעצמך מוצר לא תקין.



אזהרה: בדוק את סעיף HomeWhiz לקבלת המידע הרלוונטי בנושא איתור תקלות.



Washing Machine

User Manual



WTV 9636 XS

Document Number : 2820528352_EN/ 10-03-20.(15:44)

1 General safety instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 Life and property safety

- Never place the product on a carpet-covered floor. Otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
- Unplug the product if it is not in use.
- Always have the installation and repairing procedures carried out by the Authorised Service Agent. The manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.
- ► The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, there is the risk of water leakage.
- ► While there is still water inside the product, never open the loading door or remove the filter. Otherwise, risk of flooding and injury from hot water will occur.
- ► Do not force open the locked loading door. The door will open immediately after the washing cycle has ended. If the door does not open, apply the solutions provided for "Loading door cannot be opened." error in the Troubleshooting section. In case of forcing the loading door to open, the door and the lock mechanism may get damaged.
- ► Use detergents, softeners and supplements suitable for automatic washing machines only.
- ► Follow the instructions on the label of textile products and the detergent package.
- ► The water supply pressure required to run the product is between 1 to 10 bars (0.1 - 1 MPa).
- Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.



This product was manufactured using the latest technology in environmentally friendly conditions.
1.2 Children's safety

- This product can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone. Children under the age of 3 should be kept away unless continuously supervised.
- ► Packaging materials are dangerous for the children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep children away from the product when it is in use. Do not allow them to play with the product. Use child lock to prevent children from intervening with the product.
- ► Do not forget to close the loading door when leaving the room where the product is located.
- Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.

1.3 Electrical safety

- If the product has a failure, it should not be operated unless it is repaired by the Authorised Service Agent! There is the risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Plug the product into a grounded outlet protected by a 16 A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- Do not wash the product by spraying or pouring water onto it! There is the risk of electric shock!

- Never touch the power cable plug with wet hands! Never unplug by pulling on the cable. Always press on the plug with one hand and pull out the plug by grabbing with the other hand.
- Product should be unplugged during installation, maintenance, cleaning and repair procedures.
- If the power cable is damaged, it must be replaced by the manufacturer, authorised service or a similarly qualified person (preferably an electrician) or someone designated by the importer in order to avoid possible risks.

1.4 Hot surface safety



The glass of the loading door gets too hot while washing at higher temperatures. Therefore, especially do not allow children touch the loading door glass while washing.

2.1 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2.2 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

3 Intended use

- This product has been designed for domestic use. It is not for commercial purposes or it should not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of your product is 10 years. During this period, original spare parts will be available to operate the appliance properly.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

4 Technical specifications

Supplier name or trademark	Beko	
Model name	WTV 9636 XS	
Rated capacity (kg)	9	
Maximum spin speed (rpm)	1200	
Built-in	No	
Height (cm)	84	
Width (cm)	60	
Depth (cm)	64	
Single Water inlet / Double Water inlet	• / -	
• Available		
Electrical input (V/Hz)	230 V / 50Hz	
Total current (A)	10	
Total power (W)	2200	
Main model code	138	

4.1 Installation

- Apply to the nearest authorised service agent for the installation of your product.
- Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.
- Make sure that the installation and electrical connections of the product are performed by authorised service. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.
- Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.

4.1.1 Appropriate installation location

- Place the product on a hard and level floor. Do not put it onto a carpet with high pile or other similar surfaces.
- When the washing machine and dryer are placed on top of each other, their total weight –when loaded– amounts to 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product in the environments where the temperature falls below 0 °C.
- Leaving a gap at the sides of the machine is suggested to reduce vibration and noise
- On a graduated floor, do not place the product next to the edge or on a platform.
- Do not place heat sources such as Hobs, Irons, Ovens, etc. on the washing machine and do not use them on the product.

4.1.2 Removing packaging reinforcement (If the product has)



Tilt the machine backwards to remove the packaging reinforcement. Remove the packaging reinforcement by pulling the ribbon. Do not make this operation alone by yourself.

4.1.3 Removing the transportation locks

- 1 Loosen all bolts with an appropriate wrench until they turn freely.
- 2 Remove the transport safety bolts by turning them slightly.
- 3 Insert the plastic covers in the bag containing the user manual to the openings on the rear panel.





CAUTION: Remove the transportation safety bolts before operating the washing machine! Otherwise, the product will be damaged.

Keep the transportation safety bolts in a safe place to reuse when the washing machine needs to be moved again in the future.

Install the transport safety bolts in reverse order of the disassembly procedure.

Never move the product without the transportation safety bolts properly fixed in place!

4.1.4 Connecting water supply



It is necessary to have 10 - 80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher.



CAUTION: Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.



- Tighten the nuts of the hose by hand. Never use a tool when tightening the nuts.
- When hose connection is completed, check whether there is leak problems at the connection points by opening the taps fully. If any leaks occur, turn off the tap and remove the nut. Retighten the nut carefully after checking the seal. In order to prevent the water leaks and resultant damages, keep the taps closed when you do not use the product.

4.1.5 Connecting the drain hose to the drain

• Attach the end of the drain hose directly to waste water drain, lavatory or bathtub.



CAUTION: Your drain house will be flooded if the hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! In order to prevent such situations and make sure that the machine performs water intake and discharge processes without any problem, fix the drain hose securely.



• Connect the drain hose to a minimum height of 40 cm and a maximum height of 100 cm.

• In case the drain hose is elevated after laying it on the floor level or close to the ground (less than 40 cm above the ground), water discharge becomes more difficult and the laundry may come out excessively wet. Therefore, follow the heights described in the figure.

- To prevent the waste water to go back into the machine again and to ensure easy drainage, do not immerse the end of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.
- The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the machine.
- If the length of the hose is too short, use it by adding an original extension hose. Length of the hose may not be longer than 3.2 m. To avoid water leak failures, the connection between the extension hose and the drain hose of the product must be fitted well with an appropriate clamp as not to come off and leak.

4.1.6 Adjusting the feet



CAUTION: In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet. Otherwise, the product may move from its place and cause crushing and vibration problems.

CAUTION: Do not use any tools to loosen the lock nuts. Otherwise, they will get damaged.

- 1 Loosen the lock nuts on the feet by hand.
- 2 Adjust the feet until the product stands in a stable and balanced way.
- 3. Tighten all lock nuts by hand again.



4.1.7 Electrical connection

Connect the product to a grounded outlet protected by a 16 A fuse. The Manufacturer shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- The wiring for the electrical outlet circuit must be sufficient to meet the appliance requirements. Use of a Groud Fault Circuit Interrupter (GFCI) is recommended.
- Power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 16 Amps, have a qualified electrician install a 16 Amp fuse.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs.



CAUTION: Damaged power cables must be replaced by the Authorised Service Agents.

4.1.8 Initial use



Before starting to use the product make sure that the preparations are made which are in line with the "Important Safety and Environment Instructions" and the instructions in the "Installation" section. To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If this program is not available in your machine, apply the method which is described in the section 4.4.2.



Use an anti-limescale suitable for the washing machines.

Some water might have remained in the product due to the quality control processes in the production. It is not harmful for the product.

4.2 Preparation

4.2.1 Sorting the laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always observe the instructions given on the garment care labels.

4.2.2 Preparing laundry for washing

- Laundry items with metal attachments such as, underwiring, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash such clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "Machine washable" or "Hand washable" labelled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing.
- Only use the dyes / colour changers and descaling agents which are appropriate for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in a plastic bag in the freezer for a few hours before washing. This can reduce piling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the product. Such dusts and powders on the laundry may build up on the inner parts of the product in time and can cause damage.

4.2.3 Tips for energy and water saving

Following information will help you use the product in an ecological and energy/water-efficient manner.

- Operate the product in the highest load capacity allowed for the programme you have selected, but do not overload. See, "Programme and consumption table".
- Observe the temperature instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use more detergent than the recommended on the detergent packaging.

4.2.4 Loading the laundry

- 1. Open the loading door.
- 2. Put the laundry items into the product in a loose manner.
- 3 Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door lock will open immediately after the washing programme has ended. Then you can open the loading door. If the door does not open, apply the solutions provided for "Loading door cannot be opened." error in the Troubleshooting section.

4.2.5 Correct load capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the desired washing programme.

The machine automatically adjusts the water amount according to the weight of the laundry put inside it.



WARNING: Comply with the information in the section "Programme and consumption table". When overloaded, product's washing performance will drop. Moreover, noise and vibration problems may occur.

4.2.6 Using detergent and softener



When using detergent, softener, starch, fabric dye, bleach and descaling agents; read the manufacturer's instructions written on the package and follow the dosages specified. Use measuring cup if available.





The detergent drawer is composed of three compartments:

- (1) for prewash
- (2) for main wash
- (3) for softener
- (�) in addition, there is a siphon piece in the softener compartment.

Detergent, softener and other cleaning agents

- Add detergent and softener before starting the washing programme.
- While the washing cycle is in progress, do not leave the detergent drawer open!
- When using a programme without prewash, do not put any detergent into the prewash compartment (compartment no. "1").
- In a programme with prewash, do not put liquid detergent into the prewash compartment (compartment no. "1").
- Do not select a programme with prewash if you are using a detergent bag or dispensing ball. Place the
 detergent bag or the dispensing ball directly among the laundry in the product.
- If you are using liquid detergent, do not forget to place the liquid detergent container into the main wash compartment (compartment no. "2").

Choosing the detergent type

Detergent type to be used depends on the washing programme, fabric type and colour.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) intended solely for delicate clothes and at suggested programmes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens at suggested programme with special detergent made specifically for woollens
- Please review the programme descriptions part for suggested programme for different textiles.
- All recommendations about detergents are valid for selectable temperature range of programmes.



WARNING: Use only detergents manufactured specifically for washing machines.

WARNING: Do not use soap powder.

Adjusting detergent amount

The amount of washing detergent to be used depends on the amount of laundry, the degree of soiling and water hardness.

- Do not use amounts exceeding the dosage quantities recommended on the detergent package to avoid problems of excessive foam, poor rinsing, financial savings and finally, environmental protection.
- Use less detergent for small loads, lightly soiled clothes and short duration programmes, especially in soft water areas.

Using softeners

Pour the softener into the softener compartment of the detergent drawer.

- Do not exceed the (>max<) level sign on the softener compartment.
- If the softener has lost its fluidity, dilute it with water before adding it in the detergent compartment.



WARNING: Do not use liquid detergents or other cleaning products other than fabric softeners produced for washing machines to soften the clothes.

Using liquid detergents

If the product contains a liquid detergent cup:

- Put the liquid detergent container into the compartment no "2".
- If the liquid detergent lost its fluidity, dilute it with water before putting it into the detergent container.



If the product is equipped with a liquid detergent part:

When you want to use liquid detergent, pull the apparatus towards yourself. The part that falls down will
serve as a barrier for the liquid detergent. If required, clean the apparatus with water when it is in place
or by removing it. If you will use powder detergent, the apparatus must be secured at top position.



If the product does not contain a liquid detergent cup:

- Do not use liquid detergent for the prewash in a programme with prewash.
- Liquid detergent stains your clothes when used with "End Time" function that delays start time. If you are going to use the End Time function, do not use liquid detergent.

Using gel and tablet detergent

- If the gel detergent thickness is fluidal and your product does not contain a special liquid detergent container, put the gel detergent into the main wash detergent compartment during first water intake. If your product contains a liquid detergent container, fill the detergent into this container before starting the programme.
- If the gel detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment (compartment no. "2") or directly into the drum before washing.

Using starch

- Add liquid starch, powder starch or the dyestuff into the softener compartment.
- Do not use softener and starch together in a washing cycle.
- Wipe the inside of the product with a damp and clean cloth after using starch.

Using limescale remover

• When required, use limescale removers manufactured specifically for washing machines only.

Using bleaches

- Select a programme with prewash and add the bleach at the beginning of the prewash. Do not put detergent
 in the prewash compartment. As an alternative application, select a programme with extra rinse and add the
 bleach while the product is taking water from the detergent compartment during first rinsing step.
- Do not use bleach and detergent by mixing them.
- Use just a little amount (approx. 50 ml) of bleach and rinse the clothes very well as it causes skin irritation.
- Do not pour the bleach onto the laundry.
- Do not use it with the coloured items.
- When using an oxygen-based bleach, select a programme which washes the laundry at a low temperature.
- Oxygen-based bleach can be used together with the detergent. However, if its thickness is not the same
 with the detergent, put the detergent first into the compartment no. "2" in the detergent drawer and wait
 until the detergent flows while the product is taking in water. While the product continues taking in water,
 add bleach in the same compartment.

4.2.7 Tips for efficient washing

	-	Clothes					
		Light Colours and Whites	Colours	Black/Dark Colours	Delicates/ Woollens/Silks		
		(Recommended temperature range based on soiling level: 40-90°C)	(Recommended temperature range based on soiling level: cold -40°C)	(Recommended temperature range based on soiling level: cold -40°C)	(Recommended temperature range based on soiling level: cold-30°C)		
Level	Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colours and dark colours can be used at dosages recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.		
Soiling	Normally Soiled (For example, stains caused by body on collars and cuffs)	Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colours and dark colours can be used at dosages recommended for normally soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.		
	Lightly Soiled (No visible stains exist.)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colours and dark colours can be used at dosages recommended for lightly soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.		

4.2.8 Displayed Programme Time

You can see the programme duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, foaming, unbalanced load conditions, fluctuations in power supply, water pressure and programme settings, the programme duration is automatically adjusted while the programme is running.

SPECIAL CASE: At programme start of Cottons and Cotton Eco programmes, display shows the duration of half load, which is the most common use case. After programme starts, in 20-25 minutes actual load is detected by the machine. And if the detected load is higher than half load; washing programme will be adjusted accordingly and programme duration increased automatically. You may follow this change on the display.



4.3 Operating the product

4.3.1 Control panel



12 - Temperature adjustment button

6 - Remote Control button.

4.3.2 Display symbols

b а С d е 1200 ٨ ₩ 0 \otimes 90° \bigcirc f γ 60° 1000 */ 40° 800 g 600 30° **ծ** h - P \square 20° à තී ⊁⊦ \$ $\langle 1 \rangle$ (Ø ß ٩ * р 0 n k r m Temperature indicator Delayed Start Enabled indicator ai -Spin speed indicator bk -Auxiliary Function indicators 3 Duration information |-Child Lock is Engaged symbol C-Door lock is engaged symbol Auxiliary Function indicators 2 d m-Programme follow-up indicator Auxiliary Function indicators 1 enf-No Water indicator No Spin Indicator 0-Add Garment indicator **Rinse Hold Indicator** q p-Bluetooth Connection indicator Cold Water indicator hri-Remote Control indicator



The visuals used for machine description in this section are schematic and may not match exactly with the features of your machine.

4.3.3 Programme and consumption table

EN						/	Auxilia	ary fu	nctior	IS	
Programme		Max. Load (kg)	Water Consumption (I)	Energy Consumption (kWh)	Max. Speed***	תוכנית אדים	כביסה מהירה	שטיפה מוקדמת	Extra Rinse	Anti-Crease+	Selectable temperature range °C
	90	9	98	2,65	1200	•	•	•	•	•	Cold-90
כותנה	60	9	98	1,90	1200	•	٠	٠	٠	•	Cold-90
	40	9	95	1,10	1200	•	٠	٠	٠	•	Cold-90
כותנה חסכונית	60**	9	53,0	1,530	1200						Cold-60
סינטטית	60	4	73	1,38	1200	•	•	•	•	•	Cold-60
11.001.0	40	4	70	0,9	1200	•	•	•	•	•	Cold-60
	90	9	76	2,30	1200	•	٠		•	•	Cold-90
יום יומית מהירה / מהירה קצרה ביותר	60	9	76	1,30	1200	•	٠		•	•	Cold-90
	30	9	76	0,25	1200	•	٠		٠	•	Cold-90
יום יומית מהירה / מהירה קצרה ביותר + כביסה מהירה	30	2	48	0,15	1200	•	•		•	•	Cold-90
צמר / כביסה ביד	40	2	55	0,55	1200				•		Cold-40
עדינה	40	4	58	0,80	800				•		Cold-40
כביסה כהה / ג'ינס	40	4	86	0,95	1200	•	•	•	*	•	Cold-40
חיצוני / בגדי ספורט	40	4	58	0,6	1200			٠			Cold-40
תוכנית לכתמים	60	5	80	1,7	1200		•	•			30-60
-היגיינה	90	9	125	2,9	1200	*			*		20-90
שמיכת פוך / הלבשה תחתונה	60	-	95	1,40	1000	•			٠		Cold-60
חולצות	60	4	65	1,40	800	•	٠	٠	٠	٠	Cold-60
Drum Clean+	90	-	80	2,7	600	*					90
	1		הורדת'								
Mix	40	4	73	1,00	800	•	٠	•		•	Cold-40
Curtain	40	2	90	0,8	800			•	*		Cold-40
Lingerie	30	1	76	0,32	600				*		Cold-30
Soft Toys	40	2	65	0,82	600				*		Cold-40
Towel	60	4	100	1,20	1000	•			*		Cold-60

• : Selectable.

* : Automatically selected, cannot be cancelled.

** : Energy Label programme

*** : If maximum spin speed of the machine is lower then this value, you can only select up to the maximum spin speed.

***** : These programmes can be used with the HomeWhiz application.

- : See the programme description for maximum load.

6

The auxiliary functions in the table may vary according to the model of your machine.

Water and power consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in electric voltage.

You can see the washing duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, there may be a difference of 1-1.5 hours between the duration shown on the display and the actual duration of the wash cycle. Duration will be automatically updated soon after the washing starts.

"Selection patterns for auxiliary functions can be changed by the manufacturer company. New selection patterns can be added or removed." "The spin speed of your machine may vary according to the programme; this spin speed cannot exceed the max. spin speed of your machine."

4.3.4 Programme selection

1 Determine the programme suitable for the type, quantity and soiling level of the laundry in accordance with "Programme and consumption table".



Programmes are limited with the highest spin speed appropriate for that particular type of fabric.

When selecting a programme, always consider the type of fabric, colour, degree of soiling and permissible water temperature. Always select the lowest appropriate temperature. Higher temperature means higher electricity consumption.

2 Select the desired programme with the Programme Selection knob.



4.3.5 Programmes

• כותנה חסכונית (Cottons Eco)

Use to wash your normally soiled, durable cotton and linen laundry. Although it washes longer than all other programmes, it provides high energy and water savings. Actual water temperature may be different from the stated wash temperature. When you load the machine with less laundry (e.g. ½ capacity or less), periods in programme stages may automatically get shorter. In this case, energy and water consumption will decrease more, providing a more economic wash.

• כותנה (Cottons)

You can wash your durable cotton laundry (sheets, bedlinen, towels, bathrobes, underwear etc.) in this programme. When the quick wash function button is pressed, programme duration becomes notably shorter but effective washing performance is ensured with intense washing movements. If the quick wash function is not selected, superior washing and rinsing performance is ensured for your heavily soiled laundry.

• סינטטית (Synthetics)

You can wash your laundry (such as shirts, blouses, synthetic/cotton blended fabrics etc.) in this programme. The programme duration gets notable shorter and washing with high performance is ensured. If the quick wash function is not selected, superior washing and rinsing performance is ensured for your heavily soiled laundry.

• כביסה ביד / צמר (Woollens / Hand Wash)

Use to wash your woolen/delicate laundry. Select the appropriate temperature complying with the tag of your clothes. Your laundry will be washed with a very gentle washing action in order not to damage the clothes.

• +היגיינה) (Hygiene)

Applying a steam step at the beginning of the programme allows to soften the dirt easily. Use this programme for your laundry (baby clothes, bed sheets, bedlinen, underwear, etc. cotton items) that requires an anti-allergic and hygienic washing at high temperature with intensive and long washing cycle. The high level of hygiene is ensured thanks to the steam application before the programme, long heating duration and additional rinsing step. • Programme was tested by "The British Allergy Foundation" (Allergy UK) with the 60°C temperature option selected and it was certified in terms of its efficacy in eliminating allergens in addition to bacteria and mould.



Allergy UK is the brand of the British Allergy Association. Seal of Approval is created to guide people that require recommendation about a product that the related product restricts / reduces / eliminates the allergens or reduces the allergen content significantly in the ambient where allergy patients exist. It aims to provide assurance that the products are tested scientifically or examined in a way to provide measurable results.

• שמיכת פוך / הלבשה תחתונה) שמיכת פוך / הלבשה תחתונה)

Use this programme to wash your fiber duvets that bear "machine washable" tag. Check that you have loaded the duvet correctly in order not to damage the machine and the duvet. Remove the duvet cover before loading the duvet into the machine. Fold the duvet into two and load it into the machine. Load the duvet into the machine paying attention to place it in a way that it will not contact the bellow or the glass.

Besides, use this programme to wash your coats, vest, jackets etc. containing feathers with a "machine-washable" label on them.



Do not load more than 1 double fiber duvet (200 x 200 cm).

Do not wash your duvets, pillows and etc. that contain cotton in the machine.

WARNING: Do not wash the items apart from duvets such as carpets, rugs and etc. in the machine. Permanent damage occurs in the machine.

• סחיטה+ניקוז (Spin+Drain)

You can use this function to remove the water on the garment of drain the water in the machine.

• שטיפה (Rinse)

Use when you want to rinse or starch separately.

Curtain

You can use this programme to wash your tulles and curtains. As their meshed texture causes excessive foaming, put little amount of detergent into the main wash compartment. Thanks to the special spin profile of the programme, tulles and curtains crease lesser. Do not load your curtains above the specified capacity in order not to damage them.



It is recommended to use special detergents produced for curtains in the powder detergent compartment in this programme.

• חולצות (Shirts)

This programme is used to wash the shirts made from cotton, synthetic and synthetic blended fabrics altogether. It reduces wrinkles. When the quick wash function is selected, the Pre-treatment algorithm is executed.

• Apply the pre-treatment chemical on your garments directly or add it together with the detergent when the machine starts to take water in the powder detergent compartment. Thus, you can obtain the same performance as you obtain with normal washing in a much shorter period of time. Usage life of your shirts increases.

• אומית מהירה / מהירה (Daily Express / Xpress Super Short) יום יומית מהירה / מהירה קצרה ביותר)

Use this programme to wash your lightly soiled or unspotted cotton clothes in a short time. The programme duration can be reduced down to 14 minutes when the quick wash function is selected. When the quick wash function is selected, maximum 2 (two) kg of laundry must be washed.

• כביסה כהה / ג'ינס) (Dark Care / Jeans)

Use this programme to protect the colour of your dark-coloured garments or jeans. It performs high performance washing with special drum movement even if the temperature is low. It is recommended to use liquid detergent or woolen shampoo for dark coloured laundry. Do not wash your delicate clothes containing wool or etc.

• Mix

Use to wash your cotton and synthetic clothes together without sorting them.

עדינה (Delicates)

You can wash your delicate clothes such as cotton/synthetic blended knitwear or hosiery in this programme. It washes with more delicate washing action. Wash your clothes whose colour you want to preserve either at 20 degrees or by selecting the cold wash option.

• Lingerie

You can use this programme to wash delicate garments that are suitable for hand wash and delicate women's underwear. Small amount of garments must be washed in a washing net. Hooks, buttons etc. must be done up and zips must be zipped up.

• חיצוני / בגדי ספורט (Outdoor / Sports)

You can use this programme to wash sports and outdoors garments that contain cotton/synthetics mix and water repellent covers such as gore-tex etc. It makes sure your garments are washed gently thanks to special rotating movements.

• תוכנית לכתמים (Stain Expert)

The machine has a special stain programme which enables the removal of different types of stains in the most effective way. Use this programme only for durable colourfast cotton laundry. Do not wash delicate and pigmenting clothes and laundry in this programme. Before washing, garment tags should be checked (recommended for cotton shirts, trousers, shorts, t-shirts, baby clothes, pyjamas, aprons, table clothes, bed sheets, duvet covers, pillowcases, bath-beach towels, towels, socks, cotton underwear that are suitable for washing at high temperature and long time). You can use automatic stain programme to wash 24 types of stains divided into three different groups that can be selected with the "Quick Wash" setting button. Below you can find the soil groups that can be selected with the "Quick Wash" setting button. Depending on the selected stain group, a special washing programme for which duration of rinse hold, washing action, washing and rinsing duration are modified. Below you can find the soil groups that can be selected with the "Quick Wash" setting button:

When "Quick Wash" is not selected	When the "Quick Wash" button is pressed onceWhen the "Quick Wash" is pressed twice	
Sweat	Blood	Теа
Collar soil	Chocolate	Coffee
Meal	Pudding	Fruit juice
Mayonnaise	Grass	Ketchup
Salad dressing	Mud	Red wine
Make-up	Egg	Starch
Machine oil	Butter	Jam
Baby food	Curry	Coal

• Select the stain programme.

• Select the stain you want to clean by locating it in the groups above and selecting the related group with the quick auxiliary function button.

• Read the garment tag carefully and ensure that correct temperature and spin speed are selected.

• הורדת תוכניות (Downloaded Program)

This is a special programme that allows you to download different programmes when you want to. At the start, there is a programme you can see with the HomeWhiz application as default. However, you can use the HomeWhiz application to select a programme from the predetermined programme set, and then change and use it.



If you want to use HomeWhiz feature and Remote Control function, you must select Downloaded Programme. Detailed information can be found in 4.3.15 HomeWhiz Feature and Remote Control Function.

Soft Toys

Soft toys must be washed in a delicate programme due to their delicate fabrics, and the fibre and accessories they contain. Thanks to its delicate washing movements and spinning profile, the soft toys programme protects the toys during washing. It is recommended to use liquid detergent.



Fragile toys with hard surfaces must not be washed under any circumstances.

Toys must not be washed together with your garments since they may harm laundry.

• Towel

Use this program to wash durable cotton laundry such as towels. Load the towels into the machine paying attention to place them in a way that they will not contact the bellow or the glass.

4.3.6 Temperature selection



Whenever a new programme is selected, the recommended temperature for the programme appears on the temperature indicator. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current programme.

Press the Temperature Adjustment button to change the temperature. Temperature decreases gradually.



No change can be made in programmes where temperature adjustment is not allowed.

You can also change the temperature after the washing starts. This change can be made if the washing steps allow it. Changes cannot be made if the steps do not allow it.



If you scroll to cold wash option and press Temperature Adjustment button again, the recommended maximum temperature for the selected programme appears on the display. Press the Temperature Adjustment button again to decrease the temperature.

4.3.7 Spin speed selection



Whenever a new programme is selected, the recommended spin speed of the selected programme is displayed on the **Spin Speed** indicator.



It is possible that the recommended spin speed value is not the maximum spin speed that can be selected for the current programme.

Press the **Spin Speed Adjustment** button to change the spin speed. Spin speed decreases gradually. Then, depending on the model of the product, "Rinse Hold "O" and "No Spin "O" options appear on the display. If you are not going to unload your laundry immediately after the programme completes, you can use **Rinse Hold** function in order to prevent them from getting wrinkled when there is no water in the machine. This function holds the laundry in the final rinsing water.

If you want to spin your laundry after the Rinse Hold function:

- Adjust the **Spin Speed**.

- Press **Start / Pause / Cancel**. The programme will resume. Machine drains the water and spins the laundry. If you want to drain the water at the end of the programme without spinning, use **No Spin** function.



No change can be made in programmes where spin speed adjustment is not allowed.

You can change the spin speed after the washing starts if the washing steps allow it. Changes cannot be made if the steps do not allow it.

Rinse hold

If you are not going to unload your clothes immediately after the programme completes, you can use rinse hold function to keep your laundry in the final rinsing water in order to prevent them from getting wrinkled when there is no water in the machine. Press Start / Pause button after this process if you want to drain the water without spinning your laundry. Programme will resume and complete after draining the water. If you want to spin the laundry held in water, adjust the Spin Speed and press Start / Pause button. The programme will resume. Water is drained, laundry is spun and the programme is completed.

4.3.8 Auxiliary function selection



Select the desired auxiliary functions before starting the programme. Whenever a programme is selected, icons of the auxiliary function symbol that is selected together with it illuminates.



When an auxiliary function button that cannot be selected with the current programme is pressed, the washing machine will make a warning sound.

Also the frames of the auxiliary function selected for the current programme after the washing has started remains illuminated.

Some functions cannot be selected together. If a second auxiliary function conflicting with the first one is selected before starting the machine, the function selected first will be canceled and the second auxiliary function selection will remain active. For example, if you want to select Quick Wash after you have selected the Additional Water, Additional Water will be canceled and Quick Wash will remain active.

An auxiliary function that is not compatible with the programme cannot be selected. (See "Programme and consumption table")

Some programmes have auxiliary functions that must be operated simultaneously. Those functions cannot be cancelled. The frame of the auxiliary function will not be illuminated, only inner area will be illuminated.

4.3.8.1 Auxiliary functions

• שטיפה מוקדמת) שטיפה (Prewash)

A Prewash is only worthwhile for heavily soiled laundry. Not using the Prewash will save energy, water, detergent and time.

• כביסה מהירה) (Fast+)

After selecting a programme, you can press the Quick Wash setting key to shorten the programme duration. For some programmes, the duration can shorten by over 50%. Despite this, the washing performance is good thanks to the changed algorithm.

Although it varies in each programme, when you press the Quick Wash key once, the programme duration decreases to a certain level, and when you press the same key for the second time, it drops to the minimum level. For a better washing performance, do not use the Quick Wash setting key when washing heavily soiled laundry. Shorten the programme duration by using the Quick Wash key for Moderately and Slightly soiled laundry.

• תוכנית אדים (Steam)

Use this programme to reduce the creases and ironing times of a small amount of unspotted cotton, synthetic or mixed laundry.



When you activate the steam function, do not use liquid detergent if the product does not have a liquid detergent cup or liquid dosing function. Otherwise, stains might remain on the clothes.

• Remote Control



You can use this auxiliary function key to connect your product to smart devices. For detailed information, see 4.3.15 HomeWhiz Feature and Remote Control Function.

• Customized Programme

This auxiliary function can only be used for Cotton and Synthetics programmes together with the HomeWhiz application. When this auxiliary function is activated, you can add up to 4 auxiliary rinsing steps to the programme. You can select and use some auxiliary functions even though they are not found on your product. You can increase and decrease the time of the Cottons and Synthetics programmes within a safe range.



When the Customized Programme auxiliary function is selected, the washing performance and energy consumption will be different than the declared value.

4.3.8.2 Functions/Programmes Selected by Pressing the Function Keys for 3 Seconds

• Drum Clean+

Press and hold the auxiliary function button 1 for 3 seconds to select the programme. Use regularly (once in every 1-2 months) to clean the drum and provide the required hygiene. Steam is applied before the programme to soften the residues in the drum. Operate the programme while the machine is completely empty. To obtain better results, put powder lime-scale remover for washing machines into the detergent compartment no. "2". When the programme is over, leave the loading door ajar so that the inside of the machine gets dry.



This is not a washing programme. It is a maintenance programme.

Do not run the programme when there is something in the machine. If you try to do so, the machine detects that there is load inside and aborts the programme.

• Anti-Crease+ 🖏 3" 🐼 3"

This function is selected when the spin selection button is pressed and held for 3 seconds and the programme follow-up light for the relevant step turns on. When the function is selected, the drum rotates for up to 8 hours for preventing the laundry from creasing at the end of the programme. You can cancel the programme and take your laundry out at any time during the 8-hour duration. Press the function selection key or the machine on/off key to cancel the function. The programme follow-up light will remain on until the function is canceled or the step is complete. If the function is not cancelled, it will be active in the subsequent washing cycles as well.

• Extra Rinse 1133'' 3''

This function is selected when the auxiliary function button 2 is pressed and held for 3 seconds. This function enables the product to make another rinsing in addition to the one already made after the main wash. Thus, the risk for sensitive skins (babies, allergic skins, etc.) to be effected by the minimal detergent remnants on the laundry can be reduced.

• Child lock \bigcirc 3"

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running programme.



You can switch on and off the machine with On / Off button when the Child Lock is active. When you switch on the machine again, programme will resume from where it has stopped.

When the Child Lock is enabled, an audio warning will be given if the buttons are pressed. Audio warning will be canceled if the buttons are pressed five times consecutively.

To activate the Child Lock:

Press and hold Auxiliary Function button 3 for 3 seconds. After the countdown as "3-2-1" on the display is over, child lock symbol appears on the display. When this warning is displayed, you can release the

Auxiliary Function button 3. To deactivate the Child Lock:

Press and hold Auxiliary Function button 3 for 3 seconds. After the countdown as **"3-2-1"** on the display is over, child lock symbol disappears.

• Bluetooth 3" 🔻 3"

You can use the bluetooth connection function to pair your machine with your smart device. This way, you can use your smart device to get information about your machine and control it.

To activate bluetooth connection:

Press and hold Remote Control function button for 3 seconds. Countdown **"3-2-1"** will be displayed, and then Bluetooth icon will appear on the display. Release **Remote Control function button**. The bluetooth icon will flash while the product is pairing with smart device. If connection is successful, icon will remain on.

To deactivate bluetooth connection:

Press and hold Remote Control function button for 3 seconds. Countdown "3-2-1" will be displayed, and then Bluetooth icon will disappears on the display.



First setup of the HomeWhiz application must be complete for the bluetooth connection to be activated. After setup, pressing the remote control function button while the knob is at Download Program/Remote Control position will automatically activate the bluetooth connection.

4.3.9 End Time

Time display

Remaining time for the completion of the programme while it is running is displayed as "01:30" in hours and minutes format.



Programme time may differ from the values in section "Programme and consumption table" depending on the water pressure, water hardness and temperature, ambient temperature, amount and the type of laundry, auxiliary functions selected and the changes at the mains voltage.

With the **End Time** function, the startup of the programme may be delayed up to 24 hours. After pressing **End Time** button, the programme's estimated ending time is displayed. If the **End Time** is set, **End Time** indicator is illuminated.



In order for the End Time function is activated and the programme is completed at the end of the specified time, you must press **Start/Pause** button after adjusting the time.



If you want to cancel End Time function, turn the knob to on and off position. machine.



When you have activated the End Time function, do not add liquid detergent in the powder detergent compartment no 2. There is the risk of staining of the clothes.

- 1 Open the loading door, place the laundry and put detergent, etc.
- 2 Select the washing programme, temperature, spin speed and, if required, the auxiliary functions.
- 3 Set the end time of your choice by pressing the End Time button. End Time indicator illuminates.

4 Press **Start / Pause** button. Time countdown starts. ":" sign in the middle of the end time on the display starts flashing.



Additional laundry can be added into the machine during the End Time countdown. At the end of the countdown, End Time indicator turns off, washing cycle starts and the time of the selected programme appears on the display.

When the End Time selection is completed, the time appears on the screen consists of end time plus the duration of the selected programme.

4.3.10 Starting the programme

- 1 Press Start / Pause button to start the programme.
- 2 The **Start / Pause** button's light which was off before starts to illuminate steadily now, indicating that the programme has started.



3 Loading door is locked. The door lock symbol appears on the display after the loading door is locked.



4 Programme follow-up indicator lights on the display will show the current programme step.

4.3.11 Loading door lock

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable.

"Door Locked" symbol appears on the display when the loading door is locked.





6

If the Remote Control Function is selected, the door will be locked. In order to open the door you must deactivate Remote Start Function by either pressing the Remote Start button or changing the program position.

Opening the loading door in case of power failure:



In case of power failure, you can use the loading door emergency handle under the pump filter cap to open the loading door manually.



WARNING: To avoid any water overflow before opening the loading door, make sure there is no water left inside the machine.



Open the pump filter cap.



Release the loading door emergency handle located at the rear side of the filter cap.

• Pull down the loading door emergency handle once and open the loading door. After opening the loading door, re-insert the loading door emergency handle.

• If the loading door does not open, try again by pulling down the handle.

4.3.12 Changing the selections after programme has started

Adding laundry after the programme has started 3 5.

If the water level in the machine is suitable when you press Start/Pause button, the door lock will be deactivated and the door will open, allowing you to add garments. The door lock icon on the display goes off when the door lock is deactivated. After adding garments, close the door and press **Start/Pause** button once again to resume the washing cycle.



If the water level in the machine is not suitable when you press Start/Pause button, the door lock cannot be deactivated and the door lock icon on the display remains on.





If the temperature of the water inside the machine is above 50°C, you cannot deactivate the door lock for safety reasons, even if the water level is suitable.

Switching the machine to pause mode:

Press the Start/Pause button to switch the machine to pause mode. Pause symbol will flash on the display.



Changing the programme selection after programme has started:

The programme change is allowed when the current programme is running unless the Child Lock is enabled. This action will cancel the current programme.



The selected program starts anew.

Changing the auxiliary function, speed and temperature

Depending on the step the programme has reached, you can cancel or activate the auxiliary functions. See "Auxiliary function selection"

You can also change the speed and temperature settings. See "Speed selection" and "Temperature selection".



The loading door will not open if the water temperature in the machine is high or the water level is above the loading door baseline.

4.3.13 Cancelling the programme

The programme is cancelled when program selection knob is turned to a different programme or machine is turned off and on again using the program selection knob.



If you turn the program selection knob when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first.

If you want to open the loading door after you have cancelled the programme but it is not possible to open the loading door since the water level in the machine is above the loading door baseline, then turn the Programme Selection knob to Pump+Spin programme and drain the water in the machine.

4.3.14 End of programme

End symbol appears on the display when the programme is completed.

If you do not press any button for 10 minutes, the machine will switch to OFF mode. Display and all indicators are turned off.

Completed programme steps will be displayed if you press On/Off button.

4.3.15 HomeWhiz Feature and Remote Control Function

HomeWhiz allows you to use your smart device to check your washing machine and get information about its status. With HomeWhiz application you can use your smart device to perform various procedures that can also be performed on the machine. Plus, you can use some features only with the HomeWhiz function. You must download the HomeWhiz application from the app store of your smart device to use the bluetooth

You must download the HomeWhiz application from the app store of your smart device to use the bluetooth feature of your machine.

Make sure that your smart device is connected to internet to install the app.

If you are using the app for the first time, please follow the on-screen instructions to complete your user account registration. Once the registration procedure is complete, you can use all products with the HomeWhiz feature in your house on this account.

You can touch "Add/Remove Appliance" HomeWhiz application to see the products paired with your account. You can perform user pairing procedures of these products on this page.



To use the HomeWhiz function, the app must be installed on your smart device and your washing machine must be paired to your smart device via bluetooth. If your washing machine is not paired to your smart device it works as an appliance which does not have a HomeWhiz feature.

Your product will operate as paired to your smart device via bluetooth. The controls made by means of the application will be enabled through this pairing; therefore the bluetooth signal strength between the appliance and the smart device must be adequate.

Please visit www.homewhiz.com to see the Android and iOS versions supported by the HomeWhiz application.



WARNING: All the safety measures described in "GENERAL SAFETY INSTRUCTIONS" section of your user manual apply to the remote operation through HomeWhiz function as well.

4.3.15.1 HomeWhiz Setup

In order for the application to run, a connection between your appliance and the HomeWhiz Application must be established. For this connection to be established you must follow the steps below for setup procedure on both the appliance and the HomeWhiz Application.

• If you are adding an appliance for the first time, tap "Add/Remove Appliance" button on the HomeWhiz Application. After this step tap "Tap here to setup a new appliance". Follow steps below as well as steps in the Homewhiz Application to perform the setup.

• To start the setup, make sure that your machine is turned off. Press and hold the Temperature button and the Remote Control Function button simultaneously for 3 seconds to switch your machine to HomeWhiz setup mode.



• When the appliance is in HomeWhiz setup mode, you will see an animation on the display and the bluetooth icon will flash until your machine gets paired with smart device. Only programme knob will be active in this mode. Other buttons will be inactive.



• On the screen you see on the app, select the washing machine and press next.

• Proceed reading the on-screen instructions until HomeWhiz asks you about the product you wish to connect to your smart device.

• Return to the HomeWhiz application and wait until the setup is complete. When setup is complete, give your washing machine a name. Now, you can tap and see the product you have added in the HomeWhiz Aplication.

If you cannot successfully perform the setup within 5 minutes, your washing machine will turn off automatically. In this case, you will have to start over the setup procedure. If the problem persists contact the Authorised Service Agent.

You can use your washing machine with more than one smart device. To do this, download the HomeWhiz app on the other smart device as well. When you launch the app, you will need to log in with the account you previously created and paired your washing machine. Otherwise, please read "Setting up a washing machine that is connected to someone else's account".



WARNING: You need internet connection on your smart device to proceed with HomeWhiz setup. Otherwise, the HomeWhiz application will not let you finish the setup procedure successfully. Please contact your internet service provider if you are having problems with your internet connection.



HomeWhiz Application may require you to type the product number shown on the product label. You can find the product label inside of the appliance door. The product number will be shown on the label.



4.3.15.2 Setting up a washing machine that is connected to someone else's account

If the washing machine you want to use was previously introduced to the system with someone else's account, you must establish a new connection between your HomeWhiz Application and the appliance.

- Download HomeWhiz Application on the new smart device you want to use.
- Create a new account and log in to this account on the HomeWhiz app.
- Follow the steps described in HomeWhiz Setup (4.3.15.1 HomeWhiz Setup) and proceed with the setup procedure.



Since the HomeWhiz Feature and Remote Control function on your appliance is operated via pairing using Bluetooth technology only one Homewhiz application can operate it at a time.

4.3.15.3 Remote Control function and its use

After HomeWhiz setup, bluetooth will automatically turn on. To activate or deactivate the bluetooth connection, please see 4.3.8.2 Bluetooth 3".

If you turn off and on your machine while bluetooth is active, it will automatically reconnect. In cases such as paired device going off the range, bluetooth will automatically turn off. For this reason, you will need to turn on the bluetooth again if you want to use the Remote Control function.

You can check the bluetooth symbol on the display to track your connection status. If the symbol is continuously on, you have bluetooth connection. If the symbol is flashing, the product is trying to connect. If the symbol is off, you have no connection.



WARNING: When the bluetooth connection is on in your product, Remote Control function will be selectable. If the Remote Control function cannot be selected, check the connection status. If the connection cannot be established, repeat the initial set-up settings on the appliance.

WARNING: For safety reasons, the product's door will remain locked while the Remote Control function is enabled, independently of the operating mode. If you want to open the door of the product, you will need to turn the program selection knob or press the remote control key to deactivate the remote control function.

When you want to control your washing machine remotely, you need to activate the Remote Control function by pressing the Remote Control button while the programme knob is in the Download Program/Remote Control position button on the control panel of your washing machine. When your product is accessed, you will see a screen similar to the below.



When the Remote Control is on, you can only manage, turn-off and status follow-up operations through your washing machine. And all functions except child lock can be managed through the application.

You can follow whether the Remote Control function is On or Off through the function indicator on the button. If the Remote Control function is Off, all the operations are handled on the washing machine and only status follow-up is allowed on the application.

In the event that Remote Start function cannot be turned on, appliance will make a warning sound when you press the button. This might happen in cases such as when the appliance is turned on and there is no paired smart device via bluetooth. Bluetooth settings being Off or the washing machine's door being open are examples for such cases.

Once you activate this function on the washing machine, it will remain enabled apart from certain conditions and allow you to control your washing mahine remotely via bluetooth.

In certain cases, it deactivates itself for safety reasons:

- When your washing machine undergoes a power interruption.
- When programme knob is turned and a different program selected or appliance is turned off.

4.3.15.4 Troubleshooting

Do the following if you have a problem with controlling or connection. Observe whether the problem persists or not after the action you have performed. Do the following if the problem is not resolved.

- Check whether your smart device is connected to the relevant home network.
- Restart the product application.
- Turn bluetooth off and then on via user control panel.
- If the connection cannot be established with the above processes, repeat the initial set-up settings on the washing machine.

If the problem persists, consult an Authorised Service Agent.

4.4 Maintenance and cleaning

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

4.4.1 Cleaning the detergent drawer



Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent in time.

- 1 Press the dotted point on the siphon in the softener compartment and pull towards you until the compartment is removed from the machine.
- Lift the rear part of the siphon to remove it as illustrated. If more than normal amount of water and softener mixture starts to gather in the softener compartment, the siphon must be cleaned.
- 3. Wash the detergent drawer and the siphon with plenty of lukewarm water in a washbasin. In order to prevent the residues to contact your skin, clean it with an appropriate brush by wearing a pair of gloves.
- 4. Insert the drawer back into its place after cleaning and make sure that it is seated well.

4.4.2 Cleaning the loading door and the drum

For products with drum cleaning programme, please see Operating the product - Programmes.

Repeat Drum Cleaning process in every 2 months.

Use an detergent / anti-limescale suitable for the washing machines.



After every washing make sure that no foreign substance is left in the drum. If the holes on the bellow shown in the figure is blocked, open the holes using a toothpick.

Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel.

Never use steel wool or wire wool. These will damage the painted, chromated and plastic surfaces.

4.4.3 Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

4.4.4 Cleaning the water intake filters

There is a filter at the end of each water intake valve at the rear of the machine and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the washing machine. Filters should be cleaned as they do get dirty.



Close the taps.

Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.

Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.

Replace the seals and filters carefully and tighten their nuts by hand ensuring there are no leaks.

4.4.5 Draining remaining water and cleaning the pump filter

The filter system in your machine prevents solid items such as buttons, coins and fabric fibres clogging the pump impeller during discharge of washing water. Thus, the water will be discharged without any problem and the service life of the pump will extend.

If the machine fails to drain water, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the machine (e.g., when moving to another house) and in case of freezing of the water, water may have to be drained completely.



CAUTION: Foreign substances left in the pump filter may damage your machine or may cause noise problem.

CAUTION: If the product is not being used, shut the tap shut, remove mains pipe and drain the water inside the machine against any likely freezing.

CAUTION: After each use, turn off the water tap to which the mains hose is connected.

In order to clean the dirty filter and discharge the water:

1 Unplug the machine to cut off the supply power.



CAUTION: Temperature of the water inside the machine may rise up to 90 °C. To avoid the burning risk, clean the filter after the water inside the machine is cooled down.

2. Open the filter cover.



3 Follow the below procedures in order to drain water.

The product has an emergency water draining hose, in order to drain the water:



- a Pull the emergency draining hose out from its seat Place a large container at the end of the hose. Drain the water into the container by pulling out the plug at the end of the hose. When the container is full, block the inlet of the hose by replacing the plug. After the container is emptied, repeat the above procedure to drain the water in the machine completely.
- c When draining of water is finished, close the end by the plug again and fix the hose in its place.
- d Turn and remove the pump filter.

- 4. Clean any residues inside the filter as well as fibres, if any, around the pump impeller region.
- 5. Replace the filter.
- 6. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.

5 Troubleshooting

Problem	Cause	Solution	
Programmes do not start after the loading door is closed.	Start / Pause / Cancel button is not pressed.	Press Start / Pause / Cancel button.	
	It may be difficult to close the loading door in case of excessive loading.	• Reduce the amount of laundry and make sure that the loading door is closed properly.	
Programme cannot be started or selected.	The product has switched to self protection mode due to a supply problem (line voltage, water pressure, etc.).	To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be cancelled. (see."Cancellation of programme")	
Water inside the product.	Some water has remained in the product due to the quality control processes in the production.	 This is not a failure; water is not harmful to the product. 	
The product does not take water	Tap is turned off.	Turn on the taps.	
in.	Water inlet hose is bent.	Flatten the hose.	
	Water inlet filter is clogged.	Clean the filter.	
	Loading door is not closed.	Close the door.	
The product does not drain water.	Water drain hose is clogged or twisted.	Clean or flatten the hose.	
	Pump filter is clogged.	Clean the pump filter.	
Product vibrates or makes noise.	Product is standing unbalanced.	Stable the product by adjusting the feet.	
	A hard substance has entered into the pump filter.	Clean the pump filter.	
	Transportation safety bolts are not removed.	Remove the transportation safety bolts.	
	Laundry quantity in the product is too little.	Add more laundry to the product.	
	Excessive laundry is loaded in the product.	 Take out some of the laundry from the product or distribute the load by hand to balance it homogeneously in the product. 	
	Product is leaning on a rigid item.	Make sure that the product is not leaning on anything.	
There is water leaking from the	Water drain hose is clogged or twisted.	Clean or flatten the hose.	
bottom of the product.	Pump filter is clogged.	Clean the pump filter.	
Product stopped shortly after the programme started.	Machine has stopped temporarily due to low voltage.	 Product will resume running when the voltage restores to the normal level. 	
Product directly drains the water it takes in.	Draining hose is not at adequate height.	Connect the water draining hose as described in the user manual.	
No water can be seen in the product during washing.	Water is inside the invisible part of the product.	• This is not a failure.	
Loading door cannot be opened.	Loading door lock is activated because of the water level in the product.	 Drain the water by running the Pump or Spin programme. 	
	Product is heating up the water or it is at the spinning cycle.	Wait until the programme completes.	
	Loading door may be stuck because of the pressure it is subjected to.	Grab the handle and push and pull the loading door to release and open it.	
	If there is no power, loading door of the product will not open.	 To open the loading door, open the pump filter cap and pull down the emergency handle positioned at the rear side of the said cap. See "Loading door lock" 	

Problem	Cause	Solution
Washing takes longer than specified in the user manual.(*)	Water pressure is low.	 Product waits until taking in adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends.
	Voltage is low.	Washing time is prolonged to avoid poor washing results when the supply voltage is low.
	Input temperature of water is low.	 Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results.
	Number of rinses and/or amount of rinse water have increased.	 Product increases the amount of rinse water when good rinsing is needed and adds an extra rinsing step if necessary.
	Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage.	Use recommended amount of detergent.
Programme time does not countdown. (On models with display) (*)	Timer may stop during water intake.	 Timer indicator will not countdown until the product takes in adequate amount of water. The product will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.
	Timer may stop during heating step.	• Timer indicator will not countdown until the product reaches the selected temperature.
	Timer may stop during spinning step.	 Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
Programme time does not countdown. (*)	There is unbalanced load in the product.	Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
Product does not switch to spinning step. (*)	There is unbalanced load in the product.	Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
	The product will not spin if water is not drained completely.	Check the filter and the draining hose.
	Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage.	Use recommended amount of detergent.
Washing performance is poor: Laundry turns gray. (**)	Insufficient amount of detergent has been used over a long period of time.	Use the recommended amount of detergent appropriate for water hardness and the laundry.
	Washing has been made at low temperatures for a long time.	Select the proper temperature for the laundry to be washed.
	Insufficient amount of detergent is used with hard water.	 Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth into gray in time. It is difficult to eliminate graying once it happens. Use the recommended amount of detergent appropriate for water hardness and the laundry.
	Excessive amount of detergent is used.	Use the recommended amount of detergent appropriate for water hardness and the laundry.

Problem	Cause	Solution
Washing performance is poor: Stains persist or the laundry is not	Insufficient amount of detergent is used.	Use the recommended amount of detergent appropriate for water hardness and the laundry.
whitened. (**)	Excessive laundry is loaded in.	 Do not load the product in excess. Load with amounts recommended in the "Programme and consumption table".
	Wrong programme and temperature were selected.	• Select the proper programme and temperature for the laundry to be washed.
	Wrong type of detergent is used.	• Use original detergent appropriate for the product.
	Excessive amount of detergent is used.	Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent with each other.
Washing performance is poor: Oily stains appeared on the laundry. (**)	Regular drum cleaning is not applied.	 Clean the drum regularly. For this procedure, please see "Cleaning the loading door and the drum".
Washing performance is poor: Clothes smell unpleasantly. (**)	Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programmes.	Leave the detergent drawer as well as the loading door of the product ajar after each washing. Thus, a humid environment favorable for bacteria cannot occur in the machine.
Colour of the clothes faded. (**)	Excessive laundry was loaded in.	Do not load the product in excess.
	Detergent in use is damp.	 Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
	A higher temperature was selected.	 Select the proper programme and temperature according to the type and soiling degree of the laundry.
Washing machine does not rinse well.	The amount, brand and storage conditions of the detergent used are inappropriate.	 Use a detergent appropriate for the washing machine and your laundry. Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
	Detergent was put in the wrong compartment.	 If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.
	Pump filter is clogged.	Check the filter.
	Drain hose is folded.	Check the drain hose.
Laundry became stiff after washing. (**)	Insufficient amount of detergent is used.	 Using insufficient amount of detergent for the water hardness can cause the laundry to become stiff in time. Use appropriate amount of detergent according to the water hardness.
	Detergent was put in the wrong compartment.	 If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.
	Detergent was mixed with the softener.	• Do not mix the softener with detergent. Wash and clean the drawer with hot water.
Laundry does not smell like the softener. (**)	Detergent was put in the wrong compartment.	 If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Wash and clean the drawer with hot water. Put the detergent in the correct compartment.
	Detergent was mixed with the softener.	• Do not mix the softener with detergent. Wash and clean the drawer with hot water.

Problem	Cause	Solution			
Detergent residue in the detergent drawer. (**)	Detergent was put in wet drawer.	• Dry the detergent drawer before putting in detergent.			
	Detergent has gotten damp.	 Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures. 			
	Water pressure is low.	Check the water pressure.			
	The detergent in the main wash compartment got wet while taking in the prewash water. Holes of the detergent compartment are blocked.	Check the holes and clean if they are clogged.			
	There is a problem with the detergent drawer valves.	Call the Authorised Service Agent.			
	Detergent was mixed with the softener.	Do not mix the softener with detergent. Wash and clean the drawer with hot water.			
	Regular drum cleaning is not applied.	 Clean the drum regularly. For this procedure, please see "Cleaning the loading door and the drum". 			
Too much foam forms inside the product. (**)	Improper detergents for the washing machine is used.	Use detergents appropriate for the washing machine.			
	Excessive amount of detergent is used.	Use only sufficient amount of detergent.			
	Detergent was stored under improper conditions.	• Store detergent in a closed and dry location. Do not store in excessively hot places.			
	Some meshed laundry such as tulle may foam too much because of their texture.	• Use smaller amounts of detergent for this type of item.			
	Detergent was put in the wrong compartment.	Put the detergent in the correct compartment.			
	Softener is being taken early by the product.	 There may be problem in the valves or in the detergent drawer. Call the Authorised Service Agent. 			
Foam is overflowing from the detergent drawer.	Too much detergent is used.	 Mix 1 tablespoonful softener and ½ I water and pour into the main wash compartment of the detergent drawer. 			
		 Put detergent into the product suitable for the programmes and maximum loads indicated in the "Programme and consumption table". When you use additional chemicals (stain removers, bleaches and etc.), reduce the amount of detergent. 			
Laundry remains wet at the end of the programme. (*)	Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage.	Use recommended amount of detergent.			
	pinning step when the laundry is not evenly distribute ronment. Laundry should be rearranged and re-spun.	d in the drum to prevent any damage to the			
(**) Regular drum cleaning is not ap	oplied. Clean the drum regularly. See 4.4.2				
	ou cannot eliminate the problem although you follow the vice Agent. Never try to repair a nonfunctional product you				



 $\label{eq:WARNING: Check the HomeWhiz section for the relevant troubleshooting information.$