

מכונת כביסה מדריך למשתמש

## **Washing Machine**

User Manual



WTV 7515 BW

## HE/EN

30.06.20.1654/HE\_2820526946

## הוראות בטיחות כלליות 1

סעיף זה כולל הוראות בטיחות אשר עשויות לעזור לך למנוע סיכונים של פציעות ונזק גופנית. כל סוגי האחריות לא יהיו בתוקף אם לא תציית להוראות אלה.

## 1.1 בטיחות חיים ורכוש

- לעולם אין להציב את המכשיר על רצפה שמכוסה בשטיח. חלקים חשמליים יתחממו יתר על המידה, מכיוון שאין זרימת אוויר מתחת למכשיר. דבר זה עלול לגרום לבעיות במוצר.
  - נתק את המוצר מהחשמל אם אינו בשימוש. ◄
- הקפד תמיד שפעולות ההתקנה והתיקון יבוצעו על ידי נציג שירות מוסמך. היצרן לא יישא באחריות לנזקים שעלולים להיגרם כתוצאה מפעולות שנעשו על ידי גורמים בלתי מוסמכים.
- על צינור אספקת המים וצינור הניקוז להיות מהודקים היטב ולהישאר ללא פגם. ◄ זאת כדי למנוע נזילת מים.
- אין לפתוח את דלת הכנסת הכביסה או להסיר את המסנן כאשר יש עדיין מים בתוך המוצר. שכן, קיימת סכנת הצפה ופגיעה ממים חמים.
- אין לפתוח בכוח את דלת הכנסת הכביסה הנעולה. את דלת הכנסת הכביסה ניתן לפתוח מספר דקות לאחר סיום מחזור הכביסה. אם פותחים בכוח את דלת הכנסת הכביסה, עלול להיגרם נזק לדלת ולמנגנון הנעילה.
- ► השתמש באבקות/נוזלי כביסה, מרככים ותוספים המתאימים למכונות כביסה אוטומטיות בלבד.
  - . ציית להוראות שעל תווית האריג ועל אריזת אבקת/נוזל הכביסה.

## 1.2 בטיחות ילדים

במכשיר זה יכולים להשתמש ילדים בני 8 ומעלה ובני אדם בעלי לקויות פיזיות, חישתיות או שכליות וכן אנשים חסרי מיומנויות או ניסיון, בתנאי שתהיה עליהם השגחה או שיונחו כיצד להשתמש במוצר בצורה בטוחה ומפני אילו סכנות להישמר. אין להרשות לילדים לשחק במכשיר. אין להרשות לילדים לבצע עבודות ניקוי ותחזוקה ללא השגחה. יש להרחיק מהמכשיר ילדים מתחת לגיל 3 אלא אם כן הם נמצאים בהשגחה רצופה.



מוצר זה יוצר באמצעות הטכנולוגיה המתקדמת ביותר בתנאים ידידותיים לסביבה.

- חומרי האריזה עלולים להיות מסוכנים לילדים. הנח את חומרי האריזה במקום בטוח הרחק מהישג ידם של ילדים.
- המוצרים החשמליים מסוכנים לילדים. הרחק את הילדים מהמוצר כאשר הוא פועל. אל תרשה להם לשחק במוצר. השתמש בנעילת מקשים כדי למנוע את התעסקות הילדים במוצר.
- אל תשכח לסגור את דלת הכנסת הכביסה כאשר אתה יוצא מהחדר שבו ממוקם המוצר.
- אחסן את כל תכשירי הכביסה והתוספים במקום בטוח הרחק מהישג ידם של הילדים, על ידי סגירת המכסה של תא תכשירי הכביסה או על ידי אטימת אריזת תכשיר הכביסה.

## 1.3 בטיחות בחשמל

- ◄ אם קיימת תקלה במוצר, יש להפעילו אך ורק לאחר שתוקן על ידי נציג שירות מוסמך. סכנת התחשמלות!
- מוצר זה בנוי כך שיחדש את פעולתו לאחר הפסקת חשמל. אם ברצונך לבטל את -התוכנית, ראה פרק "ביטול התוכנית".
- חבר את המוצר לשקע מוארק המוגן על ידי נתיך A 16. יש להקפיד על התקנת כבל הארקה על ידי חשמלאי מוסמך. החברה לא תישא באחריות לנזקים כלשהם שייגרמו עקב שימוש במוצר ללא הארקה, בהתאם לתקנות המקומיות.
- אין לשטוף את המוצר על ידי התזת מים מעליו או הרטבתו במים! סכנת התחשמלות!
- ↓ לעולם אין לגעת בתקע בידיים רטובות. אל תמשוך את כבל החשמל כדי לנתק את המכונה מהחשמל, נתק אותה מהחשמל תמיד על ידי החזקת השקע ביחד אחת ומשיכת התקע ביד השנייה.
  - 🕨 יש לנתק את המוצר מהחשמל במהלך פעולות התקנה, תחזוקה, ניקוי ותיקון.
- ◄ אם כבל החשמל פגום, הוא יוחלף על ידי היצרן, או על ידי נציג שירות התמיכה בלקוח או על ידי חשמלאי מוסמך, או על ידי איש מקצוע שיועד לכך על ידי היבואן, כדי למנוע סיכונים אפשריים.

## 1.4 בטיחות משטחים חמים



כשמכונת הכביסה מכבסת את הכביסה בטמפרטורות גבוהות, דלת הכנסת הכביסה מתחממת. לאור זאת, כשמכונת הכביסה פועלת, הרחק ילדים מדלת הכנסת הכביסה של המוצר כדי שלא ייגעו בה.

### WEEE תאימות להנחיית 2.1



מוצר זה מציית להנחיה WEEE של האיחוד האירופי (2012/19/EU). מכשיר זה נושא סמל מיון לפסולת של מכשירים חשמליים ואלקטרוניים (WEEE).

מוצר זה יוצר עם חלקים וחומרים באיכות גבוהה, שניתן לעשות בהם שימוש חוזר והם מתאימים למחזור. אין לסלק את פסולת המוצר ביחד עם הפסולת הביתית ופסולת מסוגים אחרים בסוף חיי השירות שלו. כך את המוצר אל מרכז האיסוף למיחזור ציוד חשמלי ואלקטרוני. היוועץ ברשויות המקומיות כדי ללמוד אודות מרכזי איסוף אלה.

תאימות להנחיית RoHS (ההנחיה להגבלת חומרים מסוכנים)

המוצר שרכשת תואם את הנחיית RoHS של האיחוד האירופי (2011/65/EU). הוא אינו מכיל חומרים מזיקים או אסורים המצוינים בהנחיה.

#### 2.2 פרטי האריזה

חומרי האריזה של המוצר מיוצרים מחומרים ממוחזרים, בהתאם לתקנות הארציות בנושא איכות הסביבה. אין לסלק לאשפה חומרי אריזה ביחד עם אשפה ביתית או פסולת אחרת. קח אותם לנקודות האיסוף של חומרי האריזה שהקצו לשם כך הרשויות המקומיות.

#### שימוש מיועד 3

- מוצר זה נועד לשימוש ביתי. הוא לא נועד למטרות מסחריות ואין להשתמש בו מעבר לשימוש שאליו הוא נועד.
  - מותר להשתמש במוצר אך ורק לכביסה ולשטיפה של כבסים המסומנים בהתאם.
    - היצרן מתנער מכל אחריות עקב שימוש או הובלה לא נכונים.
- אורך חיי השירות של המוצר הוא 10 שנים. במהלך תקופה זו יהיו חלקי חילוף מקוריים זמינים להפעלת המכשיר בצורה נכונה.

## מפרטים טכניים 4

Beko	שם הספק או סימן מסחרי	
WTV 7515 BW	שם הדגם	
7	יכולת נקובה (בק"ג)	
А	סיווג יעילות אנרגטית / החל מסיווג A (היעילות הגבוהה ביותר) ועד סיווג D (היעילות הנמוכה ביותר)	
1000	מהירות סחיטה מרבית (סל״ד)	
84	גובה (ס"מ)	
60	רוחב (ס"מ)	
55	עומק (ס"מ)	
61	משקל נקי (±4 ק"ג)	
-/•	נקודת כניסת מים יחידה / נקודת כניסת מים כפולה	
- / •	• זמין	
230 V / 50Hz	מתח חשמלי (V/Hz)	
10	(A) זרם כולל	
2200	הספק כולל (W)	
9210	קוד דגם ראשי	
המפרטים הטכניים עשויים להשתנות ללא הודעה מוקדמת לצורך שיפור איכות המוצר.		

### 4.1 התקנה

- פנה לנציג שירות מוסמך הקרוב למקום מגוריך לשם התקנת המוצר.
- הכנת המיקום למתקני החשמל, מי הברז ומי השפכים במקום ההתקנה היא באחריות הלקוח.
- ודא שצינור כניסת המים, צינור פליטת המים וכבל החשמל אינם מקופלים, מעוכים ושלא מופעל עליהם לחץ בעת דחיפת המוצר למקומו לאחר פעולות ההתקנה והניקוי.
- ודא שהתקנת המוצר והחיבורים שלו לחשמל יבוצעו על ידי נציג שירות מוסמך. היצרן לא יישא באחריות לנזקים שעלולים להיגרם כתוצאה מפעולות שנעשו על ידי גורמים בלתי מוסמכים.
- לפני ההתקנה בדוק אם אין פגמים במוצר. אם יש, דאג שהמוצר לא יותקן. מוצרים פגומים מהווים סכנה לבטיחותך.

#### 4.1.1 מיקום התקנה הולם

- הנח את המוצר על רצפה קשה וישרה. אין להניח אותו על שטיח עם סיבים ארוכים או על משטחים דומים אחרים.
- כאשר המייבש מונח על מכונת הכביסה, המשקל הכולל שלהם בקיבולת מגיע ל-180 ק"ג. הצב את המכונה על רצפה מוצקה וישרה בעלת די שטח לנשיאת כביסה!
  - איו להציב את המכונה על כבל החשמל.
  - אין להתקין את המקרר במקומות שבהם הטמפרטורה צונחת אל מתחת ל-0°C.
    - יש להשאיר רווח מינימאלי של ס"מ בין המכונה לרהיט שלידה.
    - אין להניח את המוצר על רצפה מדורגת קרוב לקצה או על מעמד מוגבה.

#### 4.1.2 הסרת אביזרי הקיבוע של האריזה



הטה את המכונה לאחור כדי להסיר את אביזרי הקיבוע של האריזה. הסר את אביזרי הקיבוע של האריזה על ידי משיכת הסרט. אל תבצע פעולה זו בעצמך.

### 4.1.3 הסרת מנעולי ההובלה

- שחרר את כל הברגים במפתח המתאים עד שתוכל לסובב אותם בחופשיות. 1
  - 2 הסר את בורגי הבטיחות של ההובלה על ידי סיבוב קל.
- הכנס את מכסי הפלסטיק הכלולים בשקית המדריך למשתמש אל הפתחים בלוח 3

האחורי.

6



שמור את בורגי הבטיחות של ההובלה במקום בטוח, כדי שתוכל להשתמש בהם בפעם הבאה שתצטרך להעביר את מכונת הכביסה ממקוח למקוח

התקן את בורגי הבטיחות של הההובלה בסדר הפוך לפעולת הפירוק.

איו להעביר את המוצר אם בורגי הבטיחות של ההובלה אינם מהודקים בצורה נכונה למקומם!

#### 4.1.4 חיבור המכונה למערכת אספקת המים



על לחץ אספקת המים הדרוש לפעולת המכונה להיות 1-10 ברים (0.1 – 1 מגה פסקל). כדי שהמכונה תפעל בצורה חלקה, על קצב זרימת המים להיות 10 – 80 ליטר בדקה שיזרמו מברז פתוח לגמרי. התקן שסתום לחץ אם לחץ המים גבוה יותר.



**זהירות:** אין לחבר דגמים בעלי יציאת מים אחת לברז המים החמים. במקרה זה ייגרם נזק לכביסה או שהמכונה תעבור למצב הגנה ולא תפעל.

זהירות: במכונה החדשה אין להשתמש בצינורות ישנים או משומשים לכניסת מים. הם עלולים להשאיר כתמים על הכביסה.



1 הדק ידנית את האומים של הצינור. אין להשתמש ככלי עבודה בעת הידוק האומים.

2 לאחר השלמת חיבור הצינור, בדוק אם קיימות בעיות נזילה בנקודות החיבור על ידי פתיחת הברזים עד הסוף. אם קיימת נזילה, סגור את הברז והסר את האום. הדק שוב בקפידה את האום לאחר בדיקת הנזילה. כדי למנוע נזילות מים ונזקים כתוצאה מהנזילות, השאר את הברזים סגורים כשאינה משתמש במוצר.

#### 4.1.5 חיבור צינור הניקוז למערכת הניקוז

הצמד את קצה צינור הניקוז ישירות אל מערכת הניקוז של מי השופכין, אל האסלה או אל האמבטיה.

**זהירות:** ביתך יוצף במים אם הצינור ייצא מהתושבת שלו במהלך פליטת המים. יתרה מכך, קיים סיכון לכוויות עקב טמפרטורות כביסה גבוהות! כדי למנוע מצבים של אי חיבור נכון ולוודא שהמים נכנסים למכונה ונפלטים ממנה ללא בעיה, קבע את צינור הניקוז בצורה בטוחה.



חבר את צינור הניקוז לגובה מינימאלי של 40 ס"מ
 ולגובה מרבי של 100 ס"מ.

•אם מרימים את צינור הניקוז לאחר שהיה מונח בגובה הרצפה או קרוב אליה (פחות מ-40 ס"מ מעל הרצפה), פליטת המים תתבצע בקושי רב יותר והכביסה עלולה לצאת רטובה מדי. פעל בהתאם לגבהים המתוארים באיור.

- כדי למנוע חזרת מים מלוכלכים אל המכונה וכדי להבטיח ניקוז קל, אין לטבול את קצה הצינור במים המלוכלכים ואין להכניס אותו לנקז יותר מ-15 ס"מ. אם הוא ארוך מדי, קצר אותו.
  - אין לכופף את קצה הצינור, אין לדרוך עליו או להפעיל עליו לחץ בין הנקז לבין המכונה
- אם הצינור קצר מדי, השתמש בו על ידי הוספת צינור הארכה מקורי. אורך הצינור לא יעלה על 3.2 מ'. כדי למנוע תקלות הגורמות לנזילת מים, יש להתקין בצורה נכונה את החיבור בין צינור ההארכה מ'. כדי למנוע תקלות הגורמות לנזילת מים, יש להתקין בצורה נכונה את החיבור מים לבין צינור הניקוז של המוצר בעזרת מהדקים, כדי שהחיבור לא יתפרק ולא תהיה נזילת מים.

### 4.1.6 כוונון הרגליות

1 2

**זהירות:** כדי להבטיח שהמכונה תפעל בצורה שקטה יותר וללא רטט, יש להציבה בצורה ישרה ומאוזנת על הרגליות שלה. אזן את המכונה על ידי כוונון הרגליות. כדי שהיא לא תזוז ממקומה ותגרום לבעיות של הימחצות ורטט.

זהירות: אין להשתמש במכשירים כלשהם לשחרור אומי הנעילה, כדי לא לגרום להם נזק.

- שחרר ידנית את אומי הנעילה שברגליות.
- כוונן את הרגליות עד שהמכונה תעמוד בצורה ישרה ומאוזנת.
  - הדק שוב ידנית את כל אומי הנעילה.



#### 4.1.7 חיבור לחשמל

חבר את המוצר לשקע מוארק המוגן על ידי נתיך A 16. החברה לא תישא באחריות לנזקים כלשהם שייגרמו עקב שימוש במוצר ללא הארקה, בהתאם לתקנות המקומיות.

- על החיבור להתבצע בהתאם לתקנות הארציות.
- על תקע כבל החשמל להיות נגיש בקלות לאחר ההתקנה.
- אם הערך הנוכחי של הנתיך או מפסק הזרם בבית נמוכים מ-16 אמפר, הזמן חשמלאי מוסמך להתקנת נתיך או מפסק זרם 16 אמפר.
  - על המתח המצוין בסעיף "מפרטים טכניים" להיות שווה למתח מערכת החשמל.
    - אין לבצע חיבורים בעזרת כבלים מאריכים או מפצלים.



זהירות: כבלי חשמל פגומים יוחלפו על ידי נציגי שירות מורשים.

#### 4.1.8 שימוש ראשון



לפני שתתחיל להשתמש במוצר, ודא שנעשו כל ההכנות בהתאם להוראות המופיעות בפרקים "הוראות בטיחות חשובות והוראות חשובות להגנת הסביבה" ו"התקנה".

כדי להכין את המוצר לפעולת הכביסה, בצע את ההפעלה הראשונה בתוכנית לניקוי התוף. אם תוכנית זו אינה זמינה במכונת הכביסה שברשותך, פעל לפי השיטה המתוארת בסעיף 4.4.2.



השתמש בתכשיר למניעת אבנית המתאים למכונות כביסה.

ייתכן שנותרו מעט מים במוצר עקב תהליכי בקרת איכות במהלך הייצור. מים אלה אינם מזיקים למוצר.

### 4.2 הכנה

#### 4.2.1 מיון הכביסה

- א מיין את הכביסה על פי סוג הבד, צבע, דרגת הלכלוך וטמפרטורות מים מותרות. \*
  - \* ציית תמיד להוראות שעל תווית הבגד.

#### 4.2.2 הכנת הבגדים לכביסה

- כבסים עם אביזרי מתכת, כמו חזיות עם פסי מתכת, אבזמי חגורות או כפתורי מתכת יגרמו נזק למכונה. הסר את חלקי המתכת או כבס אותם בתוך שק בגדים או ציפית.
- רוקן את הכיסים ממטבעות, עטים ואטבי נייר, הפוך את הכיסים והברש אותם. חפצים אלה עלולים לגרום נזק למוצר או לגרום לבעיית רעש.
  - הכנס פרטי לבוש קטנים, כמו גרבי תינוקות וגרבונים לתוך שק כביסה או ציפית
    - הכנס למכונה וילונות בלי לדחוס אותם. הסר את ווי הווילונות.
      - סגור רוכסנים, תפור כפתורים משוחררים ותקן קרעים.
  - כבס מוצרים המסומנים כ"כביסת מכונה" או כ"כביסת יד" בתוכנית המתאימה בלבד.
- אין לכבס כביסה לבנה וצבעונית יחד. אריגי כותנה חדשים בצבעים כהים מורידים צבע רב. כבס אותם בנפרד.
  - יש לטפל בכתמים עיקשים בצורה הולמת לפני הכביסה. אם אינך בטוח, ברר בחנות לניקוי יבש.
  - השתמש רק בצבעים / משני צבע ומסירי אבנית המתאימים למכנות כביסה. פעל תמיד בהתאם להוראות שבאריזה.
    - מכנסיים וכביסה עדינה יש לכבס הפוך.
  - אריגים עשויים מצמר אנגורה יש להחזיק במקפיא מספר שעות לפני הכביסה. ההקפאה תמנע התכדרויות של הצמר (pilling).
- כביסה שהתלכלכה מאוד מחומרים כמו קמח, סיד, אבקת חלב יש לנער היטב לפני הכנסתה למכונה.
   אבקות מסוגים אלה שעל הכביסה עלולות להצטבר בחלקים הפנימיים של המכונה ועם הזמן לגרום לה נזק.

#### 4.2.3 דברים שיש לעשות כדי לחסוך באנרגיה

המידע הבא יסייע לך להשתמש במוצר באופן ידידותי לסביבה ויעיל מבחינת צריכת אנרגיה.

- הפעל את המוצר בקיבולת הגבוהה ביותר המותרת בעזרת התוכנית שבחרת, אך אל תכניס למכונה כביסה יתר על המידה; ראה "טבלת תוכניות וצריכה". ראה "טבלת תוכניות וצריכה"
  - פעל תמיד בהתאם להוראות שבאריזת תכשיר הכביסה.
    - כבס כביסה המלוכלכת קלות בטמפרטורות נמוכות.
  - השתמש בתוכניות מהירות יותר לכמויות קטנות של כביסה מלוכלכת במידה קלה.
- אין להשתמש בשטיפה מוקדמת ובטמפרטורות גבוהות לכביסה שאינה מלוכלכת או מוכתמת מאוד.
  - אם אתה מתכנן לייבש את הכביסה במייבש כביסה, בחר את מהירות הסחיטה הגבוהה ביותר המומלצת בתהליך הכביסה.
    - אין להשתמש בתכשיר הכביסה בכמות רבה יותר מזו שצוינה באריזה.

### 4.2.4 הכנסת הכביסה למכונה

- 1. פתח את מכסה פתח הכנסת הכביסה.
- 2. הכנס את הכבסים למכונה באופן רפוי.
- 3. דחף וסגור את פתח הכנסת הכביסה עד שתשמע את צליל הנעילה. ודא שלא נלכדו פריטי כביסה בדלת. דלת הכנסת הכביסה נעולה כאשר התוכנית פועלת. את הדלת ניתן לפתוח רק לאחר סיום התוכנית.

#### 4.2.5 קיבולת כביסה נכונה

קיבולת הכביסה המרבית תלויה בסוג הכביסה, בדרגת הלכלוך ובתוכנית הכביסה הרצויה. המכונה מכווננת אוטומטית את כמות המים בהתאם למשקל הכביסה שהוכנסה למכונה.



אזהרה: פעל בהתאם למידע המופיע ב"טבלת תוכניות וצריכה". אם המכונה מלאה יתר על המידה, רמת הביצועים שלה תרד. בנוסף ייתכנו בעיות של רעש ורטט.

#### 4.2.6 שימוש בנוזל/אבקת כביסה ומרכך.



אם אתה משתמש בתכשיר כביסה, במרכך, בעמילן, בחומר צביעה, במלבין ומדהה או במסיר אבנית, קרא את הוראות היצרן שבאריזת תכשיר הכביסה ופעל בהתאם למינונים המצוינים בהן. השתמש בכוס מדידה, אם קיימת.



מגירת תכשיר הכביסה בנויה משלושה תאים:

– (1) לשטיפה מוקדמת

– (2) לכביסה עיקרית

(3) – (3) למרכך

. בנוסף, בתא המרכך קיים סיפון 🏵 –

#### תכשיר כביסה, מרכך וחומרי ניקוי אחרים.

- הוסף תכשיר כביסה ומרכך לפני התחלת תוכנית הכביסה.
- כאשר מחזור הכביסה בעיצומו, אין להשאיר את מכל תכשיר הכביסה פתוח!
- בעת שימוש בתוכנית ללא שטיפה מוקדמת, אין לשים תכשיר כביסה בתא השטיפה המוקדמת (תא מס' "1").
  - בתוכנית עם שטיפה מוקדמת, אין לשים נוזל כביסה בתא השטיפה המוקדמת (תא מס' "1").
- אין לבחור תוכנית עם שטיפה מוקדמת אם אתה משתמש בשקית המכילה תכשיר כביסה או בכדור המכיל תכשיר כביסה. הנח את השקית המכילה את תכשיר הכביסה או את הכדור המכיל את תכשיר הכביסה בין הכבסים במכונה.

אם אתה משתמש בנוזל כביסה, אין לשכוח לשים את מכל הנוזל בתוך תא הכביסה העיקרית (תא מס' "2").

#### בחירת סוג תכשיר הכביסה

סוג חומר הניקוי תלוי בסוג הבד ובצבעו.

- השתמש בתכשירי כביסה שונים לכביסה צבעונית ולכביסה לבנה.
- את הכביסה העדינה יש לכבס בתכשירי כביסה מיוחדים (נוזל כביסה, שמפו לצמר, וכו') המשמשים אך ורק לכביסה עדינה.
  - בכביסת בגדים בצבע כהה ושמיכות פוך, מומלץ להשתמש בנוזל כביסה.
    - כבס מוצרי צמר בתכשיר כביסה מיוחד המיוצר במיוחד למוצרי צמר.



זהירות: השתמש אך ורק בתכשירי כביסה המיוצרים במיוחד למכונות כביסה.

זהירות: אין להשתמש באבקת סבון.

#### התאמת כמות תכשיר הכביסה

כמות תכשיר הכביסה לשימוש תלוי בכמות הכביסה, בדרגת הלכלוך ובקשיות המים.

- אין לחרוג מכמויות המינון המומלצות באריזת תכשיר הכביסה, כדי למנוע בעיות של כמות קצף רבה מדי, שטיפה דלה, כדי לחסוך כסף ולבסוף, כדי להגן על הסביבה.
  - השתמש בכמות קטנה יותר של תכשיר כביסה לכמויות קטנות יותר ופחות מלוכלכות של כביסה.

שפוך/י את המרכך אל תוך תא המרכך של מגירת חומר הניקוי.

- אין לחרוג מסימון הדרגה (> max <) שבתא המרכך.
- אם המרכך איבד מנוזליותו, יש לדללו במים לפני יציקתו למגירת תכשיר הכביסה.

#### שימוש בנוזלי כביסה אם יש במכונה כוסית לנוזל כביסה:



 שים את מכל נוזל הכביסה בתא מס' "2".

אם נוזל הכביסה איבד מנוזליותו,
 יש לדללו במים לפני יציקתו למכל תכשיר
 הכביסה.

#### אם אין במכונה כוסית לנוזל כביסה:

- אין להשתמש בנוזל כביסה לשטיפה מוקדמת בתוכנית עם שטיפה מוקדמת.
- נוזל כביסה יכתים את הבגדים בעת השימוש בפונקציה 'התחלה מושהית'. אם בכוונתך להשתמש בפונקציה 'התחלה מושהית' אל תשתמש בנוזל כביסה.

#### שימוש בתכשיר כביסה בצורת ג'ל וטבלייה

- אם ג'ל הכביסה נוזלי ואין במכונה כוסית מיוחדת לנוזל כביסה, צוק את הג'ל בתא תכשיר הכביסה של הכביסה העיקרית במהלך כניסת המים למכונה בפעם הראשונה. אם יש במכונת הכביסה כוסית לנוזל כביסה, מלא אותה בנוזל הכביסה לפני הפעלת התוכנית.
- אם ג'ל הכביסה אינו נוזלי או שהוא בצורת טבליית נוזל בכמוסה, שים אותו ישירות בתוף לפני הפעלת המכונה.
  - הנח טבליית כביסה בתוך תא הכביסה העיקרית (תא מס' "2") או ישירות בתוך התוף לפני הכביסה.
     שימוש בעמילן
    - שים סודה נוזלית, סודה אבקתית או חומר צביעה בתא המרכך.
       אין להשתמש במרכך ובעמילן ביחד באותו מחזור כביסה.
       לאחר השימוש בעמילן נגב את חלקה הפנימי של המכונה במטלית לחה ונקייה.

#### שימוש במסיר אבנית

אם יש צורך, השתמש במסירי אבנית המיוצרים במיוחד למכונות כביסה בלבד.
 שימוש במלבינים

הוסף את החומר המלבין בתחילת מחזור הכביסה על ידי בחירת תוכנית עם שטיפה מוקדמת. אין לשים תכשיר כביסה בתא השטיפה המוקדמת. לחלופין, בחר תוכנית עם שטיפה נוספת והוסף את החומר המלבין בזמן שנכנסים למכונה מים מתא תכשיר הכביסה במשך השטיפה הראשונה.

- אין לערבב יחד את החומר המלבין ואת תכשיר הכביסה.
- השתמש בכמות קטנה בלבד (כ-50 מ"ל) של חומר מלבין ושטוף את הבגדים היטב היטב כדי לא לגרום לגירוי בעור. אין לצקת את החומר מלבין ישירות על הכביסה ואין להשתמש בו לכביסה צבעונית.
  - בעת שימוש במלבין על בסיס חמצן, בחר תוכנית כביסה בטמפרטורה נמוכה.
- ניתן להשתמש במלבין על בסיס חמצן יחד עם תכשיר הכביסה; אולם, אם הם אינם בעלי אותו מרקם, שים תחילה את תכשיר הכביסה בתא מס' "2" שבמכל תכשיר הכביסה והמתן עד שהמכונה תשטוף את תכשיר הכביסה כשהמכונה מתמלאת במים. כשהמכונה ממשיכה להתמלא במים, הוסף את המלבין לאותו תא.

### 4.2.7 עצות לכביסה יעילה

בגדים					
כביסה עדינה/ צמר/משי	שחורים/כהים	הירים ולבנים צבעוניים שחורים/כהים			
(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: קר C -30)	(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: קר 40- <sup>0</sup> C)	(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: קר 40- <sup>0</sup> C)	(טווח הטמפרטורה המומלץ תלוי ברמה הלכלוך: 40-90 <sup>0</sup> C)		
העדף נוזלי כביסה המיוצרים במיוחד לבגדים עדינים. יש לכבס בגדי צמר ומשי בתכשירי כביסה מיוחדים לצמר.	ניתן להשתמש בנוזלי כביסה המתאימים לכביסה צבעונית ולצבעים כהים במינונים המומלצים לבגדים עם לכלוך כבד.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים צבעוניים במינונים המומלצים להגדים עם לכלוך כבד. מומלץ להשתמש באבקות כביסה לניקוי כתמי טיט ולכלכוך ולכתמים הרגישים לחומרים מלבינים. השתמש בתכשירי ניקוי ללא מלבין.	ייתכן שיהיה צורך לטפל בכתמים או לבצע שטיפה מוקדמת. ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים לבנים במינונים המומלצים לבגדים עם לכלוך כבד. מומלץ להשתמש באבקות כביסה לניקוי כתמי טיט ולכלכוך ולכתמים הרגישים לחומרים מלבינים.	<b>לכלוך כבד</b> (כתמים קשים כמו כתמי דשא, קפה, פירות ודם).	
העדף נוזלי כביסה המיוצרים במיוחד לבגדים עדינים. יש לכבס בגדי צמר ומשי בתכשירי לצמר. לצמר.	ניתן להשתמש בנוזלי כביסה המתאימים לכביסה צבעונית ולצבעים כהים במינונים המומלצים לבגדים עם לכלוך רגיל.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים צבעוניים במינונים המומלצים לבגדים עם לכלוך רגיל. יש להשתמש באבקת/נוזל כביסה אינו מכיל מלבין.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים לבנים במינונים המומלצים לבגדים עם לכלוך רגיל.	<b>לכלוך רגיל</b> (לדוגמה, כתמים הנגרמים על ידי הגוף על צווארונים ושרווליות)	רמת הלכלוך
העדף נוזלי כביסה המיוצרים במיוחד לבגדים עדינים. יש לכבס בגדי צמר ומשי בתכשירי כביסה מיוחדים לצמר.	ניתן להשתמש בנוזלי כביסה המתאימים לכביסה צבעונית ולצבעים כהים במינונים המומלצים לבגדים עם לכלוך קל.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים צבועניים במינונים המומלצים לבגדים עם לכלוך קל. יש להשתמש באבקת/נוזל כביסה אינו מכיל מלבין.	ניתן להשתמש באבקת/נוזל כביסה המומלצים לבגדים לבנים במינונים המומלצים לבגדים עם לכלוך קל.	<b>לכלוך קל</b> (לא קיימים כתמים נראים לעין)	

## 4.3 הפעלת המוצר

#### 4.3.1 לוח הבקרה



- 1 כפתור בחירת תוכניות (המיקום הגבוה
  - ביותר הפעלה/כיבוי)
  - 2 נוריות מחוון מהירות סחיטה
  - 3 נורת חסימת ילדים מופעלת
  - 4 נורת נעילת הדלת מופעלת
  - 5 נוריות מחוון ההתחלה המושהית.

- 6 נוריות מעקב תוכניות
- 7 לחצן הפעלה / הפסקה
- 8 לחצן הגדרת התחלה מושהית
  - 9 לחצן כוונון מהירות סחיטה

#### 4.3.2 הכנת המכונה

- 1. ודא שהצינורות מחוברים בצורה הדוקה.
  - 2. חבר את המכונה לחשמל.
  - 3. פתח את הברז עד הסוף.
  - 4. הכנס את הכביסה למכונה.
  - 5. הוסף תכשיר כביסה ומרכך.

#### 4.3.3 בחירת תוכניות ועצות לכביסה יעילה

 בחר את התוכנית המתאימה לסוג הכביסה, לכמותה ולדרגת הלכלוך שלה בהתאם ל"טבלת התוכניות והצריכה" ולטבלת הטמפרטורות שלהלן.

2. בחר את התוכנית הרצויה בעזרת הכפתור בחירת התוכניות.

#### 4.3.4 טבלת תוכניות וצריכה

HE						
(C°) תוכנית		מטען מרבי (בק״מ)	משך התוכנית (בדקות)	צריכת מים (בליטרים)	צריכת חשמל (בקוו"ש)	מהירות מרבית***
	90	7	195	98	2,45	1000
כותנה (Cottons)	40	7	195	96	1,10	1000
	20	7	195	96	0,58	1000
כותנה 60 עם קדם כביסה (Prewash-Cottons 60)	60	7	215	106	1,95	1000
כותנה חסכונית (Cottons Eco)	**60	7	225	52	1,330	1000
כווננה חסכונית (כסבו צווטטוב)	40	3,5	170	42	0,68	1000
oינטטית (Synthetics)	40	3	130	69	0,80	1000
(Synthetics) 11-001-0	20	3	130	67	0,26	1000
יום יומית מהירה (Daily Xpress)	30	7	28	65	0,15	1000
(Woollens / Hand Wash) צמר / כביסה ביד	40	1,5	65	53	0,47	1000
הלבשה תחתונה (Down Wear)	40	1,5	105	90	0,85	1000
חולצות (Shirts)	40	3	80	45	0,60	800
(Drum Cleaning) ניקוי עצמי	90	-	160	70	2,20	600

\*\*: תוכנית תווית אנרגיה

\*\*\*: אם מהירות הסחיטה המרבית של המכונה נמוכה יותר מהערך הנקוב, תוכל לבחור מהירויות רק עד מהירות הסחיטה המרבית.

- : למילוי מרבי, עיין בתיאור התוכנית.



צריכת מים וחשמל עשויה להיות שונה, בכפוף לשינויים בלחץ המים, בקשיות המים, בטמפרטורת המים, בטמפרטורת הסביבה, בסוג הכביסה ובכמותה, במהירות הסחיטה ובשינויים במתח החשמל.

בהתאם לכמות הכביסה שהכנסת למכונה, ייתכן שיהיה הפרש של 1-1.5 שעות בין הנתונים המופיעים בטבלת התוכניות והצריכה לבין משך פעולת המכונה בפועל. משך הפעולה יתעדכן אוטומטית זמן קצר לאחר התחלת התוכנית.

#### • כותנה (Cottons)

השתמש בתוכנית זו כדי לכבס את כביסת הכותנה שלך (סדינים, מצעים, מגבות, חלוקים, פרטי הלבשה תחתונה, וכו'). הכביסה תכובס בפעולת שטיפה נמרצת במחזור כביסה ממושך יותר.

#### (Synthetics) • סינטטית (

השתמש בתוכנית זו לכביסה של אריגים סינתטיים (חולצות, בגדים עשויים מתערובת של סיבי כותנה וסיבים סינתטיים, וכדומה). הכביסה תכובס בפעולת כביסה עדינה ומחזור הכביסה יהיה קצר יותר לעומת התוכנית "אריגי כותנה". לווילונות ומלמלה מומלץ להשתמש בתוכנית לאריגים סינתטיים ב-2°20 או C°40

#### • צמר / כביסה ביד (Woollens / Hand Wash)

השתמש בתוכנית זו לכביסה של בגדי צמר/כביסה עדינה. הכביסה תכובס בפעולת שטיפה עדינה מאוד כדי לא לגרום נזק לבגדים.

#### 4.3.6 תוכניות נוספות

במקרים מיוחדים, קיימות במכונה תוכניות נוספות.



תוכניות נוספות עשויות להשתנות בהתאם לדגם המכונה.

#### • כותנה חסכונית (Cottons Eco

השתמש בתוכנית זו לכביסה שניתן לכבס בתוכנית של אריגי כותנה בפרק זמן ממושך יותר, אך תוכנית זו מספקת עדיין ביצועים טובים מאוד וגם חיסכון.



התוכנית החסכונית של אריגי הכותנה צורכת פחות אנרגיה לעומת תוכניות כותנה אחרות.

#### • כותנה 60 עם קדם כביסה (Prewash-Cottons 60)

השתמש בתוכנית זו לבגדי כותנה עם לכלוך כבד בלבד. הוסף תכשיר כביסה לתא השטיפה המוקדמת. • יום יומית מהירה (Daily Xpress)

השתמש בתוכנית זו לכביסת בגדי כותנה עם לכלוך קל בפרק זמן קצר.

#### • חולצות (Shirts)

תוכנית זו משמשת לכביסה של חולצות כותנה, אריגים סינתטיים ואריגים עם תערובת של סיבים סינתטיים יחד. היא מפחיתה קמטים. מופעל אלגוריתם קדם טיפול.

מרח את תכשיר קדם הטיפול ישירות על פריטי הלבוש או הוסף אותו יחד עם תכשיר
 הכביסה כשמתחילים להיכנס מים למכונה מתא הכביסה העיקרית. כך המכונה תכבס אותם בפרק זמן
 קצר ואורך החיים הצפוי של החולצות שלך יתארך.

#### • הלבשה תחתונה (Down Wear)

השתמש בתוכנית זו כדי לכבס מעילים ארוכים וקצרים, אפודות, וכו', המכילים נוצות ונושאים את התווית "לכביסה במכונת כביסה". בזכות פרופילי הסחיטה המיוחדים, מובטח שהמים יגיעו למרווחי האוויר שבין הנוצות.

#### (Drum Clean) ניקוי עצמי

השתמש בקביעות (פעם בחודש עד חודשיים) לניקוי התוף ולהקפדה על ההיגיינה הדרושה. הפעל את התוכנית בזמן שהמכונה ריקה לחלוטין. לקבלת תוצאות טובות יותר, הכנס אבקה להסרת אבנית המיועדת למכונות כביסה לתא "2". עם סיום התוכנית, השאר את דלת הכנסת הכביסה פתוחה מעט, כדי לאפשר לחלק הפנימי של המכונה להתייבש.



זוהי אינה תוכנית כביסה. אלא תוכנית תחזוקה.

אין להפעיל את התוכנית הזאת אם יש משהו במכונה. אם תפעיל את המכונה כשיש בה משהו, היא תזהה שקיימת כביסה בתוכה והתוכנית תתבטל.

#### 4.3.7 תוכניות מיוחדות

ליישומים ספציפיים ניתן לבחור כל אחת מהתוכניות הבאות:

• שטיפה (Rinse)

השתמש בתוכנית זו אם ברצונך לשטוף במים או לעמלן בנפרד.

• סחיטה+ניקוז (Spin+Drain)

תוכל להשתמש בפונקציה זו להסרת המים מהבגד או לניקוז המים מהמכונה.

לפני שתבחר תוכנית זו, בחר את מהירות הסחיטה הרצויה ולחץ על לחצן הפעלה/הפסקה. ראשית, המכונה תנקז את המים בתוכה. לאחר מכן היא תסחט את הכביסה במהירות הסחיטה שהוגדרה ותנקז את המים היוצאים ממנה.

אם ברצונך רק לנקז את המים מבלי לסחוט את הכביסה, בחר את התוכנית Pump+Spin (שאיבה וסחיטה) ולאחר מכן בחר את הפונקציה No Spin (ללא סחיטה) בעזרת כפתור כוונון מהירות הסחיטה. לחץ על כפתור 'הפעלה/הפסקה'.



השתמש במהירות סחיטה נמוכה יותר לכביסה עדינה.

#### 4.3.8 בחירת מהירות סחיטה

כאשר נבחרת תוכנית חדשה, מהירות הסחיטה המומלצת של התוכנית שנבחרה תוצג במחוון מהירות הסחיטה.

להקטנת מהירות הסחיטה, לחץ על לחצן "כפתור כוונון מהירות הסחיטה". מהירות הסחיטה תרד בהדרגה. לאחר מכן יופיעו בתצוגה האפשרויות "Rinse Hold" (דחיית שטיפה) ו-"No Spin" (ללא סחיטה), בהתאם לדגם המוצר. כשבוחרים באפשרות "No Spin" (ללא סחיטה), נורות מחוון דרגת השטיפה אינן דולקות.

#### דחיית שטיפה

אם אינך מתכוון להוציא את הכביסה מהמכונה מייד לאחר סיום התוכנית, תוכל להשתמש בפונקציה דחיית שטיפה, כדי לשמור את הכביסה במי השטיפה הסופית ולמנוע את התקמטות הבגדים כשאין מים במכונה. לחץ על כפתור הפעלה/הפסקה לאחר תהליך זה, אם ברצונך לנקז את המים בלי לסחוט את הכביסה. התוכנית תמשיך ותסתיים לאחר ניקוז המים.

אם ברצונך לסחוט את הכביסה המוחזקת במים, כוונן את מהירות הסחיטה ולחץ על כפתור הפעלה / הפסקה.

התוכנית תחדש את פעולתה מהשלב שהפסיקה. המים ינוקזו, הכביסה תיסחט והתוכנית תסתיים.



אם התוכנית לא הגיעה לשלב הסחיטה, תוכל לשנות את המהירות בלי להעביר את המכונה למצב הפסקה.

#### 4.3.9 התחלה מושהית

בעזרת הפונקציה התחלה מושהית, התחלת התוכנית עשויה להיות מושהית עד 3, 6, או 9 שעות.



אין להשתמש בנוזל כביסה כשמגדירים התחלה מושהית! קיים סיכון שהוא יכתים את הבגדים.

- פתח את דלת הכנסת הכביסה, הכנס את הכביסה ושים תכשיר כביסה.
  - 2. בחר תוכנית כביסה ומהירות סחיטה.

3. הגדר את השעה הרצויה בלחיצה על הלחצן התחלה מושהית. לחיצה אחת על הלחצן, פירושה שנבחרה התחלה מושהית ב-3 שעות. לחיצה פעמיים על אותו לחצן, פירושה שנבחרה

פרוסה סנבות החותה מהחדת ביס סעמוג זהו בחיפעה ביראות הדבן, פרוסה סנבות ה התחלה מושהית ב-6 שעות, ולחיצה שלוש פעמים על הלחצן, פירושה שנבחרה התחלה מושהית ב-9 שעות. לחיצה רביעית על לחצין התחלה מושהית, פירושה שהפונקציה התחלה מושהית תבוטל.

4. לחץ על כפתור 'הפעלה/הפסקה'. נורית זמן התחלה מושהית קודמת תכבה ונורית זמן.

ההתחלה המושהית הבאה תדלוק כעבור כל 3 שעות.

עם סיום הספירה לאחור, כל נורות ההתחלה המושהית יכבו והתוכנית שנבחרה תחל.



תוכל להעביר את המכונה למצב הפסקה ולהוסיף כביסה במשך זמן ההתחלה המושהית.

#### שינוי פרק הזמן של ההתחלה המושהית

אם ברצונר לשנות את הזמן במהלך הספירה לאחור, יהיה עליך לבטל את התוכנית ולהגדיר שוב את זמן ההשהיה. ביטול הפונקציה התחלה מושהית

אם ברצונך לבטל את הספירה לאחור של ההתחלה המושהית ולהתחיל בתוכנית מייד:

סובב את כפתור בחירת התוכניות לתוכנית כלשהי. כך תבוטל הפונקציה התחלה מושהית. .1 הנורית סיום/ביטול תהבהב ברציפות.

- לאחר מכן, בחר תוכנית שברצונך להפעיל שוב. .2
- לחץ על כפתור הפעלה/הפסקה כדי להפעיל את התוכנית. .3

#### 4.3.10 הפעלת התוכנית

- לחץ על כפתור הפעלה/הפסקה כדי להפעיל את התוכנית. .1
- נורית מעקב התוכניות המעידה על התחלת התוכנית תדלוק. .2

#### 4.3.11 נעילת לחצנים

השתמש בפונקציה נעילת לחצנים כדי למנוע את התעסקות הילדים במכונה. וכך תוכל למנוע שינויים כלשהם בתוכנית פועלת.



אם כפתור בחירת התוכניות מסתובב כשנעילת הלחצנים פעילה, "Child Lock Enabled LED" (נורת נעילת הלחצנים פעילה) תהבהב 3 פעמים. נעילת הלחצנים אינה מאפשרת לבצע שינוי כלשהו בתוכניות או במהירות שנבחרה.

גם אם נבחרה תוכנית אחרת בעזרת כפתור בחירת התוכניות בזמן שנעילת הלחצנים פעילה, התוכנית שנבחרה קודם לכן תמשיך לפעול.

כאשר נעילת הילדים פעילה והמכונה פועלת. ניתו להעביר את המכונה למצב הפסקה בלי לבטל את פעולת נעילת הילדים. על ידי סיבוב כפתור בחירת התוכניות למצב הפעלה/כיבוי. כשתסובב את כפתור בחירת התוכניות לאחר מכו. התוכנית תחזור לפעול.

#### להפעלת נעילת הלחצנים:

לחץ על לחצן המהירות ועל לחצן ההתחלה המושהית והחזק אותם לחוצים במשך 3 שניות. בזמן נעילת "Child Lock Enabled LED, שאתה מחזיק את הלחצנים לחוצים במשך 3 שניות, נורת הלחצנים פעילה) תהבהב. תוכל לשחרר את הלחצנים כשהנורות ידלקו ברצף. לביטול הפעלת נעילת לחצנים:

לחץ על לחצן המהירות ועל לחצן ההתחלה המושהית והחזק אותם לחוצים במשך 3 שניות בזמן שמופעלת תוכנית כלשהי. בזמו שאתה מחזיק את הלחצנים לחוצים במשר 3 שניות. נורת Child Lock Enabled LED" (נעילת הלחצנים פעילה) תהבהב. תוכל לשחרר את הלחצנים כשהנורה תכבה לחלוטין.



בנוסף לדרר זו. כדי לבטל את פעולת נעילת הלחצנים. סובב את כפתור בחירת התוכניות למצב הפעלה/כיבוי. כשלא פועלות תוכניות ובחר תוכנית אחרת

הפעלת נעילת הלחצנים לא תבוטל לאחר הפסקות חשמל או כשהמכונה אינה מחוברת לחשמל.

#### 4.3.12 התקדמות של תוכנית

ניתן לעקוב אחר התקדמותה של תוכנית פועלת ממחוון מעקב התוכניות. בתחילתו של כל שלב בתוכנית, נורית המחוון הרלוונטי תדלוק ונורית השלב שהושלם תכבה.

תוכל לשנות את הגדרות המהירות מבלי להפסיק את רצף התוכנית כאשר התוכנית פועלת. לשם כך, השינוי שתעשה חייב להתבצע שלב אחד אחרי שלב הפעלת התוכנית. אם השינוי אינו תואם. הנוריות הרלוונטיות יהבהבו 3 פעמים.



אם המכונה אינה ממשיכה לשלב הסחיטה. הפונקציה Rinse Hold (דחיית שטיפה) עשויה להיות פעילה או שתפעל מערכת אוטומטית לאיתור חוסר איזון של הכביסה, עקב פיזור בלתי מאוזן של הכביסה במכונה.

#### 4.3.13 נעילת דלת הכנסת הכביסה

בדלת הכנסת הכביסה של המכונה קיימת מערכת נעילה המונעת את פתיחת דלת הכנסת הכביסה במקרים שבהם מפלס המים אינו מתאים.

נורית דלת הכנסת הכביסה תתחיל להבהב כשהמכונה תעבור למצב הפסקה. המכונה בודקת את מפלס המים בתוכה. אם מפלס המים מתאים, נורית דלת הכנסת הכביסה תכבה וניתן יהיה לפתוח את דלת הכנסת הכביסה תור דקה או שתי דקות.

אם המפלס אינו מתאים, נורית דלת הכנסת הכביסה תישאר דולקת ולא ניתן יהיה לפתוח את הדלת. אם אתה חייב לפתוח את דלת הכנסת הכביסה כאשר נורית הדלת דלוקה, עליך לבטל את התוכנית הנוכחית. ראה "ביטול התוכנית"

#### 4.3.14 שינוי הבחירות לאחר התחלת התוכנית

#### העברת המכונה למצב הפסקה

לחץ על כפתור הפעלה/הפסקה כדי להעביר את המכונה למצב הפסקה בזמן שהתוכנית פועלת. נורית השלב שבו נמצאת המכונה תתחיל להבהב במחוון מעקב התוכניות כדי להראות שהמכונה עברה למצב הפסקה.

בנוסף, כאשר ניתן לפתוח את דלת הכנסת הכביסה, הנורית של דלת הכנסת הכביסה תכבה לחלוטין. שינוי הגדרות המהירות

תוכל לשנות את הגדרות המהירות של התוכנית הפועלת כעת. ראה "בחירת מהירות סחיטה".



אם אסור לבצע שינויים, הנורית הרלוונטית תהבהב 3 פעמים.

#### הוספת כביסה או הוצאתה

תוכל להכניס כביסה למכונה או להוציא כביסה ממנה כשהתוכנית פועלת אם מפלס המים מתאים לפתיחת הדלת. לשם כך:

 לחץ על כפתור הפעלה/הפסקה כדי להעביר את המכונה למצב הפסקה. נורית המעקב של השלב הרלוונטי בתוכנית, שבמהלכו עברה המכונה למצב הפסקה, תהבהב.

- המתן עד שאפשר יהיה לפתוח את דלת הכנסת הכביסה.
  - 3. פתח את הדלת והוסף או הוצא כביסה.
  - .4 סגור את דלת הכנסת הכביסה.
  - 5. בצע שינוי בהגדרות מהירות הסחיטה, לפי הצורך.
  - 6. לחץ על כפתור הפעלה/הפסקה כדי להפעיל את המכונה.

#### 4.3.15 ביטול התוכנית

לביטול התוכנית, סובב את כפתור בחירת התוכניות כדי לבחור תוכנית אחרת. התוכנית הקודמת תבוטל. הנורית End / Cancel (סיום / ביטול) תהבהב ברציפות כדי להראות שהתוכנית בוטלה. המכונה תסיים את התוכנית בעת סיבוב כפתור בחירת התוכנית; אולם היא לא תנקז את המים שבתוכה. כשאתה בוחר ומפעיל תוכנית חדשה, התוכנית החדשה שנבחרה תתחיל בהתאם לשלב שבו הייתה התוכנית הקודמת בעת ביטולה. לדוגמה, המכונה עשויה להכניס לתוכה עוד מים או להמשיך לכבס במים שכבר נמצאים בה.



חלק מהתוכניות עשויות להתחיל על ידי סילוק המים מתוך המכונה. בהתאם לשלב שבו נמצאה התוכנית בעת ביטולה, ייתכן שיהיה עליך להכניס שוב נוזל/אבקת כביסה ומרכך עבור התוכנית החדשה שבחרת.

#### 4.3.16 סיום התוכנית

כאשר התוכנית מסתיימת, נדלקת נורת "End" (סיום) במחוון המעקב אחר התוכניות.

- 1. המתן עד ש-"Door Lock Enabled LED" (נורת נעילת הדלת פועלת) תכבה לחלוטין.
  - 2. לכיבוי המכונה, סובב את כפתור בחירת התוכניות למצב הפעלה / כיבוי.
    - הוצא את הכביסה וסגור את הדלת. המכונה מוכנה כעת למחזור הכביסה הבא.

#### 4.3.17 מוצג במכונה "מצב הפסקה".

לאחר הפעלת המכונה באמצעות לחצן בחירת התוכניות (על ידי העברת הלחצן למצב אחר שאינו מצב הפעלה/כיבוי). אם לא הופעלה תוכנית או שלא בוצע כל הליך אחר בשלב הבחירה או שלא בוצעה כל פעולה במשך כ-2 דקות לאחר סיום התוכנית שנבחרה, המכונה תעבור אוטומטית למצב חיסכון באנרגיה. הבהירות של נורות המחוון תפחת. כמו כן, אם במוצר קיימת תצוגה שמופיע בה זמן התוכנית, תצוגה זו תהיה כבויה לחלוטין. אם אתה מסובב את כפתור בחירת התוכניות או נוגע בלחצן כלשהו, הנורות והתצוגה יחזרו למצב הקודם שבו היו. הבחירות שאתה מבצע בעת היציאה ממצב היעלות האנרגטית עשויות להשתנות. בדוק אם הבחירות שלך נכונות לפני שתפעיל את התוכנית. במקרה הצורך, הגדר מחדש. זו אינה שגיאה.

### 4.4 תחזוקה וניקוי

חיי השירות של המוצר מתארכים ובעיות נפוצות מתמעטות אם מנקים אותו במרווחי זמן קבועים.

#### 4.4.1 ניקוי מגירת תכשיר הניקוי



נקה את מגירת תכשיר הניקוי במרווחי זמן קבועים (כל 4-5 מחזורי כביסה), כפי שמוצג להלן, כדי למנוע הצטברות של אבקת כביסה לאורך זמן. הרם את החלק האחורי של הסיפון כדי להסיר אותו, כפי שמודגם באיור. אם כמות גדולה מהרגיל של מים ומרכך מתחילה להצטבר בתא המרכך, יש לנקות את הסיפוו.

לחץ על הנקודה המקווקוות שבסיפון בתא המרכך ומשוך אותו כלפיך עד שהתא יוסר מהמכונה.

שטוף את מגירת תכשיר הכביסה ואת הסיפון במים פושרים בכיור. כדי למנוע מגע של 2 תכשיר הכביסה בעור, נקה אותו במברשת מתאימה ולבש כפפות. 3

הכנס את המגירה למקומה לאחר הניקוי וודא שהיא מונחת בצורה נכונה.

#### 4.4.2 ניקוי דלת הכנסת הכביסה והתוף

למוצרים בעלי תוכנית לניקוי התוף, עיין בסעיף "הפעלת המוצר - תוכניות".



חזור על תהליך ניקוי התוף פעם בחודשיים. השתמש בתכשיר למניעת אבנית המתאים למכונות כביסה.



לאחר הכביסה ודא שלא נותרו בתוף חלקיקים זרים.

אם החורים במפוח באיור סתומים, פתח אותם בעזרת קיסם שיניים.

חלקיקי מתכת זרים יגרמו לכתמי חלודה בתוף. נקה את הכתמים שעל משטח התוף בעזרת חומרי ניקוי לפלדת אל-חלד.

אין להשתמש בצמר פלדה. אלה יגרמו נזק למשטחי הצבע, הכרום והפלסטיק.

## 4.4.3 ניקוי גוף המכונה ולוח הבקרה

נקה את גוף המכונה במי סבון או בתכשירי ג'ל עדינים שאינם גורמים לשריטות, לפי הצורך, ויבש אותו באמצעות מטלית רכה.

השתמש אך ורק במטלית רכה ולחה לניקוי לוח הבקרה.

### 4.4.4 ניקוי מסנני כניסת המים.

בסוף כל שסתום לכניסת מים בחלק האחורי של המכונה נמצא מסנן כמו גם בכל צינור לכניסת מים המחובר לברז. מסננים אלה מונעים מגופים זרים ולכלוך הנמצאים במים להיכנס למכונת הכביסה. יש לנקות את המסננים בכל פעם שהם מתלכלכים.

.1



סגור את הררזים.

הסר את האומים של צינורות כניסת המים 2 כדי להגיע אל המסננים שבשסתומי כניסת המים. נקה אותם במברשת מתאימה. אם המסננים מלוכלכים מדי, הסר אותם ממקומם באמצעות צבת ונקה אותם כך. הוצא את המסננים בקצוות השטוחים של .3 צינורות כניסת המים ביחד עם האטמים ונקה אותם

ביסודיות במים זורמים.

החזר את האטמים והמסננים למקומם .4 בזהירות והדק ידנית את האומים שלהם.

#### 4.4.5 ניקוז מים נותרים וניקוי מסנן המשאבה

מערכת המסננים במכונה מונעת את סתימתו של מדחף המשאבה בפריטים קשיחים, כמו כפתורים, מטבעות וסיבי אריגים, במהלך פליטת מי הכביסה. באופן זה, ייפלטו המים ללא כל בעיה וחיי השירות של המשאבה יאריכו ימים.

אם המכונה אינה מצליחה לנקז את המים, מסנן המשאבה סתום. יש לנקות את המסנן בכל פעם שהוא נסתם או פעם ב-3 חודשים. יש לנקז תחילה את המים כדי לנקות את מסנן המשאבה.

בנוסף, לפני הובלת המכונה (לדוגמה, מעבר דירה), וכאשר המים קופאים, ייתכן שיהיה צורך לנקז את כל המים.



**זהירות:** גופים זרים הנותרים במסנן המשאבה עלולים לגרום נזק למכונה לגרום לבעיות של רעש.

**זהירות:** אם המוצר אינו בשימוש, סגור את הברז, הסר את צינור אספקת המים ונקז את המים בתוך המכונה כדי למנוע אפשרות של קפיאה. של קפיאה.

זהירות: לאחר כל שימוש, סגור את הברז שאליו מחובר צינור אספקת המים.

#### לניקוי המסנן המלוכלך ולפליטת המים:

1 נתק את המכונה מאספקת החשמל.

זהירות: טמפרטורת המים בתוך המכונה עלולים לעלות ל-00℃. כדי למנוע סכנת כוויה, נקה את המסנן לאחר התקררות המים במכונה.

#### .2פתח את מכסה המסנן.



3 בצע את הפעולות הבאות כדי לנקז את המים.

#### אם אין צינור ניקוז חירום המותקן במוצר לניקוז המים:



א. כדי לאסוף את המים ולהזרים אותם אל מחוץ למסנן, הנח כלי גדול בקדמת המסנן. ב. סובב ושחרר את מסנן המשאבה (נגד כיוון השעון) עד שהמים יתחילו לזרום. מלא את המכל שהצבת בקדמת המסנן במים הזורמים. החזק תמיד בהישג יד פיסת בד לספיגת מים שנשפכו.

ג לאחר שהמכונה התרוקנה לחלוטין ממים, הוצא ממנה לגמרי את המסנן על ידי סיבובו.

4 נקה את השאריות שנותרו בתוך המסנן, אם נותרו, וכן את הסיבים שהצטברו סביב מדחף המשאבה.

5. החזר את המסנן למקומו.

6. אם המסנן מורכב משני חלקים, סגור את מכסה המסנן בלחיצה על הלשונית. אם הוא מורכב מחלק אחד, הנח תחילה את הלשוניות במקומן בחלק התחתון ולאחר מכן לחץ על החלק העליון כדי לסגור אותו.

## 5 איתור תקלות

פתרון	סיבה	בעיה
לחץ על לחצן הפעלה / הפסקה /	לא לחצת על לחצן הפעלה / הפסקה / ביטול	התוכנית אינה מתחילה
ביטול		לפעול לאחר סגירת
		הדלת.
לביטול התוכנית, סובב את כפתור בחירת	מכונת הכביסה עברה למצב הגנה עצמית עקב	אין אפשרות להתחיל
התוכניות כדי לבחור תוכנית אחרת. התוכנית	בעיית אספקה (כמו מתח קו החשמל, לחץ	או לבחור את התוכנית
הקודמת תבוטל. (ראה "ביטול התוכנית")	מים, וכו').	או ז בווו אונ ווונוכניונ
זוהי אינה תקלה; המים אינם מזיקים	ייתכן שנותרו מעט מים במוצר עקב תהליכי	מים במכונה.
למכונה.	בקרת איכות במהלך הייצור.	
פתח את הברזים.	הברז סגור.	המכשיר אינו מתמלא
ישר את הצינור.	צינור כניסת המים מכופף.	במים.
נקה את המסנן.	מסנן כניסת המים סתום.	
סגור את הדלת.	ייתכן שדלת הכנסת הכביסה פתוחה.	
נקה או ישר את הצינור.	ייתכן שצינור הניקוז סתום או מסובב.	המכשיר אינו מנקז את
נקה את מסנן המשאבה.	מסנן המשאבה סתום.	המים.
כוון את הרגליות כדי לאזן את המכונה.	ייתכן שהמכונה אינה עומדת יציב.	המכונה רוטטת או
נקה את מסנן המשאבה.	ייתכן שגוף קשה נכנס למסנן המשאבה.	משמיעה רעשים.
הסר את מנעולי הביטחון של ההובלה.	מנעולי הביטחון של ההובלה לא הוסרו.	נוסנויעודו עסים.
הוסף עוד כביסה למכונה.	ייתכן שכמות הכביסה במכונה קטנה מדי.	
הוצא כביסה מהמכונה או פזר אותה	ייתכן שהמכונה עמוסה מדי בכביסה.	
ביד כדי ליצור פיזור אחיד במכונה.		
ודא שהמכונה אינה נשענת על משהו.	ייתכן שהמכונה עומדת על פריט קשה.	
נקה או ישר את הצינור.	ייתכן שצינור הניקוז סתום או מסובב.	קיימת נזילת מים
נקה את מסנן המשאבה.	מסנן המשאבה סתום.	מתחתית מכונת הכביסה.
היא תחדש את פעולתה כאשר	ייתכן שהמכונה עצרה זמנית עקב מתח נמוך.	המכונה עצרה זמן קצר
המתח יחזור לרמתו הרגילה.		לאחר שהתוכנית החלה.
חבר את צינור הניקוז כפי שמתואר	ייתכן שצינור הניקוז אינו בגובה המתאים.	המכונה ישר פולטת את
במדריך ההפעלה.		המים הנכנסים לתוכה.
זו אינה תקלה.	לא ניתן לראות את מפלס המים מחוץ למכונת	לא ניתן לראות מים
	הכביסה.	במכונה במהלך פעולת
		הכביסה.
נקז את המים על ידי הפעלת תוכנית	נעילת הדלת מופעלת בגלל גובה מפלס המים	לא ניתן לפתוח את
השאיבה או תוכנית הסחיטה.	במכונה.	דלת הכנסת הכביסה.
המתן לסיום התוכנית.	המכונה מחממת את המים או שהיא מבצעת	
	את מחזור הסחיטה.	
המתן שתי דקות לביטול נעילת	נעילת המקשים תפוסה: נעילת הדלת תבוטל	
הדלת.	שתי דקות לאחר סיום התוכנית.	
המכונה ממתינה עד שתתמלא	לחץ המים נמוך.	משך הכביסה ארוך
בכמות נאותה של מים כדי למנוע איכות		מהזמן המצוין במדריך.
כביסה גרועה עקב כמות מים נמוכה. לכן מתורבר זמן בבבוסב		(*)
מתארך זמן הכביסה. • זמן הכביסה מתארך כדי למנוע	ייתכן שמתח החשמל נמוך.	
תוצאות כביסה דלות כאשר מתח החשמל	ונק פנותו וווסנא ננוון.	
נמור.		
<ul> <li>הזמן הדרוש לחימום המים מתארך</li> </ul>	ייתכן שטמפרטורת המים הנכנסים נמוכה.	
בעונות קרות. כמו כן, ייתכן שזמן הכביסה	- 1-	
יתארך כדי למנוע תוצאות כביסה גרועות.		
המכונה מעלה את כמות מי השטיפה	ייתכן שמספר השטיפות ו/או כמות מי השטיפה	
כאשר נדרשת שטיפה יסודית, ומוסיפה	עלו.	
שלב שטיפה נוסף במקרה הצורך.		
השתמש בכמות התכשיר המומלצת.	תיתכן כמות קצף רבה מדי וייתכן שיהיה צורך	
	להפעיל את מערכת ספיגת הקצף האוטומטית	
	עקב שימוש בכמות רבה מדי של תכשיר ברוסב	
	כביסה.	

פתרון	סיבה	בעיה
מחוון קוצב הזמן לא יבצע ספירה	ס בוז קוצב הזמן עלול לעצור במהלך כניסת המים	בע ה לא מבוצעת ספירה
לאחור עד שתהיה במכונה כמות מים	למכונה.	
מספקת. המכונה תמתין עד שתהיה		לאחר בתוכנית.
כמות מים מספקת כדי למנוע תוצאות		(בדגמים עם תצוגה)
כביסה גרועות עקב מחסור במים. מחוון		(*)
קוצב הזמן ימשיך בפעולתו לאחר מכן.		()
קצב חונון נוסן בפערונו זאווי נופן. ◆ מחוון קוצב הזמן לא יבצע ספירה	קוצב הזמן עלול לעצור במהלך שלב חימום	
לאחור עד שהמכונה תגיע לטמפרטורה		
שנבחרה.		
<ul> <li>ייתכן שתפעל מערכת אוטומטית</li> </ul>	קוצב הזמן עלול לעצור במהלך שלב הסחיטה.	
לאיתור חוסר איזון של הכביסה עקב		
פיזור בלתי מאוזן של הכביסה בתוף.		
<ul> <li>ייתכן שתפעל מערכת אוטומטית</li> </ul>	ייתכן שקיים במכונה חוסר איזון של הכביסה.	לא מבוצעת ספירה
לאיתור חוסר איזון של הכביסה עקב		_
פיזור בלתי מאוזן של הכביסה בתוף.		לאחור בתוכנית. (*)
<ul> <li>ייתכן שתפעל מערכת אוטומטית</li> </ul>	ייתכן שקיים במכונה חוסר איזון של הכביסה.	המכונה אינה עוברת
לאיתור חוסר איזון של הכביסה עקב		-
אינור הווסר איון של הכביסה עקב פיזור בלתי מאוזן של הכביסה בתוף.		לשלב הסחיטה. (*)
בדוק את המסנן ואת צינור הניקוז.	המכונה לא תסחט אם המים לא ינוקזו לחלוטין.	
השתמש בכמות התכשיר המומלצת.	תיתכן כמות קצף רבה מדי וייתכן שיהיה צורך	
	להפעיל את מערכת ספיגת הקצף האוטומטית	
	עקב שימוש בכמות רבה מדי של תכשיר	
	עובים נווס בפנווורו בוז נווי סוי ונפסיו כביסה.	
<ul> <li>השתמש בכמות המומלצת של</li> </ul>	בביטה. במשך הזמן השתמשת בכמות קטנה מדי של	ביצועי הכביסה
תכשיר כביסה המתאים לקשיות המים		
לכביסה.		גרועים: הכביסה
בחר את הטמפרטורה הנכונה עבור	הכביסה נעשתה בטמפרטורות נמוכות במשך	מקבלת צבע אפור. (**)
הכביסה.	זמן רב.	
שימוש בכמות קטנה מדי של תכשיר	השתמשת בכמות קטנה מדי של תכשיר כביסה	
כביסה עם מים קשים גורם ללכלוך	במים קשים.	
להידבק לבגד, וכך עם הזמן הופך הבגד		
לאפור. קשה להיפטר מהצבע האפור		
לאחר שכבר נוצר. השתמש בכמות		
המומלצת של תכשיר כביסה המתאים		
לקשיות המים ולכביסה.		
	נעשה שימוש בכמות רבה מדי של תכשיר ניקוי.	
תכשיר כביסה המתאים לקשיות המים		
לכביסה.		
<ul> <li>השתמש בכמות המומלצת של</li> </ul>	השתמשת בכמות קטנה מדי של תכשיר	ביצועי הכביסה
תכשיר כביסה המתאים לקשיות המים		ב בועי וופב סוו גרועים: הכתמים אינם
ולכביסה.		-
<ul> <li>אין להכניס למכונה כמות רבה מדי</li> </ul>	הוכנסה למכונה כמות רבה מדי של כביסה.	נעלמים והכביסה אינה
של כביסה. השתמש בכמות המומלצת		מלבינה. (**)
ב"טבלת תוכניות וצריכה".		
בחר את התוכנית והטמפרטורה	נבחרו תוכנית וטמפרטורה לא נכונות.	
הנכונות עבור הכביסה.		
השתמש בתכשיר הכביסה המקורי	השתמשת בסוג תכשיר כביסה שאינו מתאים.	
המתאים למכונה.		
שים את תכשיר הכביסה בתא הנכון.	נעשה שימוש בכמות רבה מדי של תכשיר ניקוי.	
אין לערבב יחד את המלבין ותכשיר		
הכביסה.		
נקה את התוף בקביעות. לשם כך,	התוף אינו מנוקה בקביעות.	ביצועי הכביסה
ראה סעיף 4.4.2.		גרועים: כתמי שמן
		מופיעים בכביסה. (**)
<ul> <li>השאר את מגירת תכשיר הכביסה</li> </ul>	ריחות לא נעימים ושכבות של חיידקים	
וושאו אונ מגידונ ונכשיר הכביסה		ביצועי הכביסה
אוני דיזנ הכנסונ הכביסה פונוחות נעט לאחר כל כביסה. באופן זה לא תיווצר		גרועים: הבגדים
לאחר כל כביטה. באופן הרלא תיחצו סביבה לחה המועדפת על חיידקים.		מדיפים ריח לא נעים.
טביבוו זיווו וונוועו פונ עז זו דין ם.		(**)
L	1	\

פתרון	סיבה	בעיה
אין להכניס למכונה כמות רבה מדי	הוכנסה למכונה כמות רבה מדי של כביסה.	צבע הבגדים דהה. (**)
של כביסה.		
החזק את תכשירי הכביסה סגורים	תכשיר הכביסה שבו השתמשת לח.	
בסביבה יבשה ואל תחשוף אותם י		
לטמפרטורות קיצוניות.		
<ul> <li>בחר את התוכנית והטמפרטורה</li> </ul>	נבחרה טמפרטורה גבוהה יותר.	
הנכונות בהתאם לסוג הכביסה ולדרגת		
הלכלוך שלה.		
השתמש בתכשיר הכביסה המתאים	הכמות, המותג ותנאי האחסון של תכשיר	הכביסה אינה נשטפת
למכונת הכביסה שברשותך ולכביסה	הכביסה שבו השתמשת אינם מתאימים.	היטב.
שלך. החזק את תכשירי הכביסה סגורים		
בסביבה יבשה ואל תחשוף אותם		
לטמפרטורות קיצוניות.	שמת צת תפשוב בבבוסה בתוג בלוג נבוו	
<ul> <li>אם שמת את תכשיר הכביסה בתא</li> </ul>	שמת את תכשיר הכביסה בתא הלא נכון.	
השטיפה המוקדמת, על אף שמחזור		
השטיפה המוקדמת לא נבחר, המכונה יכולה להשתמש בתכשיר כביסה זה		
כולה להשונמש בונכשיר כביטה זה בשלב השטיפה או המרכך. שים את		
תכשיר הכביסה בתא הנכון. בדוק את המסנן.	מסנן המשאבה סתום.	
בדוק את הנוסנן. בדוק את צינור הניקוז.	נוסנן הנושאבוז סונום. צינור הניקוז מקופל.	
שימוש בכמות קטנה מדי של תכשיר	בנורדת קודת הקופר. השתמשת בכמות קטנה מדי של תכשיר	הכביסה יוצאת קשה
כביסה ביחס לקשיות המים יכול לגרום	כביסה.	
לכביסה להתקשות לאורך זמן. השתמש		לאחר פעולת הכביסה.
בכמות מתאימה של תכשיר כביסה		(**)
בהתאם לקשיות המים.		
<ul> <li>אם שמת את תכשיר הכביסה בתא</li> </ul>	שמת את תכשיר הכביסה בתא הלא נכון.	
השטיפה המוקדמת, על אף שמחזור		
השטיפה המוקדמת לא נבחר, המכונה		
יכולה להשתמש בתכשיר כביסה זה		
בשלב השטיפה או המרכך. שים את		
תכשיר הכביסה בתא הנכון.		
<ul> <li>אין לערבב מרכך עם תכשיר כביסה.</li> </ul>	ייתכן שתכשיר הכביסה התערבב עם המרכך.	
שטוף ונקה את מכל תכשיר הכביסה		
במים חמים.		
<ul> <li>אם שמת את תכשיר הכביסה בתא</li> </ul>	שמת את תכשיר הכביסה בתא הלא נכון.	ריח הכביסה אינו דומה
השטיפה המוקדמת, על אף שמחזור		לריח המרכך. (**)
השטיפה המוקדמת לא נבחר, המכונה		( ) ] ]
יכולה להשתמש בתכשיר כביסה זה		
בשלב השטיפה או המרכך. שטוף ונקה		
את מכל תכשיר הכביסה במים חמים.		
שים את תכשיר הכביסה בתא הנכון.		
<ul> <li>אין לערבב מרכך עם תכשיר כביסה.</li> </ul>	ייתכן שתכשיר הכביסה התערבב עם המרכך.	
שטוף ונקה את מכל תכשיר הכביסה		
במים חמים.		

בעיה	סיבה	פתרון
שארית תכשיר הכביסה	שמת את תכשיר הכביסה במגירה רטובה.	<ul> <li>יבש את מגירת תכשיר הכביסה לפני</li> </ul>
במגירת תכשיר		שתשים בה את תכשיר הכביסה.
הכביסה (**)	תכשיר הכביסה הפך להיות לח.	<ul> <li>החזק את תכשירי הכביסה סגורים</li> </ul>
() 10-11		בסביבה יבשה ואל תחשוף אותם
		לטמפרטורות קיצוניות.
	לחץ המים נמוך.	<ul> <li>בדוק את לחץ המים.</li> </ul>
	תכשיר הכביסה בתא הכביסה העיקרית	<ul> <li>בדוק את החורים ונקה אותם אם הם</li> </ul>
	נרטב בעת כניסת מים למכונה לצורך שטיפה	סתומים.
	מוקדמת. החורים בתא תכשיר הכביסה	
	סתומים.	
	יש בעיה בשסתומי מגירת תכשיר הכביסה.	<ul> <li>פנה לנציג שירות מוסמך.</li> </ul>
	ייתכן שתכשיר הכביסה התערבב עם המרכך.	אין לערבב מרכך עם תכשיר כביסה. 🔸
		שטוף ונקה את מכל תכשיר הכביסה
		במים חמים.
	התוף אינו מנוקה בקביעות.	<ul> <li>נקה את התוף בקביעות. לשם כך,</li> </ul>
		ראה סעיף 4.4.2.
וצר קצף רב מדי:	השתמשת בתכשירי כביסה שאינם מתאימים	<ul> <li>השתמש בתכשירי הכביסה</li> </ul>
במכונה. (**)	למכונת הכביסה.	המתאימים למכונת הכביסה שברשותך.
	השתמשת בכמות גדולה מדי של תכשיר	<ul> <li>השתמש בכמות מספקת של תכשיר</li> </ul>
	כביסה.	כביסה.
	אחסנת את תכשיר הכביסה בתנאים בלתי	<ul> <li>אחסן את תכשיר הכביסה במקום</li> </ul>
	הולמים.	סגור ויבש. אין לאחסן אותו במקומות
		חמים מדי.
	כביסה המכילה אריגים עם רשתות, כמו	<ul> <li>השתמש בכמויות קטנות יותר של</li> </ul>
	מלמלות כמה עלולה ליצור קצף רב מדי בגלל	תכשיר כביסה לפריטים מסוג זה.
	המרגם שלה.	
	שמת את תכשיר הכביסה בתא הלא נכון.	<ul> <li>שים את תכשיר הכביסה בתא הנכון.</li> </ul>
	מרכך הכביסה נכנס למכונה מוקדם.	ייתכן שיש בעיה בשסתומים או 🔸
		במכל תכשיר הכביסה. פנה לנציג שירות
		מוסמך.
זצף גולש מתוך מגירת	נעשה שימוש בכמות רבה מדי של תכשיר ניקוי.	<ul> <li>בחש כף אחת של מרכך כביסה בתוך חצי ליטר מים וצוק את התמיסה אל תא</li> </ul>
נכשיר הכביסה.		ווצי ליטר מים וצוק אונ הונמיסה אל ונא השטיפה הראשית של מגירת תכשיר
		הכביסה. <ul> <li>הכנס למכונה תכשיר כביסה בהתאם</li> </ul>
		הכנס למכונה ונכשיו כביסה בהוואם לתוכניות ולכמויות הכביסה המרביות
		לתוכניות ולכמויות הכביטה המו ביות המצוינות ב"טבלת תוכניות וצריכה". אם
		אתה משתמש בחומרים כימיים נוספים
		(מסיר כתמים, מלבין וכדומה), הקטן את במות תבושוב בבבוסב
<b>D</b> 20100 201222	תיתכן כמות קצף רבה מדי וייתכן שיהיה צורך	כמות תכשיר הכביסה. • השתמש בכמות התכשיר המומלצת.
הכביסה נשארת	וניונכן כמוונ קצף רבה מדי וייונכן שיהיה צורן להפעיל את מערכת ספיגת הקצף האוטומטית	
רטובה בסוף התוכנית.	זהפעיז את מערכת ספיגת הקצף האוסומסית עקב שימוש בכמות רבה מדי של תכשיר	
(*)	עקב שימוש בכמות רבה מרי שי תכשיו כביסה.	
	CT.0U	

(\*) המכונה אינה עוברת לשלב הסחיטה כאשר הכביסה אינה מפוזרת בצורה מאוזנת בתוך התוף למניעת נזק כלשהו למכונה ולסביבתה. יש לסדר מחדש את הכביסה ולסחוט אותה שוב.

(\*\*) התוף אינו מנוקה בקביעות. נקה את התוף בקביעות. ראה 4.4.2

**זהירות:** אם אינך יכול לפתור את הבעיה למרות העובדה שאתה מציית להוראות בפרק זה, היוועץ במפיץ או בנציג שירות מוסמך. אל תנסה לתקן בעצמך מוצר לא תקין.



## **Washing Machine**

User Manual



WTV 7515 BW

Document Number : 2820526946\_EN / 30-06-20.(16:20)

# 1 General safety instructions

This section includes security instructions which may help prevent the injuries and material damage risks. All kinds of warranties shall be invalid if these instructions are not observed.

## 1.1 Life and property safety

- Never place the product on a carpet-covered floor. Electrical parts will get overheated since air cannot circulate from under the device. This will cause problems with your product.
- Unplug the product if it is not in use.
- Always have the installation and repairing procedures carried out by the Authorised Service Agent. The manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.
- The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, water leak may occur.
- While there is still water inside the product, never open the loading door or remove the filter. Otherwise, risk of flooding and injury from hot water will occur.
- Do not force open the locked loading door. Door can be opened a few minutes after the washing cycle ends. In case of forcing the loading door to open, the door and the lock mechanism may get damaged.
- Use detergents, softeners and supplements suitable for automatic washing machines only.
- Follow the instructions on the label of textiles and the detergent package.
- The water supply pressure required to run the product is between 1 to 10 bars (0.1 1 MPa).
- Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.



This product was manufactured using the latest technology in environmentally friendly conditions.

## 1.2 Children's safety

- This product can be used by the children who are at the age of 8 and over and the people whose physical, sensory or mental skills are not fully developed or who do not have necessary required experience and knowledge as long as they are supervised or trained about the safe use of the product and its risks. Children should not play with the device. Cleaning and maintenance works should not be performed by children unless they are supervised by someone. Children of less than 3 years should be kept away unless continuously supervised.
- ► Packaging materials may be dangerous for the children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep the children away from the product when it is in use. Do not allow them to play with the product. Use child lock to prevent children from intervening with the product.
- Do not forget to close the loading door when leaving the room where the product is located.
- Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.

## **1.3 Electrical safety**

- ► If the product has a failure, it should not be operated unless it is repaired by the Authorised Service Agent. Risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Plug the product into a grounded outlet protected by a 16 A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- Do not wash the product by spraying or pouring water onto it! Risk of electric shock!

- Never touch the power cable plug with wet hands! Do not grab the power cord to unplug the machine, always unplug it by holding the socket with one hand, and pulling the plug with the other hand.
- Product should be unplugged during installation, maintenance, cleaning and repair procedures.
- If the power cable is damaged, it must be replaced by the manufacturer, after sales service or a similarly qualified person (preferably an electrician) or someone designated by the importer in order to avoid possible risks.

## 1.4 Hot surface safety



While washing the laundry at high temperatures, the loading door glass will get hot. Considering this fact, during washing operation keep the children away from the loading door of the product to prevent them touching it.

## 2 Important instructions for environment

## 2.1 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## 2.2 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

## 3 Intended use

- This product has been designed for domestic use. It is not for commercial purposes or it should not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of your product is 10 years. During this period, original spare parts will be available to operate the appliance properly.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

## 4 Technical specifications

Supplier name or trademark	Beko	
Model name	WTV 7515 BW	
Rated capacity (kg)	7	
Energy efficiency class / Scale from A (Highest Efficiency) to D (Lowest Efficiency)	A	
Maximum spin speed (rpm)	1000	
Height (cm)	84	
Width (cm)	60	
Depth (cm)	55	
Net weight (±4 kg.)	61	
Single Water inlet / Double Water inlet	• / -	
Available		
Electrical input (V/Hz)	230 V / 50Hz	
Total current (A)	10	
Total power (W)	2200	
Main model code	9210	
Technical specifications may be changed without prior notice to improve the quality of the product.		

## 4.1 Installation

- Apply to the nearest authorised service agent for the installation of your product.
- Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.
- Make sure that the installation and electrical connections of the product are performed by authorised service. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.
- Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.

## 4.1.1 Appropriate installation location

- Place the product on a hard and level floor. Do not put it onto a carpet with high pile or other similar surfaces.
- When the washing machine and dryer are placed on top of each other, their total weight –when loaded– amounts to 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product in the environments where the temperature falls below 0 °C.
- Leaving a gap at the sides of the machine is suggested to reduce vibration and noise
- On a graduated floor, do not place the product next to the edge or on a platform.
- Do not place heat sources such as Hobs, Irons, Ovens, etc. on the washing machine and do not use them on the product.

## 4.1.2 Removing packaging reinforcement



Tilt the machine backwards to remove the packaging reinforcement. Remove the packaging reinforcement by pulling the ribbon. Do not make this operation alone by yourself.

## 4.1.3 Removing the transportation locks

- 1 Loosen all bolts with an appropriate wrench until they turn freely.
- 2 Remove the transport safety bolts by turning them slightly.
- 3 Insert the plastic covers in the bag containing the user manual to the openings on the rear panel.





**CAUTION:** Remove the transportation safety bolts before operating the washing machine! Otherwise, the product will be damaged.

Keep the transportation safety bolts in a safe place to reuse when the washing machine needs to be moved again in the future.

Install the transport safety bolts in reverse order of the disassembly procedure.

Never move the product without the transportation safety bolts properly fixed in place!

## 4.1.4 Connecting water supply



The water supply pressure required to run the product is between 1 to 10 bars (0.1 - 1 MPa). It is necessary to have 10 - 80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher.

**CAUTION:** Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.

CAUTION: Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.



Tighten the nuts of the hose by hand. Never use a tool when tightening the nuts.

When hose connection is completed, check whether there is leak problems at the connection points by opening the taps fully. If any leaks occur, turn off the tap and remove the nut. Retighten the nut carefully after checking the seal. In order to prevent the water leaks and resultant damages, keep the taps closed when you do not use the product.

### 4.1.5 Connecting the drain hose to the drain

• Attach the end of the drain hose directly to waste water drain, lavatory or bathtub.



**CAUTION:** Your drain house will be flooded if the hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! In order to prevent such situations and make sure that the machine performs water intake and discharge processes without any problem, fix the drain hose securely.



• Connect the drain hose to a minimum height of 40 cm and a maximum height of 100 cm.

• In case the drain hose is elevated after laying it on the floor level or close to the ground (less than 40 cm above the ground), water discharge becomes more difficult and the laundry may come out excessively wet. Therefore, follow the heights described in the figure.

- To prevent the waste water to go back into the machine again and to ensure easy drainage, do not immerse the end of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.
- The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the machine.
- If the length of the hose is too short, use it by adding an original extension hose. Length of the hose may not be longer than 3.2 m. To avoid water leak failures, the connection between the extension hose and the drain hose of the product must be fitted well with an appropriate clamp as not to come off and leak.

## 4.1.6 Adjusting the feet



**CAUTION:** In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet. Otherwise, the product may move from its place and cause crushing and vibration problems.

CAUTION: Do not use any tools to loosen the lock nuts. Otherwise, they will get damaged.

- 1 Loosen the lock nuts on the feet by hand.
- 2 Adjust the feet until the product stands in a stable and balanced way.
- 3. Tighten all lock nuts by hand again.



### 4.1.7 Electrical connection

Connect the product to a grounded outlet protected by a 16 A fuse. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- The wiring for the electrical outlet circuit must be sufficient to meet the appliance requirements. Use of a Groud Fault Circuit Interrupter (GFCI) is recommended.
- Power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 16 Amps, have a qualified electrician install a 16 Amp fuse.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs.



CAUTION: Damaged power cables must be replaced by the Authorised Service Agents.

## 4.1.8 Initial use



Before starting to use the product make sure that the preparations are made which are in line with the "Important Safety and Environment Instructions" and the instructions in the "Installation" section.

To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If this program is not available in your machine, apply the method which is described in the section 4.4.2.



Use an anti-limescale suitable for the washing machines.

Some water might have remained in the product due to the quality control processes in the production. It is not harmful for the product.

## 4.2 Preparation

## 4.2.1 Sorting the laundry

- \* Sort laundry according to type of fabric, color, and degree of soiling and allowable water temperature.
- \* Always obey the instructions given on the garment tags.

## 4.2.2 Preparing laundry for washing

- Laundry items with metal attachments such as, underwired bras, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "machine washable" or "hand washable" labeled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing. If unsure, check with a dry cleaner.
- Only use the dyes / color changers and descaling agents which are appropriate to machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in the freezer for a few hours before washing. This will reduce pilling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the machine. Such dusts and powders on the laundry may build up on the inner parts of the machine in time and can cause damage.

## 4.2.3 Things to be done for energy saving

Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product in the highest capacity allowed by the programme you have selected, but do not overload; see, "Programme and consumption table". See, "Programme and consumption table"
- Always follow the instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use more detergent than the recommended amount specified on its package.

## 4.2.4 Loading the laundry

- 1. Open the laundry cover.
- 2. Put the laundry items into the machine in a loose manner.
- 3. Push and close the loading cover until you hear the locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door can only be opened a while after the programme comes to an end.

## 4.2.5 Correct load capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the washing programme desired.

Machine automatically adjusts the water amount according to the weight of the laundry put inside it.



**WARNING:** Follow the information in the "Programme and consumption table". When overloaded, machine's washing performance will drop. Moreover, noise and vibration problems may occur.

## 4.2.6 Using detergent and softener



When using detergent, softener, starch, fabric dye, bleacher and decolorant, descaling agents; read the manufacturer's instructions written on the package and follow the dosages specified. Use measuring cup if available.



The detergent drawer is composed of three compartments:

- (1) for prewash

- (2) for main wash

- (3) for softener

-  $(\circledast)$  in addition, there is a siphon piece in the

softener compartment.

## Detergent, softener and other cleaning agents

- Add detergent and softener before starting the washing programme.
- While the washing cycle is in progress, do not leave the detergent dispenser open!
- When using a programme without prewash, do not put any detergent into the prewash compartment (compartment nr. "1").
- In a programme with prewash, do not put liquid detergent into the prewash compartment (compartment nr. "1").
- Do not select a programme with prewash if you are using a detergent bag or dispensing ball. Place the detergent bag or the dispensing ball directly among the laundry in the machine.
- If you are using liquid detergent, do not forget to place the liquid detergent container into the main wash compartment (compartment number "2").

### Choosing the detergent type

Detergent type to be used depends on the fabric type and color.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) used solely for delicate clothes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woolens with special detergent made specifically for woolens.



CAUTION: Use only detergents manufactured specifically for washing machines.

**CAUTION:** Do not use soap powder.

#### Adjusting detergent amount

The amount of washing detergent to be used depends on the amount of laundry, the degree of soiling and water hardness.

- Do not use amounts exceeding the dosage quantities recommended on the detergent package to avoid problems of excessive foam, poor rinsing, financial savings and finally, environmental protection.
- Use lesser detergent for small amounts or lightly soiled clothes.

#### Using softeners

Pour the softener into the softener compartment of the detergent drawer.

- Do not exceed the (>max<) level sign on the softener compartment.
- If the softener has lost its fluidity, dilute it with water before putting it in the detergent drawer.

#### Using liquid detergents If the product contains a liquid detergent cup:



- Put the liquid detergent container into the compartment no "2".
- If the liquid detergent lost its fluidity, dilute it with water before putting it into the detergent container.

### If the product does not contain a liquid detergent cup:

- Do not use liquid detergent for the prewash in a programme with prewash.
- Liquid detergent stains your clothes when used with Delayed Start function. If you are going to use the Delayed Start function, do not use liquid detergent.

### Using gel and tablet detergent

- If the gel detergent thickness is fluidal and your machine does not contain a special liquid detergent cup, put the gel detergent into the main wash detergent compartment during first water intake. If your machine contains a liquid detergent cup, fill the detergent into this cup before starting the programme.
- If the gel detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment (compartment nr. "2") or directly into the drum before washing.

#### Using starch

 Put the liquid soda, powder soda or the fabric dye into the softener compartment. Do not use softener and starch together in a washing cycle.

Wipe the inside of the machine with a damp and clean cloth after using starch.

#### Using limescale remover

• When required, use limescale removers manufactured specifically for washing machines only.

### Using bleaches

Add the bleach at the beginning of the washing cycle by selecting a prewash program. Do not put detergent in the prewash compartment. As an alternative application, select a programme with extra rinse and add the bleaching agent while the machine is taking water from the detergent compartment during first rinsing step.

- Do not use bleaching agent and detergent by mixing them.
- Use just a little amount (approx. 50 ml) of bleaching agent and rinse the clothes very well as it causes skin irritation. Do not pour the bleach onto the laundry and do not use it with the colored items.
- When using oxygen-based decolorant, select a program which washes the laundry at a low temperature.
- Oxygen-based decolorant can be used with the detergent; however, if it is not at the same consistence, first put detergent in the compartment number "2" in the detergent dispenser and wait for the machine to flush the detergent when taking in water. While the machine continues taking in water, add decolorant in the same compartment.
# 4.2.7 Tips for efficient washing

		Clothes				
		Light Colours and Whites	Colours	Black/Dark Colours	Delicates/ Woolens/ Silks	
		(Recommended temperature range based on soiling level: 40-90 <sup>0</sup> C)	(Recommended temperature range based on soiling level: cold -40 °C)	(Recommended temperature range based on soiling level: cold -40 <sup>O</sup> C)	(Recommended temperature range based on soiling level: cold -30 <sup>O</sup> C)	
Soiling Level	Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre- treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colors can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Use detergents without bleach.	Liquid detergents suitable for colors and dark colors can be used at dosages recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents.	
	Normally Soiled (For example, stains caused by body on collars and cuffs)	Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.	Powder and liquid detergents recommended for colors can be used at dosages recommended for normally soiled clothes. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colors and dark colors can be used at dosages recommended for normally soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents.	
	Lightly Soiled (No visible stains exist.)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colors can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colors and dark colors can be used at dosages recommended for lightly soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents.	

# 4.3 Operating the product

# 4.3.1 Control panel



# 1 - Programme Selection knob (Uppermost position On / Off)

- 2 Spin Speed Indicator LEDs
- 3 Child Lock Enabled LED
- 4 Door Lock Enabled LED
- 5 Delayed Start Indicator LEDs

- 6 Programme Follow-up LEDs
- 7 Start / Pause Button
- 8 Delayed Start Setting Button
- 9 Spin Speed Adjustment button

# 4.3.2 Preparing the machine

1. Make sure that the hoses are connected tightly.

- 2.Plug in your machine.
- 3. Turn the tap on completely.

4. Place the laundry in the machine.

5.Add detergent and fabric softener.

### 4.3.3 Programme selection and tips for efficient washing

 Select the programme suitable for the type, quantity and soiling degree of the laundry in accordance with the "Programme and consumption table" and the temperature table below.
 Select the desired programme with the Programme Selection knob.

#### 4.3.4 Programme and consumption table

EN						
Programme		Max. Load (kg)	Programme Duration (~min)	Water Consumption (I)	Energy Consumption (kWh)	Max. Speed***
	90	7	195	98	2,45	1000
כותנה (Cottons)	40	7	195	96	1,10	1000
	20	7	195	96	0,58	1000
כותנה 60 עם קדם כביסה (Prewash-Cottons 60)		7	215	106	1,95	1000
כותנה חסכונית (Cottons Eco)		7	225	52	1,330	1000
		3,5	170	42	0,68	1000
סינטטית (Synthetics)		3	130	69	0,80	1000
		3	130	67	0,26	1000
ום יומית מהירה (Daily Xpress)		7	28	65	0,15	1000
צמר / כביסה ביד (Woollens / Hand Wash)		1,5	65	53	0,47	1000
Down Wear) הלבשה תחתונה		1,5	105	90	0,85	1000
חולצות (Shirts)		3	80	45	0,60	800
ניקוי עצמי (Drum Cleaning)		-	160	70	2,20	600

\*\* : Energy Label programme

\*\*\*: If maximum spin speed of the machine is lower then this value, you can only select up to the maximum spin speed.

- : See the programme description for maximum load.



Water and power consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, spin speed, and changes in electric voltage.

Depending on the amount of laundry you have loaded into your machine, there may be a difference of 1-1.5 hours between the duration shown in the Programme and consumption table and the actual washing duration. Duration will be automatically updated soon after the washing starts.

### 4.3.5 Main programmes

Depending on the type of fabric, use the following main programmes.

#### • כותנה (Cottons)

Use this programme for your cotton laundry (sheets, bedlinen, towels, bathrobes, underwear etc.). Your laundry will be washed with vigorous washing action for a longer washing cycle.

#### • סינטטית (Synthetics)

Use to wash your synthetic clothes (shirts, blouses, synthetic/cotton blends, etc.). Your laundry will be washed with a gentle action for a shorter washing cycle when compared to the Cottons programme. For curtains and tulle, it is recommended to use Synthetics 20°C or 40°C programme.

#### י צמר / כביסה בֿיד (Woollens / Hand Wash)

Use to wash your woolen/delicate laundry. Your laundry will be washed with a very gentle washing action in order not to damage the clothes.

### 4.3.6 Additional programmes

For special cases, additional programmes are available in the machine.



Additional programmes may differ according to the model of the machine.

#### • כותנה חסכונית (Cottons Eco)

Use this programme to wash your laundry washable in cottons programme for a longer time, still with a very good performance for saving purposes.



Cotton Eco programme consumes less energy compared to other cotton programmes.

#### • כותנה 60 עם קדם כביסה (Prewash-Cottons 60)

Use this programme only for heavily soiled cotton clothes. Add detergent into the prewash compartment.

#### • יום יומית מהירה (Daily Xpress)

Use this programme to wash your lightly soiled cotton clothes in a short time.

#### • חולצות (Shirts)

This programme is used to wash the shirts made from cotton, synthetic and synthetic blended fabrics altogether. It reduces wrinkles. Pre-treatment algorithm is executed.

• Apply the pre-treatment chemical on your garments directly or add it together with detergent when the machine starts to take water from the main washing compartment. Thus the machine will wash them in a short period of time and expected lifespan of your shirts will extend.

#### • הלבשה תחתונה) הלבשה תחתונה)

Use this programme to wash your coats, vest, jackets etc. containing feathers with a "machinewashable" label on them. Thanks to special spinning profiles, it is ensured that the water reaches the air gaps amongst the feathers.

#### • ניקוי עצמי (Drum Cleaning)

Use regularly (once in every 1-2 months) to clean the drum and provide the required hygiene. Operate the programme while the machine is completely empty. To obtain better results, put powder lime-scale remover for washing machines into the detergent compartment no. "2". When the programme is over, leave the loading door ajar so that the inside of the machine gets dry.



This is not a washing programme. It is a maintenance programme.

Do not run the programme when there is something in the machine. If you try to do so, the machine detects that there is load inside and aborts the programme.

# 4.3.7 Special programmes

For specific applications, select any of the following programmes.

#### שטיפה (Rinse)

Use when you want to rinse or starch separately.

#### ניקוז (Spin+Pump)

You can use this function to remove the water on the garment of drain the water in the machine. Before selecting this programme, select the desired spin speed and press Start / Pause button. First, the machine will drain the water inside of it. Then, it will spin the laundry with the set spin speed and drain the water coming out of them.

If you wish to drain only the water without spinning your laundry, select the Pump+Spin programme and then select the No Spin function with the help of Spin Speed Adjustment button. Press Start / Pause button.



Use a lower spin speed for delicate laundries.

### 4.3.8 Speed selection

Whenever a new programme is selected, the recommended spin speed of the selected programme is displayed on the spin speed indicator.

To decrease the spin speed, press the Spin Speed Adjustment button. Spin speed decreases gradually. Then, depending on the model of the product, "Rinse Hold" and "No Spin" options appear on the display. When "No Spin" is selected, the rinse level indicator lights will not turn on. Rinse hold

If you are not going to unload your clothes immediately after the programme completes, you can use rinse hold function to keep your laundry in the final rinsing water in order to prevent them from getting wrinkled when there is no water in the machine. Press Start / Pause button after this process if you want to drain the water without spinning your laundry. Programme will resume and complete after draining the water.

If you want to spin the laundry held in water, adjust the Spin Speed and press Start / Pause button. The programme will resume. Water is drained, laundry is spun and the programme is completed.



If the programme has not reached the spinning step, you can change the speed without switching the machine to Pause mode.

# 4.3.9 Delayed Start

With the Delayed Start function the startup of the programme may be delayed up to 3, 6 or 9 hours.



Do not use liquid detergents when you set Delayed Start! There is the risk of staining of the clothes.

- 1. Open the loading door, place the laundry and put detergent, etc.
- 2. Select a washing programme and spin speed.
- 3. Set the desired time by pressing the Delayed Start button. When the button is pressed once, 3 hours delayed start is selected. When the same button is pressed again, 6 hours delay is selected, and when it is pressed for the third time, 9 hours delayed start is selected. If you press the Delayed Start button once again, Delayed Start function will be canceled.
- 4. Press Start / Pause button. Previous delayed start time light turns off and next delayed start time light turns on after every 3 hours.
- 5. At the end of the countdown, all delayed start lights will turn off and the selected programme will start.



You can switch the machine to pause mode and add laundry during the delayed start period.

#### Changing the delayed start period

If you want to change the time during countdown, you will need to cancel the programme and set the delay time again.

#### Canceling the Delayed Start function

If you want to cancel the delayed start countdown and start the programme immediately:

- 1. Turn the Programme Selection knob to any programme. Thus, Delayed Start function will be canceled. The End/Cancel light flashes continuously.
- 2. Then, select the programme you want to run again.
- 3. Press Start / Pause button to start the programme.

# 4.3.10 Starting the programme

- 1. Press Start / Pause button to start the programme.
- 2. Programme follow-up light showing the startup of the programme will turn on.

# 4.3.11 Child Lock

6

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running programme.

If the Programme Selection knob is rotated when the child lock is active, "Child Lock Enabled LED" will flash 3 times. The Child Lock does not allow any change in the programmes or the selected speed.

Even if another programme is selected with the Programme Selection knob while the Child Lock is active, previously selected programme will continue running.

When the Child Lock is active and the machine is running, you can switch the machine to Pause mode without deactivating the Child Lock by turning the Programme Selection knob to On / Off position. When you turn the Programme Selection knob afterwards, the programme will resume.

#### To activate the Child Lock:

Press and hold Speed and Delayed Start buttons for 3 seconds. While you are holding for 3 seconds, the "Child Lock Enabled LED" will flash. You can release the buttons when the LEDs become permanently on.

#### To deactivate the Child Lock:

Press and hold Speed and Delayed Start buttons for 3 seconds while any programme is running. While you are holding for 3 seconds, the "Child Lock Enabled LED" will flash. You can release the buttons when the LED turns off completely.



In addition to the method above, to deactivate the Child Lock, switch the Programme Selection knob to On / Off position when no programme is running, and select another programme.

Child Lock is not deactivated after power failures or when the machine is unplugged.

### 4.3.12 Progress of programme

Progress of a running programme can be followed from the Programme Follow-up indicator. At the beginning of every programme step, the relevant indicator light will turn on and light of the completed step will turn off.

You can change the speed settings without stopping the programme flow while the programme is running. To do this, the change you are going to make must be in a step after the running programme step. If the change is not compatible, relevant lights will flash for 3 times.



If the machine does not proceed to the spinning step, the Rinse Hold function might be active or the automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the machine.

# 4.3.13 Loading door lock

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable.

Loading door light will start flashing when the machine is switched to Pause mode. The machine checks the level of the water inside. If the level is suitable, the Loading Door light turns off and the loading door can be opened within 1-2 minutes.

If the level is unsuitable, the Loading Door light remains on and the loading door cannot be opened. If you are obliged to open the Loading Door while the Loading Door light is on, you must cancel the current programme. See. "Cancelling the programme"

#### 4.3.14 Changing the selections after programme has started Switching the machine to pause mode

Press the Start / Pause button to switch the machine to pause mode while a programme is running. The light of the step which the machine is in starts flashing in the Programme Follow-up indicator to show that the machine has been switched to the pause mode.

Additionally, when the loading door is openable, the Loading Door light turns off completely. **Changing the speed settings** 

You can change the speed settings of the programme that is currently running. See "Speed selection".



If no change is allowed, the relevant light will flash 3 times.

### Adding or taking out laundry

You can load/unload laundry when a programme is running if the water level is appropriate to open the door. To do this:

- 1. Press Start / Pause button to switch the machine to pause mode. The programme follow-up light of the relevant step during which the machine was switched into the pause mode will flash.
- 2. Wait until the Loading Door can be opened.
- 3. Open the Loading Door and add or take out the laundry.
- 4. Close the Loading Door.
- 5. Make changes in speed settings, if necessary.
- 6. Press Start / Pause button to start the machine.

# 4.3.15 Cancelling the programme

To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be cancelled. End / Cancel light will flash continuously to notify that the programme has been canceled.

Your machine will end the programme when you turn the Programme Selection knob; however, it does not drain the water inside. When you select and start a new programme, the newly selected programme will start depending on the step the previous programme was canceled in. For example, it may take in additional water or continue to wash with the water inside.



Some programmes may start by discharging the water inside the machine. Depending on the step where the programme was canceled in, you may have to put detergent and softener again for the programme you have selected anew.

# 4.3.16 End of programme

When the programme ends, "End" LED becomes on at the Programme Follow-up indicator.

- 1. Wait until the "Door Lock Enabled LED" goes off completely.
- 2. To switch off the machine, turn the Programme Selection Knob to On/Off position.
- 3. Take out your laundry and close the loading door. Your machine is ready for the next washing cycle.

# 4.3.17 Your machine features "Pause Mode".

After you switch on your machine with the programme selection button (by switching the button to a different position than the On/Off position), if no programme is started or no other procedure is performed in the selection step or no action is taken within approx. 2 minutes after the selected programme ends, your machine will switch to energy saving mode automatically. The brightness of the indicator lights will decrease. Also, if your product has a display that shows programme time, this display will be completely turned off. If you turn the Programme Selection knob or touch any button, lights and display will switch back to previous condition. The selections which you make when exiting from the energy efficiency may change. Please check the correctness of your selections before starting the programme. If necessary, please make your settings again. This is not an error.

# 4.4 Maintenance and cleaning

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

# 4.4.1 Cleaning the detergent drawer



Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent in time.

Lift the rear part of the siphon to remove it as illustrated. If more than normal amount of water and softener mixture starts to gather in the softener compartment, the siphon must be cleaned.

- 1 Press the dotted point on the siphon in the softener compartment and pull towards you until the compartment is removed from the machine.
- 2. Wash the detergent drawer and the siphon with plenty of lukewarm water in a washbasin. In order to prevent the residues to contact your skin, clean it with an appropriate brush by wearing a pair of gloves.
- 3 Insert the drawer back into its place after cleaning and make sure that it is seated well.

# 4.4.2 Cleaning the loading door and the drum

For products with drum cleaning programme, please see Operating the product - Programmes.



Repeat Drum Cleaning process in every 2 months.

Use an detergent / anti-limescale suitable for the washing machines.



After every washing make sure that no foreign substance is left in the drum. If the holes on the bellow shown in the figure is blocked, open the holes using a toothpick.

Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel.

Never use steel wool or wire wool. These will damage the painted, chromated and plastic surfaces.

# 4.4.3 Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

# 4.4.4 Cleaning the water intake filters

There is a filter at the end of each water intake valve at the rear of the machine and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the washing machine. Filters should be cleaned as they do get dirty.



- 1. Close the taps.
- 2. Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.
- 3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
- 4. Replace the seals and filters carefully and tighten their nuts by hand.

# 4.4.5 Draining remaining water and cleaning the pump filter

The filter system in your machine prevents solid items such as buttons, coins and fabric fibers clogging the pump impeller during discharge of washing water. Thus, the water will be discharged without any problem and the service life of the pump will extend.

If the machine fails to drain water, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the machine (e.g., when moving to another house) and in case of freezing of the water, water may have to be drained completely.



**CAUTION:** Foreign substances left in the pump filter may damage your machine or may cause noise problem.

**CAUTION:** If the product is not being used, shut the tap shut, remove mains pipe and drain the water inside the machine against any likely freezing.

CAUTION: After each use, turn off the water tap to which the mains hose is connected.

#### In order to clean the dirty filter and discharge the water:

1 Unplug the machine to cut off the supply power.

**CAUTION:** Temperature of the water inside the machine may rise up to 90 °C. To avoid the burning risk, clean the filter after the water inside the machine is cooled down.

2. Open the filter cover.



3 Follow the below procedures in order to drain water.

The product does not have an emergency water drain hose, in order to drain the water:



- a. In order to collect the water to flow out of the filter, place a large vessel in front of the filter.
- b. Turn and loosen the pump filter until water starts to flow (counterclockwise). Fill the flowing water into the container you have placed in front of the filter. Always keep a piece of cloth handy to absorb any spilled water.
- c When the water inside the machine is finished, take out the filter completely by turning it.
- 4. Clean any residues inside the filter as well as fibers, if any, around the pump impeller region.
- 5. Replace the filter.
- 6. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.

Problem	Reason	Solution
Program does not start after	Start / Pause / Cancel button was not pressed.	<ul> <li>*Press the Start / Pause / Cancel button.</li> </ul>
closing the door.	It may be difficult to close the loading door in case of excessive loading.	<ul> <li>Reduce the amount of laundry and make sure that the loading door is closed properly.</li> </ul>
Programme cannot be started or selected.	Washing machine has switched to self protection mode due to a supply problem (line voltage, water pressure, etc.).	<ul> <li>To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be</li> </ul>
Water in the machine.	Some water might have remained in the product due	canceled. (see. "Cancellation of program") <ul> <li>This is not a failure; water is not harmful to</li> </ul>
	to the quality control processes in the production.	the machine.
The machine enters standby	Tap is turned off.	Turn on the taps.
mode after the programme	Water inlet hose is bent.	Flatten the hose.
starts or it does not take in water.	Water inlet filter is clogged.	Clean the filter.
water.	Loading door may be open. The water connection may be wrong or water may	<ul> <li>Close the door.</li> <li>Check the water connection. If the water is</li> </ul>
	be cut off (When the water is cut off, washing or rinsing LEDs flash).	<ul> <li>Check the water confliction. If the water is cut off, press the Start/Pause key after the water has been supplied again to resume the operation from standby mode.</li> </ul>
Machine does not drain water.	Water drain hose might be clogged or twisted.	Clean or flatten the hose.
	Pump filter is clogged.	Clean the pump filter.
Machine vibrates or makes noise.	Machine might be standing unbalanced.	<ul> <li>Adjust the feet to level the machine.</li> </ul>
	A hard substance might have entered into the pump filter.	Clean the pump filter.
	Transportation safety bolts are not removed.	<ul> <li>Remove the transportation safety bolts.</li> </ul>
	Laundry quantity in the machine might be too little.	<ul> <li>Add more laundry to the machine.</li> </ul>
	Machine might be overloaded with laundry.	<ul> <li>Take out some of the laundry from the machine or distribute the load by hand to balance it homogenously in the machine.</li> </ul>
	Machine might be leaning on a rigid item.	<ul> <li>Make sure that the machine is not leaning on anything.</li> </ul>
There is water leaking from the	Water drain hose might be clogged or twisted.	Clean or flatten the hose.
bottom of the washing machine.	Pump filter is clogged.	Clean the pump filter.
Machine stopped shortly after the programme started.	Machine might have stopped temporarily due to low voltage.	<ul> <li>It will resume running when the voltage restores to the normal level.</li> </ul>
Machine directly discharges the water it takes in.	Draining hose might not be at adequate height.	<ul> <li>Connect the water draining hose as described in the operation manual.</li> </ul>
No water can be seen in the machine during washing.	The water level is not visible from outside of the washing machine.	This is not a failure.
Loading door cannot be opened.	Door lock is activated because of the water level in the machine.	<ul> <li>Drain the water by running the Pump or Spin programme.</li> </ul>
	Machine is heating up the water or it is at the spinning cycle.	Wait until the programme completes.
	Child lock is engaged. Door lock will be deactivated a couple of minutes after the programme has come to an end.	Wait for a couple of minutes for deactivation     of the door lock.
	Loading door may be stuck because of the pressure it is subjected to.	<ul> <li>Grab the handle and push and pull the loading door to release and open it.</li> </ul>
Washing takes longer time than specified in the manual.(*)	Water pressure is low.	<ul> <li>Machine waits until taking in adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends.</li> </ul>
	Voltage might be low.	• Washing time is prolonged to avoid poor washing results when the supply voltage is low.
	Input temperature of water might be low.	<ul> <li>Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results.</li> </ul>
	Number of rinses and/or amount of rinse water might have increased.	<ul> <li>Machine increases the amount of rinse water when good rinsing is needed and adds an extra rinsing step if necessary.</li> </ul>
	Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent usage.	Use recommended amount of detergent.

Problem	Reason	Solution
Programme time does not countdown. (On models with display) (*)	Timer may stop during water intake.	<ul> <li>Timer indicator will not countdown until the machine takes in adequate amount of water. The machine will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.</li> </ul>
	Timer may stop during heating step.	• Timer indicator will not countdown until the machine reaches the selected temperature.
	Timer may stop during spinning step.	<ul> <li>Automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the drum.</li> </ul>
Programme time does not countdown. (*)	There might be unbalanced load in the machine.	<ul> <li>Automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the drum.</li> </ul>
Machine does not switch to spinning step. (*)	There might be unbalanced load in the machine.	<ul> <li>Automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the drum.</li> </ul>
	The machine will not spin if water is not drained completely.	Check the filter and the draining hose.
	Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent usage.	Use recommended amount of detergent.
Washing performance is poor: Laundry turns gray. (**)	Insufficient amount of detergent has been used over a long period of time.	• Use the recommended amount of detergent appropriate for water hardness and the laundry.
	Washing was made at low temperatures for a long time.	Select the proper temperature for the laundry to be washed.
	Insufficient amount of detergent is used with hard water.	<ul> <li>Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth into gray in time. It is difficult to eliminate graying once it happens. Use the recommended amount of detergent appropriate for water hardness and the laundry.</li> </ul>
	Too much detergent is used.	<ul> <li>Use the recommended amount of detergent appropriate for water hardness and the laundry.</li> </ul>
Washing performance is poor: Stains persist or the laundry is	Insufficient amount of detergent is used.	• Use the recommended amount of detergent appropriate for water hardness and the laundry.
not whitened. (**)	Excessive laundry was loaded in.	<ul> <li>Do not load the machine in excess. Load with amounts recommended in the "Programme and consumption table".</li> </ul>
	Wrong programme and temperature were selected.	<ul> <li>Select the proper programme and temperature for the laundry to be washed.</li> </ul>
	Wrong type of detergent is used.	Use original detergent appropriate for the machine.
	Too much detergent is used.	<ul> <li>Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent with each other.</li> </ul>
Washing performance is poor: Oily stains appeared on the laundry. (**)	Regular drum cleaning is not applied.	• Clean the drum regularly. For this, please see 4.4.2.
Washing performance is poor: Clothes smell unpleasantly. (**)	Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programmes.	<ul> <li>Leave the detergent drawer as well as the loading door of the machine ajar after each washing. Thus, a humid environment favorable for bacteria cannot occur in the machine.</li> </ul>
Colour of the clothes faded. (**)	Excessive laundry was loaded in. Detergent in use is damp.	Do not load the machine in excess.     Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
	A higher temperature is selected.	<ul> <li>Select the proper programme and temperature according to the type and soiling degree of the laundry.</li> </ul>

Problem	Reason	Solution
It does not rinse well.	The amount, brand and storage conditions of the detergent used are inappropriate.	<ul> <li>Use a detergent appropriate for the washing machine and your laundry. Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.</li> </ul>
	Detergent is put in the wrong compartment.	<ul> <li>If detergent is put in the prewash compartment although prewash cycle is not selected, machine can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.</li> </ul>
	Pump filter is clogged.	Check the filter.
	Drain hose is folded.	Check the drain hose.
Laundry became stiff after washing. (**)	Insufficient amount of detergent is used.	<ul> <li>Using insufficient amount of detergent for the water hardness can cause the laundry to become stiff in time. Use appropriate amount of detergent according to the water hardness.</li> </ul>
	Detergent is put in the wrong compartment.	<ul> <li>If detergent is put in the prewash compartment although prewash cycle is not selected, machine can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.</li> </ul>
	Detergent might be mixed with the softener.	<ul> <li>Do not mix the softener with detergent.</li> <li>Wash and clean the dispenser with hot water.</li> </ul>
Laundry does not smell like the softener. (**)	Detergent is put in the wrong compartment.	<ul> <li>If detergent is put in the prewash compartment although prewash cycle is not selected, machine can take this detergent during rinsing or softener step. Wash and clean the dispenser with hot water. Put the detergent in the correct compartment.</li> </ul>
	Detergent might be mixed with the softener.	<ul> <li>Do not mix the softener with detergent.</li> <li>Wash and clean the dispenser with hot water.</li> </ul>
Detergent residue in the detergent drawer. (**)	Detergent is put in wet drawer.	<ul> <li>Dry the detergent drawer before putting in detergent.</li> </ul>
	Detergent has gotten damp.	<ul> <li>Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.</li> </ul>
	Water pressure is low.	<ul> <li>Check the water pressure.</li> </ul>
	The detergent in the main wash compartment got wet while taking in the prewash water. Holes of the detergent compartment are blocked.	Check the holes and clean if they are clogged.
	There is a problem with the detergent drawer valves.	Call the Authorised Service Agent.
	Detergent might be mixed with the softener.	• Do not mix the softener with detergent. Wash and clean the dispenser with hot water.
	Regular drum cleaning is not applied.	• Clean the drum regularly. For this, please see 4.4.2.
Too much foam forms in the machine. (**)	Improper detergents for the washing machine are being used.	Use detergents appropriate for the washing machine.
	Excessive amount of detergent is used. Detergent was stored under improper conditions.	<ul> <li>Use only sufficient amount of detergent.</li> <li>Store detergent in a closed and dry location. Do not store in excessively hot places.</li> </ul>
	Some meshed laundry such as tulle may foam too much because of their texture.	<ul> <li>Use smaller amounts of detergent for this type of item.</li> </ul>
	Detergent is put in the wrong compartment.	Put the detergent in the correct compartment.
	Softener is being taken early.	<ul> <li>There may be problem in the valves or in the detergent dispenser. Call the Authorised Service Agent.</li> </ul>
Foam is overflowing from the detergent drawer.	Too much detergent is used.	<ul> <li>Mix 1 tablespoonful softener and ½ I water and pour into the main wash compartment of the detergent drawer.</li> </ul>
		<ul> <li>Put detergent into the machine suitable for the programmes and maximum loads indicated in the "Programme and consumption table". When you use additional chemicals (stain removers, bleachs and etc), reduce the amount of detergent.</li> </ul>

Problem	Reason	Solution			
Laundry remains wet at the end of the programme. (*)	Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent usage.	Use recommended amount of detergent.			
(*) Machine does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the machine and to its surrounding environment. Laundry should be rearranged and re-spun. (**) Regular drum cleaning is not applied. Clean the drum regularly. See 4.4.2					
CAUTION:         If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorised Service Agent. Never try to repair a nonfunctional product yourself.					