Refrigerator User manual



Please read this user manual first!

Dear Customer,

We hope that your product, which has been produced in modern plants and checked under the most meticulous quality control procedures, will provide you an effective service.

Therefore, read this entire user manual carefully before using the product and keep it as a reference. If you handover the product to someone else, give the user manual as well.

The user manual will help you use the product in a fast and safe way.

- Read the manual before installing and operating the product.
- Make sure you read the safety instructions.
- Keep the manual in an easily accessible place as you may need it later.
- Read the other documents given with the product.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Explanation of symbols

Throughout this user manual the following symbols are used:

Important information or useful tips.

🕂 Warning against dangerous conditions for life and property.

🕅 Warning against electric voltage.

CONTENTS

1 Your Refrigerator

2 Important Safety Warnings

Warnings	4
Intended use	4
General safety	4
For products with a	8
water dispenser;	8
Child safety	9
Compliance with WEEE Directive and	
Disposing of the Waste Product:	. 9
Package information	9
HC warning	9
Things to be done for energy saving	10
Recommendations for the fresh food	
compartment	10

3

9 9 9

3 Installation 11 Points to be paid attention to when the relocation of the refrigerator 11 Electrical connection 11 Disposing of the packaging 12 Disposing of your old refrigerator 12 Placing and Installation 12 Adjusting the legs 13 Door Open Warning 13 Changing the illumination lamp 13

4 Preparation

5 Using your refrigerator	16
Indicator panel	16
Freezing fresh food	21
Recommendations for preservation	of
frozen food	21
Placing the food	21
Making ice	22
Deep-freeze information	22
Twist Ice – matic	23
lce container	23
Fan	24
Crisper	24
Chiller compartment	24
Description and cleaning of odour	
filter:	25
Reversing the door	26
6 Maintenance and cleaning	27
Protection of plastic surfaces	. 27
7 Troubleshooting	28

15



- 1. Door shelf
- 2. Egg section
- 3. Bottle shelf
- 4. Adjustable feet
- 5. Fridge crisper
- 6. Chiller compartment
- 7. Glass Shelf
- 8. Fan
- **9.** Temperature setting button

- 10. Ion Guard
- 11. Freezer Crisper
- **12.** Moveing door shelf
- **13.** Ice box / Ice-making
- **14.** Air Filter
- 15. Freezer compartment
- **16.** Fridge compartment

*optional

Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

2 Important Safety Warnings

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction
- Do not use electrical appliances inside the food appliance, unless they are of the type storage compartments of the appliance, unless they are of the type recommended by the manufacturer
- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- children shall not play with the appliance
- Cleaning and user maintenance shall not be made by children without supervision

Please review the following information. Failure to observe this information may cause injuries or material damage. Otherwise, all warranty and reliability commitments will become invalid.

The service life of your product is 10 years. During this period, original spare parts will be available to operate the product properly.

Intended use

This product is intended to be used

- indoors and in closed areas such as homes;
- in closed working environments such as stores and offices;
- in closed accommodation areas such as farm houses, hotels, pensions.
- It should not be used outdoors. General safety

When you want to dispose/scrap the

product, we recommend you to consult the authorized service in order to learn the required information and authorized bodies.

- Consult your authorized service for all your questions and problems related to the refrigerator. Do not intervene or let someone intervene to the refrigerator without notifying the authorized services.
- For products with a freezer compartment; Do not eat cone ice cream and ice cubes immediately after you take them out of the freezer compartment! (This may cause frostbite in your mouth.)
- For products with a freezer compartment; Do not put bottled and canned liquid beverages in the freezer compartment. Otherwise, these may burst.
- Do not touch frozen food by hand; they may stick to your hand.

1 | EN

- Unplug your refrigerator before cleaning or defrosting.
- Vapor and vaporized cleaning materials should never be used in cleaning and defrosting processes of your refrigerator. In such cases, the vapor may get in contact with the electrical parts and cause short circuit or electric shock.
- Never use the parts on your refrigerator such as the door as a means of support or step.
- Do not use electrical devices inside the refrigerator.
- Do not damage the parts, where the refrigerant is circulating, with drilling or cutting tools. The refrigerant that might blow out when the gas channels of the evaporator, pipe extensions or surface coatings are punctured causes skin irritations and eye injuries.

- Do not cover or block the ventilation holes on your refrigerator with any material.
- Electrical devices must be repaired by only authorised persons. Repairs performed by incompetent persons create a risk for the user.
- In case of any failure or during a maintenance or repair work, disconnect your refrigerator's mains supply by either turning off the relevant fuse or unplugging your appliance.
- Do not pull by the cable when pulling off the plug.
- Ensure highly alcoholic beverages are stored securely with the lid fastened and placed upright.
- Never store spray cans containing flammable and explosive substances in the refrigerator.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those

recommended by the manufacturer.

- This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are attended by a person who will be responsible for their safety or who will instruct them accordingly for use of the product
- Do not operate a damaged refrigerator. Consult with the service agent if you have any concerns.
- Electrical safety of your refrigerator shall be guaranteed only if the earth system in your house complies with standards.
- Exposing the product to rain, snow, sun and wind is dangerous with respect to electrical safety.
- Contact authorized service when there is a power cable damage to avoid danger.

- Never plug the refrigerator into the wall outlet during installation. Otherwise, risk of death or serious injury may arise.
- This refrigerator is intended for only storing food items. It must not be used for any other purpose.
- Label of technical specifications is located on the left wall inside the refrigerator.
- Never connect your refrigerator to electricitysaving systems; they may damage the refrigerator.
- If there is a blue light on the refrigerator, do not look at the blue light with optical tools.
- For manually controlled refrigerators, wait for at least 5 minutes to start the refrigerator after power failure.
- This operation manual should be handed in to the new owner of the product when it is given to others.

- Avoid causing damage on power cable when transporting the refrigerator. Bending cable may cause fire. Never place heavy objects on power cable. Do not touch the plug with wet hands when plugging the product.
- Do not plug the refrigerator if the wall outlet is loose.
- Water should not be sprayed on inner or outer parts of the product for safety purposes.
- Do not spray substances containing inflammable gases such as propane gas near the refrigerator to avoid fire and explosion risk.
- Never place containers filled with water on top of the refrigerator; in the event of spillages, this may cause electric shock or fire.
- Do not overload the refrigerator with food.
 If overloaded, the food items may fall down and hurt you and damage refrigerator when you open the door.

- Never place objects on top of the refrigerator; otherwise, these objects may fall down when you open or close the refrigerator's door.
- As they require a precise temperature, vaccines, heat-sensitive medicine and scientific materials and etc. should not be kept in the refrigerator.
- If not to be used for a long time, refrigerator should be unplugged. A possible problem in power cable may cause fire.
- The plug's tip should be cleaned regularly with a dry cloth; otherwise, it may cause fire.
- Refrigerator may move if adjustable legs are not properly secured on the floor. Properly securing adjustable legs on the floor can prevent the refrigerator to move.
- When carrying the refrigerator, do not hold it from door handle. Otherwise, it may be snapped.

7 | EN

- When you have to place your product next to another refrigerator or freezer, the distance between devices should be at least 2cm. Otherwise, adjacent side walls may be humidified.
- The product shall never be used while the compartment which is located at the top or back of your product and in which electronic boards are available (electronic board box cover) (1) is open.



For products with a water dispenser;

- Pressure for cold water inlet shall be maximum 90 psi (6.2 bar). If your water pressure exceeds 80 psi (5.5 bar), use a pressure limiting valve in your mains system. If you do not know how to check your water pressure, ask for the help of a professional plumber.
- If there is risk of water hammer effect in your installation, always use a water hammer prevention equipment in your installation. Consult Professional plumbers if you are not sure that there is a water hammer effect in your installation.
- Do not install on the hot water inlet. Take precautions against of the risk of freezing of the hoses. Water temperature operating interval shall be 33°F (0.6°C) minimum and 100°F (38°C) maximum.

8 | EN

- Use only potable water. Child safety
- If the door has a lock, the key should be kept away from reach of children.
- Children must be supervised to prevent them from tampering with the product.
 Compliance with WEEE Directive and Disposing of the Waste Product:



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment

(WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and break the locking mechanism of the door, if any, so that it will be non-functional before disposing of the product.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Do not forget...

Any recycled substance is an indispensable matter for nature and our national asset wealth.

If you want to contribute to the re-evaluation of the packaging materials, you can consult to your environmentalist organizations or the municipalities where you are located.

HC warning If your product's cooling system contains R600a:

This gas is flammable. Therefore, pay attention to not damaging the cooling system and piping during usage and transportation. In the event of damage, keep your product away from potential fire sources that can cause the product catch a fire and ventilate the room in which the unit is placed.

Ignore this warning if your product's cooling system contains R134a.

Type of gas used in the product is stated in the type label which is on the left wall inside the refrigerator. Never throw the product in fire for disposal. Recommendations for the fresh food compartment *May not be available in all models

Do not allow the food to touch the temperature sensor in fresh food compartment. To allow the fresh food compartment keep its ideal storage temperature, sensor must not be hindered by food.

Do not place hot foods in the product.





Things to be done for energy saving

- Do not leave the doors of your refrigerator open for a long time.
- Do not put hot food or drinks in your refrigerator.

- Do not overload your refrigerator so that the air circulation inside of it is not prevented.
- Do not install your refrigerator under direct sunlight or near heat emitting appliances such as ovens, dishwashers or radiators. Keep your refrigerator at least 30cm away from
- heat emitting sources and at least 5cm from electrical ovens.
- Pay attention to keep your food in closed containers.

For products with a freezer compartment; You can store maximum amount of food items in the freezer when you remove the shelf or drawer of the freezer. Energy consumption value stated for your refrigerator has been determined by removing freezer shelf or drawer and under maximum load. There is no harm to use a shelf or drawer according to the shapes and size of food to be frozen.

Thawing frozen food in fridge compartment will both provide energy saving and preserve the food quality.

3 Installation

 In case the information which are given in the user manual are not taken into account, manufacturer will not assume any liability for this.
Points to be paid attention to when the relocation of the refrigerator

1. Your refrigerator should be unplugged.Before transportation of your refrigerator, it should be emptied and cleaned.

2. Before it is re-packaged, shelves, accessories, crisper, etc. inside your refrigerator should be fixed with adhesive tape and secured against impacts. Package should be bound with a thick tape and the transportation rules on the package should be strictly observed.

3. Original packaging and foam materials should be kept for future transportations or moving. Before you start the refrigerator, Check the following before you start to use your refrigerator:

1. Clean the interior of the refrigerator as recommended in the "Maintenance and cleaning" section.

2. Connect the plug of the refrigerator to the wall socket. When the fridge door is opened, fridge internal lamp will turn on.

3. When the compressor starts to operate, a sound will be heard. The liquid and gases sealed within the refrigeration system may also give rise to noise, even if the compressor is not running and this is quite normal.

4. Front edges and both sides of the refrigerator may feel warm. This is normal. These areas are designed to be warm to avoid condensation. Electrical connection Connect your product to a grounded socket which is being protected by a fuse with the appropriate capacity. Important:

The connection must be in compliance with national regulations.

- The power plug must be easily accessible after installation.
- Electrical safety of your refrigerator shall be guaranteed only if the earth system in your house complies with standards.
- The voltage stated on the label located at left inner side of your product should be equal to your network voltage.
- Extension cables and multi plugs must not be used for connection.



A damaged power cable must be replaced by a qualified electrician.

Product must not be operated before it is repaired! There is the risk of electric shock!

Disposing of the packaging The packing materials may be dangerous for children. Keep the packing materials out of the reach of children or dispose of them by classifying them in accordance with the waste instructions stated by your local authorities. Do not throw away with regular house waste, throw away on packaging pick up spots designated by the local authorities . The packing of your refrigerator is produced from recyclable materials. Disposing of your old refrigerator

Dispose of your old refrigerator without giving any harm to the environment.

 You may consult your authorized dealer or waste collection center of your municipality about the disposal of your refrigerator.

Before disposing of your refrigerator, cut out the electric plug and, if there are any locks on the door, make them inoperable in order to protect children against any danger.

Placing and Installation

If the entrance door of the room where the refrigerator will be installed is not wide enough for the refrigerator to pass through, then remove the doors of your refrigerator and pass it sideways through the door. 1. Install your refrigerator to a place that allows ease of use.

2. Keep your refrigerator away from heat sources, humid places and direct sunlight.

3. There must be appropriate air ventilation around your refrigerator in order to achieve an efficient operation. If the refrigerator is to be placed in a recess in the wall, there must be at least 5 cm distance with the ceiling and at least 2 cm with the wall. Do not place your product on the materials such as rug or carpet.

4. Place your refrigerator on an even floor surface to prevent jolts.

Adjusting the legs

If your refrigerator is unbalanced; You can balance your refrigerator by turning its front legs as illustrated in the figure. The corner where the leg exists is lowered when you turn in the direction of black arrow and raised when you turn in the opposite direction. Taking help from someone to slightly lift the refrigerator will facilitate this process.



Door Open Warning

*May not be available in all models An audio warning signal will be given when the door of your product is left open for at least 1 minute. This warning will be muted when the door is closed or any of the display buttons (if any) are pressed.

Changing the illumination lamp

To change the Bulb/LED used for illumination of your refrigerator, call your Authorised service.

The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place foodstuffs in the refrigerator/freezer in a safe and comfortable way.The lamps used in this appliance have to withstand extreme physical conditions such as temperatures below -20 °C. (only chest and upright freezer)





4 Preparation

- Your refrigerator should be installed at least 30 cm away from heat sources such as hobs, ovens, central heater and stoves and at least 5 cm away from electrical ovens and should not be located under direct sunlight.
- Please make sure that the interior of your refrigerator is cleaned thoroughly.
- If two coolers are to be installed side by side, there should be at least 2 cm distance between them.
- When you operate your refrigerator for the first time, please observe the following instructions during the initial six hours.
- Its door should not be opened frequently.
- It must be operated empty without placing any food in it.
- Do not unplug your refrigerator If a power failure occurs out of your control, please see the warnings in the "Recommended solutions for the problems" section.
- The baskets/drawers that are provided with the chill compartment must always be in use for low energy consumption and for better storage conditions.
- Food contact with the temperature sensor in the freezer compartment may increase energy consumption of the appliance. Thus any contact with the sensor(s) must be avoided.
- This product has been designed to function at ambient temperatures up to 43 °C (90 SDgr F). Even if the ambient temperature falls to -15 °C, frozen food in the freezer does not thaw thanks to its Advanced

Electronic Temperature Control System.

youcan place your product in the garage or an unheated room without the concern of causing frozen food to get rotten. However, it is likely that above mentioned low temperatures may cause the freezing of the food in the fridge compartment; thus, please consume the food items in the fridge in a controlled way as needed. When ambient temperature goes back to normal, you may change button setting according to your need.

- If the ambient temperature is below 0°C, the food in fridge compartment will freeze. Therefore, we recommend not using the fridge compartment in such low ambient temperatures. You may continue to use the freezer compartment as usual.
- In some models, the instrument panel automatically turns off 5 minutes after the door has closed. It will be reactivated when the door has opened or pressed on any key.
- Due to temperature change as a result of opening/closing the product door during operation, condensation on the door/body shelves and the glass containers is normal.

5 Using your refrigerator

Indicator panel (External Display) *Optional

Indicator panel allows you to set the temperature and control the other functions related to the product without opening the door of the product. Just press the inscriptions on relevant buttons for function settings.



1. Power failure/High temperature / error warning indicator This indicator () illuminates during power failure, high temperature failures and error warnings. During sustained power failures, the highest temperature that the freezer compartment reaches will flash on the digital display. After checking the food located in the freezer compartment (∠) press the alarm off button to clear the warning. Please refer to "remedies advised for troubleshooting" section on your manual if you observe that this indicator is illuminated.

2. Energy saving function (display off):

If the product doors are kept closed for a long time energy saving function is automatically activated and energy saving symbol is illuminated. (\checkmark) When energy saving function is activated, all symbols on the display other than energy saving symbol will turn off. When the Energy Saving function is activated, if any button is pressed or the door is opened, energy saving function will be cancelled and the symbols on display will return to normal.

Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

Energy saving function is activated during delivery from factory and cannot be canceled.

3.Quick fridge function

The button has two functions. To activate or deactivate the quick cool function press it briefly. Quick Cool indicator will turn off and the product will return to its normal settings. (

- 6 Use quick cooling function when you want to quickly cool the food placed in the fridge compartment. If you want to cool large amounts of fresh food, activate this function before putting the food into .the product If you do not cancel it, quick 6 cooling will cancel itself automatically after 1 hours or when the fridge compartment reaches to the required .temperature 6 If you press the quick cooling button repeatedly with short intervals, the electronic circuit protection will be activated and the compressor will not
 - This function is not recalled when power restores after a .power failure

.start up immediately

4. Fridge compartment temperature setting button

Press this button to set the temperature of the fridge compartment to 8, 7,6, 5,4,3, 2, 8... respectively. Press this button to set the fridge compartment temperature to the desired value. (\mathbf{r})

5.Vacation Function

In order to activate vacation function, press the this button (愛) for 3 seconds, and the vacation mode indicator () will be activated. When the vacation function is activated, "--" is displayed on the fridge compartment temperature indicator and no active cooling is performed on the fridge compartment. It is not suitable to keep the food in the fridge compartment when this function is activated. Other compartments shall be continued to be cooled as per their set temperature.

To cancel this function press

Vacation function button again.

6. Alarm off warning:

In case of power failure/high temperature alarm, after checking the food located in the freezer compartment press the alarm off button (\measuredangle) to clear the warning.

7. Key lock

Press key lock button (ϑ) simultaneously for 3 seconds. Key lock symbol

(6) will light up and key lock mode will be activated. Buttons will not function if the Key lock mode is active. Press key lock button simultaneously for 3 seconds again. Key lock symbol will turn off and the key lock mode will be exited.

Press the **key lock** button if you want to prevent changing of the temperature setting of the refrigerator (\Im).

8. Eco fuzzy

Press and hold eco fuzzy button for 1 seconds to activate eco fuzzy function. Refrigerator will start operating in the most economic mode at least 6 hours later and the economic usage indicator will turn on when the function is active (). Press and hold eco fuzzy function button for 3 seconds to deactivate eco fuzzy function. This indicator is illuminated after 6 hours when eco fuzzy is activated.

9. Freezer compartment temperature setting button

Press this button to set the temperature of the freezer compartment to-16,-17,-18,-19,-20,-22,-24,-16... respectively. Press this button to set the freezer compartment temperature to the desired value.

10. Icematic function (optional)

Indicates whether the icematic is on or off. (%) If On, then the icematic is not operating. To operate the icematic again press and hold the On-Off button for 3 seconds.

Water flow from water tank will stop when this function is selected. However, ice made previously can be taken from .the icematic

11. Quick freeze function button

Press this button to activate or deactivate the quick freezing function. When you activate the function, the freezer compartment will be cooled to a temperature lower than the set value.



- Use the quick freeze function when you want to quickly freeze the food placed in fridge compartment. If you want to freeze large amounts of fresh food, activate this function before putting the food into .the product
- If you do not cancel it, Quick Freeze will cancel itself automatically after 24 hours or when the fridge compartment reaches to the required .temperature
 - This function is not recalled when power restores after a .power failure

12. Economic usage indicator

Indicates that the product is running in energy-efficient mode. (**eco**)This indicator will be active if the Freezer Compartment temperature is set to -16 or the energy efficient cooling is being performed due to Eco-Extra function.

Economic usage indicator is turned off when quick cooling or quick freeze functions are .selected

5 Using your refrigerator

Indicator panel (Internal Display) *Optional

Indicator panels may vary according to the product model.

Audio - visual functions on the indicator panel helps you in using your product.



- 1. Freezer compartment indicator
- 2. Error status indicator
- 3. Temperature indicator
- 4. Vacation function button
- 5. Temperature setting button
- 6.Compartment selection button
- 7. Fridge Compartment Indicator
- 8. Economy mode indicator
- 9. Vacation function indicator
- *optional

Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

1. Freezer compartment indicator

Fridge compartment light is illuminated while the freezer compartment temperature is set.

2. Error status indicator

If your refrigerator does not perform enough cooling or in case of a sensor fault, this indicator is activated. When this indicator is activated, "E" is displayed on the freezer compartment temperature indicator, and numbers such as "1,2,3..." are displayed on the fridge compartment temperature indicator. These numbers on the indicator inform service personnel about the error.

3. Temperature indicator

Indicates freezer, fridge compartment temperature.

4. Vacation function button Press on Vacation Button for 3 seconds to activate this function. When the vacation function is activated, "--" is displayed on the fridge compartment temperature indicator and no active cooling is performed on the fridge compartment. It is not suitable to keep the food in the fridge compartment when this function is activated. Other compartments shall be continued to be cooled as per their set temperature.

To cancel this function press Vacation button again.

5. Temperature setting button

Changes the temperature of the relevant compartment between -24°C... -16°C and 8°C...1°C.

6. Compartment selection button

Selection button: Press compartment selection button to switch between fridge and freezer compartments.

7. Fridge compartment indicator

Fridge compartment light is illuminated while the fridge compartment temperature is set.

8. Economy mode indicator

Indicates that the refrigerator operates in energy saving mode. This display shall be activated if the freezer compartment temperature is set to -16°C.

9. Vacation function indicator

Indicates that vacation is activated.

Freezing fresh food

- It must be preferred to wrap or cover the food before placing them in the refrigerator.
- Hot food must cool down to the room temperature before putting them in the refrigerator.
- The foodstuff that you want to freeze must be fresh and in good quality.
- Foodstuff must be divided into portions according to the family's daily or meal based consumption needs.
- The foodstuff must be packaged in an airtight manner to prevent them from drying even if they are going to be kept for a short time.
- Materials to be used for packaging must be tear-proof and resistant to cold, humidity, odour, oils and acids and they must also be airtight. Moreover, they must be well closed and they must be made from easyto-use materials that are suitable for deep freeze usage.
- Frozen food must be used immediately after they are thawed and they should never be re-frozen.
- Please observe the following instructions to obtain the best results.

1. Do not freeze too large quantities of food at one time. The quality of the food is best preserved when it is frozen right through to the core as quickly as possible.

2. Placing warm food into the freezer compartment causes the cooling system to operate continuously until the food is frozen solid.

3. Take special care not to mix already frozen food and fresh food.

Recommendations for preservation of frozen food

- Prepacked commercially frozen food should be stored in accordance with the frozen food manufacturer's instructions for a **** (4 star) frozen food storage compartment.
- To ensure that the high quality achieved by the frozen food manufacturer and the food retailer is maintained, the following should be remembered:

1. Put packages in the freezer as quickly as possible after purchase.

2. Ensure that contents are labeled and dated.

3. Do not exceed "Use By", "Best Before" dates on the packaging.

Defrosting

The freezer compartment defrosts automatically. Placing the food

Freezer compartment shelves	Various frozen food such as meat, fish, ice cream, vegetables and etc.
Egg tray	Egg
Fridge compartment shelves	Food in pans, covered plates and closed containers
Fridge compartment door shelves	Small and packaged food or drinks (such as milk, fruit juice and beer)
Crisper	Vegetables and fruits

Freshzone compartment Delicatessen products (cheese, butter, salami and etc.)

Deep-freeze information Food must be frozen as rapidly as possible when they are put in a refrigerator in order to keep them in good quality.

It is possible to keep the food for a long time only at -18°C or lower temperatures.

You can keep the freshness of food for many months (at -18°C or lower temperatures in the deep freeze).

WARNING!

- Foodstuff must be divided into portions according to the family's daily or meal based consumption needs.
- Foodstuff must be packaged in an airtight manner to prevent them from drying even if they are going to be kept for a short time.
- Materials necessary for packaging:
- Cold resistant adhesive tape
- Self adhesive label
- Rubber rings
- Pen

Materials to be used for packaging the foodstuff must be tear-proof and resistant to cold, humidity ,odour, oils and acids.

Foodstuff to be frozen should not be allowed to come in contact with the previously frozen items to prevent their partial thawing.

Frozen food must be used immediately after they are thawed and they should never be re-frozen.

Making ice

(This feature is optional)

Fill the ice container with water and place it into the freezer compartment. Your ice will be ready approximately in two hours.

You can remove the ice in the ice container by removing it from the freezer and twisting it.



Twist Ice – matic

(This feature is optional)

- Remove the water tank by rotating it to the left.
- Open the water tank cover by turning it and add water to the water tank up to the lower part of the water tank cover.
- Place the water tank on its place as shown in the figure after adding water and have it seated by rotating it on the direction of the arrow. Water shall be poured down to the icebank.
- When ice has formed, rotate icebank knob in the direction of the arrow to allow that the ice is dropped down to the ice drawer.
- Take the ice cubes by pulling ice drawer out.
- Pull the front face towards you in order to wash the icebank, and put it on the slides on the interior area and push it to its place in order to replace it.
- Pull the twist icematic unit towards you in order to remove the unit, and put it on the slides on the ceiling and push it to its place in order to replace it.

Ice container

- Remove the ice container from the freezer compartment.
- Fill the ice container with water.
- Place the ice container in the freezer compartment. About two hours later, the ice is ready.
- Remove the ice container from the freezer compartment and bend it over the service plate. Ice cubes will easily fall down to the service plate.



Fan

Fan is designed to ensure homoge neous distribution and circulation of the cold air inside your refrigerator. Operation time of the fan may vary depending on the properties of your product.

While the fan works only with the com pressor in some products, the control system determines its operation time in some products in accordance with the cooling requirement.

Chiller compartment

(This feature is optional) Use this compartment to store delicatessen that shall be stored in a lower temperature or meat products that you will consume in a short time. Chiller compartment is the coolest place in your refrigerator where you can keep dairy products, meat, fish and poultry under ideal storage conditions. Fruits and vegetables should not be stored in this compartment.



Crisper

Crisper of the product is designed specially to keep the vegetables fresh without loosing their humidity. For this purpose, cool air circulation is intensified around the crisper in general.



Description and cleaning of odour filter:

optional *

Odour filter prevents unpleasant odour build-up in your refrigerator. Pull the cover into which the odour filter is installed downwards from the front section and remove as illustrated. Leave the filter under sunlight for one day. Filter will be cleaned during this time. Install the filter back to its place. Odour filter must be cleaned once in a year.



Reversing the doors





6 Maintenance and cleaning

- Never use gasoline, benzene or similar substances for cleaning purposes.
- We recommend that you unplug the appliance before cleaning.
- Never use any sharp abrasive instrument, soap, household cleaner, detergent and wax polish for cleaning.
- Use lukewarm water to clean the cabinet of your refrigerator and wipe it dry.
- Use a damp cloth wrung out in a solution of one teaspoon of bicarbonate of soda to one pint of water to clean the interior and wipe it dry.
- - Make sure that no water enters the lamp housing and other electrical items.
 - If your refrigerator is not going to be used for a long period of time, unplug the power cable, remove all food, clean it and leave the door ajar.



Check door seals regularly to ensure they are clean and free from food particles.



To remove door racks, remove all the contents and then simply push the door rack upwards from the base.

- Never use cleaning agents or water that contain chlorine to clean the outer surfaces and chromium coated parts of the product. Chlorine causes corrosion on such metal surfaces.
- Do not use sharp, abrasive tools, soap, household cleaning agents, detergents, kerosene, fuel oil, varnish etc. to prevent removal and deformation of the prints on the plastic part. Use lukewarm water and a soft cloth for cleaning and then wipe it dry.

Protection of plastic surfaces



Do not put the liquid oils or oil-cooked meals in your refrigerator in unsealed containers as they damage the plastic surfaces of your refrigerator. In case of spilling or smearing oil on the plastic surfaces, clean and rinse the relevant part of the surface at once with warm water.

7 Troubleshooting

Please review this list before calling the service. It will save your time and money. This list includes frequent complaints that are not arising from defective workmanship or material usage. Some of the features described here may not exist in your product.

The refrigerator does not operate.

- The plug is not inserted into the socket correctly. >>>Insert the plug into the socket securely.
- The fuse of the socket which your refrigerator is connected to or the main fuse have blown out. >>>Check the fuse.

Condensation on the side wall of the fridge compartment (MULTIZONE, COOL CONTROL and FLEXI ZONE).

- Door has been opened frequently. >>>Do not open and close the door of refrigerator frequently.
- Ambient is very humid. >>>Do not install your refrigerator into highly humid places.
- Food containing liquid is stored in open containers. >>>Do not store food with liquid content in open containers.
- Door of the refrigerator is left ajar. >>>Close the door of the refrigerator.
- Thermostat is set to a very cold level. >>>Set the thermostat to a suitable level.
- Compressor is not running
- Protective thermic of the compressor will blow out during sudden power failures or plug-out plug-ins as the refrigerant pressure in the cooling system of the refrigerator has not been balanced yet. The refrigerator will start running approximately after 6 minutes. Please call the service if the refrigerator does not startup at the end of this period.
- The fridge is in defrost cycle. >>>This is normal for a full-automatically defrosting refrigerator. Defrosting cycle occurs periodically.
- The refrigerator is not plugged into the socket. >>>Make sure that the plug is fit into the socket.
- Temperature settings are not made correctly. >>>Select the suitable temperature value.
- There is a power outage. >>>Refrigerator returns to normal operation when the power restores.

The operation noise increases when the refrigerator is running.

• The operating performance of the refrigerator may change due to the changes in the ambient temperature. It is normal and not a fault.

The refrigerator is running frequently or for a long time.

•	New product may be wider than the previous one. Larger refrigerators operate
	for a longer period of time.

- The room temperature may be high. >>>It is normal that the product operates for longer periods in hot ambient.
- The refrigerator might be plugged in recently or might be loaded with food. >>>When the refrigerator is plugged in or loaded with food recently, it will take longer for it to attain the set temperature. This is normal.
- Large amounts of hot food might be put in the refrigerator recently. >>>Do not put hot food into the refrigerator.
- Doors might be opened frequently or left ajar for a long time. >>>The warm air that has entered into the refrigerator causes the refrigerator to run for longer periods. Do not open the doors frequently.
- Freezer or fridge compartment door might be left ajar. >>>Check if the doors are closed completely.
- The refrigerator is adjusted to a very low temperature. >>>Adjust the refrigerator temperature to a warmer degree and wait until the temperature is achieved.
- Door seal of the fridge or freezer may be soiled, worn out, broken or not properly seated. >>>Clean or replace the seal. Damaged/broken seal causes the refrigerator to run for a longer period of time in order to maintain the current temperature.

Freezer temperature is very low while the fridge temperature is sufficient.

• The freezer temperature is adjusted to a very low value. >>>Adjust the freezer temperature to a warmer degree and check.

Fridge temperature is very low while the freezer temperature is sufficient.

• The fridge temperature is adjusted to a very low value. >>>Adjust the fridge temperature to a warmer degree and check.

Food kept in the fridge compartment drawers is frozen.

• The fridge temperature is adjusted to a very high value. >>>Adjust the fridge temperature to a lower value and check.

Temperature in the fridge or freezer is very high.

- The fridge temperature is adjusted to a very high value. >>>Fridge compartment temperature setting has an effect on the temperature of the freezer. Change the temperatures of the fridge or freezer and wait until the relevant compartments attain a sufficient temperature.
- Doors are opened frequently or left ajar for a long time. >>>Do not open the doors frequently.
- Door is ajar. >>>Close the door completely.
- The refrigerator is plugged in or loaded with food recently. >>>This is normal. When the refrigerator is plugged in or loaded with food recently, it will take longer for it to attain the set temperature.
- Large amounts of hot food might be put in the refrigerator recently. >>>Do not put hot food into the refrigerator.
- Vibrations or noise.
- The floor is not level or stable. >>> If the refrigerator rocks when moved slowly, balance it by adjusting its feet. Also make sure that the floor is strong enough to carry the refrigerator, and level.
- The items put onto the refrigerator may cause noise. >>>Remove the items on top of the refrigerator.

There are noises coming from the refrigerator like liquid flowing, spraying, etc.

• Liquid and gas flows occur in accordance with the operating principles of your refrigerator. It is normal and not a fault.

Whistle comes from the refrigerator.

- Fans are used in order to cool the refrigerator. It is normal and not a fault. Condensation on the inner walls of refrigerator.
- Hot and humid weather increases icing and condensation. It is normal and not a fault.
- Doors are opened frequently or left ajar for a long time. >>>Do not open the doors frequently. Close them if they are open.
- Door is ajar. >>>Close the door completely.

Humidity occurs on the outside of the refrigerator or between the doors.

• There might be humidity in the air; this is quite normal in humid weather. When the humidity is less, condensation will disappear.

Bad odour inside the refrigerator.

- No regular cleaning is performed. >>>Clean the inside of the refrigerator regularly with a sponge, lukewarm water or carbonate dissolved in water.
- Some containers or package materials may cause the smell. >>>Use a different container or different brand packaging material.
- Food is put into the refrigerator in uncovered containers. >>>Keep the food in closed containers. Microorganisms spreading out from uncovered containers can cause unpleasant odours.
- Remove the foods that have expired best before dates and spoiled from the refrigerator.

The door is not closing.

- Food packages are preventing the door from closing. >>>Replace the packages that are obstructing the door.
- The refrigerator is not completely even on the floor. >>>Adjust the feet to balance the refrigerator.
- The floor is not level or strong. >>>Make sure that the floor is level and capable to carry the refrigerator.

Crispers are stuck.

• The food is touching the ceiling of the drawer. >>>Rearrange food in the drawer.



קרא תחילה מדריך למשתמש זה! לקוח יקר,

אנו מקווים שמוצר זה, שיוצר במפעלים מודרניים ונבדק במסגרת נוהלי בקרת האיכות המחמירים ביותר, ישמש אותך ביעילות.

לכן, קרא בעיון את כל המדריך למשתמש לפני שתשתמש במוצר ושמור אותו בהישג יד. אם אתה מעביר את המוצר למישהו אחר, מסור יחד אתו גם את המדריך למשתמש.

בעזרת המדריך למשתמש תוכל להשתמש במוצר בצורה מהירה ובטוחה.

- קרא את המדריך לפני התקנת המוצר והפעלתו. •
 - הקפד לקרוא את הוראות הבטיחות. •
- החזק את המדריך במקום נגיש, ייתכן שתזדקק לו מאוחר יותר. ٠
 - קרא גם את המסמכים האחרים המגיעים עם המוצר. •

. זכור כי מדריך למשתמש זה מתאים גם למספר דגמים אחרים. ההבדלים בין הדגמים יזוהו במדריך.

הסבר אודות הסמלים הסמלים הבאים משמשים לאורך המדריך למשתמש הזה:



מידע חשוב או עצות שימושיות.

אזהרה מפני מצבים המהווים סכנת חיים או סכנה לרכוש. 🔬



אזהרה מפני מתח חשמלי. 🛕

תוכן עניינים

3	1 המקרר
4	2 אזהרות בטיחות חשובות
4	שימוש מיועד
4	בטיחות כללית
	למוצרים בעלי
8	מתקן המים
9	בטיחות ילדים
חשמליים	תאימות להנחיית WEEE (על פסולת של מכשירים
9	ואלקטרוניים) וסילוק פסולת המוצר
9	פרטי האריזה
9	אזהרה מפני חומצת HC

11	נה	התק	3

פעולות לחיסכון באנרגיה המלצות על התא המיועד למזון טרי

למה לשים לב כשמשנים את מיקום המקרר
חיבור לחשמל
השלכת האריזה לאשפה
השלכת המקרר הישן לאשפה12
הצבה והתקנה
כוונון הרגליות
אזהרת דלת פתוחה13
החלפת הנורה הפנימית13
<u>4 הכנה 15</u>

16	<u>5 אופן השימוש במקרר</u>
16	לוח מחוונים
21	הקפאת מזון טרי
21	המלצות לשימור מזון קפוא
21	הנחת המזון
22	הכנת קוביות קרח
	פרטים על הקפאה עמוקה מתקן לייצור קוביות קרח הפועל בסי
	מכל קרח
	מאוורר
	מגירת ירקות
	תא קירור באפס מעלות
	תיאור מסנן הריחות וניקויו
26	הזזת הדלת לאחור
27	<u>6</u> תחזוקה וניקוי
27	הגנה על משטחי פלסטיק

28	<u>7 איתור תקלות</u>



האיורים המופיעים במדריך הוראות זה הם איורים כלליים וייתכן שלא יתאימו בדיוק למוצר שברשותך. אם החלקים המוצגים במדריך אינם כלולים במוצר שרכשת, הם בוודאי תקפים לדגמים אחרים.
אזהרות בטיחות חשובות 2

- יש להקפיד שלא לחסום את פתחי האוורור במכשיר או בחלק המובנה
- אין להשתמש במכשירי חשמל שאינם מומלצים על ידי היצרן בתוך תאי אחסון המזון שבמקרר.
 - ילדים בגיל 8 ומעלה ואנשים עם מגבלות גופניות, חושיות ומנטליות או חוסר ניסיון וידע יכולים להשתמש במכשיר לאחר פיקוח או הדרכה בקשר לשימוש במכשיר בצורה בטוחה ולאחר הבנת הסיכונים האפשריים.
 - אין להרשות לילדים לשחק במכשיר
 - אין לאפשר לילדים לבצע פעולות ניקוי ותחזוקה של המשתמש ללא השגחה

עייו במידע הבא.

אי ציות למידע זה עלול לגרום לפציעות או לנזק גופני. אם לא תפעל בהתאם להוראות, ההתחייבות לאחריות ולאמינות לא תהיה תקפה. אורך חיי השירות של המוצר הוא 10 שנים.

במהלך תקופה זו יהיו חלקי חילוף מקוריים זמינים להפעלת המוצר בצורה נכונה.

שימוש מיועד

מוצר זה נועד לשימוש

- ביתי ובאזורים סגורים, כמו בתים •
- בסביבות עבודה סגורות כמו חנויות ומשרדים;
- באזורי מגורים סגורים כמו בתים כפריים, בתי מלון, בתי הארחה.
 - אין להשתמש בו מחוץ לבית.

בטיחות כללית

- אם ברצונך להיפטר מהמוצר או להשליך אותו לאשפה, מומלץ להיוועץ בנציג שירות מורשה כדי לדעת איזה מידע דרוש ומיהם הגורמים המורשים.
- היוועץ בנציג השירות המורשה לגבי כל השאלות והבעיות הקשורות למקרר. אין לבצע או לאפשר למישהו אחר לבצע פעולת התערבות במקרר מבלי להודיע לנציג שירות מורשה.
- למוצרים בעלי תא הקפאה;
 אין לאכול גלידה וקוביות קרח מיד לאחר הוצאתם מתא ההקפאה!
 (עלולות להיווצר בפיך כוויות.)
 - למוצרים בעלי תא הקפאה;
 אין להכניס לתא ההקפאה בקבוקי משקה או פחיות משקה. הם עלולים להתפוצץ.
 - אין לגעת בידיך במזון קפוא; הוא עלול להידבק אליהן.

- נתק את המקרר מהחשמל לפני הניקוי או ההפשרה.
- אין להשתמש באדים או בחומרי ניקוי עם אדים בתהליכי הניקוי וההפשרה של המקרר. האדים עלולים לבוא במגע עם החלקים החשמליים ולגרום לקצר או להתחשמלות.
- אין להשתמש בחלקים שונים של המקרר, כמו הדלת, כאמצעי תמיכה או כמדרגה.
 - אין להשתמש במכשירים חשמליים
 בתוך המקרר.
 - אין לגרום נזק לחלקים באמצעות מכשירי קידוח או חיתוך בעת זרימת חומרי הקירור. חומר הקירור, שעלול לדלוף כאשר נוצר נקר בצינורות הגז של המאייד, במאריך הצינור או במשטחי הציפוי, גורם לגירוי בעור ולפגיעה בעיניים.

- אין לכסות או לחסום בחומר כלשהו את
 פתחי האוורור שבמקרר.
 - מכשירים חשמליים יתוקנו אך ורק על ידי אנשי מקצוע מורשים. תיקונים המתבצעים על ידי אנשים בלתי מוסמכים מעמידים את המשתמש בסכנה.
- במקרה של תקלה בחשמל או במהלך פעולות תחזוקה או תיקונים, נתק את המקרר מהחשמל על ידי כיבוי הנתיך המתאים או על ידי הוצאת כבל המקרר משקע החשמל.
- בעת הוצאת התקע מהשקע אין למשוך אותו מהכבל.
- ודא שמשקאות המכילים אחוז גבוה של אלכוהול יאוחסנו בצורה בטוחה במצב אנכי כשהמכסה שלהם סגור היטב.
- אין להחזיק במקרר תרסיסים המכילים
 חומרים דליקים וחומרי נפץ.
- אין להשתמש בהתקנים מכניים או באמצעים אחרים שאינם מומלצים על ידי היצרן להאצת תהליך ההפשרה.

- מוצר זה לא נועד לשימוש על ידי אנשים
 (כולל ילדים) בעלי לקויות פיזיות, חישתיות או שכליות או חסרי ידע או ניסיון, אלא אם כן ישגיח עליהם אדם האחראי לבטיחותם ויורה להם בהתאם כיצד להשתמש במוצר.
 - אין להפעיל מקרר פגום. אם יש לך דאגות
 כלשהן, היוועץ בנציג השירות.
 - בטיחות החשמל במקרר שברשותך תהיה מובטחת רק אם מערכת ההארקה בביתך תעמוד בתקנים הדרושים.
 - חשיפת המוצר לגשם, שלג, שמש ורוח מסוכנת בכל הנוגע לבטיחות בחשמל.
 - אם כבל החשמל ניזוק, פנה לנציג שירות מורשה כדי למנוע סכנה.
- אין לחבר את המקרר לשקע החשמל במהלך ההתקנה.
 - בפעולה זו קיימת סכנת חיים והיא עלולה לגרום לפציעה קשה.
- מקרר זה נועד אך ורק לאחסון פרטי מזון. אין להשתמש בו לכל מטרה אחרת.
 - תווית המפרטים הטכניים נמצאת בדופן
 השמאלית שבתוך המקרר.
 - אין לחבר את המקרר למערכות לחיסכון
 בחשמל; הן עלולות לגרום נזק למקרר.
- אם מותקנת במקרר נורה כחולה, אין להביט
 בה באמצעות מכשירים אופטיים.
- למקררים בשליטה ידנית, המתן לפחות 5
 דקות לאחר תקלה בחשמל לפני שתפעיל את המקרר.
 - יש למסור מדריך הפעלה זה לבעלים החדש של המוצר בעת העברת המוצר למישהו אחר.

- יש למנוע נזק לכבל החשמל בעת הובלת המקרר. כיפוף הכבל עלול לגרום לשריפה. אין להניח חפצים כבדים על כבל החשמל. אין לגעת בתקע בידיים רטובות בעת ניתוק המכשיר מהחשמל.
- אין לחבר את המקרר לחשמל אם שקע החשמל רופף.
- אין להתיז מים על החלקים הפנימיים או החיצוניים של המוצר מסיבות בטיחותיות.
- אין להתיז ליד המקרר חומרים
 המכילים גזים דליקים כמו גז פורפאן
 כדי למנוע סכנת שריפה והתפוצצות.
- אין להניח מכלים מלאים במים מעל המקרר מחשש לגלישה; אלה עלולים לגרום להתחשמלות או שריפה.
- אין להעמיס את המקרר במזון יתר על המידה. אם מעמיסים את המקרר יתר על המידה, פריטי המזון עלולים ליפול ולפגוע בך ולגרום נזק למקרר בעת פתיחת הדלת.
 - אין להניח חפצים מעל המקרר; הם עלולים ליפול בעת פתיחתה או סגירתה של דלת המקרר.
 - אין להחזיק במקרר תרכיבי חיסון, תרופות רגישות לחום, חומרים מדעיים, וכו', אשר נדרשת להם טמפרטורה מדויקת.
- יש לנתק את המקרר מהחשמל אם אין כוונה להשתמש בו לאורך זמן. בעיה אפשרית היא שהכבל עלול לגרום לשריפה.
 - יש לנקות את קצה התקע באופן
 סדיר במטלית יבשה, שכן הוא עלול
 לגרום לשריפה.
 - המקרר עלול לזוז אם הרגליות
 המתכווננות אינן ננעלות כנדרש
 כשהוא עומד על הרצפה. נעילת
 הרגליות כנדרש על הרצפה עשויה
 למנוע את תזוזת המקרר.

בעת נשיאת המקרר, אין לאחוז בו
 בידית הדלת. שכן היא עלולה
 להיתלש.

- אם עליך להציב את המקרר ליד מקרר או מקפיא אחר, יש להקפיד על מרחק מזערי של 8 ס"מ בין שני המכשירים. אם מרחק זה לא יישמר, עלולה להצטבר לחות על הדפנות החיצוניות הסמוכות.
- אין להשתמש במוצר בזמן שהתא הממוקם בחלקו העליון או בחלקו האחורי של המוצר ושבו קיימים לוחות אלקטרוניים מכסה תיבת הלוח האלקטרוני (1) פתוח.



למוצרים בעלי מתקן מים:

- לחץ כניסת המים הקרים יגיע ל-90 psi (ליברה לאינץ') (6.2 ברים) psi מקסימום. אם לחץ המים עובר את 5.5 psi 80 (5.5 ברים), השתמש בשסתום להגבלת לחץ במערכת אספקת המים. אם אינך יודע כיצד לבדוק את לחץ המים, בקש עזרה משרברב מקצועי.
- אם קיים סיכון לתופעת הלם מים בהתקן שלך, השתמש תמיד בהתקן בציוד למניעת הלם מים. היוועץ בשרברבים מקצועיים אם אינך בטוח שקיימת בהתקן שלך תופעת הלם מים.
- אין להתקין את כניסת המים החמים. נקוט אמצעי זהירות אם קיים סיכון לקפיאת הצינורות. המרווח התפעולי
 F °33 של טמפרטורת המים יהיה בין 30° F °100 מינימום לבין 100° F °100 (38°C)

- השתמש אך ורק במים ראויים
 לשתייה. בטיחות ילדים
- אם יש מנעול על הדלת, יש להרחיק את המפתח מהישג ידם של ילדים.
- יש להשגיח על ילדים כדי למנוע
 מהם לטפל במוצר.

תאימות להנחיית WEEE (על פסולת של מכשירים חשמליים ואלקטרוניים) וסילוק פסולת המוצר



מוצר זה מציית להנחיה WEEE של האיחוד האירופי 2012/19/EN). מכשיר זה נושא סמל מיון לפסולת של מכשירים חשמליים ואלקטרוניים (WEEE).

מוצר זה יוצר עם חלקים וחומרים באיכות גבוהה, שניתן לעשות בהם שימוש חוזר והם מתאימים למחזור. לכן, אם סיום חיי השירות של מוצר זה, אין לסלק אותו לאשפה ביתית רגילה. קח אותו לנקודת איסוף למחזור ציור

חשמלי ואלקטרוני. היוועץ ברשויות המקומיות, כדי לברר היכן מצמצאת נקודת האיסוף הקרובה ביותר למקום מגוריך. עזור להגן על הסביבה ועל המשאבים הטבעיים על ידי מחזור מוצרים משומשים. לבטיחותם של ילדים, לפני סילוק המוצר חתוך את כבל החשמל ושבור את מנגנון הנעילה של הדלת, אם קיים, באופן שלא יהיה שמיש.

פרטי האריזה

חומרי אריזה של המוצר מיוצרים מחומרים הניתנים למחזור בהתאם לתקנות הלאומיות לאיכות הסביבה שלנו. אין לסלק לאשפה חומרי אריזה ביחד עם אשפה ביתית או פסולת אחרת. קח אותם לנקודות האיסוף של חומרי האריזה שהקצו לשם כך הרשויות המקומיות.

אל תשכח...

כל חומר ממוחזר נחוץ לטבע ולמשאבים הלאומיים שלנו. אם ברצונך לתרום להערכה מחדש של חומרי האריזה, תוכל להיוועץ בארגוני איכות הסביבה בעירייה הקרובה לאזור מגוריך.

אזהרה מפני חומצת HC

אם מערכת הקירור של המוצר מכילה R600a:

גזים אלה דליק^ים. לכן הקפד שלא לגרום נזק למערכת הקירור ולצנרת הקירור במהלך השימוש וההובלה. במקרה של גרימת נזק, יש להרחיק את המוצר ממקורות אש פוטנציאליים, שעלולים להביא להתלקחותו. כמו כן, יש לאוורר את החדר שבו מוצב המקרר.

התעלם מאזהרה זו אם מערכת הקירור של המוצר מכילה R134a.

סוג הגז המשמש במוצר מצוין בלוח הנתונים הנמצא בדופן השמאלית הפנימית של המקרר. אין להשליך את המוצר לאש בוערת כאמצעי לסילוקו לאשפה.

המלצות על התא המיועד למזון טרי אייתכן שלא יהיה זמין בכל הדגמים

אין לאפשר למזון לגעת בחיישן הטמפרטורה בתא המיועד למזון הטרי. כדי לאפשר לתא המזון הטרי לשמור על טמפרטורת האחסון האידיאלית שלו, אזור שהמזון יפריע בפעולתו.

אין להכניס מזונות חמים למוצר.





- . אין להשאיר את דלתות המקרר פתוחות לזמן ממושך.
 - אין להכניס למקרר מזון או משקאות חמים. 📍
- אין להעמיס את המקרר יתר על המידה כדי לא להפריע בזרימת האוויר בתוכו.
- אין להציב את המקרר כשהוא חשוף לשמש ישירה או בקרבת מכשירים הפולטים חום, כמו תנורים, מדיחי כלים או רדיאטורים. הצב את המקרר במרחק של לפחות 30 ס"מ ממקורות המפיצים חום, ושל לפחות 5 ס"מ מתנורים חשמליים.
 - הקפד לאחסן את המזון במיכלים סגורים. •
- למוצרים בעלי תא הקפאה: תוכל לאחסן את כמות המזון המרבית במקפיא לאחר הסרת המדף או המגירה של המקפיא. ערך צריכת האנרגיה עבור המקרר שלך נקבע לאחר הסרת המדף או המגירה של המקפיא ובעומס מרבי. אין בעיה להשתמש במדף או במגירה בהתאם לצורה ולגודל של המזון שיש להקפיא.
 - הפשרת מזון קפוא בתא הקירור גם תגרום לחיסכון באנרגיה וגם תשמר את איכות המזון.



התקנה



,אם לא תציית להוראות המופיעות במדריך למשתמש היצרן יתנער מאחריות למוצר.

למה לשים לב כשמשנים את מיקום המקרר

יש לנתק את המקרר מהחשמל. לפני הובלת .1 המקרר, יש לרוקן ולנקות אותו.

לפני שאורזים אותו מחדש, יש לקבע בתוכו את .2 המדפים, האביזרים, מגירת הירקות וכו' בסרט הדבקה ולהגן עליו מפני חבטות. את המקרר הארוז יש לקשור בסרט עבה או בחבלים חזקים, ויש לציית בקפדנות לכללי ההובלה.

יש לשמור את האריזה המקורית ואת חומר הריפוד .3 לשימוש עתידי במקרה של הובלה או מעבר דירה. לפני שתפעיל את המקרר,

בדוק את הדברים הבאים לפני שתפעיל את המקרר:

נקה את פנים המקרר לפי ההמלצות המופיעות .1 בסעיף "תחזוקה וניקוי".

חבר את התקע של המקרר לשקע החשמל שבקיר. .2 כאשר דלת המקרר נפתחת. נדלקת הנורה הפנימית של המקרר.

כאשר המדחס מתחיל לפעול, נשמע צליל. הנוזלים .3 והגזים האטומים במערכת הקירור עשויים גם הם להשמיע רעש גם אם המדחס אינו פועל: זוהי תופעה רגילה.

4. ייתכן שהקצוות הקדמיים ושני צדי המקרר יהיו חמים. זה נורמלי. אזורים אלה נועדו להיות חמים כדי למנוע התעבות.

חיבור חשמלי

חבר את המוצר לשקע מוארק המוגן על ידי נתיך בעל קיבולת הולמת.

חשוב:

על החיבור להתבצע בהתאם לתקנות הארציות.

- על תקע החשמל להיות נגיש בקלות לאחר ההתקנה.
- בטיחות החשמל במקרר שברשותך תהיה מובטחת רק . אם מערכת ההארקה בביתר תעמוד בתקנים הדרושים.
- המתח המצוין בתווית הנמצאת בחלק הפנימי בצדו • השמאלי של המוצר צריך להיות שווה למתח של רשת החשמל.
- אין להשתמש בכבלים מאריכים וברבי שקעים לשם חיבור.



. כבל חשמל שניזוק יוחלף על ידי חשמלאי מוסמך.

איו להשתמש במכשיר לפני שיתוקן! קיימת סכנת 🖄 התחשמלותי

השלכת האריזה לאשפה חומרי האריזה עלולים להיות מסוכנים לילדים. שמור את חומרי האריזה הרחק מהישג ידם של ילדים או השלך אותם על ידי סיווגם בהתאם להוראות הרשויות המקומיות בדבר פסולת. אין להשליך אותם לאשפה הביתית הרגילה. אלא למתקני איסוף שהרשויות המקומיות ייעדו לשם כך. אריזת המקרר עשויה מחומרים מתמחזרים.

השלכת המקרר הישן לאשפה

- השלך את המקרר הישן שלך מבלי לגרום נזק כלשהו לסביבה. תוכל להיוועץ בסוכן המורשה שלך או לפנות למרכז לאיסוף
 - אשפה בעירייה לגבי השלכת המקרר שלך לאשפה.

לפני השלכת המקרר לאשפה, הוצא את התקע משקע החשמל; אם קיימות נעילות כלשהן בדלת, נטרל אותן כדי להגן על ילדים מפני סכנה כלשהי.

הצבה והתקנה

אם דלת הכניסה לחדר המיועד להתקנת המקרר אינה 🖄 רחבה במידה מספקת למעבר המקרר. פנה לנציג השירות המורשה כדי להסיר את דלתות המקרר ולהעביר את המקרר מהצד דרך הדלת.

> הצב את המקרר במקום נוח לשימוש. .1

הרחק את המקרר ממקורות חום, מקומות חמים .2 ומקומות החשופים לשמש ישירה.

חייבת להיות זרימת אוויר מספקת סביב המקרר כדי .3 שהמקרר יפעל ביעילות. אם המקרר אינו מוצב בגומחה בקיר, יש לשמור על מרחק של 5 ס"מ לפחות מהתקרה ו-5 ס"מ לפחות מהקיר. אין להניח את המוצר על אריגים כמו מרבד או שטיח.

הצב את המקרר על משטח רצפה מאוזן כדי למנוע .4 זעזועים.

כוונון הרגליות

אם המקרר אינו מיוצב, תוכל לייצב אותו על ידי סיבוב הרגליות הקדמיות שלו כפי שמודגם באיור. הפינה שבה נמצאת הרגלית מונמת כאשר מסובבים אותה בכיוון החוץ השחור ומוגבהת כאשר מסובבים אותה בכיוון ההפוך. לשם כך, בקש ממישהו שיעזור לך להרים מעט את המקרר.



אזהרת פתיחת דלת *ייתכן שלא יהיה זמין בכל הדגמים

אות אזהרת שמע יישמע כאשר דלת המוצר נשארת פתוחה במשך דקה אחת לפחות. אזהרה זאת תושתק עם סגירת הדלת או בעת לחיצה על לחצן תצוגה כלשהו (אם קיים).

החלפת הנורה הפנימית

כדי להחליף את הנורה הרגילה או נורת LED המשמשת לתאורה במקרר, הזמן את נציג השירות המורשה. הנורות המשמשות למכשיר זה אינן מתאימות לתאורה של חדרי הבית. המטרה שלשמה נועדה הנורה היא לעזור למשתמש להכניס מצרכי מזון למקרר/מקפיא בצורה בטוחה ונוחה. הנורות המשמשות במוצר זה חייבות להיות עמידות בתגאים פיזיים קיצוניים כמו טמפרטורות נמוכות מ02-2°. (רק מקפיא תיבה ומקפיא אנכי)



4 הכנה

- יש להתקין את המקרר/מקפיא במרחק של לפחות 30 ס"מ ממקור חום, כמו כיריים, תנורים, חימום מרכזי ושל לפחות 5 ס"מ מתנורים חשמליים. כמו כן, אין להציבו כשהוא חשוף לשמש ישירה.
 - ודא שפנים המקרר/מקפיא נוקה ביסודיות.
 - אם מתקינים שני מקררים זה לצד זה, יש להקפיד על מרחק של לפחות 2 ס"מ ביניהם.
 - בעת הפעלת המקרר/מקפיא בפעם הראשונה, יש לציית להוראות הבאות במהלך שש השעות הראשונות.
 - אין לפתוח את הדלת לעתים קרובות.
- המקרר/מקפיא חייב לפעול ריק בלי להכניס לתוכו מזון.
 אם טמפו
 איו לנתק את המקרר/מקפיא מהחשמל, אם אירעה תקלה
 - אין לנוגן אונ המקור עמקפיא מהוושמת. אם איו עה הגקרה בחשמל שאינה בשליטתך, קרא את האזהרות בסעיף "פתרונות מומלצים לבעיות".
 - יש להשתמש תמיד בסלסילות/מגירות המגיעות עם תא הקירור באפס מעלות, כדי להגיע לצריכת אנרגיה נמוכה ולשפר את תנאי האחסון.
 - צריכת האנרגיה של המכשיר עלולה לעלות אם המזון יבוא במגע עם חיישן הטמפרטורה בתא ההקפאה. לכן יש להימנע מכל מגע עם החיישנים.
 - מוצר זה נועד לפעול בטמפרטורת סביבה של עד 43°C °43, (2°°F). גם אם טמפרטורת הסביבה יורדת ל 51°C °-15 המזון הקפוא שבמקפיא אינו מפשיר בזכות
 - מערכת בקרת הטמפרטורה האלקטרונית המתקדמת שלו.
 בהתקנה הראשונה, אין להציב את המוצר בטמפרטורות
 סביבה נמוכות.

זאת מכיוון שהמקפיא אינו יכול לרדת לטמפרטורות הפעלה רגילות. כאשר המוצר פועל ברציפות, ניתן להזיזו למקום אחר. לכן, תוכל להציב את המוצר שלך מאוחר יותר במוסך או בחדר בלתי מחומם בלי לדאוג שהמזון הקפוא שבו יירקב. אולם, סביר להניח שהטמפרטורות הנמוכות הנזכרות לעיל יגרמו להקפאת המזון בתא הקירור; לכן, צרוך את מצרכי המזון שבמקרר באופן מבוקר, לפי הצורך. כאשר טמפרטורת הסביבה חוזרת לרמה הרגילה, תוכל לשנות את הגדרות הלחצן בהתאם לצרכיך.

- אם טמפרטורת הסביבה נמוכה מ-0°C, המזון שבתא הקירור יקפא. לכן, מומלץ לא להשתמש בתא הקירור בטמפרטורת סביבה נמוכה כל כך. תוכל להמשיך להשתמש בתא ההקפאה כרגיל.
- בחלק מהדגמים, לוח המכשירים כבה אוטומטית 5 דקות
 לאחר סגירת הדלת. הוא יופעל מחדש עם פתיחה הדלת
 או עם לחיצה על מקש כלשהו.
- עקב שינוי הטמפרטורות כתוצאה מפתיחת/סגירת דלת המוצר במהלך פעולתו, התעבות על גבי מדפי הדלת/גוף המוצר ומכלי הזכוכית היא תופעה רגילה.

לוח מחוונים (תצוגה חיצונית) *אופציונלי

לוח המחוונים מאפשר לך לקבוע את הטמפרטורה ולשלוט בפונקציות האחרות הקשורות למוצר מבלי לפתוח את דלת המוצר. רק לחץ על הסימונים שבלחצנים הרלוונטיים כדי להגדיר את הפונקציות.



1. מחוון תקלה בחשמל / טמפרטורה גבוהה / אזהרת שגיאה (]] /

מחוון זה ()) הגבוהה ובעת אזהרות שגיאה. במשך תקלות בטמפרטורה בחשמל, הטמפרטורה הגבוהה ביותר שאליה יגיע תא ההקפאה תהבהב בתצוגה הדיגיטלית. לאחר בדיקת המזון

הנמצא בתא ההקפאה (Å), לחץ על הלחצן 'התראה פועלת' כדי לנקות את האזהרה. יש לעיין בסעיף "הפתרונות המומלצים לתיקון תקלות" במדריך שלך, אם אתה רואה שמחוון זה מאיר.

2. פונקציית החיסכון באנרגיה (התצוגה כבויה): אם דלתות המוצר נשארות סגורות במשך זמן ממושך, פונקציית החיסכון באנרגיה מופעלת אוטומטית וסמל

החיסכון באנרגיה מואר. ((ראש)) אם הפונקציה חיסכון באנרגיה מופעלת, כל הסמלים בתצוגה, שאינם חיסכון באנרגיה, יכבו. כאשר הפונקציה חיסכון באנרגיה מופעלת, לחיצה על לחצן כלשהו או פתיחת הדלת יגרמו לביטול הפונקציה חיסכון באנרגיה, והסמלים בתצוגה יחזרו למצבם הרגיל.

האיורים המופיעים במדריך הוראות זה הם איורים כלליים וייתכן שלא יתאימו בדיוק למוצר שברשותך. אם החלקים המוצגים במדריך אינם כלולים במוצר שרכשת, הם בוודאי תקפים לדגמים אחרים.

הפונקציה חיסכון באנרגיה מופעלת במהלך ההובלה מהיצרן ולא ניתן לבטלה.

3.פונקציית הקירור המהיר

ללחצן שתי פונקציות. לחץ על לחצן זה במהירות כדי להפעיל את פונקציית הקירור המהיר א<u>ן לבטל את</u> הפעלתו. מחוון הקירור המהיר יכבה והמוצר יחזור להגדרות הרגילות שלו.

- השתמש בפונקציית הקירור המהיר כשאתה רוצה לקרר במהירות את המזון המונח בתא הקירור. אם ברצונך לקרר כמויות גדולות של מזון טרי, הפעל פונקציה זו לפני שתכניס את המזון למוצר.
 - אם אינך רוצה לבטל אותה, התכונה קירור מהיר' תתבטל אוטומטית כעבור שעה או כאשר תא הקירור יגיע לטמפרטורה הרצויה.
- אם תלחץ על הלחצן 'קירור מהיר' שוב ושוב בהפרשי זמן קצרים, תופעל ההגנה על המעגל החשמלי והמדחס לא יתחיל לפעול מיד.
- לא ניתן לשחזר פונקציה זו לאחר הפסקת חשמל.

4. כפתור הגדרת טמפרטורת תא הקירור

לחץ על לחצן זה כדי לכוון את הטמפרטורה של תא הקירור ל-8, 7, 6, 5, 4, 3, 2, 8... בהתאמה. לחץ על לחצן זה כדי לקבוע את

📕) טמפרטורת תא הקירור לערך הרצוי. (

5.פונקציית חופשה

להפעלת פונקציית החופשה, לחץ על לחצן זה (🏞) והחזק 🚓

6. אזהרת התראה פועלת:

במקרה של התראת תקלה בחשמל/טמפרטורה גבוהה, לאחר בדיקת המזון הנמצא בתא ההקפאה, לחץ על הלחצן 'התראה ער

פועלת' (ראי נקות את האזהרה.

7. נעילת מקשים

לחץ על לחצן נעילת מקשים (엽3") בו זמנית במשך 3 שניות. סמל נעילת המקשים --

(♥) ידלוק ומצב נעילת מקשים יופעל. הלחצנים לא יפעלו אם מצב נעילת מקשים פעיל. לחץ שוב על לחצן נעילת מקשים בו זמנית במשך 3 שניות. סמל נעילת מקשים יכבה והמקשים יצאו ממצב נעילה.

לחץ על הלחצן **נעילת מקשים** אם ברצונך למנוע את שינוי

הגדרת הטמפרטורה של המקרר ("3℃).

Eco Fuzzy .8

לחץ על הלחצן Eco Fuzzy והחזק אותו לחוץ במשך שנייה אחת, כדי להפעיל את הפונקציה Eco Fuzzy. המקרר יתחיל לפעול במצב החסכוני ביותר לפחות 6 שעות מאוחר יותר ומחוון

השימוש החסכוני ידלוק כשהפונקציה תהיה פעילה (🎦).

לחץ על הפונקציה Eco Fuzzy והחזק אותה לחוצה במשך 3 שניות, כדי לבטל את הפעלת הפונקציה Eco Fuzzy. מחוון זה יואר לאחר 6 שעות כשהפונקציה eco fuzzy מופעלת.

9. לחצן הגדרת הטמפרטורה בתא ההקפאה לחץ על לחצן זה כדי להגדיר את טמפרטורת תא ההקפאה ל--

לחץ על לחצן זה כדי להגדיר את טמפרטורת תא ההקפאה ל---16, 17, 18,-19,-20, 22, 24,-16... בהתאמה. לחץ על לחצן זה_כדי להגדיר את טמפרטורת תא ההקפאה לערך הרצוי.

ד) 10. פונקציים

10. פונקציית מתקן קוביות הקרח (אופציונלי)

מציין אם מתקן קוביות הקרח מופעל או כבוי. (איד) אם פונקציית כיבוי מתקן קוביות הקרח מופעלת, המתקן אינו פועל. כדי להפעיל שוב את מתקן קוביות הקרח, לחץ על לחצן הפעלה-כיבוי והחזק אותו לחוץ במשך 3 שניות.

זרימת המים ממכל המים תיעצר בעת	
בחירת פונקציה זו. אולם, ניתן להוציא	
מהמתקן את הקרח שהוכן לפני כן.	

11. לחצן פונקציית ההקפאה המהירה

לחץ על לחצן זה כדי להפעיל את פונקציית ההקפאה המהירה או לבטל את הפעלתה. כאשר אתה מפעיל את הפונקציה, תא ההקפאה יתקרר ויגיע לטמפרטורה נמוכה מהערך שהוגדר.



השתמש בפונקציית ההקפאה המהירה כשאתה רוצה להקפיא במהירות את המזון המונח בתא הקירור. אם ברצונך להקפיא כמויות גדולות של מזון טרי, הפעל פונקציה זו לפני שתכניס את המזון למוצר.	1
אם אינך רוצה לבטל אותה, התכונה 'הקפאה מהירה' תתבטל אוטומטית כעבור 24 שעות או כאשר תא הקירור יגיע לטמפרטורה הרצויה.	ì
לא ניתן לשחזר פונקציה זו לאחר הפסקת חשמל.	ì

12. מחוון השימוש החסכוני

מציין שהמוצר פועל במצב של יעילות בצריכת החשמל.

(⁶⁰⁰)מחוון זה יהיה פעיל אם טמפרטורת תא ההקפאה נקבעה ל 16 או שמבוצע קירור יעיל מבחינת צריכת החשמל בזכות פונקציית החיסכון הנוסף.



לוח מחוונים (תצוגה פנימית) *אופציונלי לוחות המחוונים עשויים להשתנות בהתאם לדגם המוצר. פונקציות אורקוליות בלוח המחוונים מסייעות בשימוש במוצר.



- מחוון תא הקפאה
- 2. מחוון סטטוס שגיאה
- **3**. מחוון טמפרטורה
- 4. לחצן פונקציית חופשה
- 5. לחצן הגדרת הטמפרטורה
 - **6.** לחצן בחירת תא
 - 7. מחוון תא הקירור
 - **8.** מחוון מצב חיסכון
 - 9. מחוון פונקציית חופשה

אופציונלי*

האיורים המופיעים במדריך הוראות זה הם איורים כלליים וייתכן שלא יתאימו בדיוק למוצר שברשותך. אם החלקים המוצגים במדריך אינם כלולים במוצר שרכשת, הם בוודאי תקפים לדגמים אחרים.

1. מחוון תא ההקפאה

נורת תא הקירור מאירה לאחר הגדרת טמפרטורת תא ההקפאה.

2. מחוון מצב שגיאה

3. מחוון טמפרטורה

. מציין את טמפרטורת תא ההקפאה ותא הקירור

4. לחצן פונקציית חופשה לחץ על לחצן חופשה במשך 3 שניות כדי להפעיל את תפונקציה הזאת. כאשר פונקציית החופשה פעילה, הכיתוב "--" יוצג במחוון הטמפרטורה של תא הקירור ולא יבוצע קירור בפועל בתא הקירור. אין זה מתאים להחזיק מזון בתא הקירור כשפונקציה זו פעילה. תאים אחרים ימשיכו לקרר לפי הטמפרטורה שהוגדרה להם.

כדי לבטל את הפונקציה הזאת, לחץ שוב על לחצן החופשה.

5. כפתור הגדרת הטמפרטורה

משנה את טמפרטורת התא הרלוונטי בי 24°C...°8°C -16°C...

6. לחצן בחירת תא

. לחצן בחירה: לחץ על לחצן בחירת התא כדי לעבור בין תא הקירור לתא ההקפאה.

7. מחוון תא הקירור

נורת תא הקירור מאירה לאחר הגדרת טמפרטורת תא הקירור.

8. מחוון מצב חיסכון

מציין שהמקרר פועל במצב חיסכון באנרגיה. תצוגה זו תופעל אם טמפרטורת תא ההקפאה תהיה מכוונת ל C°-16.

9. מחוון פונקציית החופשה

מציין שמצב חופשה הופעל.

הקפאת מזון טרי

- יש להעדיף לעטוף או לכסות את המזון לפני הנחתו במקרר.
- יש להמתין להתקררותו של מזון חם לפני אחסונו במקרר. המזוו שברצונר להקפיא חייב להיות טרי ובאיכות טובה.
- המזון שברצונך להקפיא חייב להיות טרי ובאיכות טובה.
 יש לחלק את המזון למנות בהתאם לצריכה היומית או הצריכה לארוחה של המשפחה.
 - יש לארוז את המזון באריזה אטימה כדי למנוע את
 התייבשותו, גם אם הוא מאוחסן במקרר לזמן קצר.
- י שלהשתמש בחומרי אריזה בלתי קריעים וחסיני קור, לחות, ריחות, שמן וחומצה. על חומרי האריזה גם להיות אטימים.
 - כמו כן, עליהם להיות סגורים היטב ועשויים מחומרים נוחים לשימוש ומתאימים להקפאה עמוקה.
 - י יש להשתמש במזון קפוא מיד לאחר הפשרתו ואין להקפיאו שוב לאחר שהופשר.
 - יש לציית להוראות הבאות לקבלת התוצאות הטובות ביותר.

 אין להקפיא כמויות מזון גדולות מדי בבת אחת. איכות המזון נשמרת בצורה הטובה ביותר כאשר הוא קופא במלואו במהירות האפשרית.

. הנחת מזון חם בתא ההקפאה תגרום למערכת הקירור לפעול ללא הפסקה עד לקפיאתו המוחלטת של המזון.

. הקפד במיוחד שלא לערבב מזון קפוא במזון טרי.

המלצה לשימור מזון קפוא

- יש לאחסן מזון ארוז מראש וקפוא בהתאם להוראות היצרן
 - הכתובות על מזון קפוא לגבי תא אחסון **★★★★ ש**ל מזון קפוא (4 כוכבים).
- כדי להבטיח שגם היצרן וגם הקמעונאי של המזון הקפוא ישמרו על איכות גבוהה, יש לזכור את הנקודות הבאות:
 - 1. הנח את החבילות במקפיא מהר ככל האפשר לאחר הקנייה.
 - . ודא שהתכולה מתויגת ורשום עליה תאריך.

הפשרה

מגירת ירקות

•

תא ההקפאה יפשיר באופן אוטומטי. בנחת במזוו

ירו זו ר דירי זין	
מדפי תא ההקפאה	מצרכי מזון קפואים שונים, כמו בשר, דגים, גלידות, ירקות וכו'.
מגש ביצים	ביצים
מדפי תא הקירור	מזון בסירים, צלחות מכוסות ומכלים סגורים
מדפי דלת תא הקירור	מזון או משקה ארוזים במנות קטנות (כמו חלב, מיץ פירות ובירה)

ירקות ופירות

מעדנים (גבינה, חמאה, נקניק וכו')	תא המזוו הטרי
-------------------------------------	---------------

פרטים על הקפאה עמוקה

כדי לשמור על איכותו, יש להקפיא מזון במהירות האפשרית מיד עם הנחתו במקרר.

אפשר לאחסן את המזון במקפיא לתקופה ממושכת רק אם הטמפרטורה בתא ההקפאה מגיעה ל-18- מעלות צלזיוס או פחות. ניתן לשמור על טריות המזון למשר חודשים רבים (בטמפרטורה של 18-משלם עליבים ברבים ברפוטיוניים ביום ל

עמעלות צלזיוס או פחות בהקפאה עמוקה).



- יש לחלק את המזון למנות בהתאם לצריכה היומית או הצריכה לארוחה של המשפחה.
- יש לארוז את המזון באריזה אטימה כדי למנוע את התייבשותו, גם אם הוא מאוחסן במקרר לזמן קצר.
 - חומרי האריזה הנחוצים:
 - סרט הדבקה עמיד בפני קור
 - מדבקה
 - גומיות
 - עט •

יש להשתמש בחומרי אריזה בלתי קריעים וחסיני קור, לחות, ריחות, שמן וחומצה.

אין לאפשר למוצרי מזון המיועדים להקפאה לבוא במגע עם פריטי מזון שכבר הוקפאו קודם לכן, וזאת כדי למנוע הפשרה חלקית.

יש להשתמש במזון קפוא מיד לאחר הפשרתו ואין להקפיאו שוב לאחר שהופשר.

הכנת קוביות קרח

(תכונה זו היא אופציונלית) מלא את מכל הקרח במים והכנס אותו לתא ההקפאה. קוביות הקרח יהיו מוכנות תוך כשעתיים. תוכל להסיר את הקרח ממכל הקרח על ידי הוצאת המכל מהמקפיא וסיבובו.



מתקן לייצור קוביות קרח הפועל בסיבוב כפתור (תכונה זו היא אופציונלית)

- הסר את מכל המים על ידי סיבובו שמאלה.
- פתח את מכסה מכל המים על ידי סיבובו והוסף מים למכל המים עד לחלקו התחתון של מכסה מכל המים.
 - הנח את מכל המים במקומו כפי שמודגם באיור לאחר הוספת המים וקבע אותו על ידי סיבובו בכיוון החץ. המים יימזגו למכל הקרח.
- לאחר שנוצר קרח, סובב את כפתור מכל הקרח בכיוון החץ כדי לאפשר לקרח ליפול למגירת הקרח.
 - קח את קוביות הקרח על ידי משיכת מגירת הקרח החוצה.
- משוך את החלק הקדמי כלפיך כדי לשטוף את מכל הקרח, והנח אותו על המסילות בחלק הפנימי ודחף אותו למקומו כדי להחזיר אותו למקומו.
- משוך את מתקן קוביות הקרח הפועל בסיבוב כפתור כלפיך כדי להסירו, והנח אותו על המסילות שבתקרה שלו ודחף אותו למקומו כדי להחזיר אותו למקומו.

מכל קרח

- הסר את תא הקרח מתא ההקפאה.
 - מלא את מכל הקרח במים.
- הסר את תא הקרח מתא ההקפאה. הקרח יהיה מוכן כשעתיים מאוחר יותר.
 - הסר את תא הקרח מתא ההקפאה וכופף אותו מעל צלחת
 ההגשה. קוביות הקרח ייפלו בקלות לצלחת ההגשה.



המאוורר

המאוורר נועד להבטיח פיזור וזרימה אחידים של אוויר קר בתוך המקרר. זמן ההפעלה של המאוורר עשוי להשתנות בהתאם לתכונות המוצר שרכשת.

בעוד שהמאוורר פועל אך ורק בעזרת מדחס בחלק מהמקררים, מערכת הבקרה קובעת את זמן ההפעלה שלו בחלק אחר של המקררים, בהתאם לדרישת הקירור.

תא קירור באפס מעלות

. (תכונה זו היא אופציונלית)

תשתמש בתא זה כדי לאחסן מעדנים שיאוחסנו בטמפרטורה נמוכה יותר או מוצרי בשר שתצרוך תוך זמן קצר. תא הקירור באפס מעלות הוא המקום הקר ביותר במקרר, שבו באפשרותך להחזיק מוצרי חלב, בשר, דגים ועופות בתנאי אחסון אידיאליים. אין לאחסן בתא זה פרות וירקות.



מגירת ירקות

מגירת הירקות במוצר נועדה באופן מיוחד לשמור על הירקות טריים מבלי שיאבדו את הלחות שבהם. לשם כך, באופין כללי מתגברת זרימת אוויר קר סביב מגירת הירקות.



תיאור מסנן הריחות וניקויו:

* אופציונלי

אחנצנו, שהעבור בא כיחות לא נעימים במקרר. משוך כלפי מטה מהחלק הקדמי את המכסה שבתוכו מותקן מסנן הריחות והסר אותו, לפי המודגם באיור. השאר את המסנן באור שמש למשך יום אחר. במשך זמן זה יתינקה המסנן. התקן את המסנן חזרה למקומו. יש לנקות את מסנן הריחות פעם בשנה.



החזרת הדלתות למקומן



תחזוקה וניקוי 6



אין להשתמש בבנזין, בבנזן או בחומרים דומים לצורכי ניקוי.

מומלץ לנתק את המקרר מהחשמל לפני הניקוי.

אין להשו לשריטות

אין להשתמש במכשירים חדים או בחומרי ניקוי הגורמים לשריטות, בסבון, בתכשירי ניקוי לבית, בחומרי ניקוי שונים ובחומרי הברקה עם שעווה.



השתמש במים פושרים לניקוי החלק החיצוני של המקרר ונגב אותו.



השתמש במטלית לחה וסחוטה, שנטבלה בתמיסת סודה לשתייה ביחס של כפית אחת של סודה לכחצי ליטר מים, כדי לנקות את החלק הפנימי של המכשיר ולנגבו.

ודא שלא חודרים מים לתושבת הנורה ולפריטים חשמליים אחרים.



אם אין כוונה להשתמש במכשיר לתקופה ארוכה, כבה אותו, הסר ממנו את כל המזון, נקה אותו והשאר את הדלת פתוחה במקצת.

בדוק בקביעות את אטמי הדלת כדי לוודא שהם נקיים ושלא נדבקו אליהם חלקיקי מזון.

להסרת מגש מהדלת, רוקן את תכולתו ודחוף את מגש הדלת כלפי מעלה מבסיסו.



אין להשתמש בחומרי ניקוי או במים המכילים כלור לניקוי המשטחים החיצוניים של המוצר או לניקוי חלקי המוצר המצופים כרום. כלור גורם לשיתוך במשטחי מתכת מסוג זה.



אין להשתמש בכלים חדים או בכלים הגורמים לשריטות, בסבון, בחומרי ניקוי לבית, בתכשירים שונים, בקרוסין, נפט, לקה וכו', כדי למנוע את הסרת ההדפסים מהחלק הפלסטי ואת השחתת צורתו.

השתמש במים פושרים ובמטלית רכה לניקוי ולאחר מכן לניגובו

הגנה על משטחי פלסטיק

וייבושו.



אין להניח במקרר שמן נוזלי או ארוחות שבושלו בשמן במכלים בלתי אטומים, מכיוון שהם עלולים לגרום נזק למשטחי הפלסטיק שבמקרר. אם נשפך או נמרח שמן על משטחי הפלסטיק, נקה ושטוף מייד את החלק המתאים של המשטח במים חמים.

7 איתור תקלות

שנן רשימה זו לפני שתקרא לנציג שירות. היא תחסוך לך זמן וכסף. רשימה זו כוללת תלונות נפוצות שאינן נובעות מפגמים בייצור המקרר או משימוש לקוי בחומרים. ייתכן שכמה מהתכונות המתוארות כאן לא יהיו קיימות במוצר שלך.

מקרר אינו פועל.
התקע אינו מחובר לשקע החשמל בצורה נכונה. >>>הכנס את התקע לשקע בצורה בטיחותית.
הנתיך של השקע שאליו מחובר המקרר או הנתיך הראשי נשרפו. >>>בדוק את הנתיך.
העבות בדופן הצדית של תא הקירור (אזור רב-תכליתי, בקרת קור ואזור גמיש).
הדלת נפתחה לעתים קרובות. >>>אין לפתוח ולסגור את דלת המקרר לעתים קרובות.
הסביבה לחה מאוד. >>>אין להתקין את המקרר במקומות בעלי לחות גבוהה.
מזון המכיל נוזלים מאוחסן במכלים פתוחים. >>> אין לאחסן מזון המכיל נוזלים במכלים פתוחים.
דלת המקרר הושארה פתוחה מעט. >>>סגור את דלת המקרר.
התרמוסטט מוגדר לטמפרטורה קרה מאוד. >>>הגדר את התרמוסטט לרמה המתאימה.
המדחס אינו פועל
מערכת ההגנה התרמית של המדחס תכבה במהלך תקלות פתאומיות בחשמל או כאשר מוציאים את שקע החשמל ומכניסים
אותו חזרה למקומו, מאחר שלחץ חומרי הקירור במערכת הקירור של המקרר לא הספיקו להתאזן. המקרר יתחיל לפעול כעבור
כ-6 דקות. אם המקרר אינו מתחיל לפעול עם תום פרק זמן זה, קרא לנציג שירות.
המקרר נמצא במצב הפשרה. >>>זוהי תופעה רגילה במקרר בעל יכולת הפשרה אוטומטית מלאה. מצב ההפשרה מתרחש
מפעם לפעם.
המקרר אינו מחובר לשקע חשמל. >>>ודא שהתקע הוכנס לשקע.
הטמפרטורות לא הוגדרו בצורה נכונה. >>>בחר את ערך הטמפרטורה המתאים.
יש הפסקת חשמל. >>>המקרר יחזור לפעולה רגילה בעת חזרת החשמל.
עש פעולת המקרר מוגבר כאשר המקרר פועל.

ביצועי הפעלת המקרר עשויים להשתנות עקב השינויים בטמפרטורת הסביבה. זוהי תופעה רגילה; אין כאן תקלה.

המקרר פועל לעתים תכופות או לפרק זמן ממושך.

טמפרטורת החדר עלולה להיות גבוהה. >>>זוהי תופעה רגילה שהמוצר פועל במשך פרקי זמן ממושכים יותר בסביבה חמה.	•
ייתכן שהמקרר חובר לאחרונה לחשמל או שהועמס בו מזון. >>>אם המקרר חובר לאחרונה לחשמל או שהוא הועמס לאחרונה	•
במזון, יידרש לו זמן רב יותר כדי להגיע לטמפרטורה שהוגדרה. זה נורמלי.	
ייתכן שהונחו לאחרונה במקרר כמויות גדולות של מזון חם. >>>אין להכניס למקרר מזון חם.	•
ייתכן שהדלתות נפתחו לעתים תכופות או שנשארו פתוחות מעט במשך זמן רב. >>>האוויר החם שנכנס למקרר גורם למקרר	•
לפעול פרקי זמן ממושכים יותר. אין לפתוח את הדלתות לעתים קרובות.	
ייתכן שדלת תא ההקפאה או דלת תא הקירור נשארו פתוחות מעט. >>>בדוק אם הדלתות סגורות הרמטית.	•
המקרר מכוונן לטמפרטורה נמוכה מאוד. >>>כוונן את טמפרטורת המקרר לדרגה גבוהה יותר והמתן עד שתושג הטמפרטורה	•
הרצויה.	
ייתכן שאטם דלת המקרר או דלת המקפיא מלוכלך, שחוק, קרוע או שזז ממקומו. >>>נקה או החלף את האטם. אטם	•
פגום/שבור גורם למקרר לפעול זמן ממושך יותר כדי לשמור על הטמפרטורה הנוכחית.	
פרטורת המקפיא נמוכה מאוד ואילו טמפרטורת המקרר מספקת.	טמ
טמפרטורת המקפיא מכווננת לדרגת קור נמוכה מאוד. >>>כוונן את טמפרטורת המקפיא לדרגת חום גבוהה יותר ובדוק.	•
פרטורת המקרר נמוכה מאוד ואילו טמפרטורת המקפיא מספקת.	טמ
טמפרטורת המקרר מכווננת לדרגת קור נמוכה מאוד. >>>כוונן את טמפרטורת המקרר לדרגת חום גבוהה יותר ובדוק.	•
זון המאוחסן במגירות תא הקירור קפוא.	המ
טמפרטורת המקרר מכווננת לדרגת קור גבוהה מאוד. >>>כוונן את טמפרטורת המקרר לערך נמוך יותר ובדוק.	•

• ייתכן שהמקרר החדש רחב יותר מהמקרר הקודם. מקררים גדולים יותר פועלים במשך תקופה ארוכה יותר.

. הטמפרטורה במקרר או במקפיא גבוהה מאוד.

טמפרטורת המקרר מכווננת לדרגת חום גבוהה מאוד. >>>הגדרת טמפרטורת תא הקירור משפיעה על טמפרטורת המקפיא.	•
שנה את טמפרטורת המקרר או המקפיא והמתן עד שהתאים הרלוונטיים יגיעו לטמפרטורה מספיקה.	
הדלתות נפתחות לעתים תכופות או שנשארו פתוחות מעט במשך זמן רב. >>>אין לפתוח את הדלתות לעתים קרובות.	•
הדלת פתוחה מעט. >>>סגור את הדלת לחלוטין.	•
המקרר חובר לאחרונה לחשמל או שהועמס בו מזון לאחרונה. >>>זוהי תופעה רגילה. אם המקרר חובר לאחרונה לחשמל או	•
שהוא הועמס לאחרונה במזון, יידרש לו זמן רב יותר כדי להגיע לטמפרטורה שהוגדרה.	
ייתכן שהונחו לאחרונה במקרר כמויות גדולות של מזון חם. >>>אין להכניס למקרר מזון חם.	•
רטט או רעש.	•
הרצפה אינה ישרה או יציבה. >>>אם המקרר מתנענע כאשר מזיזים אותו לאט, יצב אותו על ידי כוונון הרגליות שלו. כמו כן,	•
ודא שהרצפה חזקה במידה מספקת המסוגלת לשאת את משקל המקרר; כמו כן, ודא שהיא ישרה.	
ייתכן שהפריטים המונחים על המקרר הם מקור הרעש. >>>הסר את הפריטים מחלקו העליון של המקרר.	•
מעים רעשים, המגיעים מתוך המקרר, הדומים לזרימת נוזלים, התזתם וכו'.	נש
זרימת נוזלים וגז מתרחשת בהתאם לעקרונות ההפעלה של המקרר. זוהי תופעה רגילה; אין כאן תקלה.	•
אריקה מגיעה מהמקרר.	הע
ושתמשים במאווררים כדי לאפשר למקרר להתקרר. זוהי תופעה רגילה; אין כאן תקלה.	۱ •
נעבות בדפנות הפנימיות של המקרר.	าก
מזג אוויר חם ולח מגביר את הצטברות הקרח ואת ההתעבות. זוהי תופעה רגילה; אין כאן תקלה.	•
הדלתות נפתחות לעתים תכופות או שנשארו פתוחות מעט במשך זמן רב. >>>אין לפתוח את הדלתות לעתים קרובות. סגור	•
אותן אם הן פתוחות.	
הדלת פתוחה מעט. >>>סגור את הדלת לחלוטין.	•
ות מצטברת בחלקו החיצוני של המקרר או בין הדלתות.	לח
ייתכן שקיימת לחות באוויר; זוהי תופעה די רגילה במזג אוויר לח. כאשר הלחות יורדת ההתעבות נעלמת.	•
ז רע במקרר.	ריו
המכשיר לא נוקה בקביעות. >>>נקה בקביעות את פנים המקרר בספוגית, מים פושרים או תמיסת מי סודה.	•
ייתכן שחלק מהמכלים או מחומרי האריזה גורמים לריח. >>>השתמש במכל אחר או בחומרי אריזה של יצרן אחר.	•
המזון הוכנס למקרר במכלים לא מכוסים. >>>אחסן את המזון במכלים סגורים. חיידקים המתפשטים מתוך מכלים בלתי	•
מכוסים עלולים לגרום לריחות לא נעימים.	
בסב מבמדבב עת במזוו וווסג תודסו ועת במזוו וווכתדלדל	

הסר מהמקרר את המזון שפג תוקפו ואת המזון שהתקלקל.

הדלת אינה נסגרת.

אריזות המזון מונעות את סגירת הדלת. >>>שנה את מקומן של האריזות שמפריעות לסגור את הדלת. המקרר אינו עומד יציב לחלוטין על הרצפה. >>>כוונן את הרגליות ויצב את המקרר. הרצפה אינה ישרה או חזקה. >>>כמו כן, ודא שהרצפה ישרה ומסוגלת לשאת את משקל המקרר. המגירות לירקות נתקעות.

המזון נוגע בתקרת המגירה. >>>ארגן מחדש את המזון במגירה. •

