

Hand Blender

User Manual



HBS7750X

EN

01M-8833953200-2919-02

beko

Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Do not immerse the appliance in water.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.



It does not contain PCB.
Made in P.R.C

CONTENTS

ENGLISH

4-13

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance may be used by children and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of the reach of children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.

Important safety and environmental instructions

- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Wait for moving accessories to stop and unplug the appliance when left attended, while installing/removing accessories or before cleaning.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- Use the appliance only with the supplied rubber base and glass container.
- Do not operate the appliance without the ingredients in the bowl.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.

Important safety and environmental instructions

- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

1

Important safety and environmental instructions



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.5 Things to do for energy saving

Follow the times recommended in the manual during use. Unplug the appliance after use.

2 Your Hand Blender

2.1 Overview



1. Blending shaft
2. Speed adjustment button
3. Operating switch
4. Motor unit
5. Measuring beaker
6. Non-slip rubber base (cover)

2.2 Technical data

Voltage: 220-240 V~,
50/60 Hz

Power: 750 W

Technical and design modifications
reserved.

The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Operation

3.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

It is designed for chopping and whisking small amounts of solid food only.



When you do not exceed 10 seconds in intermittent uses, you can operate the appliance until the end of the process by waiting for a couple of seconds.

3.2 Initial use

1. Clean the appliance parts before initial use (see 4.1).
2. Use the appliance upright on a balanced, flat, clean, dry and non-skid surface.
3. Do not use the appliance continuously for more than 10 seconds. Turn off the device when used for more than 10 seconds and wait for 1 min. before operating again.

3.3 Blending and chopping with the blending shaft

1. Insert blending shaft (1), by aligning (▼) symbol on motor unit (4) with (⌚) symbol and turning clockwise.
 - Make sure (▼) symbol is aligned with (⌚) symbol. Fit it into its place, do not apply too much force.
2. Put processed ingredients (in small pieces) in measuring container or a container that you will use.
3. Immerse blending shaft (1) into the container.
4. Plug in the appliance.
5. Run the appliance by pressing operation button (3).

3 Operation



- Turn speed adjustment button (2) to gradually increase speed.
- Start mixing in low speed while mixing ingredients. Ingredients may be spattered when you start with high speed.
- You can get better results if you make circular movements with the appliance during processing.



WARNING:

- Do not touch the blades with your bare hands.
- This appliance is not suitable for dry or hard foods. Do not operate the appliance while mixing ingredients which might have food stuck in the blending shaft to prevent appliance damage.

6. Release the operation switch when the operation is finished. Unplug the appliance and wait for it to stop completely.

7. Turn blending shaft (1) counterclockwise and remove from motor unit (4) when it is aligned with (Ⓐ) symbol.

4 Cleaning and care

4.1 Cleaning



WARNING: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

1. Unplug the appliance before cleaning.
2. Make sure the appliance is at complete stop and remove blending shaft.
3. Wipe appliance motor unit (4) with a damp cloth.
4. Chopper blade can be washed using a sponge and dishwashing detergent.
5. Dry all parts of the appliance after cleaning.



WARNING: Do not wash the blending shaft in dishwasher.



WARNING: Never immerse inner part of blending shaft, the motor unit or power cable in water or in any other liquid.

4.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

