

Chopper

User Manual



CHG7402X

EN

01M-8833983200-2519-02

beko

Please read this manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



Warnings for dangerous situations concerning the safety of life and property.



Suitable for contact with food.



Do not immerse the appliance, power cable, or power plug in water or any other liquids.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.



It does not contain PCB.

CONTENTS

1 Important safety and environmental instructions 4

- 1.1 General safety..... 4
- 1.2 Compliance with the WEEE Directive and disposal of waste products7
- 1.3 Package information7
- 1.4 Plug Wiring..... 8

2 Your Chopper 9

- 2.1 Overview..... 9
- 2.2 Technical data 10

3 Operation 11

- 3.1 Intended use11
- 3.2 Initial use11
- 3.3 Operation11
- 3.4 Maximum quantities and preparation times..... 13
- 3.5 Things to do for energy saving 13

4 Cleaning and care 14

- 4.1 Cleaning 14
- 4.2 Storage 14
- 4.3 Handling and transportation..... 14

1 Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance can be used by people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, provided that they are supervised or they understand the instructions with regard to safe use of the product and potential dangers.
- This appliance cannot be used by children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Unplug the appliance when left unattended, while installing/removing accessories or before cleaning.

1 Important safety and environmental instructions

- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning, disassembly, accessory replacement and wait for it to stop completely.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- Use the appliance only with the supplied rubber base and glass container.
- Do not operate the appliance without the ingredients in the bowl.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.

1 Important safety and environmental instructions

- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- To prevent overheating, do not use the appliance continuously for more than 10 seconds. Leave to cool for 1 minute in between each 10 seconds of operation.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use caution and hold the chopping blade only from its plastic section.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.

1 Important safety and environmental instructions

- Keep the appliance out of the reach of children.

1.2 Compliance with the WEEE Directive and disposal of waste products

This product does not include harmful and prohibited materials specified in the “Regulation for Supervision of the Waste Electric and Electronic Appliances” issued by the Ministry of Environment and Urban Planning. Complies with the WEEE Regulation.



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Package information



Package of the product is made of recyclable materials in accordance with our national legislation. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.


1 Important safety and environmental instructions

1.4 Plug Wiring

The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

• Fiting a different plug

- As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:
- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line
- With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

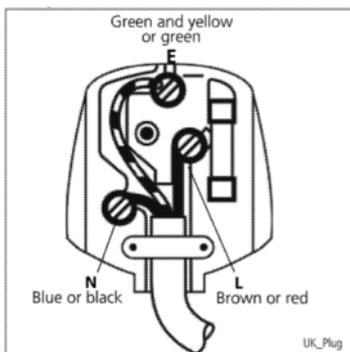

2 Your Chopper

2.1 Overview



The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

2 Your Chopper

1. Glass container
2. Fixed shaft
3. Middle cover
4. Motor unit
5. Operating switch
(speed adjustment I and II)
6. Chopper blade
7. Non-slip rubber base

2.2 Technical data

Power supply:

220-240 V~, 50/60 Hz

Power: 400 W

Technical and design modifications reserved.

3 Operation

3.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

It is designed for chopping small amounts of solid food only.

3.2 Initial use

Clean the appliance parts before initial use (see 4.1).

3.3 Operation

1. Place your appliance on a hard and flat surface on its non-slip rubber base.
2. Remove motor unit (4) and middle cover (3) from the glass container.
3. Place the chopper blade (6) on fixed shaft (2) holding the plastic section.
4. Put the ingredients you want to prepare into the glass container (1) (see. 3.4).
5. Place middle cover (3) on glass container (1) (silicone seal facing down). Then, place the motor unit (4) on top.



WARNING: Fit the middle cover (3) on glass container. Otherwise, motor unit (4) will not be seated securely and appliance will not start.

6. Plug in the appliance.
7. Run the desired speed pressing the operation switch (5) (see. 3.4).
8. Do not use the appliance continuously for more than 10 seconds. Turn off the device when used for more than 10 seconds and wait for 1 min. before operating again.



WARNING: When you do not exceed 10 seconds in intermittent uses, you can operate the appliance until the end of the process by waiting for a couple of seconds.

3 Operation



Soft foods like onions or parsley, 1-second, short intermittent presses will be sufficient.



WARNING: Do not touch the blades with your bare hands.

9. Release the operation switch when the operation is finished. Unplug the appliance and wait for it to stop completely.
10. Remove motor unit (4) and then the middle cover (3).
11. Remove chopper blade (6) from the glass container (1) by pulling away holding the plastic section.
12. Remove the processed food from glass container (1).



The inner part of the blade has springs. When you seat the blade on fixed shaft, you will feel a backlash. Blade is secured when you turn it left or right for a quarter of turn.

13. When you want to remove blade from the shaft, turn the blade left or right for a quarter of turns to release and remove.

3 Operation

3.4 Maximum quantities and preparation times

Ingredient	Max. amount	Processing time	Speed adjustment
Lean meat (small cubes)	300 g	20 s	max II
Onion/Garlic (small pieces)	300 g	20 s	max II
Hazelnut	300 g	20 s	max II
Tomato	300 g	15-20 s	max II
Cheese (small cubes)	150 g	5-10 s	max II
Fruit (cut into pieces)	300 g	15-20 s	max II
Parsley	100 g	10 s	max II
Candied date	500 g	5 s	max II

3.5 Things to do for energy saving

Follow the times recommended in the manual during use. Unplug the appliance after use.

4 Cleaning and care

4.1 Cleaning

1. Unplug the appliance before cleaning.
 2. Wait for chopper blade (6) to stop.
- Use a slightly damp cloth to clean the exterior of the motor unit (4).



WARNING: Do not use gasoline, solvent and abrasive cleaning agents or hard brush to clean the appliance.



WARNING: Be careful while cleaning chopper blade (6). It is sharp.



The glass bowl, chopping blade and middle cover can be washed in the dishwasher on the upper shelf.



WARNING: Never immerse the motor unit or its power cable in water or in any other liquid.

- Dry all parts of the appliance after cleaning.

4.2 Storage

If you do not intend to use the appliance for a long time, store it carefully.

- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

Product Guarantee

12 months breakdown and repair guarantee

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexperienced installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

How to obtain after sales service, help or general advice

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.

Model number	Serial number	Purchased from	Date of purchase

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland: **0333 207 9710**

Republic of Ireland: **01 862 3411**

You can also contact us through our website: **www.beko.co.uk**

