


Front Load Washer Dryer

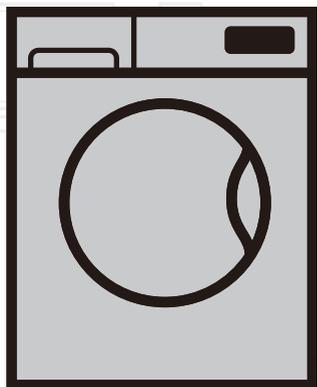

WDW 106141 DWMM

beko

Read this information first!

Dear User,

Thanks for your choosing Beko washing machine.

Before you use, we suggest you read all the information in this user manual.

The following symbols will be used Throughout this user manual:



Read user manual.



DANGER!

Warning for electric shock.



DANGER!

Product weight warning



DANGER!

Fire risk warning.



CAUTION!

Warning for hazardous situations with regard to life and property.



PRECAUTION!

Precautions that need to be taken.



INFORMATION

Important information or useful hints about usage.

Instructions for human and product safety

INFORMATION

This appliance is intended to be used in household and similar applications such as:
staff kitchen areas in shops, offices and other working environments;
farm houses;
by clients in hotels, motels and other residential type environments;
bed and breakfast type environments;
areas for communal use in blocks of flats or in launderettes.

DANGER !

Do not dry unwashed items in the tumble dryer.
Items that have been soiled with the substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
Remove all objects from pockets such as lighters and matches.

WARNING!

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

CAUTION !

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety."
"Children should be supervised to ensure that they do not play with the appliance."

CAUTION !

Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.

CAUTION !

Do not make connections via extension cables or multi-plugs.

INFORMATION

Do not touch the glass of the loading door with bare hands after drying. There is the risk of burning.

Your product is designed to work at temperatures between 0°C and +35°C.

Ambient temperatures between 15°C and +25°C are suitable for your product.

Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.

Do not forget to close the loading door when leaving the room where the product is located.

Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.

Content

Safety Notifications.....	2
Part Name	3
Installation Instruction	4
Methods of Door Lock and Remove	9
The Usage Method of the Detergent Box.....	9
Function Introduction of Operating Panel	10
The Introduction of Function and Program	12
Introduction of Washing Programs	20
Maintenance	21
Varieties of Functions	23
Notice before Washing	25
Non-fault Conditions.....	29
Troubleshooting Guide	30
Specification	31

Safety Notifications (Please Must Follow)

- In order to prevent the harm or damage to the user or the person and property of others, please make sure to follow the safety issues.

WARNING!

- The risk of electric shock.
 1. Please use 220-240V, above 10A with ground wire dedicated socket.
 2. When inserting and pulling out the power cord please use the plug, please. Don't use the damaged power cord. When the power cord pin is dirty please wipe clean with dry cloth in time.
 3. Do not use the wet hand to insert or pull out the plug.
 4. Please pull out the plug when finishing, repairing or cleaning.

DANGER!

- The danger of fire and current leakage
 1. Do not allow the washing machine close to the fire, or lighted cigarettes, candles and volatile materials.
 2. Please do not sprinkle the water on the control panel of washing machine.
 3. Please do not put the washing machine in the place of wet and outside place.
 4. Please fix the drain pump and make sure the sewer unobstructed.

WARNING!

- The danger of high temperature
 1. When washing in high temperature, the door glass will be heating. Please do not touch the door glass, especially children.
 2. When opening the door after high temperature washing, please wait for the temperature cooled down to a safe level and the door will unlocked automatically.

DANGER!

- The danger of getting hurt
 1. Please handle the carton box after removing, don't let the children touch or eat.
 2. Do not allow the children to operate or climb up to the washing machine.
 3. Please close the door after use to avoid the children enter into the drum.

DANGER!

- The danger of injury
 1. Do not put any heavy things on the top of the washing machine.
 2. If you want to move the machine, please remember ask for help.
 3. Please do not ask unprofessional people to repair the machine.

INFORMATION

- The danger of damage the cloths
 1. Please do not wash the cloths which is waterproof, like Raincoat, feather products, sleeping bags
 2. Please wash the cloths which can be washed, if you have any doubt, please following the instructions.

DANGER!

 
 
- The danger of explosion
 1. Please do not washing the cloths which stained with kerosene, gasoline, thinner, inflammable goods.
 2. Please do not washing when gas leakage.

INFORMATION


- If want to open the door when the machine running or other circumstances, please check the water level in the drum first in order to avoid the water overflow and cause unnecessary loss.

Part name

Attachment specification

user manual	water hoses	wrench	transportation bolt caps
			

Part name

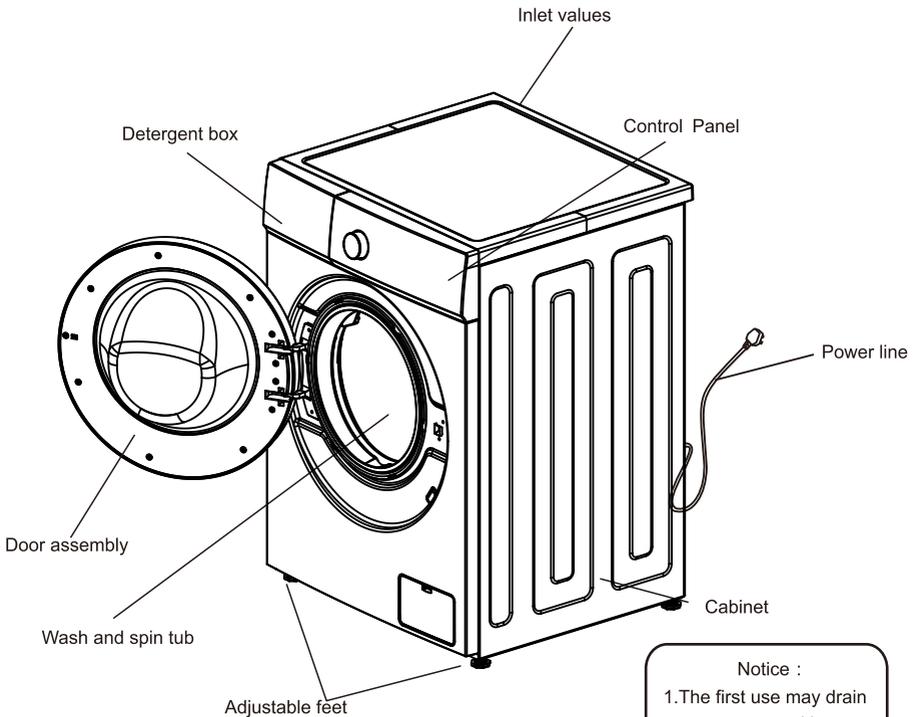

The above picture is just for reference, the detailed information should be based on the real product !

Notice :

- 1.The first use may drain some water out. It's residual water after performance test, belong to the normal phenomenon.
- 2.After each use, please pull the plug and turn off the faucet to prevent accidental flood or fire.

Installation instruction

- Make sure the temperature of the places where the washer is installed or placed above 0°C or put it outside.
- Place the washer correctly according to management standards and regulations.




- Keep the base of washer ventilated when it is placed on the ground with carpet.
- There are too much pests in villages. Please keep the surroundings clean because any damages caused by cockroaches or other pests don't belong to warranty.

Transportation bolt

Washers are installed with transport bolt to prevent internal damage in transit.

Dismantle the transportation bolt

1. In order to prevent internal damage in transit, 4 bolts are installed. Before using the washer, dismantle the bolt (see chart 1).
- If the bolts are not dismantled, violent vibration, noise and trouble will be caused.
2. Use the attached wrench to loosen the 4 bolts (see chart 2).
3. Twist the bolt rubber slightly and then pull out the bolts, keep the bolts and wrench as standby(see chart 3).
- The bolts should be remounted no matter when to transport the washer.
4. Use attached stopples to seal the screw holes(see chart 4).

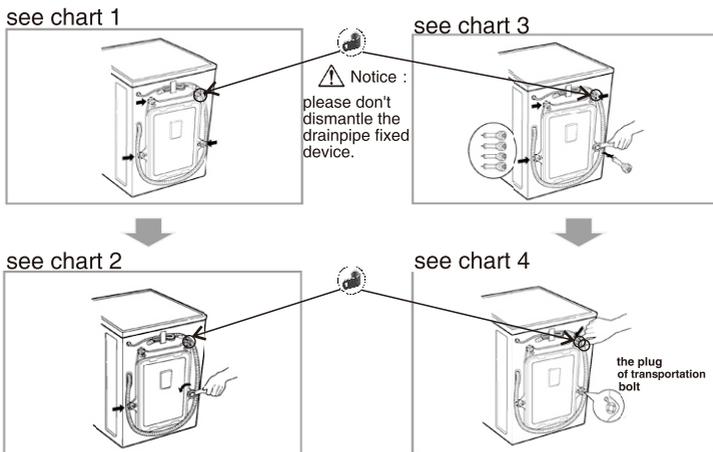

Requires for positions

Horizontal adjustment:


- The slant angle should be less than 1 degree.

Power outlet

- The distance between any side of washer and power outlet should be within 1.5 meters.
- Don't use too many electrical appliances in one outlet.

Environment cleaning

- It's necessary to clean the wall, door and ground.
- Install the washer on a hard and steady ground with floor drain rather than soft blanket or wooden floor.
- Don't put dirty clothes or some other goods on a washer's head cover, otherwise it may impact the normal operation.

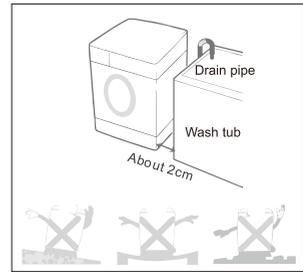

CAUTION !

Power connection

1. Don't use the wiring board or something like that.
 2. If the power lines are damaged, please contact professionals to repair.
 3. After the use of washer, pull the plug and turn the tap off.
 4. Connect the washer with grounded outlet to correspond to the wiring principles.
 5. Place the washer in which is easy to connect the outlet.
- Contact the maintenance center and ask professionals to repair the washer. Laypeople may cause damages and troubles on the washer.
 - Don't put the washer in the place where the temperature is below zero. The pipes will be frozen and break. Moreover, the temperature below zero will damage the programming controller.
 - If move the washer in an environment whose temperature is below zero, please keep the washer at room temperature for a few hours before starting it.

Grounding introduction


- A washer must have the grounding devices. If a trouble happens, the device can reduce the risk of electrical shock. The device is equipped with a cable (including a wire and a grounded plug). The grounded plug must be inserted in an appropriate outlet. If you want to know if the washer is grounded correctly, please contact with professional maintenance staff. If the plug can't match with the outlet, please don't change the plug by yourself.
- Once your washer smokes or emits an odor, please cur the power and contact with professional maintenance staff.

Washers should be connected with water inlet. Please use attached new plumbing rather than the old. In order to ensure the quality, water injection tests are carried out before the washer leaves factory, so there may be water inside the internal tub, door seals and door panel, which are normal.

i INFORMATION


Water inlet connection

1. The pressure of supply water should be between 30kPa and 1000kPa.
 2. Don't abrade the screw thread when connect the inlet pipes with valves.
 3. Please install dropping equipment if the pressure of supply water surpasses 1000kPa.
- Two are supplied in the connectors of both ends of the pipe to prevent water leaking.
 - Turn on the tap and check if the connectors leak.
 - Check the pipes regularly. Please change them if necessary.
 - Make sure the pipes don't be damaged or twine with each other.

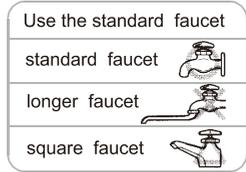

The connection of inlet pipes and taps

1 Check the rubber seals on both sides of the hose.
-insert a rubber seal into the threaded fittings on each hose to prevent leaking.

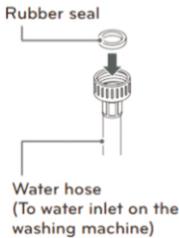

2 Connect the water supply hoses to the water faucets tightly by hand and then tighten another 2/3 turn with pliers.
-Connect the blue hose to water faucet.

 


▲ WARNING
• Do not overtighten. Damage to the coupling can result.

3 After connecting inlet hose to water faucets, turn on the water faucets to flush out foreign substances (dirt, sand or sawdust) in the water lines. Let water drain into a bucket, and check the water temperature.



4 Connect the hoses to the water inlet tightly by hand and then tighten another 2/3 turn with pliers.





▲ WARNING
• Do not overtighten the hoses. Overtightening can damage the valves resulting in leaking and property damage.

5 Check for leaks by turning on the faucets. If water leaks, check steps 1 to 4 again.

- Such washing machine is designed for home appliances, please do not install it on ship, traveling truck or plane.
- Please turn off the stopcock if long time out of use.
(e.g vacation)
- Please remove plug and cancel door lock function to avoid child locking himself/herself inside.
- Packing materials(e.g film, foam) could harm child's safety and cause asphyxia! Attention: MAKE ALL PACKING MATERIEALS OUT OF CHILD REACH.

Install drain-pipe

- Please fix the drain-pipe by a lifting rope.
- For the sake of lightening damage of leak towards ground, please place the drain-pipe correctly.
- In order to avoid siphon,the height of drain-pipe should between (0.85m-1.25m),moreover, the terminal of is should not be placed in water.
- If the drain-pipe is too long, please do not force to insert it into washing machine, which would cause abnormal noise.
(Please check sketch map next page)

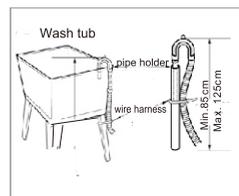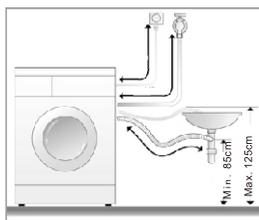

The instruction of installation of pipe

Horizontal Adjustment

- To avoid noise and vibrate by adjusting washing machine level. place it at the room corner preferably.
- If ground not level, please adjust alignment pins. Do not put wood pieces or something like, please make sure four alignment pins touch ground tightly, and machine level completely.




- Adjust adjustable feet

Adjust the adjustable feet to make sure the washing machine in balance, which can be placed on the ground steadily. After settling, screw the locknut to guarantee. Do not place the washing machine in the platform, which is higher than the ground, in order to prevent the machine from falling down because of other accidents.

- The diagonal check

Applying force downward on the diagonal of the washing machine, washing machine should not shake. (both diagonal need to check, if the washing machine shake, must readjust adjustable foot.)

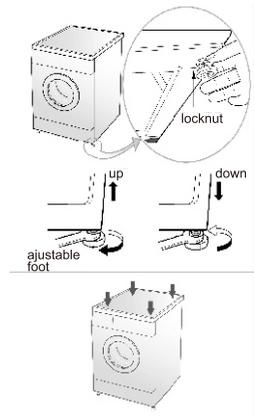

Methods of Door Lock and Remove

DOOR LOCK

- After operating ,the door will be locked automatically and "DOOR LOCK" light/picture on the panel is lighting.

Remove Door Lock

- When "DOOR LOCK" light/picture is lighting,press "Start/Pause" , WASHING/DEWATERING drum stop operating.Please wait for about 10s, door lock will be removed automatically.
- Foam overflowing if open the door during operating, please catch foam with towel.
- If temperature is too high, the door can not be opened during operating.
- If water level is too high,the door can not be open during operating.

The Usage Method of the Detergent Box



Synthetic Detergent Powder 

- Please dissolve detergent (e.g soap pieces)before putting into detergent box.

Liquid detergent. Bleach 

- Please use detergent with less foam.
- Please use two times water to dilute the concentrated type detergent before putting into detergent box.

Softener 

- Please put softener before washing, which will pour into drum automatically when last potch happening.
- When using concentrated type softener, please dilute it with appropriate water.
- Do not exceed MAX mark.

Pre-wash Detergent 

- If the clothes is very dirty, please choose pre-wash function, add proper amount detergent.

- Use special detergent.
- Do not use too much detergent which will cause too much foam and affect washing quality or will cause malfunction.
- Select detergent according to cloths variety,color, water temperature and contamination level.
- Please use moderate detergent to get washing effect and protect environment.

Function Introduction of Operating Panel



Image shown here is indicative only. Actual product you receive may differ.

1 POWER

- Press it to turn on/off power.
- Procedure over, power off automatically.

2 Start/Pause

- Press START button to start operation.
- Press PAUSE button to stop, and press it again to continue.

3 Knob

- Rotate it to select additional function.

4 “Select” button

- When push the power button to start the machine and select the program, you can choose the washing mode (Intensive,Crease Care,Soak) by this button.

5 “Rinse” button

- When push the power button to start the machine and select the program, you can choose the times of rinse by this button, which can make better washing performance.

6 “Temp.” button

- When push the power button to start the machine and select the program, you can choose proper water temperature according to the material of cloths.

7 “Speed” button

- When push the power button to start the machine and select the program, you can choose different spin speed.

8 “Additional Function” Button

- According to your request, you can add the additional function to the basic programs. The additional function will be different according to different basic programs. (Please take reference the additional functions introduction in details).

9 Child Lock Lamp

- To avoid the children wrongly operations
- If you want to start child lock function, you should push “Select” button for 3 seconds during the running process of washing machine. To unlock child lock function, you can push “Select” button for 3 seconds during the running process . (Please check the detailed introduction of child lock function in the “additional function introduction”).

10 “Dry” Button

- Press the “Dry” button to change from “Standard”, “Low Temperature”, “Timing 30 minutes”, “Timing 60 minutes”, “Timing 90minutes”, “Timing 120 minutes”, “Timing 150 minutes”, “Ironing”, “High Temperature”.

11 Display Screen

- To display the remaining time or pre delay time
Remaining time gradually reduce in accordance with the washing.
- During the process of washing, if there is a abnormal phenomenon, the screen will display the error code accordingly.
- If the remaining time is different with the real time, the program will adjust according to the real situation. It is not an error.
- If the program has self-weight function, the screen will display “ - - -”. If washing machine is in the process of weighting, the screen will flash “-”. If the weighting function ends, the screen will display the remaining time of washing.

12 The reminding window of washing status

- There are five indicator lamp on the top, represent weighting, washing, rinse spin and dry.
- When setting the programs before washing, if some indicator lamp lights, it means that this washing program has the following washing process; When the machine is running, if one indicator lamp lights, it means the current washing process is under this status; If some indicator lamp always flash, it means that the following washing process include the corresponding programs.

The introduction of function and program

Usage of routine clothes

1.Preparations

- Open the door put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the Power button

3.The programs can be selected according to requirements.

- Cotton — Mix — Duvet — Wool — Down Jacket — Air Wash— Sports — Rinse+Spin — Spin — Tub Wash — Dry— Wash&Dry — Quick 42' — Quick 15'

4.Press Start/Pause button and begin to wash

5.Washing Ending

- The screen displays “End” with a hum.
- Open the door and take out the cloth.
- Pull out the plug and close the faucet.

The usage of self-compiled program

You can use it when need to set washing intensity, rinse times, water temperature, spin speed.

1.Prepare to wash

- Open the door, put clothes in and close the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the power button

3. The programs can be selected according to requirements.

- 4. Push “Temp.”/ “Speed”/ “ Dry ” / “ Rinse ” / “Select ” button to set water temperature, spin speed, washing intensity, rinse times, delay time.

5. Press the Start/Pause button to start washing.

6.When the program ends, it will have a hum sound.

- The screen displays “End” with a hum.
- Open the door and take out the cloth.
- Pull out the plug and close the faucet.

Cotton Program Introduction

This program is suitable for the clothes which are moderate or mild dirty, like cotton, beddings, underwear, towels and shirt, etc...

1. Preparation for washing

- Open the door, put the clothes then close the door
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2. Push "Power" button and connect to the power

3. Turn the program button to choose "Cotton" program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4. Push "Start/Pause" button to start washing

5. When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.
- When the washing machine washing towel, the yarn will be squeezed, washing will get rough surface, using the fiber softening agent, to prevent this kind of phenomenon happens to the greatest extent.

Sports Program Introduction

Wash the machine- washable sports clothes

1. Prepare for washing

- Open the door, put the clothes then close the door
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2. Push "Power" button and connect to the power

3. Turn the program button to choose "Sports" program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4. Push "Start/Pause" button to start washing

5. When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.
- In order to prevent clothing damage, speed cannot set the highest speed, the temperature cannot be set to "60 °C" and "90 °C"

Duvet Program Introduction

The cloths have the machine-washable mark, like bedding, bed sheets, curtains, etc

1.Prepare for washing

- Open the door, put the clothes then close the door
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2.Push “Power” button and connect to the power

3.Turn the program button to choose “Duvet” program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4.Push “Start/Pause ”button to start washing

5.When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push “Start/Pause” button first and stop washing, then push button to reset.
- In order to prevent clothing damage, speed cannot set the highest speed, the temperature cannot be set to "60 °C" and "90 °C"
- The electric blanket and carpet cannot be washed.(It will damage the machine and clothes).
- Put the clothes in the washing drum properly and uniform when spinning, in order to avoid large vibration and drying time maybe extended.
- Heavy clothes cannot be entanglement ,need to put inside the washing machine after shaking loose.
- Uneven clothes can lead to not spinning (display UE), take out again in the after washing to shake loose.

Rinse and Spin Program Introduction

The machine will not wash, only rinse and spin.

1.Prepare washing

- Open the door and put the cloths then close the door
- 2. Push “Power” button and connect to the power
- 3. Turn the program button to choose“Rinse+ Spin” program
- The washing program will be selected automatically.
- Choose the proper spin speed and rinse times.

4.Push “Start/Pause ”button to start washing.

5.When the program ends, it will have a hum sound.

- If you want to change the current setting, please push “Start/Pause” button first and stop washing, then push “Rinse” and “Spin Speed” button to reset.
- The Spin speed can be selected the highest, but the temperature cannot be set.

Wool Program Introduction

Wash wool fiber texture, such as machine washable wool fabrics, etc.

1.Prepare for washing

- Open the door, put the clothes then close the door.
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2.Push “Power” button and connect to the power

3.Turn the program button to choose “Wool” program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4.Push “Start/Pause ”button to start washing

temperature, dewatering speed and appoint time.

5. When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push “Start/Pause” button first and stop washing, then push button to reset.
- In order to prevent clothing damage, speed cannot set the highest speed, the temperature cannot be set to "60 °C "and "90 °C "
- After washing completed, take the clothes in time, drying, after shaking loose plastic deformation in order to avoid placing time is too long.
- Please separate white or bright color clothes from the dark clothes for washing.
- Using special wool detergent can reduce clothing damage, improve the washing effect.

Mix Program Introduction

This function can be used to wash mix clothes like cotton, synthetic and soon (please do not mix wash the clothes that easily rub off).

1.Prepare for washing

- Open the door, put the clothes then close the door
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2.Push "Power" button and connect to the power

3.Turn the program button to choose "Mix" program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4.Push "Start/Pause "button to start washing

5.When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.
- In order to prevent clothing damage, speed cannot set the highest speed, the temperature cannot be set to "60 °C" and "90 °C"
- Please separate white or bright color clothes from dark clothes.

Tub Wash Program Introduction

Tub Wash program is to use high water level, high temperature and high spin speed to clean and sterilize the inner tube.

1.Preparation for washing

- Please make sure nothing in the tub before cleaning.
- Open the distribution box, add the liquid bleach in the main box.
- Don't add detergent or laundry detergent to prevent causing too much foam.
- Close the distribution box.
- Please make sure the inlet pipes connected well and the tap turned on.

2.Push "Power" button and connect to the power.

3.Turn the program button to choose "Tub Wash" program.

- The washing program will be selected automatically.

4.When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please firstly push "Start/Pause" button to stop the operation, then to reset different programs.
- This mode can not adjust the temperature, spin speed and rinse times, but can adjust the washing time.
- During the process of setting tub clean program, it will alternately display washing remaining time and "CLn". During the process of operating, it will on display remaining time.
- When the program ends, open the door and dry the inner part of washing machine in order to prevent the deformation of gasket.
- If there are children at home, please don't open the door for too much time.

The Single Dry Function

1. Dry Preparation

- Put the clothes in the machine and close the door, then connect to the water inlet hose and open the water tap.
2. Press the "Power" button.
 3. Turn the "Process" knob to the "Single Dry".
 4. Press the "Dry" button to choose the type, and press the "Speed" button to choose the "1000 rpm—1400 rpm—canceling spinning".
 5. Press the "Start/Pause" button to start the machine.
 6. When working, the machine shows a time, but this time is not the whole time of drying. The machine gives this time after spinning automatically according to the weight of clothes.
 7. After finishing drying, the screen will show "END" and buzz.

- If not taking the clothes out in time, the machine will start the "Cd" function. The screen shows "Cd", and the tube will spin for several hours without heating to avoid crease. However, if you want to stop the process to take out the clothes, you can press any button to stop it.
- If pressing the "Power" button during the drying, the machine will start the "CF" function. The screen shows "CF", and the fan blows cold wind to inner tube to avoid high temperature when opening the door. Pressing the "Power" button or "Start/Pause" button in 30 seconds can stop the "CF" function and cut off the power. 30 seconds later, the "CF" function will stop and the power will be off.

Quick 15' Program Introduction

To wash clothes that are changed frequently, not too dirty and thin clothes

1. Prepare for washing.

- Open the door, put the clothes then close the door.
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2. Push "Power" button and connect to the power.

3. Turn the program button to choose "Quick 15" program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4. Push "Start/Pause" button to start washing.

5. When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.
- In order to prevent clothing damage, speed cannot set the highest speed, the temperature can be set to "cold", "20°C", "40°C" prevent the door from distorting.
- In order to ensure the washing effect, washing is suitable for the washing capacity under 2 kg.

Spin Program Introduction

The machine will not wash and rinse, only spin.

1. preparation for washing

- Open the door, put clothes in and closes the door.

2. Push "Power" button and connect to the power

3. Rotate the program button and choose the "Spin"

- Pressing "Speed" button can adjust the speed.

4. Press the Start/Pause button

- Begin to drain away water and spin.

5. When the program ends, it will have a hum sound.

- If you want to change the current settings during the process of spin, please push the "Start/Pause" button to stop the washing machine and then push "spin speed" button to change.
- During the process of spinning, the actual spinning speed may be inconsistent with the program speed, which is because the washer adjust the speed according to the balance between clothes.
- There may be rhythmic drone during spinning, which is the normal voice of drain bump rather than the machine fault.

Quick 42' Program Introduction

To wash clothes that are changed frequently, not too dirty and thin clothes

1.Prepare for washing.

- Open the door, put the clothes then close the door.
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2.Push "Power" button and connect to the power.

3.Turn the program button to choose "Quick 42'" program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4.Push "Start/Pause "button to start washing.

5.When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.
- In order to prevent clothing damage, speed cannot set the highest speed, the temperature can be set to "cold" ,"20°C" ,"40°C" prevent the door from distorting.
- In order to ensure the washing effect, washing is suitable for the washing capacity under 4 kg.

Wash&Dry Program Introduction

To wash &dry clothes that are changed frequently, not too dirty and thin clothes

1.Prepare for washing.

- Open the door, put the clothes then close the door.
- Taking the detergent box and add detergent then close it.
- Connect the water inlet pipe well and make sure the faucet is running.

2.Push "Power" button and connect to the power.

3.Turn the program button to choose Wash&Dry program

- The washing program will be selected automatically.
- Choose the needed water temperature, spin speed, rinse times and washing intensity.

4.Push "Start/Pause "button to start washing.

5.When the program ends, it will have a hum sound.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.
- In order to ensure the washing and drying effect, washing is suitable for the washing capacity under 2 kg.

Introduction of Washing Programs

Program	Temperature (°C)	Spin Speed (Run/Min.)	Rinse (times)	Time(m)	Optional function
Cotton	40°C (0°C, 20°C, 60°C, 90°C)	800 (0, 400, 1000, 1400)	2 (3,4)	55	Pre Wash, Intensive, Crease Care, SOAK, Dry
Duvet	40°C (0°C, 20°C, 60°C)	800 (0, 400, 1000)	2 (3,4)	88	Pre Wash, Intensive, Crease Care, SOAK, Dry
Air Wash	—	—	—	50	—
Wash&Dry	20°C (0°C, 40°C)	1000 (1400)	1 (2,3)	60	Intensive, Dry, Timer
Quick 15'	0°C (20°C, 40°C)	800 (0, 400)	1 (2,3)	15	Intensive, Dry, Crease Care
Quick 42'	20°C (0°C, 40°C)	800 (0, 400)	2 (3,4)	42	Intensive, Dry, Crease Care
Tub Wash	60°C	800	2	75	Intensive
Rinse+Spin	—	800 (0, 400, 1000, 1400)	1 (2,3)	16	Crease Care, Dry
Spin	—	800 (0, 400, 1000, 1400)	—	10	Crease Care, Dry
Wool	40°C (0°C, 20°C)	800 (0, 400)	2 (3,4)	48	Intensive, SOAK, Crease Care
Down Jacket	40°C (0°C, 20°C)	800 (0, 400)	2 (3,4)	77	Intensive, SOAK, Crease Care
Dry	—	1000 (1400)	—	191	Dry
Sports	60°C	800 (0,400, 1000)	2 (3,4)	130	Dry, SOAK, Crease Care
Mix	0°C (20°C, 40°C)	800 (0,400)	2 (3,4)	76	Pre Wash, Intensive, Crease Care, SOAK, Dry

Instruction:

- 1.The needed time can be changed due to water pressure, drain condition, clothing textile,weight, water temperature changing.
- 2.During the process of washing,the time of washing and spinning will be different with the real running time.
- 3.During the process of washing,the real display time will beat according to sensing the weight changing of clothing.
- 4.Due to different weight of clothing and detergent, if the spin speed is too low, the rinse performance will not be good, please increase times of rinse.
- 5.The data in the chart can be different from different models.
- 6.When editing the default program as energy efficiency program, washing time will increase automatically.

Maintenance

- Please maintenance washing machine to extend service life.
- Before maintenance, please unplug.

Body of washing machine

After washing, please clean it with soft cloth. If much contamination, please use appropriate detergent or soap.


- Do not watering directly.
- Do not use putty-powder, diluent, gasoline, alcohol to clean machine body.

Door Gasket Ring

After washing, please remove contamination, wastepaper and so on, if foreign matter exists, please remove.

The Clearance of Detergent Box

Please clean the detergent box regularly. Pull it out and wash with clean water, then insert back.

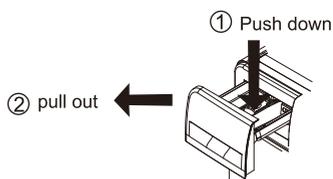

The Clearance of Universal coupling (Suggest:Once/ half year)


- If waste accumulated, it will influence water inlet speed.

1. Take off the soft pipe from connecting part side.
2. Take off the screwing device according to the arrow showed.
3. Wash the inside of the screwing device.
4. Install the cleaned crewing device with the inlet soft pipe.



The clearance of inlet water valve (Suggest:Once/ half year)


1. Take off the soft pipe from washing machine side.
2. Take off the filter net from water valve.
3. Clean the filter net with tooth-brush.
4. Install the soft inlet pipe.

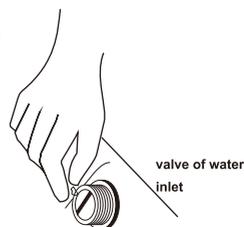

Maintenance

When washing machine is frozen

1. Cover stopcock and connecting part with hot towel.
2. Take off the inlet pipe, and put it into 50 degree water.
3. Pour into the drum about 2-3L of 50 degree water.
4. Connect inlet pipe, turn on the stopcock and start the washing machine, please check whether inlet and outlet is normal.

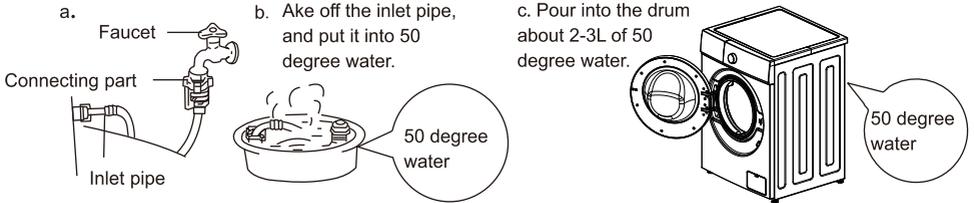

The Clearance of dewatering-pump filter(Suggest: once/month)

1. Press fastener on the pump after dewatering and power off, open the lid of water-pump filter.(Attention: if hot water inside, please go ahead after it be cold.)
 2. Take off the filter anti-anticlockwise.
 3. Wash the filter.
 4. Direct at pump and insert the filter, tighten it clockwise and tighten the lid.
- Attention: a. Please tighten the filter well to avoid leak.
b. Please do not clean during operation.

The Drum Clearance (Suggest once/month)



After using for a period, some dirt maybe exist. You can clean the inside and outside of drum by operating the drum procedure.

Attention: please do not put cloths and detergent when clearing the drum.

Emergency Open the Door

When there is power cut and the door cannot be open normally, but you need to open the door, please pull open the emergency door opening tab, and remember to reset the emergency door opening tab.

The pull-tab is located at the front right bottom of the inside of the cover. Please open the cover when use.

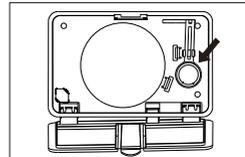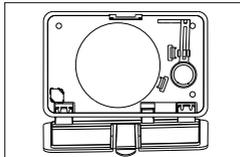

Attention

Forbid to use the emergency door opening tab when the machine is running; When you have to use it at emergency, please open the emergency door opening cover when water cooling to avoid scald because there will be excess water flowing out from the inner tub at high temperature.



Varieties of Functions



1. **Pre wash:** If the cloths are too dirty, you can choose this program before washing.
2. **Soak:** After selecting this function, there is a period of time for cloth soaking, which can enhance the performance of washing. If the program has the “weight” function, push one more time for “soak” button can select the function of “weight”.
3. **Dry:** After selecting this function, you can change from “Standard”, “ Timer ”, “Low Temp”, “Iron”, “High Temp” and “Cancel”.
4. **Rinse:** After selecting this function, the machine will heat the water during last time of rinse in order to enhance the performance of rinse.
5. **Child Lock function:** You can lock and unlock the child lock function by pushing “ Select ” 3 seconds when the machine is running.
 - Once the child lock function set, all the other buttons will be locked except the power button.
 - After setting child lock function, the lamp will light up, meanwhile the screen will display “CL” intermittently.
 - When the washing process ending or push “Power” button or default warning, the child lock function cannot be unlocked. It means that the child lock function must be unlocked by hand. When the power on and start the machine, if the child lock function is going on(the lamp of child lock light up and the screen display CL),you need to push “Pre Delay” button for 3 second to unlock the child lock function and then continue to operate the washing machine.
 - Already set the child lock function and then want to change the programs. Firstly remove the child lock function and push the "Start/Pause" button to stop running, then select the required function, then push the "Start/Pause" button to restart running.

6. Add garment function: During the process running, if you want to add garment, please push "Start/Pause" button to stop running;
 - After around 5 seconds, it has a sound of unlocking, meanwhile the door lock mark in the screen disappear then you can open the door.
 - Add the additional garment into the drum(Don't let the door clamp clothes, this will cause failure of leakage and error).
 - Forced to open the door part, damage may occur, such as safety problem.
 - When there are many bubble in the inner barrel and plenty of water, open the door, water and foam will flow out .
 - When the inner drum is running, it is in danger status since the temperature of water is above 45°C and there is plenty of water inside. At this time, the door can not be forced to open. If want to open the door, please follow the below instructions:
 - (1) Wait till the inner drum stop running.
 - (2) Wait till the water temperature cool down to below 45°C.If want to open the door when the water temperature is above 45°C,please shut off the power and open the door after 5 minutes.
 - (3) When there is plenty of water inside of inner drum, please restart the power and select "spin speed" button to drain out the water then open the door.
 - Abnormal power off for 2 minutes, you can open the door. During the process of running, the required condition for opening door(water level below door gasket, water temperature below 45°C,spin speed is 0),push "Start/Pause" button, wait till door lock mark disappear, then open the door. When closing the door, press the middle place of the door handle.
7. Quick entering into the functions: Power on, push "Power" button, directly push the following functional button(no need to turn the knob).
 - Push "Start/Pause" to enter standard washing mode directly.
 - Quick entering into the functions: Power on, push "Power" button, directly push the following functional button(no need to turn the knob).
 - "Spin" button,the washing machine enter" Spin only"mode(You can choose spin speed),push "Start/Pause"button to start the washing machine.
8. Eliminate the sound: Push "Pre wash"button for 3 seconds to start/close the sound during the process running.
9. Power-off Memory: When there is power on again after a period of power-off, the machine will continue the working process at the time node of last power-off action.
10. Automatic Power Off: After the whole washing process is finished, the machine will be automatically powered off after 120 seconds.

- Check the door seals and make sure nothing on them.
- Make sure there is nothing in the tub before washing.
- Please use the low bubble detergent specially for front loading washing to wash the cloths.

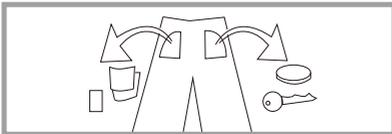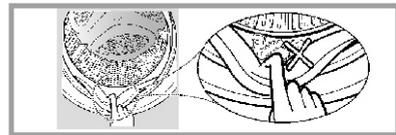

The Dry Function

1. Dry: Press the “Dry” button to change from “Standard”, “Low Temp”, “Timing 30 minutes”, “Timing 60 minutes”, “Timing 90minutes”, “Timing 120 minutes”, “Timing 150 minutes”, “Iron”, “High Temp”.

Standard : applied to dry the cotton clothes

Low Temperature: applied to dry the synthetic fiber clothes which can be out of shape easily under the high temperature, and it will take longer time.

Iron: applied to clothes that need to be ironed like shirts. After drying, clothes contain water and can be ironed.

High Temp: applied to thick clothes or high temperature resistant clothes in short time.

Timed drying: press the “Dry” button to choose the drying time.

2. Washing and drying

(1) Open the door to put clothes in and then close the door; Take the detergent box out, put the detergent as well as softener in, and place it well. Connect to the water inlet hose and then open the water tap.

(2) Turn the power on and start the washing machine.

(3) Turn the “Process” knob to choose process.

(4) Press “Dry ” button to dry, and choose the drying process. Press “Speed” to choose 1000rpm, 1400rpm.

(5) Press “Start/Pause” button to start.

(6) When working, the machine shows a time, but this time is not the whole time of drying. The machine gives this time after spinning automatically according to the weight of clothes.

(7) After finishing drying, the screen will show “END” and buzz.

NOTICE:

1. If not taking the clothes out in time, the machine will start the “Cd” function. The screen shows “Cd”, and the tube will spin for several hours without heating to avoid crease. However, if you want to stop the process to take out the clothes, you can press any button to stop it.

2. If pressing the “Power” button during the drying, the machine will start the “CF” function. The screen shows “CF”, and the fan blows cold wind to inner tube to avoid high temperature when opening the door. Pressing the “Power” button or “Start/Pause” button in 30 minutes can stop the “CF” function and cut off the power. 30 minutes later the “CF” function will stop and the power will be off.

Attention with Drying

1. When drying, the clothes cannot go beyond the rated maximum quantity, or the clothes cannot be dried well.
2. The machine cannot dry well in the region where the water can not enter the machine smoothly or the water pressure is too low.
3. Before choosing drying function, please check if the clothes are fit to be dried.
4. When choosing “1400rpm” spinning speed, the drying effect can be improved and time will be short.
5. Before drying, the machine will spin automatically, so the time may be longer and this will improve the drying effect.
6. Clothes washed by hands can directly apply the single dry process.
7. During drying, the time on the screen is not the accurate time, and machine will enlarge or shorten the practical time according to the type of clothes and drying effect.
8. After drying, some clothes may be out of shape or shrink for their material to some extent.
9. During drying, users can press “Pause” button to open the door, but this behavior will affect the drying effect and cause failure.
10. The drying time refers to the time users choose or the system set the time automatically.
11. If there is some water in the detergent box when washing again, please take the detergent box out, clean the water and put the detergent in.
12. After drying, please wait a while to let the clothes cool down for safety.
13. Water will enter machine and drain for repeated times during drying to improve the drying effect, not the failure.
14. Some clothes are not fit to drying in washing machine like sponge latex, rubber clothes, silk or shoulder pad.
15. Clothes that contain oil or degreaser cannot be dried by washing machine, because they are volatile.
16. Sleeping bag, eiderdown, pillow and blanket will swell and block the air flow, so they are not fit to be dried.

After the drying program finished:

1. cancelling the Ag+ selection, the program finished
2. keeping the Ag+ selection, the program will keep operating for 4 hours

Non-fault conditions

The door can't open.	<ul style="list-style-type: none">● The program is running.● There are clothes between the door and door seals.
There is an odor.	<ul style="list-style-type: none">● There may be a smell of rubber because some components are made up of rubber.
There is too little water when wash and rinse.	<ul style="list-style-type: none">● Roller washing machine just needs a little water when operating.
No water inflowing.	<ul style="list-style-type: none">● Is the tap turned on?● Is the inlet pipe frozen?● Are the filters blocked?
Water inflows halfway	<ul style="list-style-type: none">● If the water level declines, the washer will supply water automatically.
Water outflows when washing.	<ul style="list-style-type: none">● Check if add the detergent with too much bubbles.
Remaining time changes	<ul style="list-style-type: none">● If clothes are off center when spin, spinning time will extend to correct the deviation.
There is abnormal noise when spin.	<ul style="list-style-type: none">● Check if the power line touches with cabinet.● Have the transport bolts been dismantled?● Are there some hairpins or coins in the roller?
The washer can't work after the failure of electricity.	<ul style="list-style-type: none">● The washer will stop working after the failure of electricity. When the power is restored, it still can't continue to work. Please press the power button and reset the program.

Troubleshooting guide

Phenomenon	check points	solutions
Washer can't start	<ul style="list-style-type: none"> ● Check if press the power button or start/pause button? ● Is the plug pulling out? ● Is there a power failure? ● Check if cut the leakage protector? 	Press the power button or start/pause button. Connect the plug. Please wait. Open the leakage protector.
Spinning screen shows "UE"	<ul style="list-style-type: none"> ● Check if disassemble the carriage bolt? ● Is the machine placed steadily? ● Are the clothes too small or light? ● Are the locknuts on under the feet tightened up? 	Disassemble the carriage bolt. Place the machine on a steady ground. Add more clothes. Tighten up the locknuts.
Water inflow screen shows "IE"	<ul style="list-style-type: none"> ● Check if turn the tap off? ● Is the water supply cut off or the water pressure too low? ● Are the water inlet pipes frozen? ● Are the filters blocked? 	Open the stopcock. Please wait. Use hot water to unfreeze the pipes. Take out the filters and clean them.
Water outflow screen shows "OE"	<ul style="list-style-type: none"> ● Are the outlet pipes placed too highly? ● Are the outlet pipes frozen? ● Are the outlet pipes blocked? ● Are the floor drain blocked? 	Please put away the outlet pipes and make sure the height within 1M. Use hot water to unfreeze the pipes. Take out the foreign matter and dredge the pipes. Clean the floor drain.
Door trouble screen shows "DE"	<ul style="list-style-type: none"> ● Make sure if start the washer without closing the door well. 	Make sure the door truly closed
Not heating, screen shows "LE"	<ul style="list-style-type: none"> ● Please pull out the plug and call for the after sale service 	
Keep water inletting without stop, screen shows "FE"	<ul style="list-style-type: none"> ● Due to the abnormal of water inlet valve and water level sensor 	Shut the water tap, pull out the plug and call for the after sale service
The wash drum does not running, screen shows "LE" or "CE"	<ul style="list-style-type: none"> ● Please pull out the plug and call for the after sale service 	
Too much bubble	<ul style="list-style-type: none"> ● If adding the amount of detergent is more than the suggested? ● If use the low bubble detergent which is especially for front loading washing machine? 	Add proper amount of detergent. Use the correct type of detergent.
The fault of water level sensor, the screen shows "PE"	<ul style="list-style-type: none"> ● If the water level sensor has fallen off or not? ● If the water level sensor pipe blocked or there is a big pressure? 	Tighten the sensor. Open the water pipe excluded congestion or pressure
Power off, the screen shows "PF"	<ul style="list-style-type: none"> ● Power off then power on, push the "power" button, the screen display "PF" to indicate that the power has powered off before. The machine can be in normal operation. 	To push the button of "Start/Pause" can continue the operations before power off. And the other operations can be processed.

Specification

Rated washing capacity	10.5kg
Rated spin capacity	10.5kg
Rated dry capacity	6.0kg
Rated voltage	220-240V~,50Hz
Rated washing input power	200W
Rated spinning input power	650W
Rated dry power	1500W
Rated heating input power	2000W
Maximum input power	2200W

