




Built-in Oven
User Manual

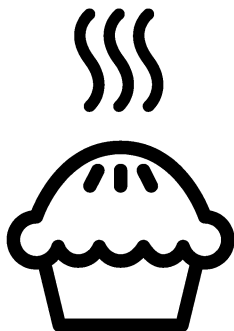

BB060B2SB

EN

285.4605.10/R.AE/29.06.2020

7786687704

Please read this user manual first!

 
 
 
 
 
Dear Customer,

Thank you for purchasing this Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Explanation of symbols

Throughout this user manual the following symbols are used:



Arçelik A.Ş.
Karaağaç caddesi No:2-6
34445 Sülüce/İstanbul/TURKEY
Made in TURKEY

This product was manufactured using the latest technology in environmentally friendly conditions.

TABLE OF CONTENTS

1 Important instructions and warnings for safety and environment 4

General safety	4
Electrical safety	4
Product safety	5
Intended use	7
Safety for children.....	7
Disposing of the old product.....	8
Package information	8

2 General information 9

Overview	9
Package contents	10
Technical specifications	11

3 Installation 12

Before installation	12
Installation and connection	13
Future Transportation.....	15

4 Preparation 16

Tips for saving energy	16
Initial use.....	16
Time setting	16
First cleaning of the appliance	17
Initial heating.....	17

5 How to operate the oven 18

General information on baking, roasting and grilling	18
How to operate the electric oven	19
Operating modes.....	21
How to operate the oven control unit	24
Using the keylock.....	26
Using the clock as an alarm.....	26
Cooking times table.....	27
Cooking guide functions	29
Settings menu.....	32
How to operate the grill.....	33
Cooking times table for grilling.....	33

6 Maintenance and care 34

General information.....	34
Cleaning the control panel	34
Cleaning the oven	34
Removing the oven door	36
Removing the door inner glass.....	37
Replacing the oven lamp.....	38

7 Troubleshooting 39

1 Important instructions and warnings for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

General safety

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised or instruction concerning use of the appliance by a responsible person for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- If the product is handed over to someone else for personal use or second-hand use purposes, the user manual, product labels and other relevant documents and parts should be also given.
- Installation and repair procedures must always be performed by Authorised Service Agents. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorised persons which may also void the warranty. Before

installation, read the instructions carefully.

- Do not operate the product if it is defective or has any visible damage.
- Ensure that the product function knobs are switched off after every use.

Electrical safety

- If the product has a failure, it should not be operated unless it is repaired by an Authorised Service Agent. There is the risk of electric shock!
- Only connect the product to a grounded outlet/line with the voltage and protection as specified in the “Technical specifications”. Have the grounding installation made by a qualified electrician while using the product with or without a transformer. The manufacturer shall not be liable for any problems arising due to the product not being earthed in accordance with the local regulations.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!
- The product must be disconnected during installation,

maintenance, cleaning and repairing procedures.

- If the power connection cable for the product is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Only use the connection cable specified in the “Technical specifications”.
- The appliance must be installed so that it can be completely disconnected from the mains supply. The separation must be provided by a switch built into the fixed electrical installation, according to construction regulations.
- If the electrical supply is restricted, means of all-pole disconnection must be accessible and incorporated in the fixed wiring in accordance with the wiring rules.
- Rear surface of the oven gets hot when it is in use. Make sure that the electrical connection does not contact the rear surface; otherwise, connections can get damaged.
- Do not trap the mains cable between the oven door and frame and do not route it over hot surfaces. Otherwise, cable

insulation may melt and cause fire as a result of short circuit.

- Any work on electrical equipment and systems should only be carried out by authorised and qualified persons.
- In case of any damage, switch off the product and disconnect it from the mains. To do this, turn off the fuse at home.
- Make sure that fuse rating is compatible with the product.

Product safety


- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- Never use the product when your judgment or coordination is impaired by the use of alcohol and/or drugs.
- Be careful when using alcoholic drinks in your dishes. Alcohol evaporates at high temperatures and may cause fire since it can ignite when it comes into contact with hot surfaces.
- **Food Poisoning Hazard:** Do not let food sit in oven for more than 1 hour before or after cooking. Doing so can result in food poisoning or sickness.

- Do not place any flammable materials close to the product as the sides may become hot during use.
- During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- Keep all ventilation slots clear of obstructions.
- Do not heat closed tins and glass jars in the oven. The pressure that would build-up in the tin/jar may cause it to burst.
- Do not place baking trays, dishes or aluminium foil directly onto the bottom of the oven. The heat accumulation might damage the bottom of the oven.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven glass door since they can scratch the surface, which may result in shattering of the glass.
- Do not use a steam cleaner to clean this appliance.
- (Varies depending on the product model.)

Placing the wire shelf and tray onto the wire racks properly

It is important to place the wire shelf and/or tray onto the rack properly. Slide the wire shelf or tray between 2 rails and make sure that it is balanced before

placing food on it (Please see the following figure).

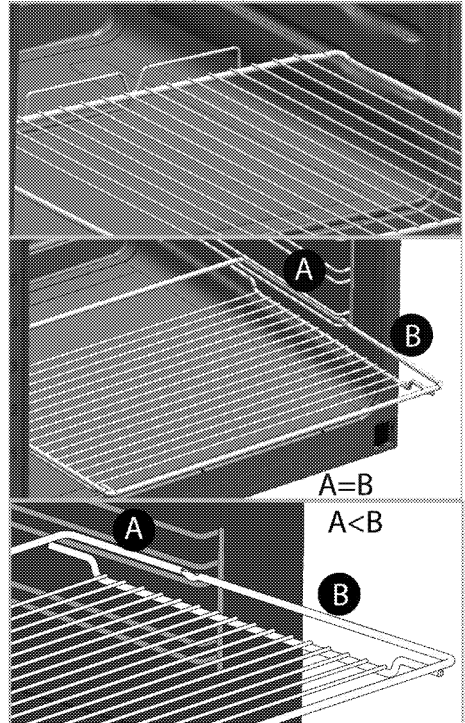

- Do not use the product if the front door glass removed or cracked.
- Do not use the oven handle to hang towels for drying. Do not hang up towel, gloves, or similar textile products when the grill function is at open door.
- Always use heat resistant oven gloves when putting in or removing dishes into/from the hot oven.
- Place the baking paper into the cooking pot or on to the oven accessory (tray, wire grill etc) together with the food and then insert all into the preheated oven.

Remove the excess parts of the baking paper overflowing from the accessory or the pot in order to prevent the risk of touching the oven's heating elements. Never use the baking paper in an operating temperature higher than the indicated value for the baking paper. Do not place the baking paper directly on the base of the oven.

- **WARNING:** Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- This oven must not be installed behind a decorative door in order to avoid overheating.
- Product must be placed directly on the floor. It must not be placed onto a base or a pedestal.

Prevention against possible fire risk!

- Ensure all electrical connections are secure and tight to prevent risk of arcing.
- Do not use damaged cables or extension cables.
- Ensure liquid or moisture is not accessible to the electrical connection point.

Intended use

- This product is designed for domestic use. Commercial use will void the guarantee.
- This appliance is for cooking purposes only. It must not be

used for other purposes, for example room heating.

- This product should not be used for warming the plates under the grill, drying towels, dish cloths etc. by hanging them on the oven door handles. This product should also not be used for room heating purposes.
- The manufacturer shall not be liable for any damage caused by improper use or handling errors.
- The oven can be used for defrosting, baking, roasting and grilling food.

Safety for children

- **WARNING:** Accessible parts will become hot when in use. Young children should be kept away.
- **WARNING:** Accessible parts may become hot when the grill in use. Children should be kept away.
- The packaging materials will be dangerous for children. Keep the packaging materials away from children. Please dispose of all parts of the packaging according to environmental standards.
- Electrical products are dangerous to children. Keep children away from the product when it is operating and do not allow them to play with the product.
- Do not place any items above the appliance that children may reach for.

- When the door is open, do not load any heavy object on it and do not allow children to sit on it. It may overturn or door hinges may get damaged.

Disposing of the old product

Compliance with the WEEE Directive and Disposing of the Waste Product:



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste

product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:


The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information


- Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 General information

Overview

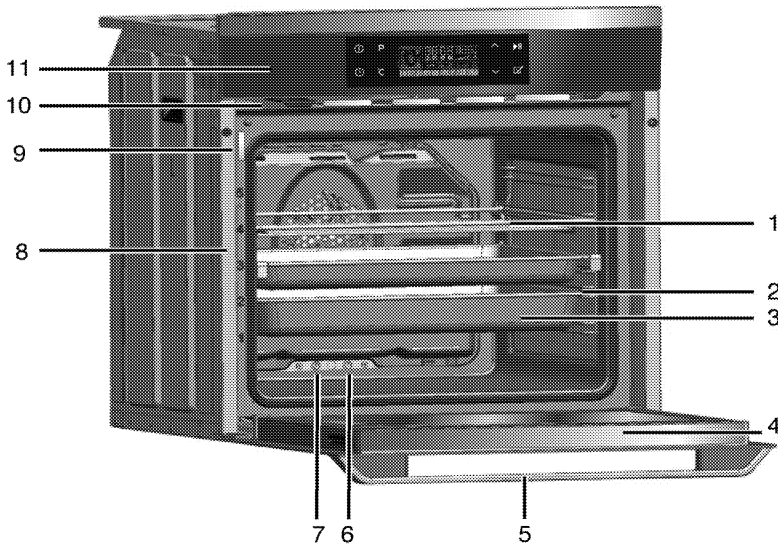

- | | | | |
|---|------------------|----|----------------------------|
| 1 | Wire shelf | 7 | Excessive water exit holes |
| 2 | Shelves | 8 | Shelf positions |
| 3 | Tray | 9 | Water level indicator |
| 4 | Front door | 10 | Pitcher |
| 5 | Handle | 11 | Control panel |
| 6 | Vapour exit pipe | | |

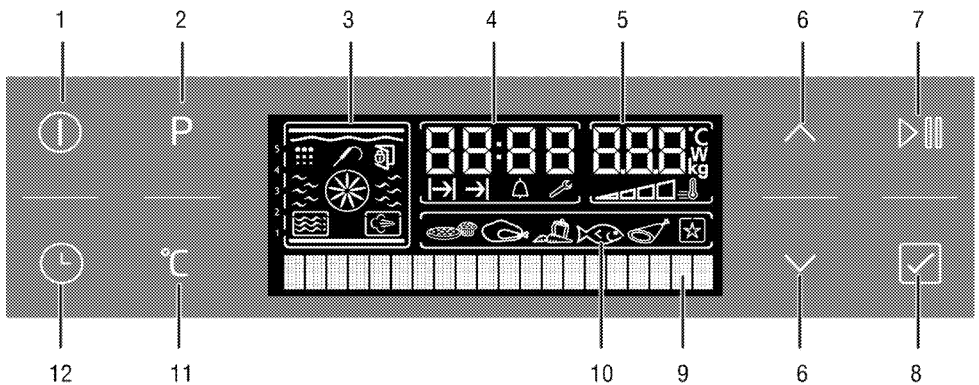

- | | | | |
|---|--|----|--|
| 1 | ON/OFF key | 7 | Start/stop cooking key |
| 2 | Program selection key | 8 | Convenience food menu selection key |
| 3 | Function display | 9 | Text display |
| 4 | Current time indicator field | 10 | Convenience food selection display |
| 5 | Temperature/weight indicator field | 11 | Temperature/weight/booster setting key |
| 6 | Temperature-time increase/decrease-navigate keys | 12 | Time and settings key |

Package contents




Accessories supplied can vary depending on the product model. Not every accessory described in the user manual may exist on your product.

1. **User manual**


2. **Standard tray**

Used for pastries, frozen foods and big roasts.

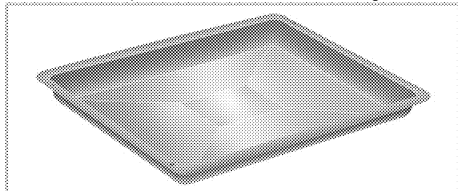



3. **Deep tray**

Used for pastries, large roasts, juicy dishes, and for collecting the fat while grilling.

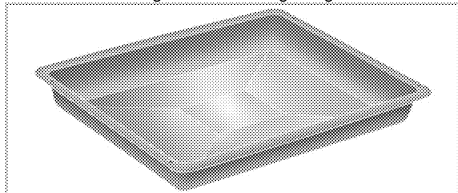


4. **Wire grill**

Used for roasting and for placing the food to be baked, roasted or cooked in casserole dishes to the desired rack.

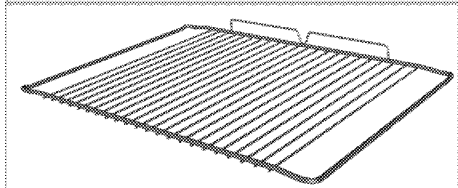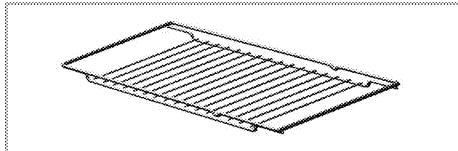

5. **Small wire shelf**



It is placed into the tray (if supplied) in order to collect the dripping fat while grilling so that the oven is kept clean.

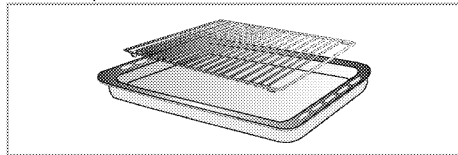

6. **Placing the wire shelf and tray onto the telescopic racks properly (This feature is optional. It may not exist on your product.)**

Telescopic racks allow you to install and remove the trays and wire shelf easily.

When using the tray and wire shelf with telescopic racks, make sure that the pins at the rear section of the telescopic rack stands against the edges of the wire shelf and tray.

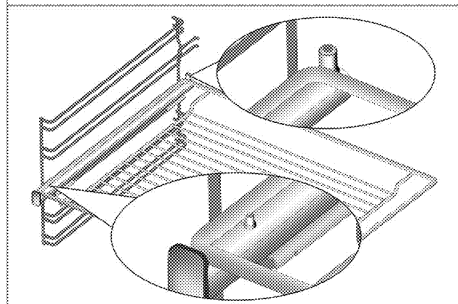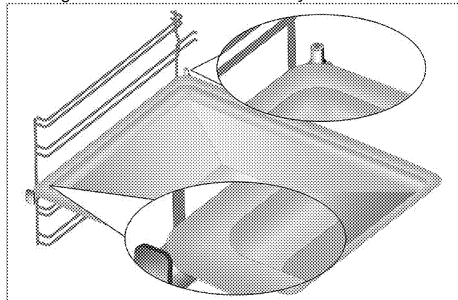

Technical specifications

Voltage / frequency	220-240 V ~ 50 Hz
Total power consumption	3.1 kW
Cable type / section	min.H05W-FG 3 x 1,5 mm ²
External dimensions (height / width / depth)	595 mm/594 mm/567 mm
Installation dimensions (height / width / depth)	**590 or 600 mm/560 mm/min. 550 mm
Main oven	Multifunction oven
Inner lamp	15/25 W
Grill power consumption	2.2 kW

Basics: Information on the energy label of electrical ovens is given in accordance with the EN 60350-1 / IEC 60350-1 standard. Those values are determined under standard load with bottom-top heater or fan assisted heating (if any) functions.
Energy efficiency class is determined in accordance with the following prioritization depending on whether the relevant functions exist on the product or not. 1-Cooking with eco-fan, 2- Turbo slow cooking, 3- Turbo cooking, 4- Fan assisted bottom/top heating, 5-Top and bottom heating.

** See. Installation, page 12.



Technical specifications may be changed without prior notice to improve the quality of the product.



Figures in this manual are schematic and may not exactly match your product.



Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with relevant standards. Depending on operational and environmental conditions of the product, these values may vary.

3 Installation

Product must be installed by a qualified person in accordance with the regulations in force. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorised persons which may also void the warranty.



Preparation of location and electrical installation for the product is under customer's responsibility.



DANGER:

The product must be installed in accordance with all local electrical regulations.



DANGER:

Prior to installation, visually check if the product has any defects on it. If so, do not have it installed.

Damaged products cause risks for your safety.

Before installation

The appliance is intended for installation in commercially available kitchen cabinets. A safety

distance must be left between the appliance and the kitchen walls and furniture. See figure (values in mm).

- Surfaces, synthetic laminates and adhesives used must be heat resistant (100 °C minimum).
- Kitchen cabinets must be set level and fixed.
- If there is a drawer beneath the oven, a shelf must be installed between oven and drawer.
- Carry the appliance with at least two persons.




Do not install the appliance next to refrigerators or freezers. The heat emitted by the appliance will lead to an increased energy consumption of cooling appliances.



The door and/or handle must not be used for lifting or moving the appliance.



If the appliance has wire handles, push the handles back into the side walls after moving the appliance.

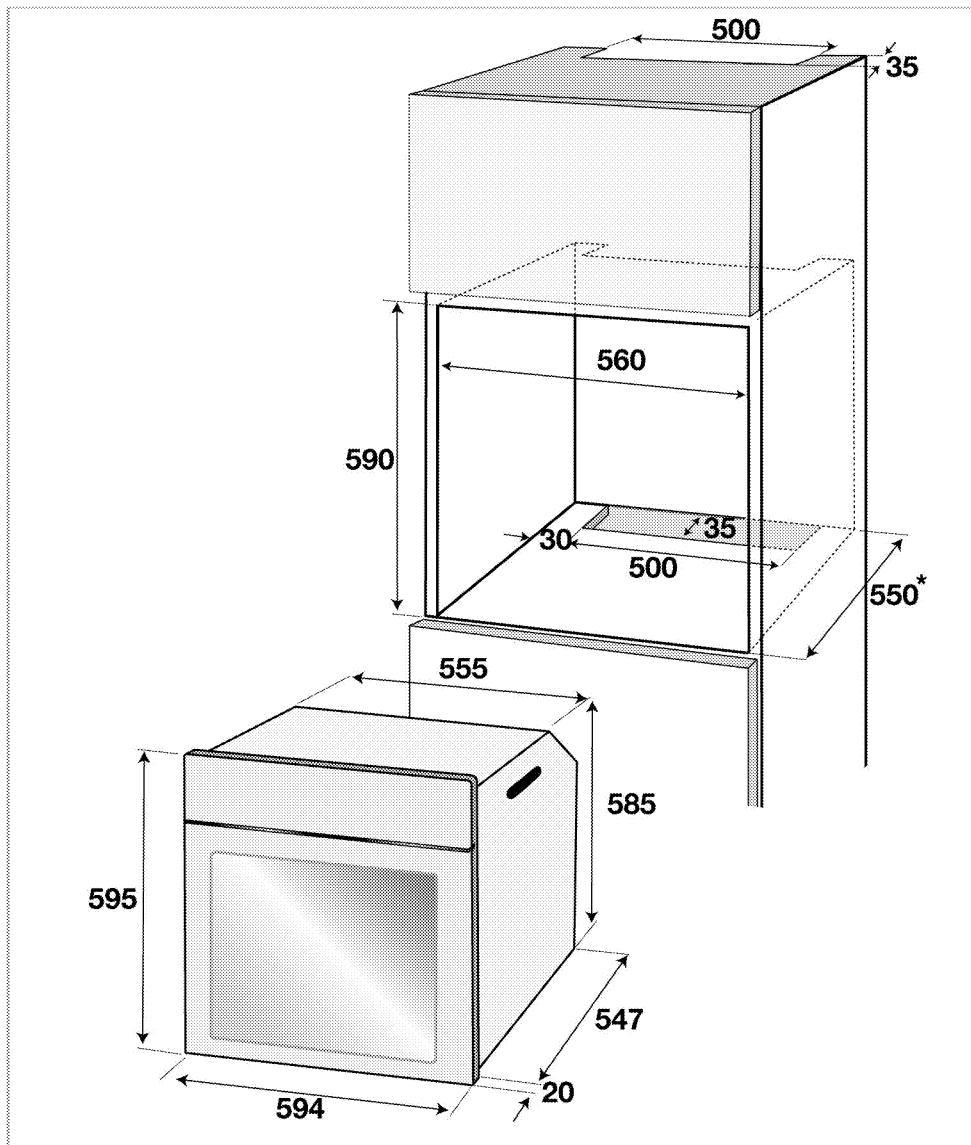

* min.

Installation and connection

- The product must be installed in accordance with all local gas and electrical regulations.

Electrical connection

Connect the product to a grounded outlet/line protected by a fuse of suitable capacity as stated in the "Technical specifications" table. Have the grounding installation made by a qualified electrician

while using the product with or without a transformer. The manufacturer shall not be liable for any damages that will arise due to using the product without a grounding installation in accordance with the local regulations.

**DANGER:**

The product must be connected to the mains supply only by an authorised and qualified person. The product's warranty period starts only after correct installation. Manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorised persons.

**DANGER:**

The power cable must not be clamped, bent or trapped or come into contact with hot parts of the product.

A damaged power cable must be replaced by a qualified electrician. Otherwise, there is risk of electric shock, short circuit or fire!

- Connection must comply with national regulations.
- The mains supply data must correspond to the data specified on the type label of the product. Open the front door to see the type label.
- Power cable of your product must comply with the values in "Technical specifications" table.

**DANGER:**

Before starting any work on the electrical installation, disconnect the product from the mains supply.

There is the risk of electric shock!

Connecting the power cable

1. If a power cable is not supplied together with your product, a power cable that you would select from the table (Technical specifications, page 11) in accordance with the electrical installation at your home must be connected to your product by following the instructions in cable diagram.


If it is not possible to disconnect all poles in the supply power, a disconnection unit with at least 3 mm contact clearance (fuses, line safety switches, contactors) must be connected and all the poles of this disconnection unit must be adjacent to (not above) the product in accordance with IEE directives. Failure to obey this instruction may cause operational problems and invalidate the product warranty.



Additional protection by a residual current circuit breaker is recommended.

2. Open the terminal block cover with a screwdriver.
3. Insert the power cable through the cable clamp below the terminal and secure it to the main body with the integrated screw on cable clamping component.

4. Connect the cables according to the supplied diagram.

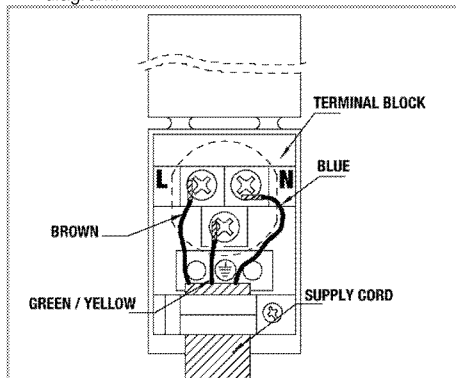


5. After completing the wire connections, close the terminal block cover.
6. Route the power cable so that it will not contact the product and get squeezed between the product and the wall.



Power cable must not be longer than 2 m because of safety reasons.


Installing the product

1. Slide the oven into the cabinet, align and secure it while making sure that the power cable is not broken and/or trapped.

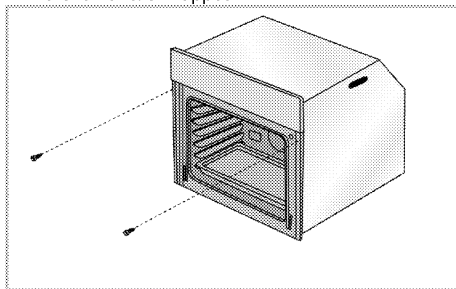

Secure the oven with 2 screws as illustrated.

For products with cooling fan (It may not exist on your product.)

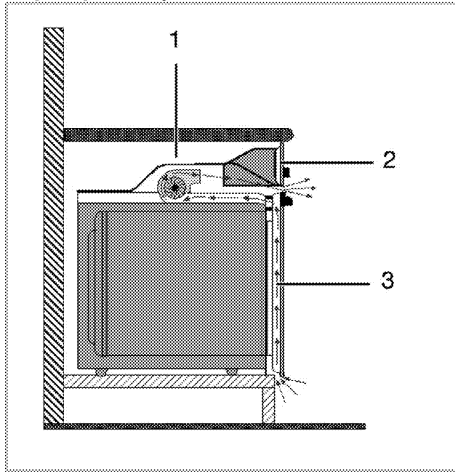

- 1 Cooling fan
- 2 Control panel
- 3 Door

The built-in cooling fan cools both the built-in cabinet and the front of the product.



Cooling fan continues to operate for about 20-30 minutes after the oven is switched off. If you have cooked by programming the timer of the oven, cooling fan will also be switched off at the end of the cooking time together with all functions.

Final check

1. Connect the power cable and switch on the product's fuse.
2. Check the functions.

Future Transportation

- Keep the product's original carton and transport the product in it. Follow the instructions on the carton. If you do not have the original carton, pack the product in bubble wrap or thick cardboard and tape it securely.
- To prevent the wire grill and tray inside the oven from damaging the oven door, place a strip of cardboard onto the inside of the oven door that lines up with the position of the trays. Tape the oven door to the side walls.
- Do not use the door or handle to lift or move the product.



Do not place any objects onto the product and move it in upright position. Do not move the product when there is water in it. You can move the product after draining the water in it.



Check the general appearance of your product for any damages that might have occurred during transportation.

4 Preparation

Tips for saving energy


The following information will help you to use your appliance in an ecological way, and to save energy:

- Use dark coloured or enamel coated cookware in the oven since the heat transmission will be better.
- While cooking your dishes, perform a preheating operation if it is advised in the user manual or cooking instructions.
- Do not open the door of the oven frequently during cooking.


- Try to cook more than one dish in the oven at the same time whenever possible. You can cook by placing two cooking vessels onto the wire shelf.
- Cook more than one dish one after another. The oven will already be hot.
- You can save energy by switching off your oven a few minutes before the end of the cooking time. Do not open the oven door.
- Defrost frozen dishes before cooking them.

Initial use

Time setting

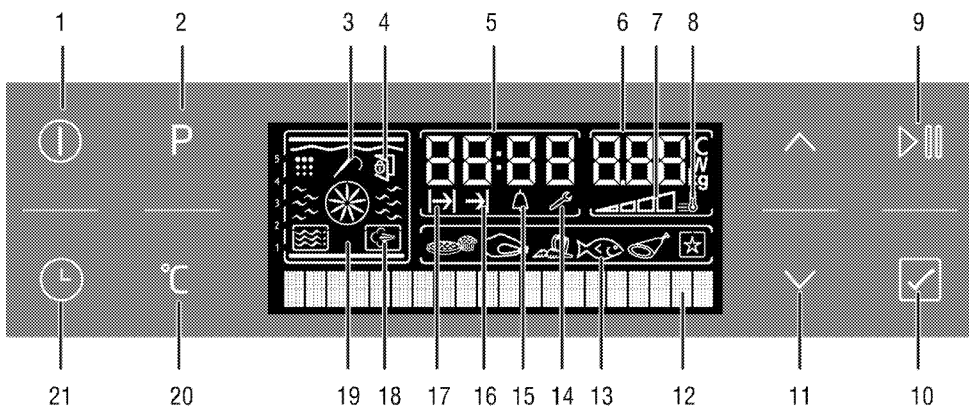

- | | |
|--|--|
| <p>1 ON/OFF key</p> <p>2 Program selection key</p> <p>3 Meat Probe symbol (*)</p> <p>4 Door Lock symbol (*)</p> <p>5 Current time indicator field</p> <p>6 Temperature/weight indicator field</p> <p>7 Oven Inner Temperature symbol</p> <p>8 Booster symbol (rapid pre-heating)</p> <p>9 Start/stop cooking key</p> <p>10 Convenience food menu selection key</p> <p>11 Temperature-time increase/decrease-navigate keys</p> <p>12 Text display</p> <p>13 Convenience food selection display</p> <p>14 Settings symbol</p> <p>15 Alarm symbol</p> <p>16 End of Cooking Time symbol</p> <p>17 Cooking Time symbol</p> <p>18 Steam Cooking symbol (*)</p> | <p>19 Function display</p> <p>20 Temperature-Weight and Rapid Heating Setting key</p> <p>21 Time and settings key</p> <p>* (Varies depending on the product model.)</p> <p>Plug in the power cable and switch on the product's fuse.</p> <p>You have to set the language before setting the time. Set the language</p> |
|--|--|

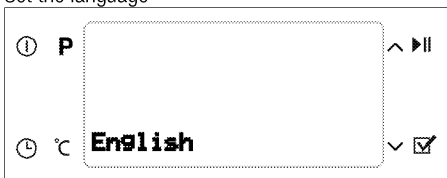


When you switch on the oven for the first time, "English" appears on the Text display (12). Press or (11) lightly to select the desired language. (10)

Press lightly to confirm the language selection.



Language setting screen will appear only during the initial startup. Use Settings menu to change the language. Settings menu, page 32.

Set the time

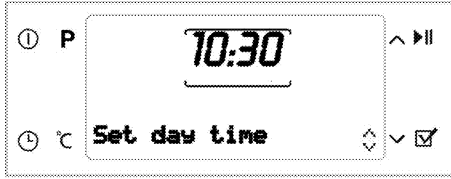

After selecting the language, "Time setting" appears on the Text display (12). Press or (11) lightly to enter the current time.



Before you can use the oven, the time must be set. If the time is not set, Settings symbol (14) will remain lit. It will disappear once the time is set.

First cleaning of the appliance



The surface might get damaged by some detergents or cleaning materials.
Do not use aggressive detergents, cleaning powders/creams or any sharp objects during cleaning.
Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

1. Remove all packaging materials.
2. Wipe the surfaces of the appliance with a damp cloth or sponge and dry with a cloth.

Initial heating

Heat up the product for about 30 minutes and then switch it off. Thus, any production residues or layers will be burnt off and removed.



WARNING

Hot surfaces cause burns!
Product may be hot when it is in use. Never touch the hot burners, inner sections of the oven, heaters and etc. Keep children away. Always use heat resistant oven gloves when putting in or removing dishes into/from the hot oven.

Electric oven

1. Take all baking trays and the wire grill out of the oven.
2. Close the oven door.
3. Select Static position.
4. Select the highest grill power; See How to operate the electric oven, page 19.
5. Operate the oven for about 30 minutes.
6. Turn off your oven; See How to operate the electric oven, page 19

To clean the steam system:

1. Take all baking trays and the wire grill out of the oven.
2. Close the oven door.
3. Select "Steam + Fan heating" function.
4. Add 350 cc water into the Pitcher (2). See, Operating modes, page 21- "Steam + Fan heating" function usage.
5. Run the oven for around one hour. Touch the key whenever "Press to spray steam" appears on the display.
6. Turn off the oven; see, How to operate the electric oven, page 19

Grill oven

1. Take all baking trays and the wire grill out of the oven.
2. Close the oven door.
3. Select the highest grill power; see How to operate the grill, page 33.
4. Operate the grill about 15 minutes.
5. Turn off your grill; see How to operate the grill, page 33



Smoke and smell may emit for a couple of hours during the initial operation. This is quite normal. Ensure that the room is well ventilated to remove the smoke and smell. Avoid directly inhaling the smoke and the smell that emits.

5 How to operate the oven

General information on baking, roasting and grilling



WARNING

Hot surfaces cause burns!

Product may be hot when it is in use. Never touch the hot burners, inner sections of the oven, heaters and etc. Keep children away. Always use heat resistant oven gloves when putting in or removing dishes into/from the hot oven.



DANGER:

Be careful when opening the oven door as steam may escape.

Exiting steam can scald your hands, face and/or eyes.

Tips for baking

- Use non-sticky coated appropriate metal plates or aluminum vessels or heat-resistant silicone moulds.
- Make best use of the space on the rack.
- Place the baking mould in the middle of the shelf.
- Select the correct rack position before turning the oven or grill on. Do not change the rack position when the oven is hot.
- Keep the oven door closed.

Tips for roasting

- Treating whole chicken, turkey and large piece of meat with dressings such as lemon juice and black pepper before cooking will increase the cooking performance.

- It takes about 15 to 30 minutes longer to roast meat with bones when compared to roasting the same size of meat without bones.
- Each centimeter of meat thickness requires approximately 4 to 5 minutes of cooking time.
- Let meat rest in the oven for about 10 minutes after the cooking time is over. The juice is better distributed all over the roast and does not run out when the meat is cut.
- Fish should be placed on the middle or lower rack in a heat-resistant plate.

Tips for grilling

When meat, fish and poultry are grilled, they quickly get brown, have a nice crust and do not get dry. Flat pieces, meat skewers and sausages are particularly suited for grilling as are vegetables with high water content such as tomatoes and onions.

- Distribute the pieces to be grilled on the wire shelf or in the baking tray with wire shelf in such a way that the space covered does not exceed the size of the heater.
- Slide the wire shelf or baking tray with grill into the desired level in the oven. If you are grilling on the wire shelf, slide the baking tray to the lower rack to collect fats. Add some water in the tray for easy cleaning.




Foods that are not suitable for grilling carry the risk of fire. Only grill food which is suitable for intensive grilling heat.

Do not place the food too far in the back of the grill. This is the hottest area and fatty food may catch fire.

How to operate the electric oven

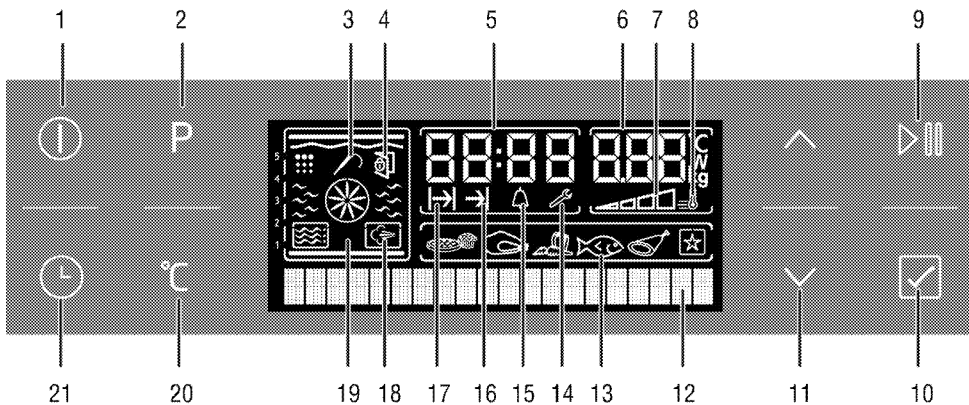

Control panel




- 1 ON/OFF key
- 2 Program selection key
- 3 Meat Probe symbol (*)
- 4 Door Lock symbol (*)
- 5 Current time indicator field
- 6 Temperature/weight indicator field
- 7 Oven Inner Temperature symbol
- 8 Booster symbol (rapid pre-heating)
- 9 Start/stop cooking key
- 10 Convenience food menu selection key
- 11 Temperature-time increase/decrease-navigate keys
- 12 Text display
- 13 Convenience food selection display
- 14 Settings symbol
- 15 Alarm symbol
- 16 End of Cooking Time symbol
- 17 Cooking Time symbol
- 18 Steam Cooking symbol (*)
- 19 Function display
- 20 Temperature-Weight and Rapid Heating Setting key
- 21 Time and settings key
- * (Varies depending on the product model.)

Adjust the current time

You can set the time again when desired.


1. To set the current time, press Time and Settings key (21) three times until "Set day time" appears on the Text display (12) while the oven is switched off.
2. Press  or  (11) lightly to set the current time.

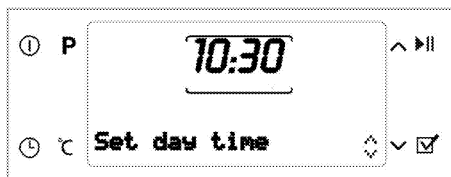



i During power outages that last shorter than 20 minutes, time setting will remain stored. Current time can not be changed when any of the oven functions is in use.

Select temperature and operating mode

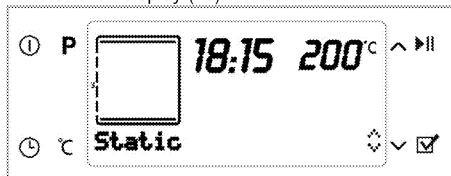

1. Press On/Off key (1) to switch on the oven. When the oven switches on, top and bottom heating icons appear in Function display (19) and "Static" appears in Text display (12). Recommended temperature appears in Temperature/Weight indicator field (6). Active heaters and recommended tray position appears in the Function display (19).




i Oven will switch off automatically within 20 seconds if no oven setting is made on Function display (19).


2. Press  or  (11) to select the desired operating mode.

 
After the function is selected, "Temperature", "Cook time", "Cook end time" and "Booster" (rapid heating) can be set.

3. 2. Press Temperature - Weight and Rapid Heating Setting key (20) once to reach the temperature display.
4. Press  or  (11) until the desired temperature appears in the Temperature/Weight Indicator field (6).

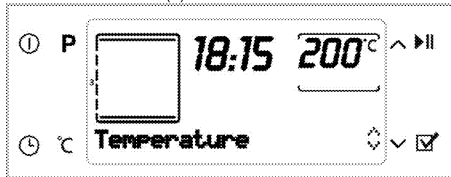

5. Press Start/stop Cooking key (9) to start the oven with the selected function. "Cooking" appears on the display.

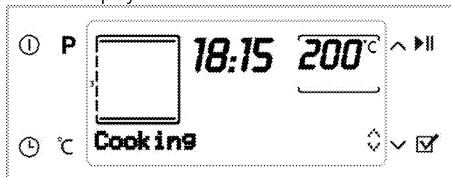

 If the oven door is opened during cooking, "Door open" warning appears on the display.


Switching off the electric oven

Press On/Off key (1) to switch off the oven.

Rack positions (For models with wire shelf)





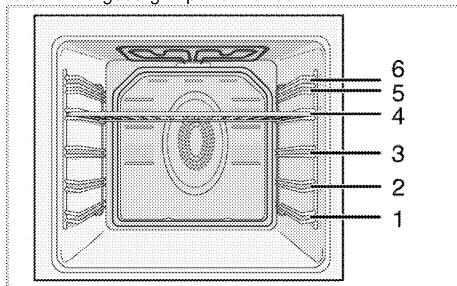


It is important to place the wire shelf onto the side rack correctly. Wire shelf must be inserted between the side racks as illustrated in the figure.


Do not let the wire shelf stand against the rear wall of the oven. Slide your wire shelf to the front section of the rack and settle it with the help of the door in order to obtain a good grill performance.



Function table

Function table indicates the functions that can be used in the oven and their respective maximum and minimum temperatures. Recommended temperature is displayed when the function is selected.

	Functions vary depending on the product model.
	Due to safety reasons, maximum time that can be set for "Cook time" is limited with 6 hours at all positions apart from "Warm Keeping" and "Low Temperature Cooking" functions.
	While making any adjustment, related symbols will flash on the display.
	Program will be cancelled in case of power failure. You must reprogram the oven.
	Current time cannot be set while the oven is operating in any function, or if semi-automatic or full automatic programming is made on the oven.
	If no button is pressed within 20 seconds while making any settings on the oven, it will switch itself off.
	Even if the oven is switched off, oven lamp lights up when the oven door is opened.

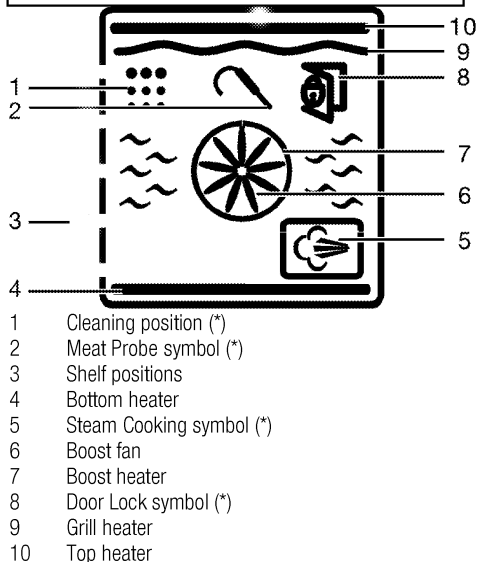



Functions vary depending on the product model!

Function	Temperature range (°C)
Static	40-280
Static + Fan	40-280
Fan assisted cooking /Surf	40-250
Multi (3D)	40-250
Pizza	40-250
Full grill+Fan (fan assisted large grill)	40-280
Full Grill	40-280
Grill	40-280
Slow cooking/Eco Fan Heating	160-220
Bottom heating	40-220
Warm keeping	40-100
Low temperature cooking	50-150
Defrost	-
Steam + Fan heating	150-280
Steam cleaning	-


* Functions vary depending on the product model.

Operating modes

The order of operating modes shown here may be different from the arrangement on your product.

Static

Food is heated simultaneously from the top and bottom. It is suitable for cakes, pastries, or cakes and casseroles in baking moulds. Cook with one tray.

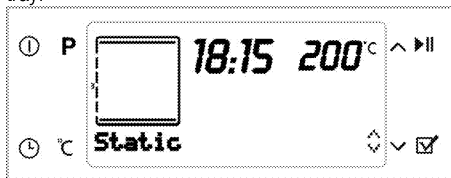


Static+fan

Hot air heated by the bottom and top heaters is evenly distributed throughout the oven rapidly by means of the fan. Cook with one tray.



Fan assisted cooking / Surf function (Side Venting Function)

Hot air heated by the rear heater is evenly distributed throughout the oven rapidly by means of the fan. It is suitable for cooking your meals in different rack levels and preheating is not required in most cases. Suitable for cooking with multi trays.

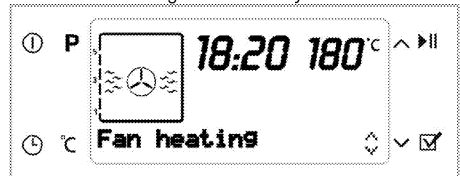

Multi (3-D) cooking

Top heating, bottom heating and fan assisted heating are in operation. Food is cooked evenly and quickly all around. Cook with one tray.




Fan heat.+bottom

Bottom heating and fan assisted heating (in the rear wall) are in operation. Suitable for baking pizza.



Full grill+Fan


Hot air heated by the full grill is distributed very fast in the oven by means of the fan. It is suitable for grilling large amount of meat.

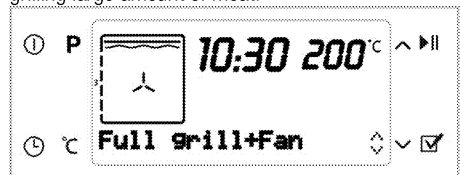

- Put big or medium-sized portions in correct rack position under the grill heater for grilling.
- Turn the food after half of the grilling time.

Full grill


Large grill at the ceiling of the oven is in operation. It is suitable for grilling large amount of meat.

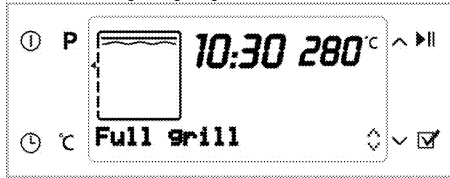

- Put big or medium-sized portions in correct rack position under the grill heater for grilling.
- Turn the food after half of the grilling time.

Grill

Small grill at the ceiling of the oven is in operation. Suitable for grilling and gratin dishes.

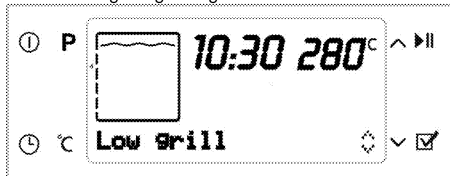

- Put small or medium-sized portions in correct rack position under the grill heater for grilling.
- Turn the food after half of the grilling time.

Eco Fan Heating

To save power, you can use this function instead of the cooking operations that you would perform by using Fan Heating at 160-220 °C temperature range. However, the cooking time will increase a little bit.

Cooking times related to this function are indicated in "Eco Fan Heating" table.



Bottom Heating

Only bottom heating is in operation. It is suitable for pizza and for subsequent browning of food from the bottom.

Bottom Heating




Warm keeping

Used for keeping food at a temperature ready for serving for a long period of time.



Low temperature cooking

Food is heated simultaneously from the top and bottom. It is suitable for slow-cooking of roasted/seared pieces of meat (veal, lamb, poultry etc.) in an open container at low temperature. This function ensures that the meat is juicy and soft on the inside. Please use hygienically suitable types of meat. On the hob, grill etc., pre-roast/sear all surfaces of the meat in a hot pan. You can cook the pre-roasted/seared meat with the "low temperature cooking" function for a long time. Cook with one tray only.

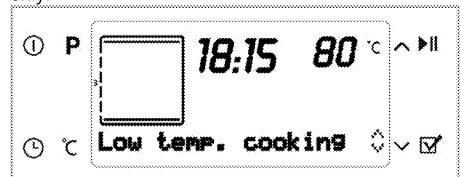

Defrost

The oven is not heated. Only the fan (in the rear wall) is in operation.

Suitable for thawing frozen granular food slowly at room temperature and cooling down the cooked food.



Steam Turbo

In addition to the cooking operations that you perform by using Fan Heating between 150-280°C, you will also have the option of applying steam to the dishes after the oven reaches the set temperature. But, the cooking time will increase a little bit.

This option allows you to cook dishes that fit to your own taste apart from the automatic menus.



1. Press the key (1).
2. Put the dish into the oven.
3. Press \wedge or \vee (11) to select "Steam + Fan heating" function. Then, Press Start/Stop Cooking key (9) to start cooking. If there is no water in your system, "Fill with 350 ml water" appears on the display. Fill in water using the water container supplied with your oven until you hear the audio warning. See. Adding water. "Door open" will be displayed when you fill in enough amount of water.




Do not use any other liquids apart from potable water in the steam system.

Close the door and "Cooking" is displayed. "Press



to spray steam" appears when the set

temperature is attained. Touch the key  to deliver steam into the oven for 5 minutes. You can apply steam for 3 times whenever you want during the cooking time.



Remaining water in the system must be drained at the end of cooking. See. Cooking guide functions, page 29, Draining water.

Steam cleaning



Easy steam cleaning

(This feature is optional. It may not exist on your product.)


This function enables the dirt (having waited not for too long) in the oven to get soft and be cleaned easily. Please see "Cleaning - easy steam cleaning" section for easy steam cleaning.



Steam cleaning


This mode is for softening dirt inside the oven after you have completed cooking. See Steam Cleaning, .

How to operate the oven control unit

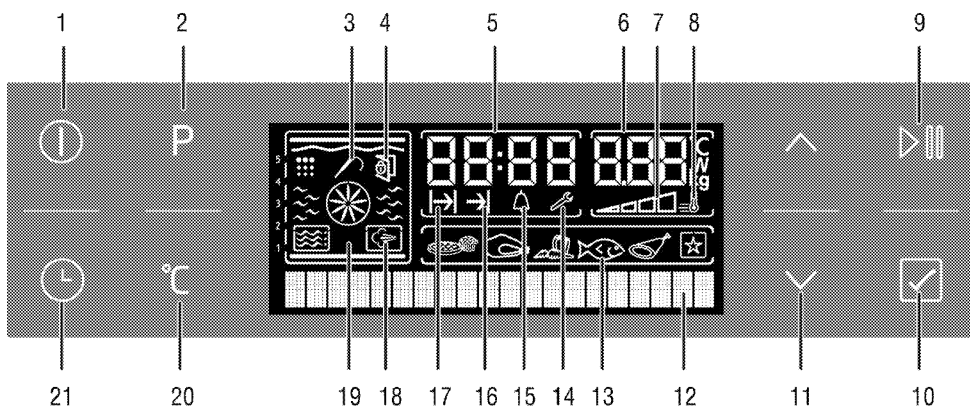

- 1 ON/OFF key
 - 2 Program selection key
 - 3 Meat Probe symbol (*)
 - 4 Door Lock symbol (*)
 - 5 Current time indicator field
 - 6 Temperature/weight indicator field
 - 7 Oven Inner Temperature symbol
 - 8 Booster symbol (rapid pre-heating)
 - 9 Start/stop cooking key
 - 10 Convenience food menu selection key
 - 11 Temperature-time increase/decrease-navigate keys
 - 12 Text display
 - 13 Convenience food selection display
 - 14 Settings symbol
 - 15 Alarm symbol
 - 16 End of Cooking Time symbol
 - 17 Cooking Time symbol
 - 18 Steam Cooking symbol (*)
 - 19 Function display
 - 20 Temperature-Weight and Rapid Heating Setting key
 - 21 Time and settings key
- * (Varies depending on the product model.)

2. Press or (11) to select the desired function.
3. For cooking time, press Time and Settings button (21) for once to highlight "Cook time" on the Text display (12). Cooking Time symbol (17) flashes at the same time.
4. Press or (11) lightly to set the cooking time. Cooking Time symbol (17) is displayed after setting the cooking time.

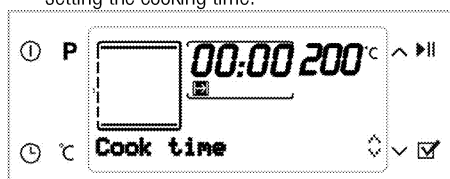


5. Put your dish into the oven and close the door.
 6. For cooking temperature, press Temperature - Weight and Rapid Heating Setting key (20) for once to highlight "Temperature" on the Text display.
 7. Press or (11) to set the temperature.
 8. Press Start/Stop Cooking key (9) to start cooking. "Cooking" appears on the display.
- » The oven will be heated up to the preset temperature and will maintain this temperature until the end of the cooking time you selected. The oven lamp is lit during the cooking process.

Enable semi-automatic operation

In this operation mode, you may adjust the time period during which the oven will operate (cook time).



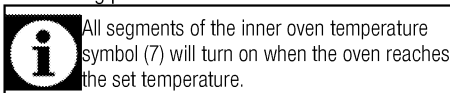

1. Press On/Off button (1) to switch on the oven.








9. After the cooking is completed, "Good appetite... Press ▷⏏ to continue" appears on the display and alarm signal is heard.
10. To stop the alarm signal, just press any key. If you press Start/Stop Cooking key (9), oven continues to operate in the selected mode. Alarm stops.
11. If you do not press Start/Stop Cooking key (9), oven switches off automatically and current time is displayed.

Switch on fully automatic operation

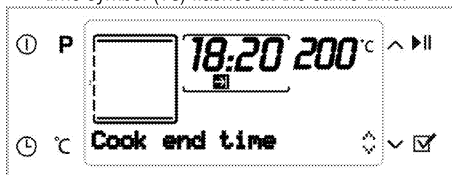
In this operation mode you can adjust cooking time and end of cooking time.

1. Press On/Off key (1) to switch on the oven.
 2. Press  or  (11) to select the desired function.
 3. For cooking time, press Time and Settings key (21) for once to highlight "Cook time" on the Text display (12). Cooking Time symbol (17) flashes at the same time.
 4. Press  or  (11) lightly to set the cooking time.
- » Cooking Time symbol (17) is displayed after setting the cooking time.
5. For end of cooking time, press Time and Settings key (21) with short intervals until "Cook end time" appears on the Text display (12). End of cooking time symbol (16) flashes at the same time.




6. Press  or  (11) to set the end of cooking time.
- » After setting the end of cooking time, End of Cooking Time symbol (16) appears on the display.
7. Put your dish into the oven and close the door.
 8. For cooking temperature, press Temperature - Weight and Rapid Heating Setting key (20) for once to highlight "Temperature" on the Text display. Press  or  (11) to set the temperature.
 9. Press Start/Stop Cooking key (9) to start cooking. "Waiting" appears on the display.
- » Oven timer automatically calculates the startup time for cooking by deducting the cooking time from the end of cooking time you have set.
10. Selected operation mode is activated when the startup time of cooking has come, "Cooking" appears on the display and the oven is heated up to the set temperature. It maintains this

 temperature until the end of the cooking time. The oven lamp is lit during the cooking process.




11. After the cooking is completed, "Good appetite... Press ▷⏏ to continue" appears on the display and alarm signal is heard.
12. To stop the alarm signal, just press any key. If you press Start/Stop Cooking key (9), oven continues to operate in the selected mode. Alarm stops.
13. If you do not press Start/Stop Cooking key (9), oven switches off automatically and current time is displayed.

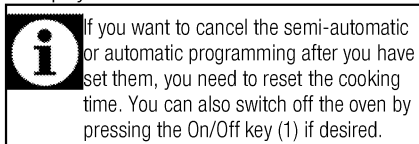


Setting the booster


Use Booster (rapid pre-heating) function to make the oven reach the desired temperature faster.

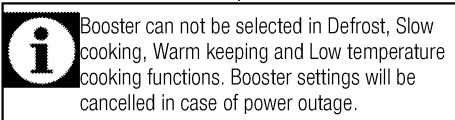

Select the desired cooking function and then:

 1. Press Temperature - Weight and Rapid Heating Setting key (20) with short intervals until "Booster passive" appears on the display.
2. Press  (11) to display 1 "Booster active". Booster symbol (8) remains lit.



- » Booster symbol (8) disappears as soon as the oven reaches the desired temperature and oven resumes operating in the function it was in before the Booster function.
3. To cancel Booster function, press Temperature - Weight and Rapid Heating Setting key (20) with short intervals until "Booster active" appears on the display.
 4. Press  (11) to display 1 "Booster passive".



» When you return to the function selection display after this process, Booster symbol (8) disappears.

 
Using the keylock


You can prevent oven from being intervened with by activating the Keylock function.



Keylock can be used either when the oven is operating or not. Oven can be switched off by pressing the On/Off button (1) even when the keylock is activated while the oven is operating.

Activating the keylock

1. Press Time and Settings button (21) with short intervals until Key lock passive appears on the display.
2. Press  (11) to activate the keylock. After activating the keylock, "Key lock active" will appear on the display.

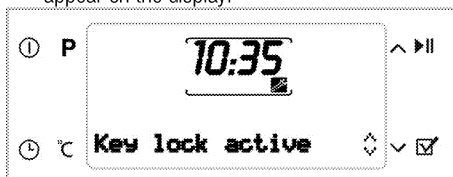



» After activating the keylock, "Keylock active" warning will appear on the display when you press any key (except ).



Oven keys are not functional when the Keylock function is activated. Keylock will not be cancelled in case of power outage.

 Deactivating the keylock

1. Press  (11) to deactivate the keylock. "Key lock passive" appears on the display.

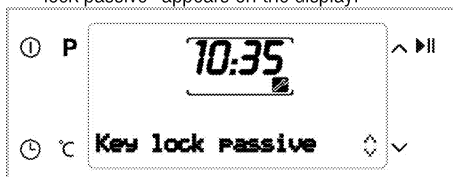

Using the clock as an alarm

You can use the clock of the product for any warning or reminder apart from the cooking programme.

The alarm clock has no influence on the functions of the oven. It is only used as a warning. For example,


 
this is useful when you want to turn food in the oven at a certain point of time. Alarm clock will give a signal once the time you set is over.




Maximum alarm time can be 23 hours and 59 minutes.

To set the alarm:



1. Press Time and Settings button (21) with short intervals until Alarm symbol (15) appears on the display.
2. Press  or  (11) to set the time. Alarm symbol (15) remains lit after setting the alarm time.
3. After the alarm time is finished, alarm symbol will start flashing and an alarm signal is heard.
4. Press any key to stop the alarm.

To cancel the alarm:

1. Press Time and Settings button (21) with short intervals until Alarm symbol (15) appears on the display.
2. Press  (11) until "00:00" appears on the display.

Cooking times table








The timings in this chart are meant as a guide. Timings may vary due to temperature of food, thickness, type and your own preference of cooking.

Baking and roasting



 













1st rack of the oven is the bottom rack.

Dish	Cooking level number	Accessory to use	Operating mode	Rack position	Temperature (°C)	Cooking time (approx. in min.)
Cakes in tray	One level	Standard tray*		3	180	25 ... 30
Cakes in mould	One level	Cake mold on wire grill**		2	180	50 ... 60
Small cakes	One level	Standard tray*		3	160	25 ... 35
	One level	Standard tray*		3	150	30 ... 40
	2 levels	1-Pastry tray* 3-Standard tray*		1 - 3	150	30 ... 45
	3 levels	1-Deep tray* 3-Pastry tray* 5-Standard tray*		1 - 3 - 5	150	30 ... 45
Sponge cake	One level	Round springform pan with a diameter of 26 cm on wire grill**		3	160	25 ... 35
	One level	Round springform pan with a diameter of 26 cm on wire grill**		3	150	35 ... 45
	2 levels	1-Round springform pan with a diameter of 26 cm on wire grill** 4-Round springform pan with a diameter of 26 cm on pastry tray**		1 - 4	150	35 ... 45
	One level	Pastry tray*		3	180	25 ... 30
Cookies	One level	Pastry tray*		3	180	25 ... 30
	2 levels	1-Pastry tray* 3-Standard tray*		1 - 3	170	35 ... 45
	3 levels	1-Deep tray* 3-Pastry tray* 5-Standard tray*		1 - 3 - 5	170	35 ... 45
	Dough pastry	One level	Standard tray*		2	200
	2 levels	1-Pastry tray* 5-Standard tray*		1 - 5	200	45 ... 55
	3 levels	1-Deep tray* 3-Pastry tray* 5-Standard tray*		1 - 3 - 5	200	45 ... 55
Rich pastry	One level	Standard tray*		2	200	25 ... 35
	2 levels	1-Pastry tray* 3-Standard tray*		1 - 3	200	35 ... 45
	3 levels	1-Deep tray* 3-Pastry tray* 5-Standard tray*		1 - 3 - 5	200	35 ... 45
	Leaven	One level	Standard tray*		2	200
Lasagna	One level	Glass/metal rectangular pan on wire grill**		2 - 3	200	30 ... 40
Pizza	One level	Standard tray*		2	200 ... 220	15 ... 20
	One level	Standard tray*		3	200	10 ... 15
Beef steak (whole) / Roast	One level	Standard tray*		3	25 min. 250/max then 180 ... 190	100 ... 120
Leg of Lamb (casserole)	One level	Standard tray*		3	25 min. 250/max then 190	70 ... 90
	One level	Standard tray*		3	25 min. 250/max then 190	60 ... 80
	Roasted	One level	Standard tray*		2	15 min. 250/max

chicken (1,8-2 kg)					then 180 ... 190	
	One level	Standard tray*		2	15 min. 250/max then 180 ... 190	60 ... 80
Turkey (5.5 kg)	One level	Standard tray*		1	25 min. 250/max then 180 ... 190	150 ... 210
	One level	Standard tray*		1	25 min. 250/max then 180 ... 190	150 ... 210
Fish	One level	Standard tray*		3	200	20 ... 30
	One level	Standard tray*		3	200	20 ... 30
It is suggested to perform preheating for all foods.						
* These accessories may not be supplied with the product.						
** These accessories are not supplied with the product. They are commercially available accessories.						

Cooking table for test meals

Meals in this cooking table are prepared according to EN 60350-1 to make it easier for control institutes to test the product

Dish	Cooking level number	Accessory to use	Operating mode	Rack position	Temperature (°C)	Cooking time (approx. in min.)
Shortbread	One level	Standard tray*		3	140	20 ... 30
	One level	Standard tray*		3	140	20 ... 30
	2 levels	1-Standard tray* 3-Pastry tray*		1 - 3	140	20 ... 30
	3 levels	1-Standard tray* 3-Pastry tray* 5-Deep tray*		1 - 3 - 5	140	25 ... 35
Small cakes	One level	Standard tray*		3	160	25 ... 35
	One level	Standard tray*		3	150	30 ... 40
	2 levels	1-Pastry tray* 3-Standard tray*		1 - 3	150	30 ... 45
	3 levels	1-Deep tray* 3-Pastry tray* 5-Standard tray*		1 - 3 - 5	150	30 ... 45
Sponge cake	One level	Round springform pan with a diameter of 26 cm on wire grill**		3	160	25 ... 35
	One level	Round springform pan with a diameter of 26 cm on wire grill**		3	150	35 ... 45
	2 levels	1-Round springform pan with a diameter of 26 cm on wire grill** 4-Round springform pan with a diameter of 26 cm on pastry tray**		1 - 4	150	35 ... 45
Apple pie	One level	Round black metal dish with a diameter of 20 cm on wire grill**		2	180	55 ... 65
	One level	Round black metal dish with a diameter of 20 cm on wire grill**		3	180	50 ... 60
	2 levels	2-Round black metal dish with a diameter of 20 cm on wire grill** 4-Round black metal dish with a diameter of 20 cm on pastry tray**		2 - 4	180	50 ... 60
It is suggested to perform preheating for all foods.						
* These accessories may not be supplied with the product.						
** These accessories are not supplied with the product. They are commercially available accessories.						

Eco Fan Heating



Do not change the cooking temperature after cooking starts in Eco Fan Heating mode.



Do not open the door during cooking in the Eco Fan Heating mode.

Dish	Cooking level number	Accessory to use	Rack position	Temperature (°C)	Cooking time (approx. in min.)
Small cakes	One level	Standard tray*	3	160	40 ... 50
Cookies	One level	Standard tray*	2	200	30 ... 35
Dough pastry	One level	Standard tray*	2	200	40 ... 45
Rich pastry	One level	Standard tray*	2	200	40 ... 45

* These accessories may not be supplied with the product.

Tips for baking cake

- If the cake is too dry, increase the temperature by 10°C and decrease the cooking time.
- If the cake is wet, use less liquid or lower the temperature by 10°C.
- If the cake is too dark on top, place it on a lower rack, lower the temperature and increase the cooking time.
- If cooked well on the inside but sticky on the outside use less liquid, lower the temperature and increase the cooking time.

Tips for baking pastry

- If the pastry is too dry, increase the temperature by 10°C and decrease the cooking time. Dampen the layers of dough with a sauce composed of milk, oil, egg and yoghurt.
- If the pastry takes too long to bake, pay care that the thickness of the pastry you have prepared does not exceed the depth of the tray.
- If the upper side of the pastry gets browned, but the lower part is not cooked, make sure that the amount of sauce you have used for the pastry is not too much at the bottom of the pastry. Try to scatter the sauce equally between the dough layers and on the top of the pastry for an even browning.



Cook the pastry in accordance with the mode and temperature given in the cooking table. If the bottom part is still not browned enough, place it on one lower rack next time.

Tips for cooking vegetables

- If the vegetable dish runs out of juice and gets too dry, cook it in a pan with a lid instead of a tray. Closed vessels will preserve the juice of the dish.
- If a vegetable dish does not get cooked, boil the vegetables beforehand or prepare them like canned food and put in the oven.

For the best cooking result Fan assisted heating/Fan heating/Surf function(Side Venting Function):

- You can cook foods made of dense dough such as buns, cake in paper, cookies or biscuits simultaneously in 1, 2 or 3 trays thanks to the homogenous heat distribution ensured by this function.
- You may cook wet dough foods such as apple pie and tart in tray simultaneously in 2 trays.
- Cooking large amount of foods containing much liquid or yeasted dough in a single tray will improve the cooking result. More homogenous cooking is obtained in large volume foods which are rising as the hot air comes from the side walls as well, which is a function not contained in conventional ovens.
- Time and energy can be saved and perfect cooking results can be obtained thanks to the multi-tray cooking feature of this function.

Cooking guide functions


Selecting the convenience food functions

 
 
Convenience Foods menu contains meal programmes that are prepared for you by professional cooks specially and stored in the memory of the control unit. In this menu, temperature, rack position, weight and cooking functions are set automatically.

You can change the weight and cooking time according to your meal and your taste.

To select the Cooking Guide functions:


1. Press On/Off key (1) to switch on the oven.
2. Press Programme Selection button (2) to select the Convenience Food function display. In this step, "Cakes&Breads&Tarts" appears on the display and Convenience Food Selection display (13) is highlighted.

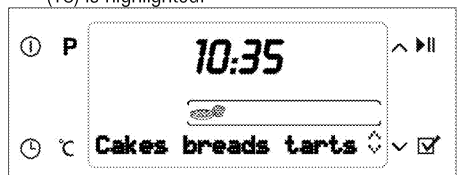

3. Press  or  (11) to select the desired convenience food function main menu

(Cakes&Breads&Tarts, Meat Poultry, Meat, Fish, Special meals, Special).

- Press Convenience Food Menu Selection key (10) to confirm the desired Main Meal menu.
- Press \wedge or \vee (11) to select the desired meal (Cookies, Cake, Small cake, etc).

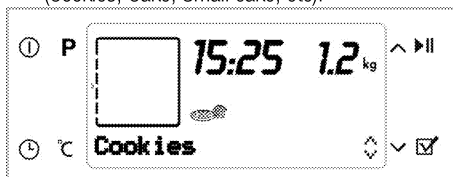

- Put your meal into the oven.
- Press Start/Stop Cooking key (9) to start cooking. "Cooking" appears on the display.

i If Start/Stop Cooking key (9) is not pressed within 20 seconds, the oven will switch itself off.

- After the cooking is completed, "Good appetite..." appears on the display and alarm signal is heard.

i To stop the alarm signal, just press any key.

i "Back" appearing on the display while navigating in the meal menu allows you to return to the upper menu. Press Convenience Food Menu Selection button (10) to return to the upper menu.

Before starting to cook in the Convenience Food menu, you can set the weight depending on the meal type you have selected. To do this:

- Press Temperature - Weight and Rapid Heating Setting button (20) until the weight indicator field starts flashing.



- Press \wedge or \vee (11) to set the weight. Before starting to cook in the convenience food menu, you can set the weight depending on the meal type you have selected. To do this:

- Press Temperature - Weight and Rapid Heating Setting button (20) until the weight indicator field starts flashing.
- Press (11) key to set the weight.

Convenience food menu:

May vary depending on the models

Cakes&Breads&Tarts	Meat poultry	Special meals	Fish	Meat	Special
Cookies	Chicken, grilled	Casserole	Fish fillet	Roast beef	Fermenting
Small cake	Chicken, fillet	Quiches	Baked anchovy	Dalyan meatball	Yoghurt
Brownie		Macaroni cheese	Haddock (Merlans)		Dried apple
Sponge cake		Lasagna	Salmon fillet		Fried chestnut
Apple strudel		Moussaka			
Apple pie					

To select the steam assisted convenience food functions:

- Press On/Off key (1) to switch on the oven.
- Press Programme Selection key (2) with short intervals until Steam Cooking symbol (18) appears on the display. In this step, "Cakes&Breads&Tarts" appears on the display.
- Press \wedge or \vee (11) to select the desired convenience food function main menu (Cakes&Breads&Tarts, Meat Poultry, Meat, Fish, Special meals, Special).

- Press Convenience Food Menu Selection key (10) to confirm the desired Main Meal menu.
- Press \wedge or \vee (11) to select the desired meal (Cookies, Cake, Small cake, etc).
- Put your meal into the oven.
- Press Start/Stop Cooking key (9) to start cooking.
- "Fill with 350 ml water" appears on the display.

i Risk for health!
Do not use any other liquids apart from potable water in the steam system.

9. Open the door and add water through the water inlet. "Door open" warning appears on the display together with the audio warning when filling in water.
10. Oven starts cooking and "Cooking" appears on the display as soon as the door is closed.
11. After the cooking is completed, "Good appetite", "Please take the meal" appears on the display and alarm signal is heard.
 - » To stop the alarm signal, just press any key.
12. Open the oven door and take out the meal as soon as cooking completes.

Close the oven door to start the Automatic Water Vaporization function.

» In this step, "Disposing water" and the required time appears on the display.

» It is important for your health not to use the remaining water since the quality of the water that waits will deteriorate. Water disposal smoothenes the dirt in the oven and allows it to be removed easily after cooking.

» Wipe inside the oven with a cloth after disposing the water.

Using the water container:

Water container consists of 2 pieces. Upper piece removes the lime in the water.

Assemble the lower and upper parts of the container as illustrated.


Shake gently to pass the water in the upper jug to the lower jug.

Do not fill more than 150 cc, otherwise the water is not purified.

Remove the upper part and pour the water into the oven with the lower part.




Remove the lime in the water container by applying the following procedure before each use. Dissolve 2 teaspoon of salt in a glass and pour into the water container. And then, wash the lower container.

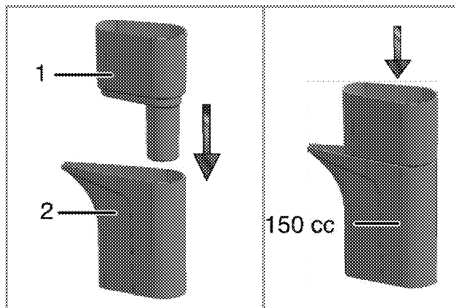

- 1 Upper part
- 2 Lower part

Adding water:

1. Pull the pitcher illustrated in the figure (1).
2. Pour water into the container until you hear the signal sound. Observe the amount of water from the water level indicator (2).

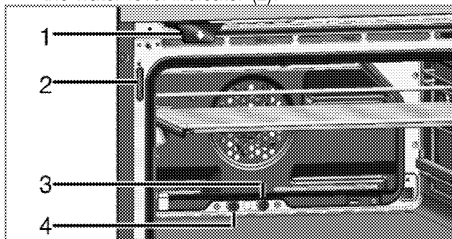

- 1 Pitcher
- 2 Water indicator
- 3 Vapour exit pipe
- 4 Drainage pipe for excessive water



The system waits at least 10 minutes for you to add water. If you do not add water in 10 minutes, oven switches off.



To clean the pitcher, remove it from the oven and wash with water only.



Water level in the tank should be checked through the water indicator while adding water. If the water level exceeds the tank full level, excessive water will run into the oven. Excessive water that run into the oven can affect cooking in steam assisted automatic cooking programmes and cause condensation on the door. In order to avoid this, remove the excessive water that has run into the oven before cooking starts.



If the oven is switched off before the cooking is completed and no cooking function is selected within 2 minutes, "Please take the meal. Water will evaporize." message will appear on the Text display soon as the oven is switched on with On/Off key (1). Water disposal starts automatically after around 1 minute.



CAUTION
Keep the door closed during water vaporization.

Steam assisted convenience food menu:

May vary depending on the models

Cakes&Breads&Tarts	Meat poultry	Special meals	Fish	Meat
Pizza, fresh thinbase	Chicken < 1600 gr	Fresh vegetable	Trout casserole	Roast lamb
Pizza, fresh thickbase	Chicken > 1600 gr	Frozen vegetable, graten		Leg of lamb
Dough pastry	Turkey, thigh	Jacket potatoes		Veal pot roast
Vol au vent	Duck, whole			Tandoori
Fruit cake				
Short bread				
Rich pastry				
Bagel				
Loaf bread (yeasted)				
Sandwich bread				
Baguette				
Bread rolls, frozen				

Settings menu

Brightness setting

Brightness can only be set when the oven is switched off.

1. Press Time and Settings key (21) with short intervals until "Brightness" appears on the display.
2. There are 4 brightness levels, namely 1, 2, 3 and 4. Press or (11) to select the desired level.



Brightness level decreases to save power when the oven is switched off. It restores to the set level again when the oven is switched on.

Contrast setting

Contrast can only be set when the oven is switched off.

1. Press Time and Settings key (21) with short intervals until "Contrast" appears on the display.
2. There are 4 contrast levels, namely 1, 2, 3 and 4. Press or (11) to select the desired level.

Volume setting

Volume can only be set when the oven is switched off.

1. Press Time and Settings key (21) with short intervals until "Volume" appears on the display.
2. There are 3 volume levels, namely 0 (mute), 1 and 2. Press or (11) to select the desired level.

Language setting

Language can only be set when the oven is switched off.



1. Press Time and Settings key (21) with short intervals until the last selected language appears on the display.
2. Press or (11) to select the desired language.
3. Confirm with Convenience Food Menu Selection key (10).



How to operate the grill



WARNING

Close oven door during grilling.
Hot surfaces may cause burns!

1. Press On/Off key (1) to switch on the oven.
2. Press  or  (11) to select the desired language.
3. For cooking temperature, press Temperature - Weight and Rapid Heating Setting key (20) for once to highlight "Temperature" on the Text

display. Press  or  (11) to set the temperature.

4. Press On/Off key (1) to switch off the oven.



Foods that are not suitable for grilling carry the risk of fire. Only grill food which is suitable for intensive grilling heat.

Do not place the food too far in the back of the grill. This is the hottest area and fatty food may catch fire.

Cooking times table for grilling

Grilling with electric grill

Food	Accessory to use	Rack position	Recommended temperature (°C)**	Cooking time (approx. in min.) [#]
Fish	Wire grill	4..5	250	20...25 min. [#]
Sliced chicken	Wire grill	4..5	250	25...35 min.
Lamb chops	Wire grill	4..5	250	20...25 min.
Roast beef	Wire grill	4..5	250	25...30 min. [#]
Veal chops	Wire grill	4..5	250	25...30 min. [#]
Toast bread*	Wire grill	4	250	1...3 min.

[#]depending on thickness

*Preheat for 5 minutes

**If the grill temperature of your product cannot be adjusted, the grill will work at the maximum temperature.

Meals in this cooking table are prepared according to EN 60350-1 to make it easier for control institutes to test the product

Food	Accessory to use	Rack position	Temperature (°C)	Cooking time (approx. in min.)
Toast bread	Wire grill	4	250	1...3 min.
Meatballs (beef) - 12 pieces	Wire grill	4	250	25...35 min.


Turn the food after 2/3 of the total grilling time.


It is suggested to perform 5-6 minutes preheating for all foods broiling.

6 Maintenance and care


General information


Service life of the product will extend and the possibility of problems will decrease if the product is cleaned at regular intervals.

 **DANGER:**
Disconnect the product from mains supply before starting maintenance and cleaning works.
There is the risk of electric shock!

 **DANGER:**
Allow the product to cool down before you clean it.
Hot surfaces may cause burns!

- Clean the product thoroughly after each use. In this way it will be possible to remove cooking residues more easily, thus avoiding these from burning the next time the appliance is used.
- No special cleaning agents are required for cleaning the product. Use warm water with washing liquid, a soft cloth or sponge to clean the product and wipe it with a dry cloth.
- Always ensure any excess liquid is thoroughly wiped off after cleaning and any spillage is immediately wiped dry.
- Do not use cleaning agents that contain acid or chloride to clean the stainless or inox surfaces and the handle. Use a soft cloth with a liquid detergent (not abrasive) to wipe those parts clean, paying attention to sweep in one direction.

 The surface might get damaged by some detergents or cleaning materials.
Do not use aggressive detergents, cleaning powders/creams or any sharp objects during cleaning.
Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.


 Do not use steam cleaners to clean the appliance as this may cause an electric shock.

Cleaning the pitcher


Pitcher stops at a certain point when you pull it towards yourself.

When you continue pulling, it arrives at the second stop point and stops again.

If you continue pulling after this point it will get out of its place.

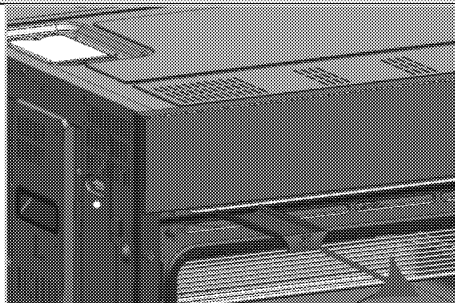


You can clean the pitcher under tap water after removing it.

 Do not use chemical materials when cleaning the pitcher. Use only water.

Cleaning the control panel

Clean the control panel and knobs with a damp cloth and wipe them dry.


 If your product is equipped with buttons/knobs do not remove the control buttons/knobs to clean the control panel.
Control panel may get damaged!

Cleaning the oven

To clean the side wall (Varies depending on the product model.)


(This feature is optional. It may not exist on your product.)

1. Remove the front section of the side rack by pulling it in the opposite direction of the side wall.
2. Remove the side rack completely by pulling it towards you.

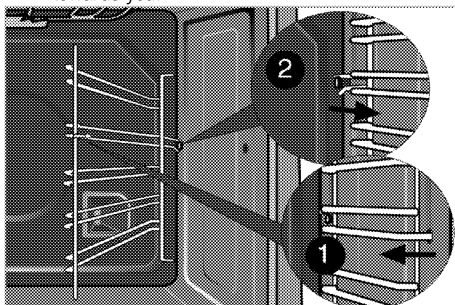

(If your product is equipped with "Surf" function)


1. Remove pin (1) of the side rack by pulling it in the direction of arrow with the side wall it is mounted.

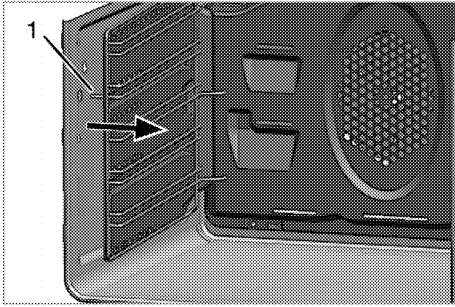

2. Remove the side rack and side wall completely by pulling it towards you.
3. Remove the side rack from the holes (2) on the oven wall by pulling.


i The number of holes behind the side wall and the size of the wire rack may change depending on the product model.

4. To clean the side rack and side wall, use warm water with washing liquid, a soft cloth or sponge to clean the product and wipe it with a dry cloth.
5. Place side rack by pulling to holes (2) on the back of side wall.

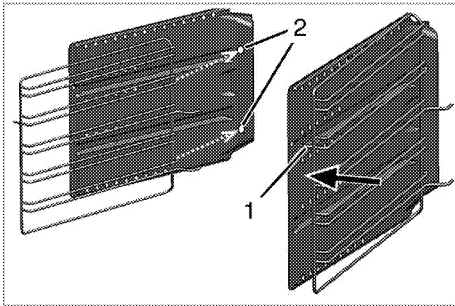

i If you have the flexi telescopic feature of your product; there is one hole on the back surf side wall. Place side rack by pulling to hole.

6. Lock side rack to side wall by pulling pin (1) of side rack in the direction of arrow.
7. Place side rack and side wall assembly to its place by pulling pins (3) to holes on the back wall as shown in figure.

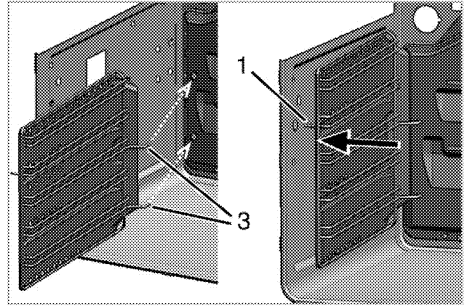

8. Place pin (1) at side rack to its place as shown in figure.




Be sure that side rack and side wall has been placed properly.

Catalytic walls

(This feature is optional. It may not exist on your product.)

The inner side walls (A) and/or the rear wall (B) of your product may be coated with catalytic enamel. Catalytic walls have a light matte colour and a porous surface. Catalytic walls of the oven should not be cleaned. Porous surfaces of the catalytic walls are automatically cleaned by absorbing and converting the spilled oil (steam and carbon dioxide).

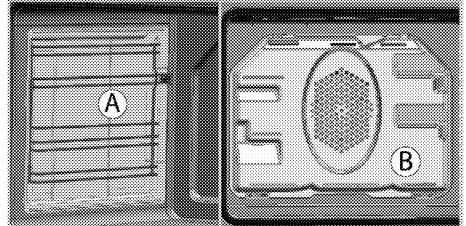


Easy Steam Cleaning

(This feature is optional. It may not exist on your product.)

It ensures easy cleaning because the dirt (having waited not for too long) is softened with the steam that forms inside the oven and the water drops condensing on the inner surfaces of the oven.

1. Remove all accessories inside the oven.
2. Pour 500 ml of water into the oven tray and place the tray at the 2nd rack of the oven.

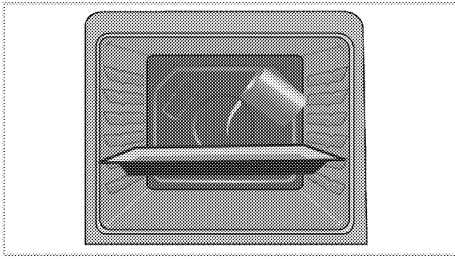

3. Select easy steam cleaning function. Cleaning duration will appear on the screen and it cannot be changed. You can set the end time for this cleaning function.
4. Open the door and wipe the inner surfaces of the oven with a damp sponge or cloth.
5. Use warm water with washing liquid, a soft cloth or sponge to clean the persistent dirt and wipe it with a dry cloth.

i During the easy steam cleaning mode, water that is placed in the tray to soften lightly formed residues/dirt within the oven cavity will evaporate and condense in the oven cavity and inner glass of the oven door, therefore water may drip when the oven door is opened. Wipe away the condensation as soon as the oven door is opened.

Steam Cleaning

It ensures easy cleaning because the dirt (having waited not for too long) is softened with water drops condensing inside the oven after giving steam for a certain time.



1. Press **key** to switch on the oven.
2. Make sure you have removed the food.
3. Press **^** or **v** key to select **"Steam cleaning"** mode.
4. Press Start/Stop Cooking key (9) to start cleaning. If there is no water in the system, **"Fill with 150 ml water"** appears on the displayed.
5. Fill with 150 ml water using the water container supplied with your oven.

i Risk for health!
Do not use any other liquids apart from potable water in the steam system.

6. If the temperature inside the oven is below 100 C when the door is closed, cleaning starts without delay. If inner temperature is not below 100 C with the water filled and door closed, **"Cooling"** message appears on the screen.

When inner temperature falls below 100 C, cleaning starts automatically.



7. When cleaning starts, **"Cleaning"** message is displayed.
» Steam is delivered into the oven until the water of the system runs out.

i Steaming takes approximately 35 minutes with the completely full container. This time will be shorter for less water.

8. When the water runs out, **"Wipe the surfaces"** is displayed.
9. Open the door and wipe the inner surfaces of the oven with a damp sponge or cloth.

When the cleaning is over (generally water runs out), remaining water should be drained in any case. See Cooking Guide Functions, *page 31*, Draining water.

Clean oven door


To clean the oven door, use warm water with washing liquid, a soft cloth or sponge to clean the product and wipe it with a dry cloth.

i Don't use any harsh abrasive cleaners or sharp metal scrapers for cleaning the oven door. They could scratch the surface and destroy the glass.


i Front door inner glass is coated to easy clean material. Do not use any harsh abrasive cleaners, hard metal scrapers, scouring pads or bleach to clean front door inner glass as they may scratch the surface. This may destroy the coating material.

Removing the oven door


1. Open the front door (1).
2. Open the clips at the hinge housing (2) on the right and left hand sides of the front door by pressing them down as illustrated in the figure.

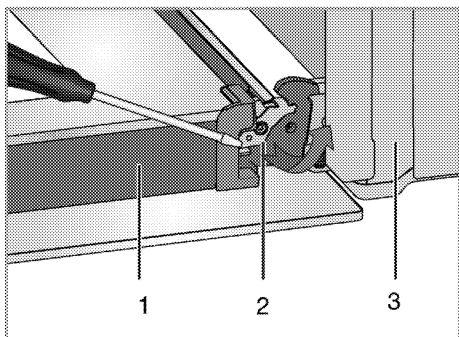

- 1 Door
- 2 Hinge lock(closed position)
- 3 Oven
- 4 Hinge lock(open position)

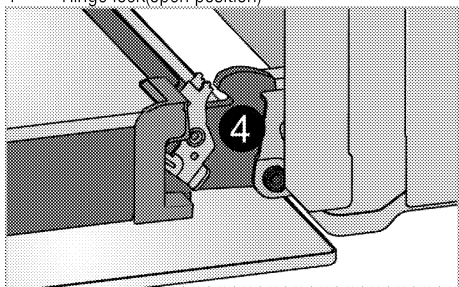

3. Move the front door to half-way.

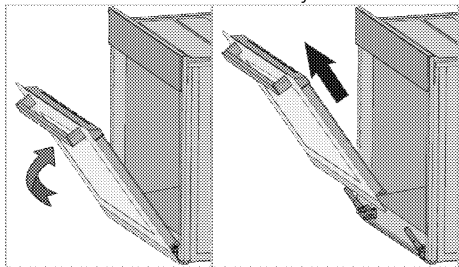


4. Remove the front door by pulling it upwards to release it from the right and left hinges.

i Steps carried out during removing process should be performed in reverse order to install the door. Do not forget to close the clips at the hinge housing when reinstalling the door.


Removing the door inner glass (This feature is optional. It may not exist on your product.)

The inner glass panel of the oven door can be removed for cleaning.


1. Open the oven door.

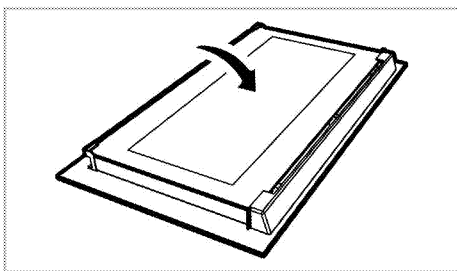

2. Pull towards yourself and remove the plastic part installed to upper section of the front door.

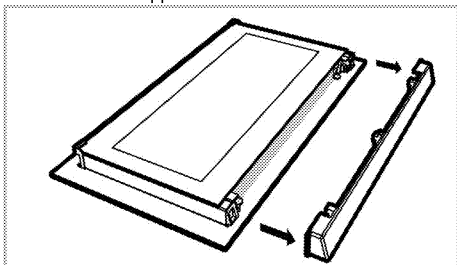

3. As illustrated in figure, raise the innermost glass panel (1) slightly in direction A and pull it out in direction B.

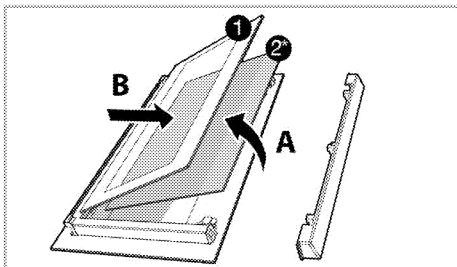






- 1 Innermost glass panel
- 2* Inner glass panel (This may not exist on your product.)
- 4. If your product is equipped with an inner glass panel; repeat the same procedure to remove the inner glass panel (2).
- 5. The first step to regroup the door is reinstalling inner glass panel (2). Place the chamfered corner of the glass panel so that it will rest in the chamfered corner of the plastic slot. (If your product is equipped with an inner glass panel). Inner glass panel (2) must be installed into the plastic slot close the innermost glass panel (1).
- 6. When installing the innermost glass panel (1), make sure that the printed side of the panel faces towards the inner glass panel. It is important to

seat lower corner of innermost glass panel (1) into the lower plastic slot.


7. Push the plastic part towards the frame until you hear a "click".

Replacing the oven lamp


	DANGER: Before replacing the oven lamp, make sure that the product is disconnected from mains and cooled down in order to avoid the risk of an electrical shock. Hot surfaces may cause burns!
	The oven lamp is a special electric light bulb that can resist up to 300 °C. See <i>Technical specifications, page 11</i> for details. Oven lamps can be obtained from Authorised Service Agents or technician with licence.
	Position of lamp might vary from the figure.
	The lamp used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to see foodstuffs.
	The lamps used in this appliance have to withstand extreme physical conditions such as temperatures above 50 °C.

If your oven is equipped with a round lamp:

1. Disconnect the product from mains.
2. Turn the glass cover counter clockwise to remove it.

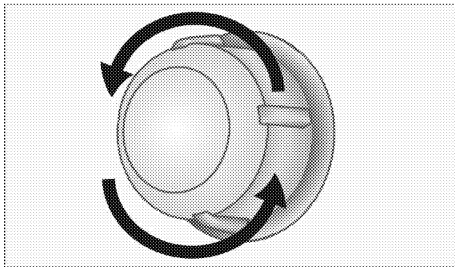


3. If your oven lamp is of type (A) shown in the figure below, remove it by rotating as shown and replace it. If it is of type (B), pull and remove it as shown in the figure and replace it.

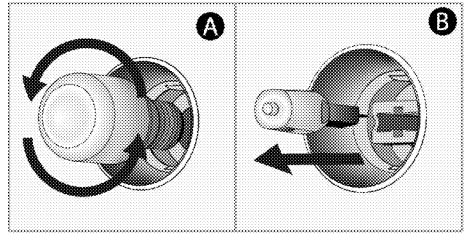


4. Install the glass cover.

If your oven is equipped with a square lamp:

1. Disconnect the product from mains.
2. Remove the wire racks as described. See *Cleaning the oven, page 34*.

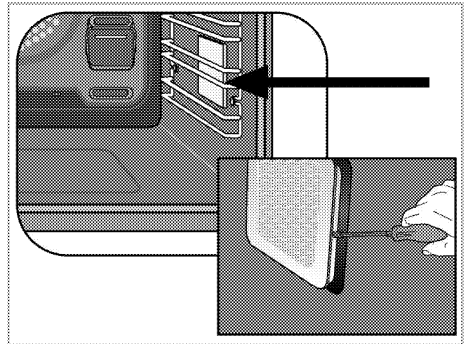

3. Remove the protective glass cover with a screwdriver.
4. If your oven lamp is of type (A) shown in the figure below, remove it by rotating as shown and replace it. If it is of type (B), pull and remove it as shown in the figure and replace it.

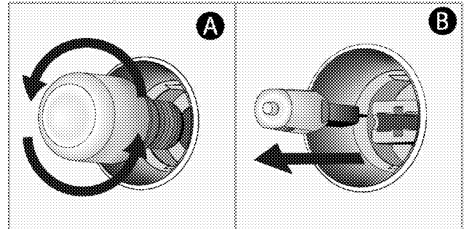

5. Install the glass cover and then the wire racks.

7 Troubleshooting

Oven emits steam when it is in use.

- It is normal that steam escapes during operation. >>> This is not a fault.

Product emits metal noises while heating and cooling.

- When the metal parts are heated, they may expand and cause noise. >>> This is not a fault.

Product does not operate.

- The mains fuse is defective or has tripped. >>> Check fuses in the fuse box. If necessary, replace or reset them.
- Product is not plugged into the (grounded) socket. >>> Check the plug connection.
- Buttons/knobs/keys on the control panel do not function. >>> Keylock may be enabled. Please disable it. (See. Using the keylock, page 26)

Oven light does not work.

- Oven lamp is defective. >>> Replace oven lamp.
- Power is cut. >>> Check if there is power. Check the fuses in the fuse box. If necessary, replace or reset the fuses.

Oven does not heat.

- Function and/or Temperature are not set. >>> Set the function and the temperature with the Function and/or Temperature knob/key.
- Power is cut. >>> Check if there is power. Check the fuses in the fuse box. If necessary, replace or reset the fuses.



Consult the Authorised Service Agent or technician with licence or the dealer where you have purchased the product if you can not remedy the trouble although you have implemented the instructions in this section. Never attempt to repair a defective product yourself.

