


**! Attention:** Please read the operating manual prior to operating the machine for the first time.

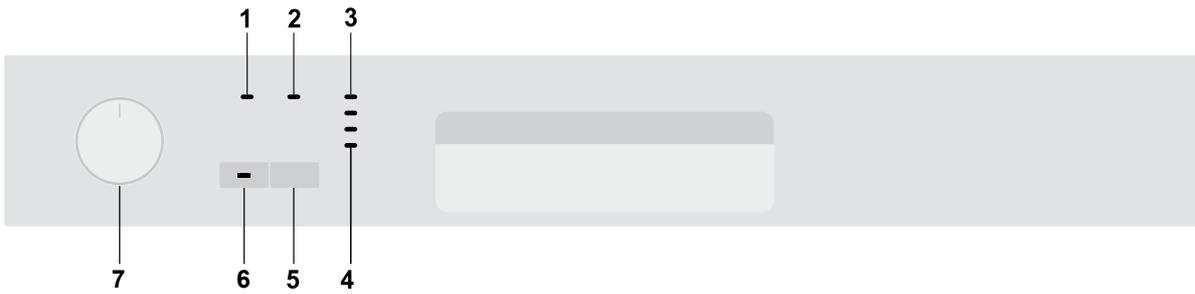

- 1 Rinse aid level indicator light
- 2 Salt level indicator light
- 3 "ON" indicator light
- 4 LED progress indicator lights
- 5 Start/Cancel Key
- 6 Half Load (1/2)
- 7 On/Off/Programme selection Knob

**How to use your dishwasher:**


- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Check the salt and rinse aid level indicator lights. If necessary, refill salt and/or rinse aid.
- Use the on / off / programme selection knob to choose your washing programme.
- Start the programme with the Start/Cancel button:

**Attention**

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.


- Use the on / off / programme selection key to turn the machine off again. When the progress indicator light "programme end" lights up, the programme is complete.
- Close the water tap. Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open. Unload the dishes. Begin with the lower basket.

**Programme Table**

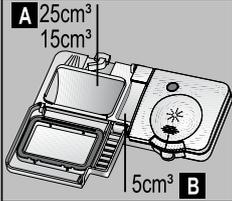
Programme number	1Reference*	2	3	4	5
Programme name	eco	 Intensive	 Clean & Shine	 Quick & Clean	 30min.
Cleaning temperature	50°C	70°C	65°C	70°C	35°C
Degree of Soiling	Most economical washing program for the medium soiled daily dishes that are kept waiting. 	Suitable for heavily soiled dishes, pots and pans.	Daily washing program for normally soiled dishes.	Daily washing program at which the medium soiled dishes that are kept waiting are cleaned in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.
Detergents A=25 cm <sup>3</sup> /15 cm <sup>3</sup> B=5 cm <sup>3</sup>	A+B	A+B	A+B	A+B	A
Programme sequence (without options)	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ End
Duration (min)	192	124	90	58	30
Water (l)	14,0	17,6	11,8	11,8	11,8
Energy (kWh)	1,02	1,70	1,24	1,32	0,79

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

\* Reference programme for testing institutes The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.

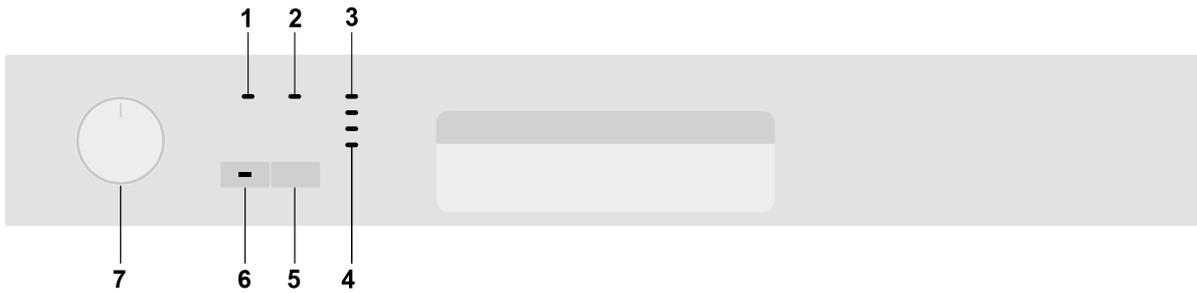

- 1 Rinse aid level indicator light
- 2 Salt level indicator light
- 3 "ON" indicator light
- 4 LED progress indicator lights
- 5 Start/Cancel Key
- 6 Half Load (1/2)
- 7 On/Off/Programme selection Knob

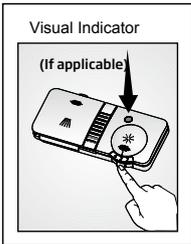

**Rinse aid level indicator light**

If the indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

**ON/OFF**

Machine will be switched on when you move the Programme Selection knob to position "1". "ON" light will illuminate. Machine will be switched off when you move it to "OFF" position. All lights will turn off.

**Programme selection Knob**


Used to switch on/off the machine and select the washing programmes.

**Half Load (1/2) button**

When there are few dishes, you press this button after pressing the programme selection button. When turning the dishwasher on, the indicator light on the button lights up. This function helps you to save water and energy.

**Start/Cancel key**

You use the key to start the selected programme. Stop the programme with the Start / Cancel key if you would like to open the door once the dishwasher's washing programme is running.

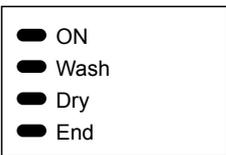

**LED progress indicator lights**

The programme sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

**! Warning**

Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will still be engaged for approximately 35 minutes. Do not worry this is not a fault. The End progress indicator light will come on when finished.

**! Warning**

Do not switch the machine off before End light comes on.

**How to cancel the washing program**

To cancel a programme while the machine is operating: Press start/stop key for 3 seconds. The machine will drain the water inside the machine for 45 seconds. The programme is cancelled when washing light goes off. Then, you can choose and start a new programme.

**! Important:** Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before being washed properly.

**Improper Loading Of Dishware**

