


Quick Guide

Operation of the product

 Read "Safety Instructions" section first!

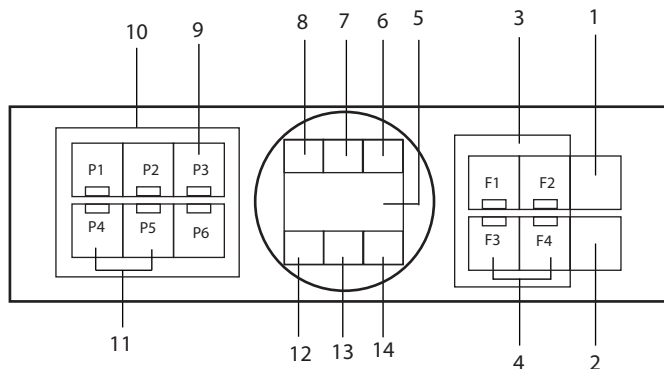

1. On / Off Button
2. Start / Hold / Cancel Key
3. Function Selection Buttons
 - F1 Hygiene Intense function
 - F2 AqualIntense Function
 - F3 Delay function
 - F4 Fast+ Function
4. Not in use
5. Screen
6. Program Working Indicator
7. Low Rinse Aid Warning Indicator
8. Low Salt Warning Indicator
9. Settings Selection Key/Program Key
(When it is used for Settings, the key led is disabled.)
10. Program Selection Keys
11. Child (Key) Lock Function
12. Child (Key) Lock Indicator
13. Not in use
14. Not in use

Programme Table

| Programme Data and Average Consumption Values Table | | | | | | |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|------------------------------------------------------------------------|---------------------------------------------------------------------------|
| Programme number | 1 | 2 | 3 | 4 | 5 | 6 |
| Programme name | Auto | Intensive | Eco * | Delicate | Quick&Shine (#) | Mini (#) |
| Cleaning temperature | 40-65 °C | 70 °C | 50 °C | 40 °C | 60 °C | 35 °C |
| Degree of Soiling | Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes. | Suitable for heavily soiled dishes, pots and pans. | Suitable for washing dishes with normal amount of soil. It is the most efficient program in terms of combined power and water consumption. This is used for assessing the compliance with EU's eco-design directive. | Special programme for gentle cleaning of delicate glassware. | Daily washing programme for normally soiled dishes in the fastest way. | Suitable for lightly soiled daily dishes that are scraped or pre-cleaned. |
| Prewash | Medium to high | High | Medium | Low | Medium | Low |
| Wash | + | + | + | + | - | - |
| Dry | + | + | + | + | + | + |
| Duration (min) | 110-178 | 170 | 220 | 100 | 58 | 30 |
| Water (l) | 9,4-12,4 | 16,8 | 9,5 | 14,4 | 10,6 | 10,8 |
| Energy (kWh) | 0,90-1,45 | 1,51 | 0,951 | 0,92 | 1,18 | 0,8 |

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. * Reference programme for testing institutes. The tests in accordance with EN 50242/60436 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50 °C programme are indicative only. (#) Additional functions might cause changes in programme durations.







Loading Capacity: 14

Quick Guide

Adjusting the water softening system

Washing, rinsing and drying performance of your dishwasher will improve when the water softening system is adjusted correctly.

 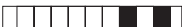

 

 

To adjust the system, first learn the water hardness in your region and adjust as indicated below.

- Unpack the test strip.
 - Open the tap and let the water flow for approx. 1 minute.
 - Dip in the test strip into the water for 1 second.
 - Take out the strip from the water and shake it.
 - Wait for 1 minute.
 - Make the necessary adjustment according to the test strip.
- | | |
|---------|------------------------------------------------------------------------------------|
| Level 0 |  |
| Level 1 |  |
| Level 2 |  |
| Level 3 |  |
| Level 4 |  |
| Level 5 |  |


After the determination of the water hardness:

1. Press the On/Off key and P2 program key simultaneously for 3 seconds and enter the Settings menu after turning your machine on with On/Off key, depending on the model you may enter the Settings Menu by pressing the P3 key for 3 seconds.
2. Move to “r” position on the screen by pressing the P2 key.
3. Set to a proper level by selecting one of the “r:1”, “r:2”, “r:3”, “r:4” or “r:5” positions with the P3 program key.
4. To save, exit the settings menu by pressing on/off key of your machine for 3 seconds. Your settings shall be saved automatically.

Water hardness level adjustment table

| Hardness Level | English Water Hardness °dE | German Water Hardness °dH | French* Water Hardness °dF | Water Hardness Level Indicator |
|-----------------------------------------------------------------------------------------------|----------------------------|---------------------------|----------------------------|--------------------------------------------------------------------------------|
| Level 0  | 0-5 | 0-4 | 0-8 | Press the Selection key to switch the water hardness level to position 1. (r1) |
| Level 1  | 6-9 | 5-7 | 9-13 | |
| Level 2  | 10-15 | 8-12 | 14-22 | Press the Selection key to switch the water hardness level to position 2. (r2) |
| Level 3  | 16-19 | 13-15 | 23-27 | Press the Selection key to switch the water hardness level to position 3. (r3) |
| Level 4  | 20-24 | 16-19 | 28-34 | Press the Selection key to switch the water hardness level to position 4. (r4) |
| Level 5  | 25-62 | 20-50 | 35-90 | Press the Selection key to switch the water hardness level to position 5. (r5) |

Perform the same hardness level adjustment that you have set on the control panel also with the regeneration adjustment switch. For example, if you have adjusted to “3” in the control panel, also set the regeneration adjustment switch to 3.

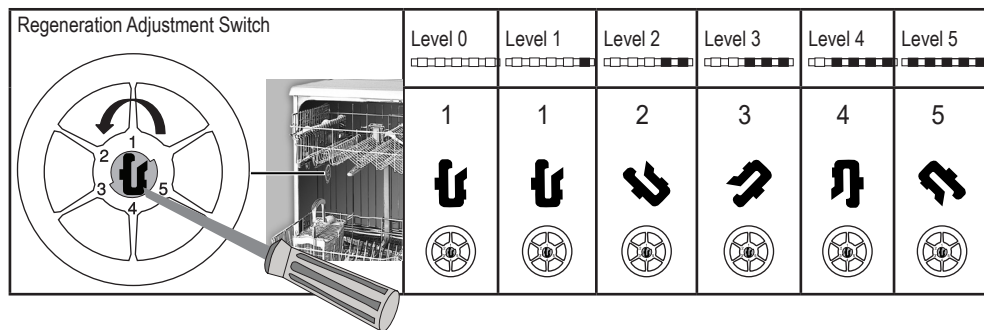

- If the hardness level of the water that you use is above 50°dH or if you are using well water, than it is recommended to use filter and water purification devices.
 - If the hardness level of the water that you use is below 7°dH, there is no need to use salt in your dishwasher. In this case, the Salt Indicator light on the control panel of your dishwasher will light continuously.
 - If the water hardness is set to level 1, the Salt Indicator will light continuously although it is not necessary to use salt. If you use salt under this condition, salt will not be consumed and the lamp will not illuminate.
- i** When moving, you will need to set the water hardness level of your dishwasher again according to the information above, depending on the water hardness of the place you have moved to. If the water hardness level of your machine is adjusted previously, your machine will display the most recent hardness level adjustment.