


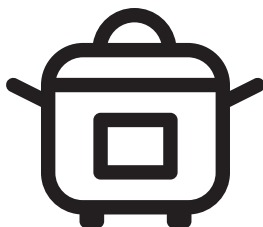

## Hot Air Fryer

User Manual



FRL 3374 B

EN - TH



01M-8917173200-2624-02

CONTENTS

|         |       |
|---------|-------|
| ENGLISH | 3-18  |
| ไทย     | 19-33 |

# Please read this guide first!

Dear Customer,

Thank you for choosing a Beko product. We would like you to achieve the optimal efficiency from this high quality product which has been manufactured with the state of the art technology. Please make sure you read and understand this guide and supplementary documentation fully before use and keep it as a reference. Include this guide with the unit if you hand it over to someone else. Observe all warnings and information herein and follow the instructions.

Keep in mind that this user guide may apply to several product models. The guide clearly indicates any variations of different models.

## Symbols and their meanings

Following symbols have been used throughout this guide:

|                                                                                    |                                                                                            |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
|    | Important information and helpful advice on using the device.                              |
|    | <b>WARNING:</b> Warnings about dangerous situations related to life and property safety.   |
|   | Suitable for contact with food.                                                            |
|   | Do not immerse the appliance, the power cord or the plug in water or in any other liquids. |
|  | <b>WARNING:</b> Warning about hot surfaces.                                                |

## 1 Important safety and environmental instructions

This section contains safety instructions to prevent hazards that can result in injury or property damage.

Failure to follow these instructions will void any warranty.

### 1.1 General safety

- This appliance complies with international safety standards.
- This appliance is intended for home use and food preparation only, it is not suitable for professional use.
- This appliance cannot be used by children between the ages 0-8. The appliance can only be used by children aged 8 and over, provided that they are under constant surveillance. This appliance may be used by people who have limited physical, auditory or mental skills, or lack of experience and knowledge, if they are provided with supervision or information about the safe use and hazards encountered.
- This product is not designed for commercial use, it is intended for use at home and in applications as follows:
  - – In the staff kitchens of the stores, offices and other working environments,
  - – In farm houses,
  - – By customers in hotels, motels or other accommodation facilities;
  - – In hostels, or similar environments.
  - – Bedrooms and breakfast locations
- Children being supervised not to play with the appliance.
- Children should not do cleaning and user maintenance unless an adult supervises them.
- Keep the product and the product cable out of the reach of children under the age of 8.
- Position the handles of the cooking appliances (if any) so that hot liquids do not spill and place them securely.

- Make sure that the voltage indicated on the appliance is the same as the mains voltage in your home.
- Use the appliance in a grounding plug.
- Do not use the appliance with an extension cord.
- Do not place your appliance on or near heat sources such as ovens and stoves.
- To prevent damage to the power cord, prevent it from being pinched, crimped or rubbed against sharp edges.
- Do not unplug the appliance by pulling on the cord.
- Do not immerse the appliance or its power cord in water.
- Do not leave the appliance unattended while it is plugged in.
- Do not disassemble the appliance.
- Use only original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning and dry all parts completely after cleaning.
- Clean the appliance in accordance with the instructions in the Cleaning and Maintenance section.
- Do not put large pieces of food in the appliance as it may cause a fire.
- Do not touch the plug of the appliance while your hands are damp or wet.
- Do not use the appliance in humid environments.
- Do not move the appliance while it is in use and the oil inside is hot.
- Do not use the appliance in or near explosive or flammable environments and substances.
- To avoid the risk of burns, do not touch hot surfaces.
- Let the appliance cool down in a safe place out of the reach of children.
- Do not block the air inlet and air outlet openings while the appliance is operating.
- Do not lean over while the appliance is in use. Hot air rises from the appliance

## 1 Important safety and environmental instructions

during use!

- The appliance becomes hot during use. To avoid the risk of burns, do not touch hot surfaces.
- Make sure that the room is adequately ventilated during use.
- In case of fire, unplug the appliance.
- Do not pour water on the appliance, as it may cause electric shock hazard.
- Do not operate the appliance with an external timer or a separate remote control system.
- Only use metal kitchenware with insulated handles with the appliance.
- Do not put anything on the appliance while it is operating or hot.
- Turn the indicator button off to disconnect. Then unplug the appliance.
- If you keep the packaging materials, keep them out of the reach of children.
- If the power cord is damaged, it must be replaced

by the manufacturer, its service agent or similarly qualified persons to avoid potential hazards.

### 1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

# **1 Important safety and environmental instructions**

## **1.3 Compliance with RoHS Directive**


The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## **1.4 Package information**



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

## 2 Less Oil Cooker

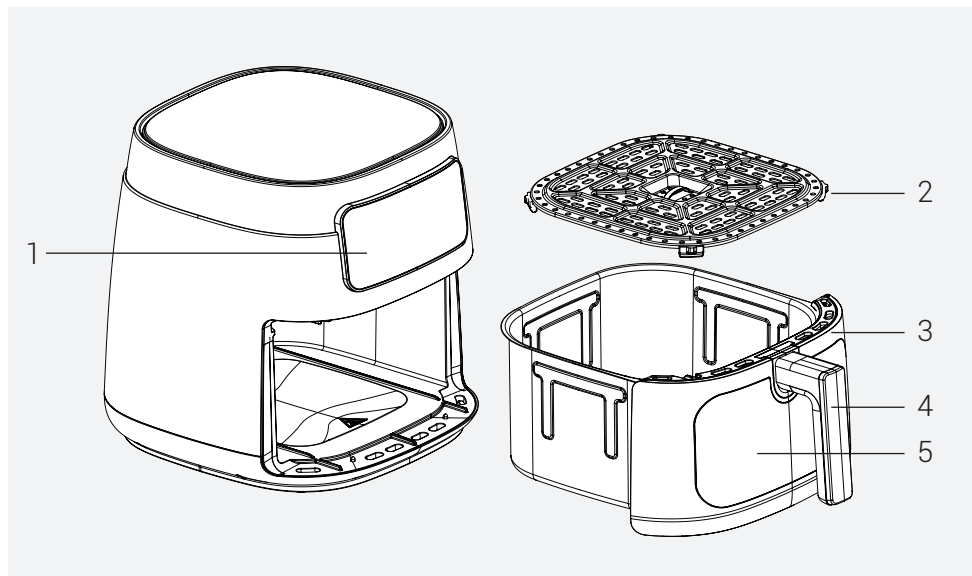

1. Digital control panel
2. Cooking grid
3. Cooking pot
4. Handle
5. Cooking pot window

### Technical data

|                          |                       |
|--------------------------|-----------------------|
| <b>Power Source</b>      | 220-240V~,<br>50-60Hz |
| <b>Power Consumption</b> | 1750 W                |

Signs on the appliance and values specified by the documents provided along with the product have been obtained under laboratory conditions in accordance with the related standards. The values may vary based on use of the appliance and ambient conditions. Power values have been tested in the voltage of 230 V.


## 3 Usage

### 3 Intended use


- The appliance is intended for home use only and is not suitable for professional use.
- When you use the appliance for the first time, there may be a slight emission of smoke. This is normal.

### 3.1 Preparing the appliance for use


- Use the appliance in an upright position on a stable, level, clean, dry and non-slip surface.

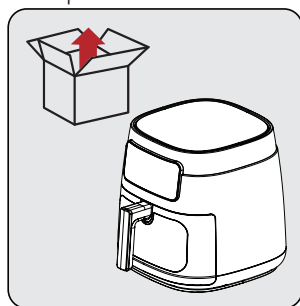

Before using the appliance for the first time, remove the packaging materials and place the appliance in a flat and clean area.

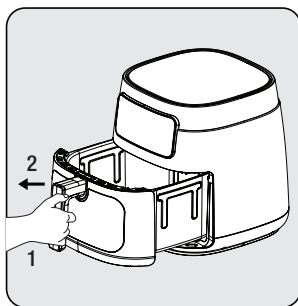


Grab the handle (4) firmly to take the drawer out of its housing.

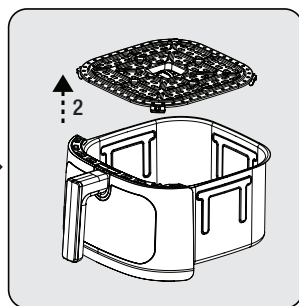


Place the cooking pot on a flat surface to detach the cooking grid (2).



Clean the cooking grid (2) and the removable cooking basket (3) with warm soapy water, then dry the appliance's outer surface and the parts you have washed thoroughly.

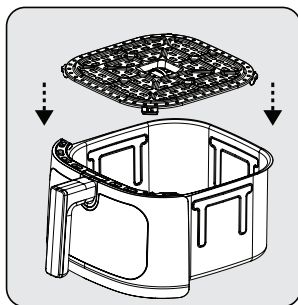

place the cooking grid in the cooking chamber

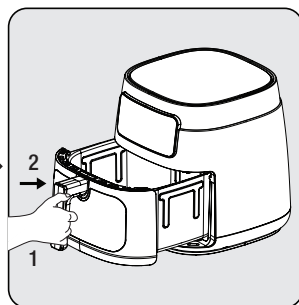


Attach the cooking pot to the appliance after cleaning all parts. The appliance is ready for use.



- For the first use, set the product to the highest temperature and run it for about 10 minutes without adding any food.
- Never use the basket drawer (6) without the removable cooking grid (2).


## 3.2 Control panel and LED display:

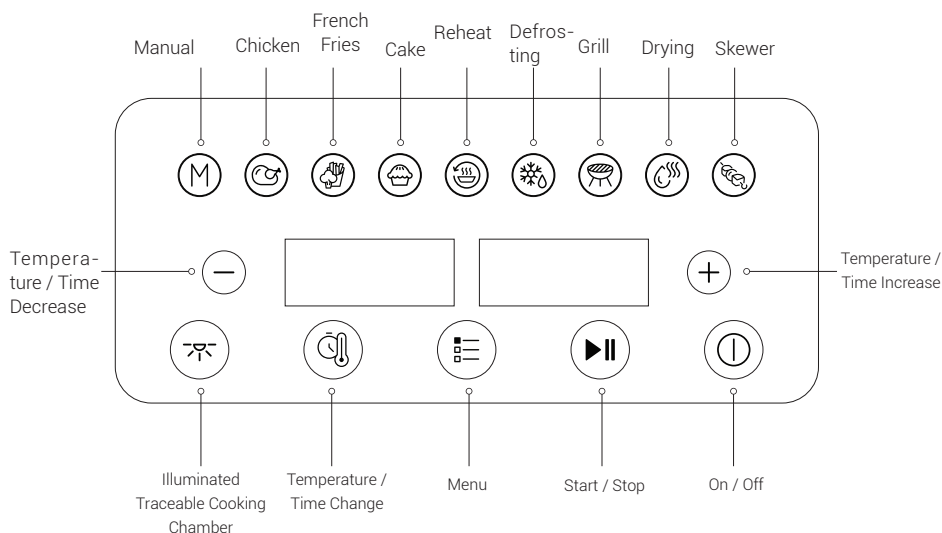

- Press “Menu [Menu Icon]” symbol until finding the desired program to select a program. When the desired program is found, the light of the program will blink, press “Start [Start Icon]” symbol to start the program.
- When “End” appears on the display, the cooking process is completed, and the cooking basket must be removed.
- Display shuts down, when the cooking basket is taken out of the appliance. Appliance resumes, when the cooking basket is put back.

## 3 Usage

### 3.3 Warnings before first use

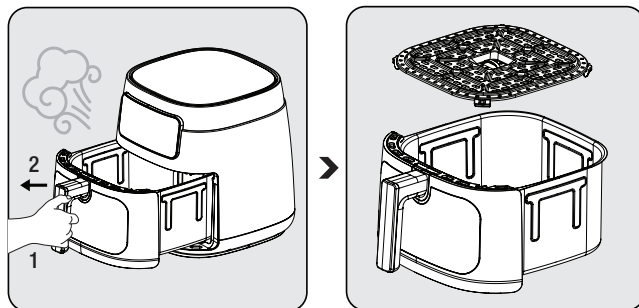

When the cooking pot (3) is pulled back while the appliance is operating, hot steam will emanate from the air outlet and the top of the pot. Therefore, be careful not to get burned by the high-temperature steam.

While using the cooking grid (2) and cooking pot (3) at higher temperatures, be careful not to make a direct contact with them.

### 3.4 Operation

#### 3.4.1 Selecting and starting a program




The display shows the automatically set temperatures and times according to the selected cooking functions. You can change these temperatures and times as desired.




Press the shutdown symbol if you want to switch to a different program after the product is started. Afterwards, press "Menu"  to select the desired program.

## 3 Usage

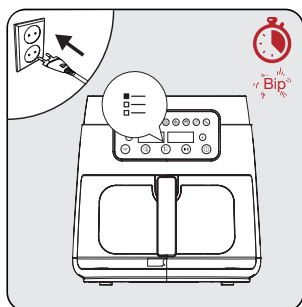

Plug the product in and press the on/off symbol once. The entire selection display will appear. Press the "Menu" symbol until you reach the function you want to select.

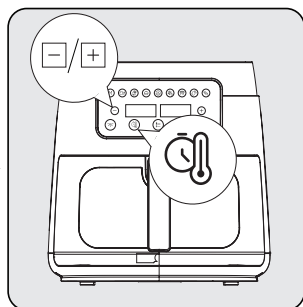


Press the "Temperature / Time" change symbol. The temperature will flash on the display. Replace with the desired temperature "+" or "-" symbols. When you press the "Temperature / Time" symbol again, the time will flash on the display. Set the cooking time with the "+" or "-" symbols".




Press the "Start/Stop" symbol and start the device. Place the food you want to cook in the cooking basket of the product. When you place the cooking basket in its place, the time you set will be seen on the display, excluding the preheating time, and the time will start to count down.

### 3.4.2 Temperature and time setting

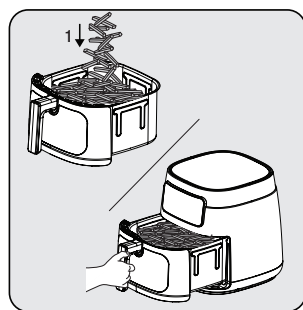

Press the "Temperature / Time" symbol to set the temperature and time. Afterwards, press "-" "+" symbol to set the necessary temperature and time. Press the "Start/Stop" symbol to start.

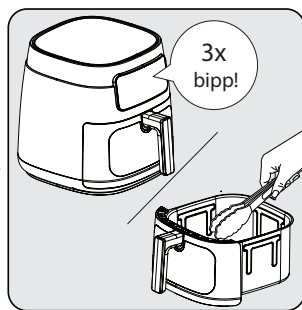

When half of the set time of the program is reached, at this point, the basket drawer (3) can be removed, and you can turn the food with an auxiliary tool (tongs, etc.).

## 3 Usage




- The cooking grid is made of high-temperature resistant silicone material that can be used for cooking food. It essentially prevents the basket lining from being scratched. Therefore, make sure that it does not come off during cooking.
- Be aware of hot steam that may be outlet while pulling the basket drawer (3) out and do not touch with your bare hands, because it is highly hot.
- When removing cooked food, use a tool (tongs, etc.) that will not damage the inner surface of the appliance.

### 3.5. Cooking


- Blend food with oil before placing it in the removable cooking basket (3).




Please do not hold the basket drawer (3) and the removable cooking grid (2) with anything other than the handle while they are hot.

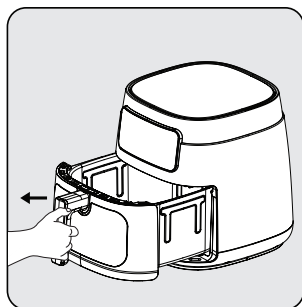

Grasp the handle firmly to open the cooking pot (3); then remove the drawer from the machine and place it on a flat, clean surface.

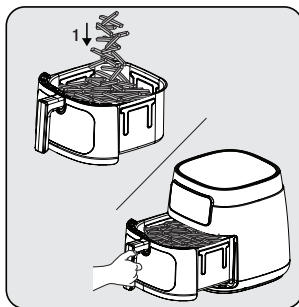


Place foods in the cooking pot (3). Then attach the pot to the appliance and make sure it fits completely.

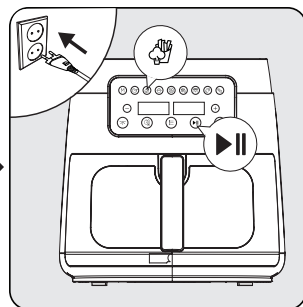


Plug your appliance in and select the desired cooking program. Then, start the cooking process.


### 3 Usage

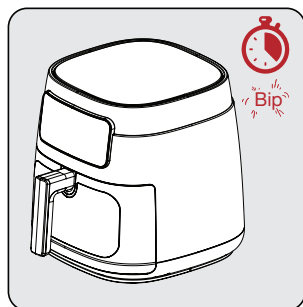


Warning sound will be heard when the set time is up and your appliance turns off automatically. When the cooking program is completed, an "End" notification appears on the display. This expression indicates that the food program is finished.

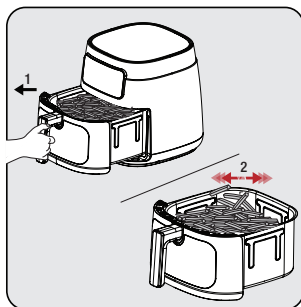

Take the cooking pot (3) out and check the food, whether it is fried or frozen or not. If it requires additional cooking time, you can prolong the cooking time a little bit more.

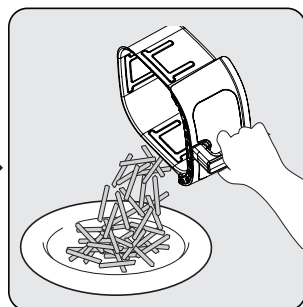

After the process is completed, pour the ingredients from the cooking pot into a bowl or plate.

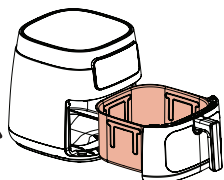

Avoid contact of the cooking pot with the outer surface of the appliance, since surface of the cooking pot (5) will be hot during and after cooking.



- Let the foods rest for 5-10 seconds before removing them from the cooking pot (3)
- Use tongs to take large or soft foods out of the cooking pot and cooking grid not to cause any damage on the interior surface of the appliance.
- When one batch is ready, the appliance is immediately ready for another batch.



Note that the device can become very hot during the turning process.

## 4 Cooking time

The following table gives an overview of cooking times for different foods. Cooking time varies based on thickness and texture of foods. The recommended times and quantities should be regarded as approximate.


Perform a pre-heating process until the appliance reaches up to the recommended temperature specified in the table before cooking process to achieve successful results.

| PROGRAM      | FOOD            | AMOUNT             | SYMBOL                                                                            | TEMPERATURE | TIME (min.)<br>INTERVAL | BLENDING /<br>SHAKING |
|--------------|-----------------|--------------------|-----------------------------------------------------------------------------------|-------------|-------------------------|-----------------------|
| DEFROSTING   |                 |                    |  | 80 °C       | 13-17 min.              | 2                     |
| FRENCH FRIES | Frozen Potato   | 500 g              |  | 200 °C      | 15-20 min.              | 4                     |
| CHICKEN      | Chicken Thigh   | 450 g              |  | 200 °C      | 20 minutes              | 2                     |
| GRILL        | Burger in Rolls | 500 g              |  | 190 °C      | 15 min.                 | 2                     |
| SKEWER       | Chicken Skewer  | 500 g              |  | 180 °C      | 15-20 min.              | 4                     |
| CAKE         | Muffin          | 6 mini muffin cups |  | 160 °C      | 20 minutes              | X                     |
| DRYING       |                 |                    |  | 70 °C       | 60-140 min.             | X                     |


## 5 Cleaning and maintenance

### 5.1 Cleaning


**i** Never use gasoline, solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.

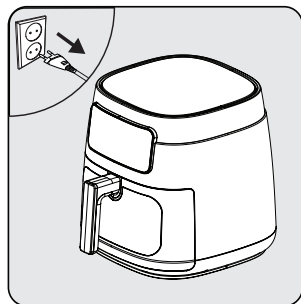


Switch off the appliance and disconnect it from the power supply.

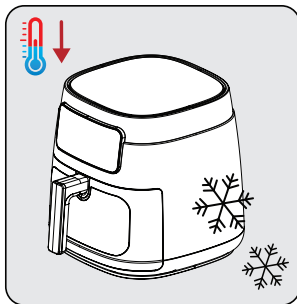


Allow the appliance to cool down completely.

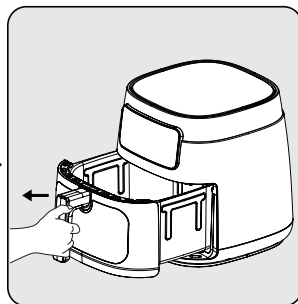


Remove the cooking basket (3) from the drawer.

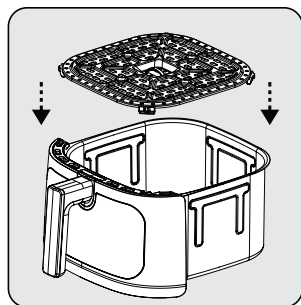

Remove the cooking grid (2) from the basket by grasping its handle and pulling it upwards.

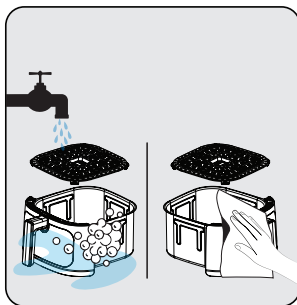

Clean the cooking basket (3) and the cooking grid (2) with warm soapy water and then dry them thoroughly.

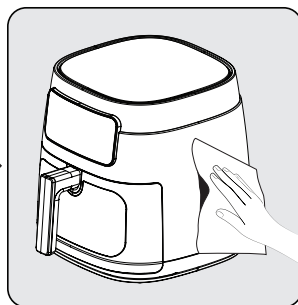

Clean the outside of the appliance with a damp cloth. Dry the outside of the appliance completely.

**i** Always keep the base of the removable cooking pot (3) and the cooking grid (2) clean to prevent the accumulation of foreign substances.

## **5** Cleaning and maintenance

### **5.2 Storage**

- If you do not intend to use the appliance for a longer period of time, store it carefully.
- Unplug the appliance and let it cool down before putting it away.
- Store the appliance in a cool and dry place.
- Keep the appliance and the cable out of the reach of children.

### **5.3 Transport and shipping**

- Transport the appliance in its original packaging during handling and transport. The packaging protects the appliance from physical damage.
- Do not place heavy objects on the appliance or its packaging. The appliance may get damaged.
- If the appliance is dropped, it may stop working or permanent damage may occur.

## 6 Troubleshooting

|                                                                                                                                   | The problem                             | Cause                                                                      | Solution                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                                                                 | Appliance inoperative                   | Power outages                                                              | Check the power supply and make sure there is power                                                                               |
|                                                                                                                                   |                                         | No power or poor contact at the power outlet                               |                                                                                                                                   |
|                                                                                                                                   |                                         | Mismatch of the power supply voltage with the nominal voltage of appliance |                                                                                                                                   |
| 2                                                                                                                                 | The food is insufficiently cooked/burnt | The cooking time is not correct                                            | Combine recipes and your personal experience to adjust preparation and timing                                                     |
| 3                                                                                                                                 | Smoke during first use                  | Rust-preventive oil remaining on the heater of appliance                   | Set the temperature at maximum and perform a pre-heating fro 10-15 minutes to remove rust-preventive oil on the heat of appliance |
| 4                                                                                                                                 | Strange smell                           | Foreign object on cooking basket, basket drawer and heater                 | Remove the foreign object                                                                                                         |
| 5                                                                                                                                 | E2                                      | NTC shorted, Parts Defective                                               | Send to service for repair                                                                                                        |
| 6                                                                                                                                 | E4                                      | NTC shorted, Parts Defective                                               |                                                                                                                                   |
| Contact our authorised service for repair, in case the problem cannot be solved after performing the above-mentioned supervision. |                                         |                                                                            |                                                                                                                                   |

โปรดอ่านคู่มือนี้ก่อนใช้งาน!

เรียนลูกค้าผู้มีอุปการคุณ

ขอขอบคุณสำหรับการเลือกผลิตภัณฑ์ เบโค เราต้องการให้คุณได้รับประสิทธิภาพที่ดีที่สุดจากผลิตภัณฑ์คุณภาพสูงนี้ ซึ่งได้รับการผลิตด้วยเทคโนโลยีอันทันสมัย โปรดอ่านและทำความเข้าใจคู่มือนี้และเอกสารประกอบเสริมอย่างถี่ถ้วน ก่อนใช้งานอุปกรณ์ และเก็บคู่มือไว้เพื่ออ้างอิง หากคุณมอบอุปกรณ์ให้กับผู้อื่น โปรดมอบคู่มือนี้ไปด้วย ปฏิบัติตามคำเตือนทั้งหมดและข้อมูลที่ได้รับและทำตามคำแนะนำ

โปรดทราบว่าคู่มือผู้ใช้นี้อาจครอบคลุมผลิตภัณฑ์หลายรุ่น คู่มือนี้ระบุความแตกต่างของรุ่นต่างๆ ไว้อย่างชัดเจน

## สัญลักษณ์และความหมาย

สัญลักษณ์ต่อไปนี้มีกล่าวถึงไว้ตลอดคู่มือนี้:



ข้อมูลสำคัญและคำแนะนำที่เป็นประโยชน์เกี่ยวกับการใช้อุปกรณ์



**คำเตือน:** คำเตือนเกี่ยวกับสถานการณ์อันตรายที่เกี่ยวข้องกับความปลอดภัยในชีวิตและทรัพย์สิน



เหมาะสำหรับการสัมผัสกับอาหาร



ห้ามนำผลิตภัณฑ์ สายไฟ หรือปลั๊กไฟจุ่มลงในน้ำหรือในของเหลวอื่นใด



**คำเตือน:** คำเตือนเกี่ยวกับพื้นผิวร้อน



วิธีคิดและ  
วิธีคิดได้  
กระดาษ

หัวข้อนี้เป็นคำแนะนำด้านความปลอดภัยเพื่อป้องกันอันตรายที่อาจส่งผลให้เกิดการได้รับบาดเจ็บหรือทรัพย์สินเสียหาย

การไม่ปฏิบัติตามข้อแนะนำเหล่านี้จะเป็นการยุติการรับประกันใดๆ

### 1.1 ความปลอดภัยทั่วไป

- อุปกรณ์นี้สอดคล้องกับมาตรฐานความปลอดภัยระหว่างประเทศ
- เครื่องใช้ไฟฟ้านี้กำหนดให้ใช้สำหรับการใช้งานในครัวเรือน และไม่เหมาะสำหรับการใช้งานเชิงพาณิชย์
- เด็กอายุระหว่าง 0-8 ปีไม่สามารถใช้เครื่องใช้ไฟฟ้านี้ได้ เด็กอายุ 8 ปีขึ้นไปเท่านั้นที่สามารถใช้งานเครื่องใช้ไฟฟ้านี้ได้ โดยต้องอยู่ภายใต้การดูแลของผู้ใหญ่อย่างใกล้ชิด เครื่องใช้ไฟฟ้านี้อาจใช้โดยผู้ที่มีความบกพร่องทางร่างกาย การได้ยิน หรือจิตใจ หรือขาดประสบการณ์และความรู้ โดยจะต้องอยู่ภายใต้การควบคุมดูแลหรือได้รับความรู้เกี่ยวกับการใช้งานอย่างปลอดภัยและอันตรายที่มีแล้ว
- ผลิตภัณฑ์นี้ไม่ได้ออกแบบมาสำหรับการใช้งานเชิงพาณิชย์ แต่กำหนดให้ใช้ในบ้านและในการใช้งานต่อไปนี้:
  - ในห้องครัวพนักงานของร้านค้า สำนักงาน และสถานที่ทำงานแบบอื่นๆ
  - ในโรงเรียนในร้านา
  - โดยลูกค้าในโรงแรม ที่พัก หรือสถานที่พักรับรองอื่นๆ

- ในโฮสเทล หรือสถานบริการที่พักที่คล้ายกัน
- สถานที่บริการเตียงนอนพร้อมอาหารเช้า
- ดูแลเด็กเล็กไม่ให้มาเล่นกับอุปกรณ์นี้
- ห้ามเด็กทำงานการทำความสะอาดและบำรุงรักษาโดยผู้ใช้ เว้นแต่มีผู้ใหญ่ควบคุมดูแล
- เก็บอุปกรณ์นี้และสายไฟให้ห่างจากการเข้าถึงของเด็กอายุต่ำกว่า 8 ปี
- จัดตำแหน่งที่จับของอุปกรณ์ปรุงอาหาร (ถ้ามี) เพื่อไม่ให้ของเหลวร้อนหกออกมาและจัดวางตำแหน่งอย่างมั่นคง
- ตรวจสอบว่าแรงดันไฟฟ้าที่ระบุบนเครื่องใช้ไฟฟ้าตรงกับแรงดันไฟฟ้าระบบหลักในบ้านของคุณ
- ใช้เครื่องใช้ไฟฟ้านี้กับเต้าเสียบที่มีระบบสายดินเท่านั้น
- อย่าใช้งานอุปกรณ์โดยใช้การต่อพ่วงสายไฟ
- อย่าวางเครื่องใช้ไฟฟ้าบนหรือใกล้แหล่งความร้อน เช่น เตาอบและเตาไฟฟ้า
- เพื่อป้องกันความเสียหายกับสายไฟ อย่าให้สายไฟบิดพับ ถูกหนีบ หรือขัดถูกับขอบคม
- อย่าถอดปลั๊กของเครื่องใช้ไฟฟ้านี้โดยการดึงที่สายไฟ
- อย่าจุ่มอุปกรณ์นี้หรือสายไฟของอุปกรณ์ลงในน้ำ
- อย่าปล่อยผลิตภัณฑ์ทิ้งไว้โดยไม่มีใครดูแลในขณะที่เสียบปลั๊กไฟอยู่
- อย่าถอดแยกอุปกรณ์นี้

- ให้ใช้เฉพาะอะไหล่แท้หรืออะไหล่ที่ได้รับ การแนะนำโดยผู้ผลิตเท่านั้น
- ถอดปลั๊กไฟของเครื่องก่อนทำความสะอาด และเช็ดทุกชิ้นส่วนให้แห้งสนิทหลังทำความสะอาด
- ทำความสะอาดเครื่องใช้ไฟฟ้านี้ตามคำแนะนำในส่วนการทำความสะอาดและบำรุงรักษา
- อย่าใส่อาหารชิ้นใหญ่เข้าไปในเครื่องใช้ไฟฟ้า นี้ เพราะอาจทำให้เกิดไฟไหม้ได้
- อย่าสัมผัสปลั๊กไฟของเครื่องในขณะที่มือของคุณชื้นหรือเปียก
- อย่าใช้เครื่องใช้นี้สภาพแวดล้อมที่ชื้นแฉะ
- อย่าเคลื่อนย้ายเครื่องในขณะที่ใช้งานและ น้ำมันภายในเครื่องใช้ร้อน
- อย่าใช้งานอุปกรณ์ในบริเวณหรือใกล้กับ สภาพแวดล้อมและที่ที่มีสารที่ระเหยได้หรือ ติดไฟได้
- เพื่อหลีกเลี่ยงความเสี่ยงที่จะเกิดการไหม้ ห้ามสัมผัสพื้นผิวที่ร้อน
- รอให้เครื่องเย็นลงในที่ปลอดภัยและพ้นจากการเข้าถึงของเด็กได้
- อย่าปิดกั้นช่องลมเข้าและช่องลมออกในขณะที่เครื่องใช้ไฟฟ้านี้กำลังทำงาน
- อย่ายืนอิงแอบใกล้กับอุปกรณ์นี้ขณะที่ใช้งาน จะมีอากาศร้อนพุ่งออกจากเครื่องระหว่างการใช้งาน!
- เครื่องใช้นี้จะมีความร้อนระหว่างการใช้งาน เพื่อหลีกเลี่ยงความเสี่ยงที่จะเกิดการไหม้
- ห้ามสัมผัสพื้นผิวที่ร้อน
- ให้แน่ใจว่าห้องมีการระบายอากาศเพียงพอ ระหว่างการใช้งาน
- ในกรณีเกิดเพลิงไหม้ ให้ถอดปลั๊กไฟของเครื่อง
- ห้ามเทน้ำลงบนเครื่อง เพราะอาจทำให้เกิดอันตรายจากไฟฟ้าช็อตได้
- อย่าใช้งานเครื่องพร้อมตัวจับเวลาภายนอก หรือมีระบบควบคุมระยะไกลแยกต่างหาก
- ใช้เฉพาะเครื่องครัวโลหะที่มีด้ามจับหุ้มฉนวนพร้อมกับเครื่องใช้ไฟฟ้านี้เท่านั้น
- อย่าวางสิ่งของใดๆ บนเครื่องในขณะที่เครื่องกำลังทำงานหรือมีความร้อน
- ปิดปุ่มตัวจับขึ้นเพื่อยกเลิกการเชื่อมต่อ จากนั้น ปลดปลั๊กไฟของเครื่อง
- ถ้าต้องการเก็บวัสดุบรรจุภัณฑ์ของผลิตภัณฑ์เอาไว้ โปรดจัดเก็บให้ห่างจากการเข้าถึงของเด็กเล็ก
- ถ้าสายไฟที่นำมาชาร์จ จะต้องเปลี่ยนใหม่ โดยผู้ผลิต ตัวแทนฝ่ายบริการ หรือบุคคลที่มีคุณสมบัติที่คล้ายกันเพื่อหลีกเลี่ยงอันตรายที่เป็นไปได้

#### 1.1 การเป็นไปตามข้อกำหนดของ WEEE และการจัดการและการแยกขยะของผลิตภัณฑ์ที่เป็นขยะ

ผลิตภัณฑ์นี้สอดคล้องกับข้อกำหนดขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ของสหภาพยุโรป (EU WEEE Directive) (2012/19/EU) ผลิตภัณฑ์นี้แสดงสัญลักษณ์ระดับชั้นของอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ที่ไม่ใช้งานแล้ว (WEEE)



สัญลักษณ์นี้บ่งชี้ว่าห้ามกำจัดขยะผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือนอื่นๆ เมื่อยกเลิกการใช้งานผลิตภัณฑ์นี้แล้ว คุณจะต้องส่งคืนผลิตภัณฑ์ที่ใช้แล้วไปยังจุดรวบรวมขยะอย่างเป็นทางการเพื่อการรีไซเคิลขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ หากต้องการทราบจุดรวบรวมขยะเหล่านี้ โปรดติดต่อหน่วยงานผู้มีอำนาจในท้องถิ่นของคุณหรือร้านค้าที่คุณซื้อผลิตภัณฑ์นี้ แต่ละครัวเรือนมีความรับผิดชอบที่สำคัญในการฟื้นฟูและรีไซเคิลอุปกรณ์เก่าที่เลิกใช้แล้ว การกำจัดขยะของผลิตภัณฑ์ที่ใช้แล้วอย่างเหมาะสมจะช่วยป้องกันผลด้านลบที่อาจเกิดขึ้นต่อสิ่งแวดล้อมและสุขภาพของมนุษย์ได้

## 1.2 การเป็นไปตามข้อกำหนดของ RoHS

ผลิตภัณฑ์นี้เป็นไปตามข้อกำหนด RoHS ของสหภาพยุโรป (2011/65/EU) ผลิตภัณฑ์นี้ไม่มีวัสดุที่เป็นอันตรายและวัสดุต้องห้ามที่ระบุไว้ในข้อกำหนด


## 1.3 ข้อมูลบรรจุภัณฑ์



วัสดุบรรจุภัณฑ์ของผลิตภัณฑ์นี้ผลิตจากวัสดุที่รีไซเคิลได้ซึ่งสอดคล้องกับกฎระเบียบด้านสิ่งแวดล้อมแห่งชาติ ห้ามทำการจัดการแยกขยะของวัสดุบรรจุภัณฑ์พร้อมกับขยะภายในบ้านหรือขยะอื่นๆ ให้นำวัสดุเหล่านี้ไปยังจุดรวบรวมขยะบรรจุภัณฑ์ที่กำหนดตำแหน่งไว้โดยหน่วยงานที่มีอำนาจ

## 1.4 ประเด็นสำคัญในการประหยัดพลังงาน

ปฏิบัติตามระยะเวลาที่คู่มือแนะนำไว้ขณะใช้งานเครื่องใช้ไฟฟ้านี้ ถอดปลั๊กไฟของเครื่องหลังใช้งานทุกครั้ง

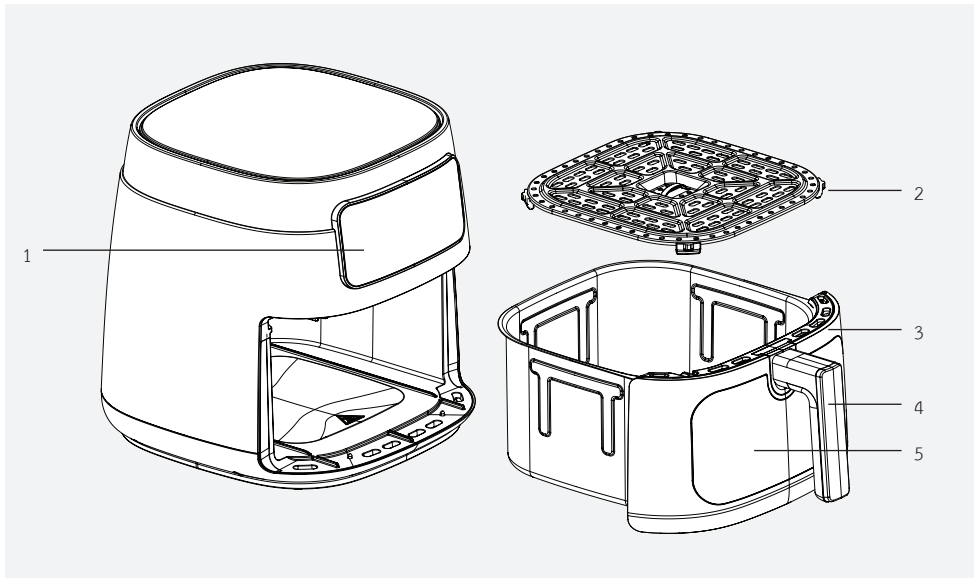

1. แผงควบคุมแบบดิจิทัล
2. ตะแกรงปรุงอาหาร
3. หม้อปรุงอาหาร
4. ที่จับ
5. ช่องสำหรับดูสถานะการปรุงอาหาร

#### ข้อมูลทางเทคนิค

|             |                    |
|-------------|--------------------|
| แรงดันไฟฟ้า | 220-240V~, 50-60Hz |
| กำลังไฟฟ้า  | 1750 W             |


ป้ายบนตัวเครื่องและค่าที่ระบุในเอกสารประกอบที่ให้มาพร้อมกับผลิตภัณฑ์ได้มาจากการทดสอบในห้องปฏิบัติการตามมาตรฐานที่เกี่ยวข้อง ค่าเหล่านี้อาจแปรผันโดยขึ้นอยู่กับการใช้งานเครื่องใช้และสภาพแวดล้อมขณะใช้งาน ค่ากำลังไฟได้รับการทดสอบภายใต้แรงดันไฟฟ้า 230 V

### 3 การใช้งานที่กำหนด


- เครื่องใช้ไฟฟ้านี้กำหนดให้ใช้สำหรับการใช้งานในครัวเรือนเท่านั้น และไม่เหมาะสำหรับการใช้งานเชิงพาณิชย์
- เมื่อคุณใช้งานเครื่องเป็นครั้งแรก อาจมีควันออกมาเล็กน้อย นี่เป็นลักษณะปกติ

#### 3.1 การเตรียมเครื่องสำหรับการใช้งาน


- ใช้เครื่องใช้ในตำแหน่งที่ตั้งตรงบนพื้นผิวที่มั่นคง เรียบ สะอาด แห้งและไม่ลื่น

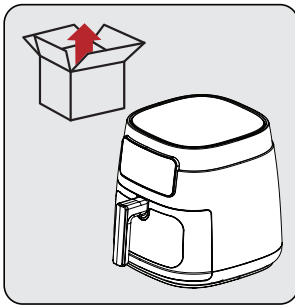

ก่อนใช้งานเครื่องเป็นครั้งแรก ให้แกะวัสดุบรรจุภัณฑ์ออก และจัดวางเครื่องในพื้นที่ที่เรียบและสะอาด

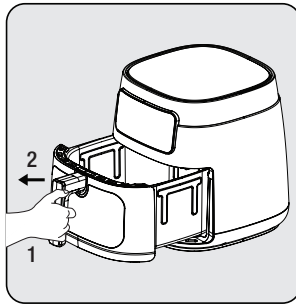


จับยึดที่จับ (4) ให้แน่นเพื่อปลดหม้อปรุงอาหาร (3) จากนั้นให้นำหม้อปรุงอาหารออกจากตัวเครื่อง

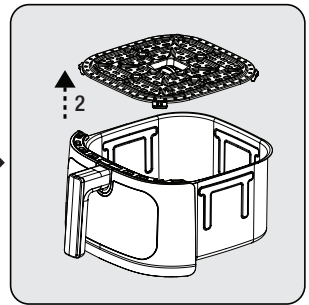


วางหม้อปรุงอาหารบนพื้นผิวเรียบเพื่อถอดและล้างหม้อปรุงอาหาร (2) ออกจากหม้อทอด



ทำความสะอาดและล้างหม้อปรุงอาหาร (2) และหม้อปรุงอาหาร (3) ด้วยน้ำสบู่ จากนั้นเช็ดพื้นผิวด้านนอกของเครื่องและชิ้นส่วนที่ล้างให้แห้ง

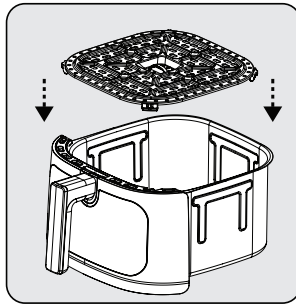

สวมตะแกรงปรุงอาหารลงในหม้อปรุงอาหารให้เข้าที่

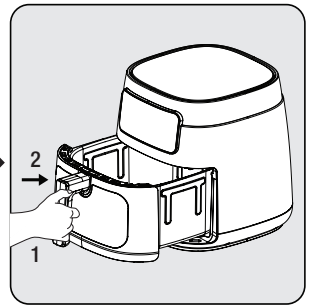


ใส่หม้อปรุงอาหารเข้ากับเครื่องหลังจากทำความสะอาดทุกชิ้นส่วนเพื่อให้หม้อทอดพร้อมใช้งาน

#### i

- สำหรับการใช้งานครั้งแรก ให้ตั้งอุณหภูมิที่อุณหภูมิสูงสุดแล้วเปิดทิ้งไว้ประมาณ 10 นาที โดยไม่ต้องใส่อาหารใดๆ
- อย่าใช้สันชักหม้อ (6) โดยไม่มีตะแกรงปรุงอาหาร (2) ใส่ไว้นั่น


## 3.2 แผงควบคุมและจอแสดงผล LED:

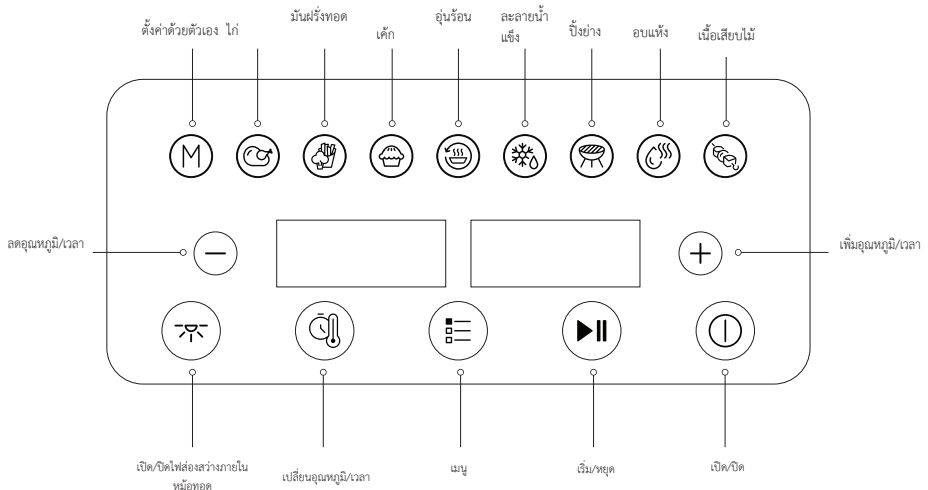


## i

- กดสัญลักษณ์ “เมนู” จนกระทั่งพบโปรแกรมที่ต้องการเลือกใช้ เมื่อพบโปรแกรมที่ต้องการแล้ว ไฟสถานะของโปรแกรมจะติดกะพริบ กดสัญลักษณ์ “เริ่ม” เพื่อเริ่มโปรแกรม
- เมื่อ “End” ปรากฏบนจอแสดงผล บ่งชี้ว่ากระบวนการปรุงอาหารเสร็จสิ้น และให้ถอดหม้อปรุงอาหารออก
- จอแสดงผลจะดับลงเมื่อนำหม้อปรุงอาหารออกจากเครื่อง เครื่องจะกลับมาทำงานอีกครั้งเมื่อใส่หม้อปรุงอาหารกลับเข้าที่

### 3.3 คำเตือนก่อนใช้งานครั้งแรก

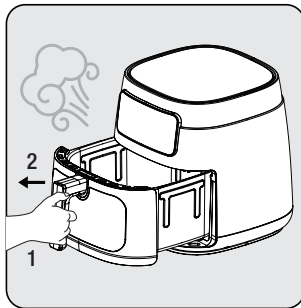

เมื่อตั้งหม้อปรุงอาหาร (3) กลับในขณะที่เครื่องใช้กำลังทำงาน อาจมีไอร้อนล็ดลอดออกมาจากช่องระบายอากาศและด้านบนของหม้อ จะต้องระวังอย่าให้ถูกไอร้อนหม้อสูงจนเกินไป

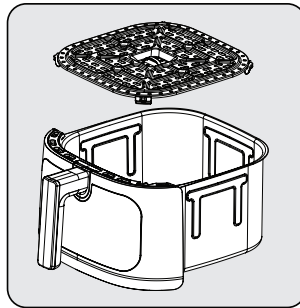

ขณะปรุงอาหารด้วยเครื่อง หม้อปรุงอาหารและตะแกรงจะมีอุณหภูมิที่สูงขึ้น ให้ระวังห้ามสัมผัสผลิตภัณฑ์โดยตรง

### 3.4 การใช้งาน


#### 3.4.1 การเลือกและเริ่มโปรแกรม




จอแสดงผลจะแสดงอุณหภูมิและเวลาที่ตั้งค่าไว้โดยอัตโนมัติตามฟังก์ชันการปรุงอาหารที่เลือก คุณสามารถเปลี่ยนอุณหภูมิและเวลาเหล่านี้ได้ตามต้องการ



กดสัญลักษณ์ปิดเครื่องหากคุณต้องการเปลี่ยนไปยังโปรแกรมอื่นหลังจากเริ่มโปรแกรมแล้ว หลังจากนั้นให้กด “เมนู” เพื่อเลือกโปรแกรมที่ต้องการ

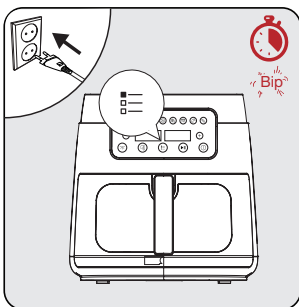

เสียบปลั๊กไฟของผลิตภัณฑ์แล้วกดที่สัญลักษณ์เปิด/ปิดหนึ่งครั้ง หน้าจอการเลือกทั้งหมดจะปรากฏขึ้น กดสัญลักษณ์ “เมนู” จนกว่าจะถึงฟังก์ชันที่ต้องการเลือก


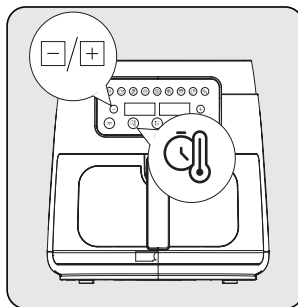


กดสัญลักษณ์เปลี่ยน “อุณหภูมิ / เวลา” อุณหภูมิจะกะพริบบนจอแสดงผล แทนที่ด้วยอุณหภูมิที่ต้องการ + หรือสัญลักษณ์ - เมื่อกดที่สัญลักษณ์ “อุณหภูมิ/เวลา” อีกครั้ง เวลาจะกะพริบบนจอแสดงผล ตั้งเวลาปรุงอาหารด้วยสัญลักษณ์ + หรือ -



กดสัญลักษณ์ “เริ่ม/หยุด” และเริ่มการทำงานของอุปกรณ์ ใส่อาหารที่คุณต้องการปรุงลงในหม้อปรุงอาหารของผลิตภัณฑ์ เมื่อคุณวางหม้อปรุงอาหารเข้าที่ เวลาที่คุณตั้งไว้จะปรากฏบนจอแสดงผลโดยไม่รวมเวลาอุ่น และเวลาจะเริ่มนับโดยอัตโนมัติ

#### 3.4.2 การตั้งค่าอุณหภูมิและเวลา

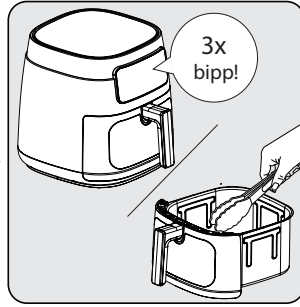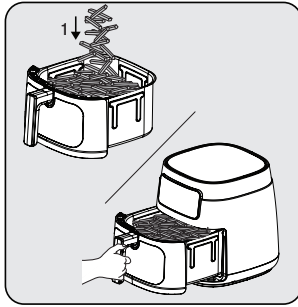

กดสัญลักษณ์ เพื่อตวงอุณหภูมิและเวลา หลังจาก  
นั้น กดสัญลักษณ์ เพื่อตวงอุณหภูมิและเวลาที่  
จำเป็น กดสัญลักษณ์ เพื่อเริ่มต้น

เมื่อถึงครึ่งหนึ่งของเวลาที่ตั้งโปรแกรมไว้ คุณสามารถ  
ถอดลิ้นชักหม้อ (3) ออกได้ และคุณสามารถพลิก  
อาหารโดยใช้เครื่องมือเสริม (ที่คีบ ฯลฯ)




- มุมของตะแกรงปรุงอาหารทำจากวัสดุซิลิโคนทนอุณหภูมิสูงที่สามารถใช้ปรุงอาหารได้ ซึ่งโดยปกติแล้วจะทำหน้าที่ป้องกันไม่ให้ผิวเคลือบหม้อเป็นรอยขีดข่วน ดังนั้น ให้แน่ใจว่าจะต้องไม่ถอดออกในระหว่างการปรุงอาหาร
- โปรแกรมวังไอน้ำร้อนที่อาจจะบายออกมาขณะตั้งลิ้นชักหม้อ (3) ออกมา และอย่าสัมผัสหม้อปรุงอาหารและตะแกรงด้วยมือเปล่า เนื่องจากมีความร้อนสูง
- เมื่อนำอาหารที่ปรุงสุกแล้วออกจากเครื่อง ให้ใช้เครื่องมือ (ที่คีบ ฯลฯ) ที่จะไม่ทำให้พื้นผิวด้านในของเครื่องเสียหาย

## 3.5. การปรุงอาหาร


- คลุกเคล้าอาหารกับน้ำมันก่อนใส่ลงในหม้อปรุงอาหาร (3)




โปรดอย่าถือหม้อปรุงอาหาร (3) และตะแกรง (2) ด้วยสิ่งของอื่นที่ไม่ใช่ที่จับของเครื่องในขณะที่ยังร้อนอยู่

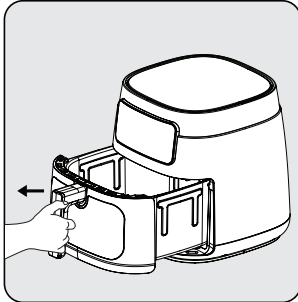


จับยึดที่จับให้แน่นเพื่อเปิดล็อกหม้อ (3) จากนั้นให้นำสันชักออกจากตัวเครื่องและวางไว้บนพื้นผิวที่เรียบและสะอาด

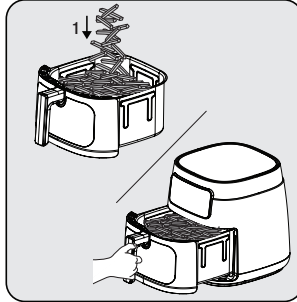


ใส่อาหารลงในหม้อปรุงอาหาร (3) จากนั้นใส่หม้อเข้ากับเครื่องและตรวจสอบให้แน่ใจว่าใส่ได้พอดี

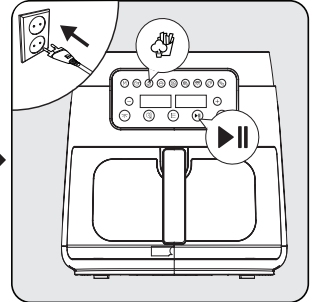


เสียบปลั๊กไฟของเครื่องและเลือกโปรแกรมหุงอาหารที่ต้องการ จากนั้น เริ่มกระบวนการปรุงอาหาร

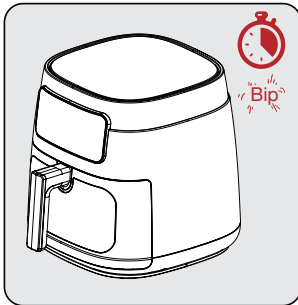


จะมีเสียงเตือนดังขึ้นเมื่อหมดเวลาที่ตั้งไว้และเครื่องจะปิดโดยอัตโนมัติ เมื่อโปรแกรมการทำอาหารเสร็จสิ้น การแจ้งเตือน "End" จะปรากฏบนจอแสดงผล ซึ่งบ่งชี้ว่าโปรแกรมปรุงอาหารเสร็จสิ้นแล้ว

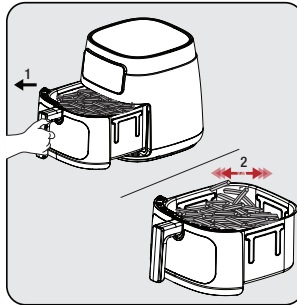

นำหม้อปรุงอาหารแบบถอดได้ (3) ออกมาและตรวจสอบอาหารว่าทอดสุกหรือยังหรือไม่ หากต้องการเวลาปรุงอาหารเพิ่มเติม คุณสามารถยืดระยะเวลาการปรุงอาหารได้อีกเล็กน้อย

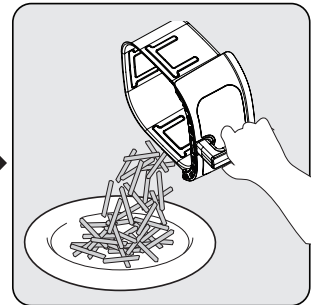

หลังจากเสร็จสิ้นกระบวนการ ให้เทส่วนผสมอาหารลงในหม้อลงในไขมันหรือจาน

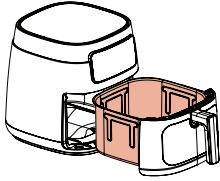

ระวังอย่าให้หม้อปรุงอาหารสัมผัสกับพื้นผิวด้านนอกของเครื่อง เนื่องจากพื้นผิวของหม้อปรุงอาหาร (3) จะมีความร้อนในระหว่างและหลังการปรุงอาหาร



- ปลดอาหารพักไว้ในหม้อประมาณ 5-10 วินาทีก่อนนำออกจากหม้อปรุงอาหาร (3).
- ใช้ที่คีบอาหารขนาดใหญ่หรืออาหารแบบอ่อนออกจากหม้อ เพื่อไม่ให้พื้นผิวภายในของเครื่องเสียหาย
- เมื่อปรุงอาหารชุดหนึ่งแล้ว ผลิตภัณฑ์จะพร้อมสำหรับใช้ปรุงอาหารต่อได้ทันที



โปรดระวัง เครื่องอาจมีความร้อนสูงในระหว่างการพลิก

ตารางต่อไปนี้จะภาพรวมเวลาในการปรุงอาหารสำหรับอาหารประเภทต่างๆ เวลาในการปรุงอาหารจะแตกต่างกันไปขึ้นอยู่กับความหนาและผิวเนื้อสัมผัสของอาหาร เวลาและปริมาณที่แนะนำเป็นค่าโดยประมาณ


ดำเนินการอุ่นร้อนล่วงหน้าจนกว่าเครื่องจะมีอุณหภูมิถึงอุณหภูมิที่แนะนำซึ่งระบุไว้ในตารางก่อนเริ่มกระบวนการปรุงอาหารเพื่อให้ได้อาหารปรุงสุกเต็มที่

| โปรแกรม         | อาหาร           | ปริมาณ                    | สัญลักษณ์                                                                         | อุณหภูมิ | เวลา (นาที)<br>ช่วงเวลา | การผสม/การเขย่า |
|-----------------|-----------------|---------------------------|-----------------------------------------------------------------------------------|----------|-------------------------|-----------------|
| การละลายน้ำแข็ง |                 |                           |  | 80 °C    | 13-17 นาที              | 2               |
| มันฝรั่งทอด     | มันฝรั่งแช่แข็ง | 500 g.                    |  | 200 °C   | 15-20 นาที              | 4               |
| ไก่             | สะโพกไก่        | 450 g.                    |  | 200 °C   | 20 นาที                 | 2               |
| ปังย่าง         | เบอร์เกอร์ม้วน  | 500 g.                    |  | 190 °C   | 15 นาที                 | 2               |
| เนื้อเสียบไม้   | ไก่เสียบไม้     | 500 g.                    |  | 180 °C   | 15-20 นาที              | 4               |
| เค้ก            | มัทพีน          | ถ้วยมัทพีนขนาดเล็ก 6 ถ้วย |  | 160 °C   | 20 นาที                 | X               |
| อบแห้ง          |                 |                           |  | 70 °C    | 60-140 นาที             | X               |


## 5.1 การทำความสะอาด




ห้ามใช้น้ำมันเบนซิน สารตัวทำลายลาย สารทำความสะอาดที่กัดกร่อน วัตถุโลหะ หรือแปรงขนแข็งใดๆ เพื่อทำความสะอาดเครื่องใช้

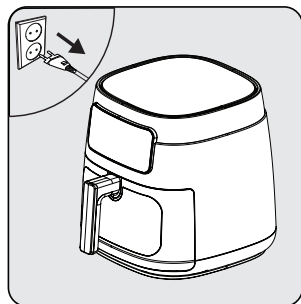


ปิดเครื่องและถอดปลั๊กไฟจากแหล่งจ่ายไฟ

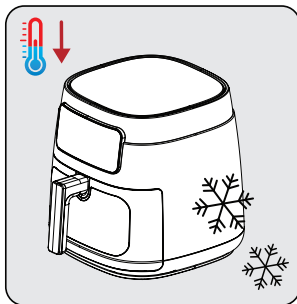


ปล่อยให้เครื่องเย็นลงสนิท

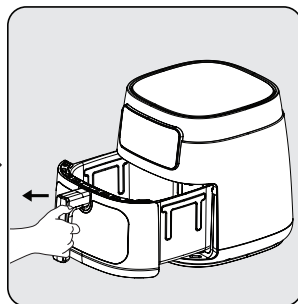


ถอดหม้อปรุงอาหาร (3) ออกจากลิ้นชัก

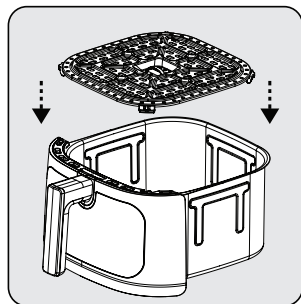

ถอดตะแกรงปรุงอาหาร (2) ออกจากหม้อโดยจับยึดที่จับแล้วดึงขึ้น

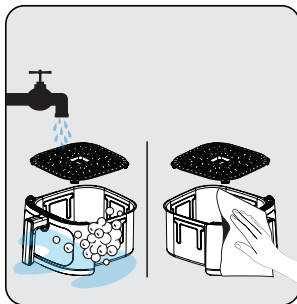

ทำความสะอาดหม้อปรุงอาหาร (3) และตะแกรงปรุงอาหาร (2) ด้วยน้ำผสมสบู่ จากนั้นเช็ดให้แห้งอย่างทั่วถึง

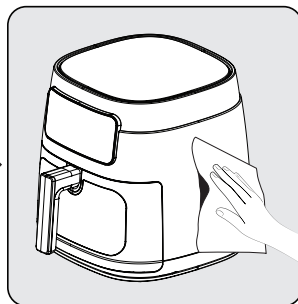

ใช้ผ้าชุบน้ำบิดหมาดเช็ดทำความสะอาดพื้นผิวด้านนอกของตู้เครื่อง เช็ดด้านนอกของเครื่องให้แห้งสนิท



ดูแลรักษาฐานของหม้อปรุงอาหาร (3) และตะแกรงปรุงอาหาร (2) ให้สะอาดอยู่เสมอ เพื่อป้องกันการสะสมของเชื้อโรคและสารแปลกปลอม

## 5.2 การจัดเก็บ

- ถ้าคุณจะไม่ใช้เครื่องใช้นี้เป็นเวลานาน โปรดจัดเก็บอย่างระมัดระวัง
- ถอดปลั๊กไฟของเครื่องและปล่อยให้เครื่องเย็นก่อนจัดเก็บ
- จัดเก็บเครื่องใช้ไว้ในที่เย็นและแห้ง
- เก็บรักษาเครื่องใช้และสายไฟให้ห่างจากการเข้าถึงของเด็ก

## 5.3 การขนย้ายและการขนส่ง

- ขนส่งเครื่องใช้ไฟฟ้าโดยใส่ในบรรจุภัณฑ์เดิมระหว่างการขนย้ายและการขนส่ง บรรจุภัณฑ์เดิมของเครื่องใช้สามารถปกป้องต่อความเสียหายทางกายภาพ
- อย่าวางวัตถุที่มีน้ำหนักมาลงบนอุปกรณ์หรือกล่องบรรจุภัณฑ์เดิม เครื่องใช้อาจเสียหายได้
- ถ้าอุปกรณ์หล่นลงพื้น อาจใช้งานไม่ได้หรือเกิดความเสียหายแบบถาวรต่ออุปกรณ์ได้

|   | ปัญหา                          | สาเหตุ                                                                       | แนวทางแก้ไขปัญหา                                                                                                                  |
|---|--------------------------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| 1 | เครื่องไม่ทำงาน                | ไม่มีกระแสจ่ายไฟ                                                             | ตรวจสอบแหล่งจ่ายไฟและตรวจสอบให้แน่ใจว่าระบบไฟฟ้าหลักจ่ายไฟปกติ                                                                    |
|   |                                | ไม่มีไฟจ่ายเข้าหรือหน้าสัมผัสที่ปลั๊กไฟไม่ดี                                 |                                                                                                                                   |
|   |                                | แรงดันไฟฟ้าของแหล่งจ่ายไฟในบ้านไม่ตรงกับแรงดันไฟฟ้าที่ระบุของเครื่องใช้ไฟฟ้า |                                                                                                                                   |
| 2 | อาหารไม่สุก/ไหม้               | เวลาการปรุงอาหารไม่ถูกต้อง                                                   | ผนวกรวมสูตรอาหารและประสบการณ์ส่วนตัวของคุณเพื่อปรับวิธีการเตรียมอาหารและเวลาที่เหมาะสม                                            |
| 3 | มีควันออกมาเมื่อใช้งานครั้งแรก | มีน้ำมันป้องกันสนิมค้างอยู่บนเครื่องทำความร้อนของเครื่องใช้ไฟฟ้านี้          | ตั้งอุณหภูมิไปที่สูงสุดและอุ่นเครื่องล่วงหน้าประมาณ 10-15 นาที เพื่อขจัดน้ำมันป้องกันสนิมบนเครื่องทำความร้อนของเครื่องใช้ไฟฟ้านี้ |
| 4 | มีกลิ่นแปลกๆ                   | มีวัตถุแปลกปลอมบนหม้อปรุงอาหาร ล้นซັคหม้อ และเครื่องทำความร้อน               | ขจัดวัสดุแปลกปลอม                                                                                                                 |
| 5 | E2                             | NTC ลัดวงจร ชิ้นส่วนชำรุด                                                    | ส่งเครื่องไปยังศูนย์บริการเพื่อซ่อมแซม                                                                                            |
| 6 | E4                             | NTC ลัดวงจร ชิ้นส่วนชำรุด                                                    |                                                                                                                                   |

ติดต่อศูนย์บริการเบ็ดเสร็จสำหรับการซ่อมแซม หากไม่สามารถแก้ไขปัญหาก็ได้หลังจากดำเนินการตามคำแนะนำข้างต้นแล้ว

Arçelik A.Ş.  
Karaağaç Caddesi No:2-6, 34445,  
Sütlüce / İSTANBUL / TÜRKİYE  
[www.beko.com](http://www.beko.com)