

Vacuum Cleaner

User Manual



VCO 20713 WV

EN | TH

01M-8864183200-4817-01

beko




Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Protection class for electric shock.



This product has been produced in environmentally friendly, modern facilities

CB

Does not contain PCB.
Made in P.R.C.

CONTENTS

1 Important safety and environmental instructions 4-5

- 1.1 General safety 4
- 1.2 Compliance with WEEE Directive and Disposing of the Waste Product 5
- 1.3 Compliance with RoHS Directive 5
- 1.4 Package information 5

2 Your vacuum cleaner 6

- 2.1 Overview 6
- 2.2 Technical data 6

3 Usage 7-8

- 3.1 Intended use7
- 3.2 Attaching/removing the hose.....7
- 3.3 Attaching/removing the telescopic tube...7
- 3.4 Attaching/removing the parquet/carpet brush.....7
- 3.5 Adjusting the parquet/carpet brush7
- 3.6 Operation7
- 3.6.1 Vacuum control.....7
- 3.7 Accessories..... 8
- 3.8 Switching off the vacuum cleaner and parking feature..... 8

4 Cleaning and care 9

- 4.1 Emptying the dust container..... 9
- 4.2 Cleaning the filters..... 9
- 4.2.1 Motor protection filter..... 9
- 4.2.2 HEPA filter..... 9
- 4.3 Storage..... 9
- 4.4 Handling and transportation 9

1 Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international security standards.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use it if the power cable or the appliance itself is damaged. Contact an authorized service.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- The mains supply of the appliance must be secured with a minimum 16 A fuse.
- Do not use the appliance with an extension cord.
- In order to prevent the power cable from getting damaged, make sure that it doesn't get stuck, twisted or rub against sharp surfaces.
- Do not touch the appliance or its plug when it is plugged if your hands are damp or wet.
- Do not pull the power cable when unplugging the appliance.
- Do not vacuum flammable materials and when vacuuming cigarette ashes make sure that it got cold.
- Do not vacuum water or other liquid materials.
- Protect the appliance from rain, humidity and heat sources.

1 Important safety and environmental instructions

- Never use the appliance in or near to combustible or inflammable places and materials.
- Unplug the appliance before cleaning and maintenance.
- Do not dip the appliance or its cable in water to clean it.
- Check the hose of the appliance regularly. Do not use if it is damaged and contact an authorized service.
- Do not attempt to dismantle the appliance.
- Only use the original parts or parts recommended by the manufacturer.
- Do not use the appliance without filters; otherwise it can get damaged.
- When vacuuming the stairs, the appliance should be located below the user.
- If your store the package material, keep it out of the reach of children.

1.2 Compliance with WEEE Directive and Disposing of the Waste Product



This product complies with EU WEEE Directive (19/2012/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Your vacuum cleaner

2.1 Overview



1. Handle
2. Vacuum control
3. Telescopic tube
4. On/Off button
5. Telescopic tube adjustment latch
6. Parquet/carpet brush
7. Suction nozzle
8. Hose cap
9. Dust container
10. Dust container removal latch
11. Carriage handle
12. Cord winding button
13. Hose

2.2 Technical data

Supply voltage	: 220-240V~ 50-60 Hz
Power	: 1400W
Operating radius	: 7 m
Suction power	: 250 W
Filter	: HEPA

Rights to make technical and design changes are reserved.

The values which are declared in the markings affixed on your appliance or other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Usage

3.1 Intended use

The appliance has been designed for household use and is not suitable for industrial use.

3.2 Attaching/removing the hose

1. To attach the hose (13), push the hose cap (8) to match it with the slot (a click sound will be heard).
- Projecting parts on the hose cap should be aligned correspondingly.
2. To remove the hose (13), press the unlocking buttons on the sides of the hose cap (8) and pull the hose.

3.3 Attaching/removing the telescopic tube

1. Attach the telescopic tube (3) to the handle (1).
2. Pull the telescopic tube (3) from the handle (1) to remove it.
3. To adjust the length of the telescopic tube, push the telescopic tube adjustment latch (4) in the arrow direction and pull it from the end of it.




3.4 Attaching/removing the parquet/carpet brush

1. Attach the telescopic tube (3) to the parquet/carpet brush (6).
2. Pull the telescopic tube (3) from the parquet/carpet brush (6) to remove it.


3.5 Adjusting the parquet/carpet brush

By pressing the adjustment latch located on the parquet carpet brush (6);

- Use "▬▬▬▬" position for hard floors and parquet.

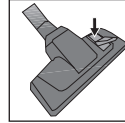

- Use "▬" position for rugs and carpets.

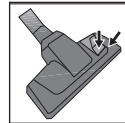

3.6 Operation

1. Plug in the appliance after pulling the power plug located at the back of the appliance.
2. Press the on/off button (4) to switch on your appliance.


3.6.1 Vacuum control

You can lower the suction power of the parquet carpet brush (6) by pulling backward the vacuum adjustment control (2) located on the handle (1).

3 Usage


3.7 Accessories

Crevice tool

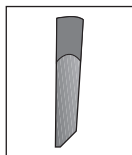

Suitable for cleaning surfaces difficult to clean, such as areas under sofas and furniture.

Furniture Brush

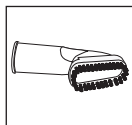

Suitable for cleaning objects such as curtains, floorings, delicate fragile items, couches, sofas etc.



WARNING: Do not perform cleaning tasks using the end part of the handle (1).

3.8 Switching off the vacuum cleaner and parking feature

1. Switch off the appliance with the on/off button (4) and unplug it.
2. Press the cord winding button (12) to rewind the power cord.

Horizontal parking feature

Insert the hook of the parquet/carpet brush (6) into the parking groove located at the rear section of the appliance.

4 Cleaning and care

Switch off and unplug the appliance before cleaning it.



WARNING: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

4.1 Emptying the dust container

1. Pull the dust container removal latch (10) towards yourself to remove the dust container (9).
2. Press the dust container release button located beneath the dust container to open the cover and empty the container.
3. When you have emptied dust, close the dust container cover (9); a click sound will be heard.
4. Insert the dust container (9) back into its location.

4.2 Cleaning the filters



WARNING: Do not use appliances producing hot air such as hair dryer or heater to dry the filters.



WARNING: Do not install the filters without completely drying them; otherwise, smell of moisture may occur during use, water can leak from the back of the appliance or the filters may get damaged.



WARNING: Attach the filters into their places after they have dried.

4.2.1 Motor protection filter

These filters are located on the rear side of the dust container (9).

5. Pull the dust container removal latch (10) towards yourself to remove the dust container (9).

6. Remove the HEPA filter and motor protection filter found at the back of the dust container (9).
7. After washing the sponge protection filter under running water, wring it out slightly and leave it to dry (for 24 hours minimum).
8. Shake off the HEPA inlet filter to eliminate the dusts on it. After that, you can wash it by holding its clean side under running cool water.
9. If you wash the HEPA filter, dry it at room temperature (for 24 hours minimum). Do not use it before ensuring that it is completely dry.

4.2.2 HEPA filter

HEPA outlet filter is located on the rear side of the appliance.

1. Remove the HEPA filter by pulling it from its handle.
2. Shake off the HEPA outlet filter to eliminate the dusts on it. After that, you can wash it by holding its clean side under running cool water.
3. If you wash the HEPA filter, dry it at room temperature (for 24 hours minimum). Do not use it before ensuring that it is completely dry.

4.3 Storage

If you do not intend to use the appliance for a long time, store it carefully.

- Unplug the appliance.
- Keep the appliance out of the reach of children.

4.4 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or on the packaging. The appliance may get damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

โปรดอ่านคู่มือผู้ใช้เล่มนี้ก่อน!

เรียน ลูกค้ำผู้มีอุปการะคุณ,

ขอขอบคุณที่ท่านได้ตัดสินใจสั่งซื้อผลิตภัณฑ์เบโค เราหวังว่าท่านจะได้รับผลลัพธ์ที่ยอดเยี่ยมที่สุดจากผลิตภัณฑ์ของท่าน ซึ่งถูกผลิตด้วยคุณภาพสูงและเทคโนโลยีที่ล้ำสมัย ดังนั้นโปรดอ่านคู่มือการใช้งานและเอกสารอื่นๆที่ให้มาทั้งหมดอย่างละเอียดก่อนใช้งานผลิตภัณฑ์ และเก็บคู่มือนี้ไว้เพื่ออ้างอิงในอนาคต และถ้าหากท่านมอบผลิตภัณฑ์นี้ให้กับบุคคลอื่น กรุณามอบคู่มือการใช้งานนี้ด้วย แนะนำให้ปฏิบัติตามคำแนะนำและข้อแนะนำทั้งหมดในคู่มือการใช้งานนี้

คำอธิบายสัญลักษณ์ต่างๆ

สัญลักษณ์ต่อไปนี้ จะถูกนำมาใช้ในคู่มือการใช้งานตลอดทั้งเล่ม:

	ข้อมูลสำคัญหรือคำแนะนำที่เป็นประโยชน์เกี่ยวกับการใช้งาน
--	---

	การเตือนสำหรับสถานการณ์อันตรายที่เกี่ยวข้องกับชีวิตและทรัพย์สิน
--	---

	ระดับการป้องกันสำหรับไฟฟ้าช็อต
--	--------------------------------



ผลิตภัณฑ์นี้ได้รับการผลิตในโรงงานที่เป็นมิตรกับสิ่งแวดล้อมและทันสมัย

CB

ปราศจากสาร PCB

ผลิตใน P.R.C.

1 ความปลอดภัยที่สำคัญและคำแนะนำ	
ด้านสิ่งแวดล้อม	12-13
1.1 ความปลอดภัยทั่วไป	12
1.2 การปฏิบัติตามข้อกำหนดการคัดแยกขยะทางไฟฟ้าและอิเล็กทรอนิกส์ (WEEE) และการกำจัดผลิตภัณฑ์ที่ไม่ใช้แล้ว	13
1.3 การปฏิบัติตามข้อกำหนด RoHS	13
1.4 ข้อมูลด้านบรรจุภัณฑ์	13
2 เครื่องดูดฝุ่นของคุณ	14
2.1 ภาพรวม	14
2.2 ข้อมูลทางเทคนิค	14
3 การใช้งาน	15-16
3.1 การใช้งานที่กำหนดไว้	15
3.2 การประกอบ/การถอดสายดูดฝุ่น	15
3.3 การประกอบ/การถอดท่อแบบยืดได้	15
3.4 การประกอบ/การถอดแตรงสำหรับพื้นปาร์เก้/พรม	15
3.5 การปรับเปลี่ยนแตรงสำหรับพื้นปาร์เก้/พรม	15
3.6 การใช้งาน	15
3.6.1 การควบคุมพลังดูด	15
3.7 อุปกรณ์เสริม	16
3.8 การปิดเครื่องดูดฝุ่นและ คุณลักษณะสำหรับวางเก็บเครื่อง	16
4 การทำความสะอาดและการบำรุงรักษา	17
4.1 การเทกล่องเก็บฝุ่นให้ว่างเปล่า	17
4.2 การล้างแผ่นกรองฝุ่น	17
4.2.1 แผ่นกรองป้องกันมอเตอร์	17
4.2.2 แผ่น กรองชนิด HEPA	17
4.3 การจัดเก็บ	17
4.4 การถือและขนย้ายเครื่องดูดฝุ่น	17

1 ความปลอดภัยที่สำคัญและคำแนะนำด้านสิ่งแวดล้อม

ในส่วนนี้ประกอบด้วยคำแนะนำด้านความปลอดภัยที่จะช่วยป้องกันจากความเสียหายต่อผู้ใช้งานที่อาจได้รับบาดเจ็บหรือเกิดความเสียหายต่อทรัพย์สินต่างๆ

การไม่ปฏิบัติตามคำแนะนำเหล่านี้จะส่งผลให้การรับประกันสินค้าเป็นโมฆะ

1.1 ความปลอดภัยทั่วไป

- เครื่องใช้ไฟฟ้านี้สอดคล้องกับมาตรฐานความปลอดภัยสากล
- เด็กอายุตั้งแต่ 8 ปีขึ้นไปสามารถใช้เครื่องใช้ไฟฟ้านี้ได้ รวมถึงผู้ที่มีความสามารถบกพร่องทางกายภาพ, ทางทางการรับรู้เข้าใจหรือทางจิต หรือผู้ที่ขาดประสบการณ์หรือ ไม่มีความรู้ หากพวกเขาได้รับการ ควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าอย่าง ปลอดภัยและเข้าใจถึงอันตราย อาจ เกิดขึ้น เด็กไม่ควรเล่นเครื่องใช้ไฟฟ้า ไม่ควรให้เด็กทำความสะอาด และบำรุงรักษาเครื่องใช้โดยไม่มี การ ควบคุมดูแล
- อย่าใช้เครื่องใช้ไฟฟ้าหากพบสายไฟหรือตัวเครื่องเสียหาย ให้ติดต่อผู้ให้บริการที่ได้รับการรับรองจาก Beko
- แหล่งจ่ายไฟหลักของคุณควรสอดคล้องกับข้อมูลในแผ่นป้ายระบุอัตราไฟฟ้าของเครื่อง

- แหล่งจ่ายไฟหลักของเครื่องใช้นี้จะ ต้องติดตั้งด้วยฟิวส์ขนาด 16 A
- ห้ามใช้งานเครื่องใช้กับสายไฟต่อพ่วง
- เพื่อหลีกเลี่ยงความเสียหายต่อสายไฟ ตรวจสอบให้แน่ใจว่าสายไฟไม่ติดพันกัน, บิดงอ หรือถูกไปมากับพื้นผิวที่คม
- อย่าสัมผัสเครื่องใช้หรือปลั๊กไฟขณะเสียบอยู่หากมือของคุณเปียกน้ำ
- ห้ามดึงที่สายไฟเมื่อกดปลั๊กไฟออก
- อย่าใช้เครื่องดูดฝุ่น ดูดสิ่งที่ติดไฟได้ และเมื่อจะดูดฝุ่นที่เป็นเก้าอี้หรือ ให้แน่ใจว่าเก้าอี้หรือยืนลงแล้ว
- อย่าดูดน้ำหรือวัตถุของเหลวใดๆ
- ป้องกันเครื่องใช้จากฝน ความชื้น และแหล่งให้ความร้อน
- ห้ามใช้เครื่องใช้ไฟฟ้าในบริเวณหรือใกล้แหล่งที่สามารถเกิดไฟลุกได้หรือเป็นบริเวณหรือวัตถุไวไฟ
- ถอดปลั๊กเครื่องใช้ ก่อนทำความสะอาดและการบำรุงรักษา
- อย่าจุ่มเครื่องใช้หรือสายไฟลงในน้ำ เพื่อทำความสะอาด
- ตรวจสอบสายดูดฝุ่นของเครื่องใช้เป็นประจำ อย่าใช้งานในกรณีเครื่องใช้ชำรุด และติดต่อผู้ให้บริการที่ได้รับการรับรองจาก Beko

1 คำแนะนำด้านความปลอดภัยและสิ่งแวดล้อมที่สำคัญ

- อย่าพยายามรื้อถอดเครื่อง
- ให้ใช้ชิ้นส่วนดั้งเดิมหรือชิ้นส่วนที่ได้รับการแนะนำ จาก Beko เท่านั้น
- อย่าใช้เครื่องโดยไม่มีแผ่นกรองฝุ่น มิฉะนั้นเครื่องอาจเสียหายได้
- เมื่อดูดฝุ่นที่ขุ่นบนโต๊ะด้วยเครื่องดูดฝุ่นควรวางเครื่องไว้ในตำแหน่งที่ต่ำกว่าผู้ใช้งาน
- หากคุณต้องการเก็บกล่องบรรจุภัณฑ์ กรุณาเก็บให้พ้นมือเด็ก

1.2 การปฏิบัติตามข้อกำหนดการคัดแยกขยะทางไฟฟ้าและอิเล็กทรอนิกส์ (WEEE) และการกำจัดผลิตภัณฑ์ที่ไม่ใช้แล้ว



ผลิตภัณฑ์ที่ไม่มีส่วนประกอบของวัสดุที่เป็นอันตรายและเป็นสิ่งต้องห้ามที่ระบุไว้ “กฎระเบียบว่าด้วยการกำจัดของเสียและอุปกรณ์อิเล็กทรอนิกส์” EU WEEE (2012/19/EU) ที่ออกโดยกระทรวง สิ่งแวดล้อม อุปกรณ์นี้สอดคล้องกับระเบียบ WEEE ผลิตภัณฑ์ที่ได้รับการผลิตด้วยชิ้นส่วนและวัสดุที่มีคุณภาพสูง ซึ่งสามารถใช้งานได้และเหมาะสำหรับการรีไซเคิล ดังนั้นอย่าทิ้งผลิตภัณฑ์ ด้วยวิธีการเหมือนขยะตามปกติเมื่อหมดอายุการใช้งาน ให้นำผลิตภัณฑ์ของเสียไปที่จุดเก็บรวบรวม ขยะรีไซเคิลสำหรับอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ สอบถามหน่วยงานท้องถิ่นในพื้นที่ของคุณสำหรับจุด รวบรวมเหล่านี้ มีส่วนร่วมในการรักษาสิ่งแวดล้อม และแหล่งธรรมชาติ โดยนำผลิตภัณฑ์ที่ใช้ไปยังจุด รีไซเคิล

1.3 การปฏิบัติตามข้อกำหนด RoHS

ผลิตภัณฑ์ที่คุณได้ซื้อมีความสอดคล้องตามข้อกำหนด RoHS ของสหภาพยุโรป (2011/65/EU) ผลิตภัณฑ์ที่ไม่มีวัสดุที่เป็นอันตรายผสมอยู่ หรือ เจือปนที่ระบุไว้ในข้อกำหนดดังกล่าว

1.4 ข้อมูลด้านบรรจุภัณฑ์



วัสดุบรรจุภัณฑ์ของผลิตภัณฑ์ ได้ถูกผลิตขึ้นจากวัสดุรีไซเคิล ตามกฎระเบียบด้าน สิ่งแวดล้อมแห่งชาติ ห้ามทิ้งวัสดุบรรจุภัณฑ์พร้อมกับขยะในครัวเรือนหรือขยะอื่น ให้นำวัสดุบรรจุภัณฑ์ไปยังจุดรวบรวมขยะที่เป็นวัสดุบรรจุภัณฑ์ ที่กำหนดให้โดยหน่วยงานท้องถิ่น

2 เครื่องดูดฝุ่นของคุณ

2.1 ภาพรวม



1. ด้ามจับ
2. ปุ่มเลื่อนควบคุมแรงดูด
3. ท่อดูดที่เลื่อนเข้าออกได้
4. ปุ่ม เปิด/ปิด
5. สลักปรับความยาวท่อดูดที่เลื่อนเข้าออกได้
6. หัวแปรงดูดฝุ่นพื้นพาร์เก้/พรมประสิทธิภาพสูง
7. หัวดูด
8. ปุ่มปิดฝาครอบฝุ่น
9. ถังเก็บฝุ่น
10. ปุ่มปลดล็อกฝาครอบเก็บฝุ่น
11. ที่จับตัวเครื่องสำหรับเคลื่อนย้าย
12. ปุ่มม้วนเก็บสายไฟ
13. สายดูด

2.2 ข้อมูลทางเทคนิค

แรงดันไฟฟ้าจ่ายเข้า	: 220-240 โวลต์~ 50-60 เฮิร์ตซ์
กำลังไฟ	: 1400 วัตต์
รัศมีการทำงาน	: 7 ม.
พลังดูด	: 250 วัตต์
ตัวกรอง	: HEPA

ขอสงวนสิทธิ์ในการเปลี่ยนแปลงทางด้านเทคนิคและ การออกแบ

ค่าที่แสดงไว้ในแผ่นแสดงที่ติดไว้บนเครื่องใช้ของคุณหรือเอกสารที่พิมพ์ไว้อื่นๆ ที่ให้มาพร้อมกับเครื่องใช้นี้แสดงค่าซึ่งได้มาจากการทดลองในห้องทดสอบตามมาตรฐานที่เกี่ยวข้อง ค่าเหล่านี้อาจแปรผันโดยขึ้นอยู่กับการใช้งานเครื่องใช้นี้และเงื่อนไขแวดล้อม

3.1 การใช้งานที่กำหนดไว้

เครื่องใช้นี้ออกแบบมาสำหรับการใช้งานในครัวเรือน และไม่เหมาะสำหรับการใช้งานทางอุตสาหกรรม

3.2 การประกอบ/การถอดสายดูดฝุ่น

1. ในการต่อสายดูด (13) ให้ดันปลอกสวมสายดูด (8) ไปตามทิศทางลูกศรจนตรงพอดีกับตัวเครื่อง (คุณจะได้ยินเสียงคลิก)
- ตำแหน่งส่วนที่ยื่นออกมาบนปลอกสวมสายดูดให้ตรงกัน
2. ในการถอดสายดูดออก (13) ให้กดปุ่มปลดล็อคที่ ด้านข้างของปลอกสวมสายดูด (8) แล้วดึงสาย ดูดออก

3.3 การประกอบ/การถอดท่อแบบยืดได้

1. ต่อก่อดูดที่เลื่อนเข้าออกได้ (3) เข้ากับด้ามจับ (1)
2. ดึงท่อดูดที่เลื่อนเข้าออกได้ (3) ออกจากด้ามจับ (1) เพื่อถอดออก
3. คุณสามารถขยายหรือย่นท่อดูด (3) ได้โดยเลื่อน สลักโยกปรับความยาวท่อดูดที่เลื่อนเข้าออก(4) กลับไปกลับ มาได้




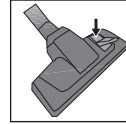
3.4 การประกอบ/การถอดแปรง สำหรับพื้นพาร์เก้/พรม


1. ต่อก่อดูดที่เลื่อนเข้าออก (3) เข้ากับหัวแปรงดูดฝุ่นพื้นพาร์เก้/พรม (6) ตามทิศทางลูกศร
2. คุณสามารถถอดท่อดูดที่เลื่อนเข้าออก (3) ออกจากหัวแปรงดูดฝุ่นพื้นพาร์เก้/พรม (6) โดยการ ดึงออก


3.5 การปรับเปลี่ยนแปรงสำหรับพื้นพาร์เก้/พรม

ให้ปฏิบัติตามข้อแนะนำต่อไปนี้สำหรับสลักโยกปรับตำแหน่งแปรงดูดฝุ่น ที่อยู่บนหัวแปรงดูดฝุ่นพื้น พาร์เก้/พรม (6);

- ใช้ตำแหน่ง "  " สำหรับดูดฝุ่นบนพื้นเนื้อแข็งและพาร์เก้; ขยายขนแปรง ให้ไหลออกก่อนดูดฝุ่น



- ใช้ตำแหน่ง "  " สำหรับดูดฝุ่นบนพื้นพรมและแผ่นพรม; หดขนแปรงลง ก่อนดูดฝุ่น

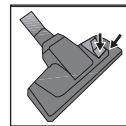

3.6 การใช้งาน


1. เสียบปลั๊กไฟหลังจากดึงปลั๊กไฟที่ด้านหลังเครื่อง ออกมา
2. กดปุ่ม เปิด/ปิด (4) เพื่อเปิดเปิดเครื่อง

3.6.1 การควบคุมพลังดูด

คุณสามารถลดพลังดูดของแปรงสำหรับพื้นพาร์เก้/พรม ได้ (6) โดยดึงปุ่มเลื่อนควบคุมแรงดูดไปด้านหลัง (2) บริเวณด้ามจับ (1).

3.7 อุปกรณ์เสริม

หัวดูดฝุ่นปากแบน

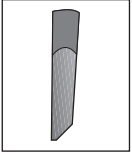

เหมาะสำหรับการทำความสะอาดพื้นผิวที่
ยากแก่การทำความสะอาด เช่น พื้นที่ได้
โซฟาและเครื่องเฟอร์นิเจอร์

หัวแปรงปิดฝุ่น



เหมาะสำหรับการทำความสะอาดวัตถุ
ต่างๆ เช่น ผ้าม่าน วัสดุปูพื้น แก้ว
ยาว โซฟา และวัตถุที่ต้องทะนุถนอมและ
แตกหักง่าย เป็นต้น



คำเตือน: อย่าดูดฝุ่นโดยใช้ส่วนปลาย
ด้ามจับ (1)

3.8 การปิดเครื่องดูดฝุ่นและ คุณลักษณะสำหรับวางเก็บเครื่อง

1. ปิดเครื่องโดยใช้ปุ่มเปิด/ปิด (4) แล้วถอดปลั๊ก ออก
2. กดปุ่มม้วนเก็บสายไฟ (12) เพื่อเก็บสายไฟ

คุณสมบัติการวางเก็บเครื่องแนวนอน

ใส่ตะขอพักเครื่องของแปรงสำหรับพื้นพาร์เก้/พรม (6) ใน
ช่องพักเครื่อง บริเวณด้านหลังของเครื่องใช้

ปิดสวิตช์และถอดปลั๊กเครื่องใช้ก่อนทำความสะอาด



คำเตือน: ห้ามใช้น้ำมันเบนซิน ตัวทำละลาย สารทำความสะอาดที่กัดกร่อน วัตถุโลหะ หรือแปรงขนแข็งเพื่อทำความสะอาดเครื่องใช้

4.1 การเทกลองเก็บฝุ่นให้ว่างเปล่า

1. กดปุ่มปลดล๊อคกล่องเก็บฝุ่น (10) เพื่อถอดกล่อง เก็บฝุ่น (9) และให้กล่องเก็บฝุ่นในทิศทางเข้าหาตัวเอง โดยให้ถือกล่องเก็บฝุ่นบริเวณปุ่มปลดล๊อคกล่องเก็บฝุ่น
2. เปิดฝาของกล่องเก็บฝุ่น (9) แล้วทิ้งฝุ่นให้หมด
3. เมื่อคุณได้นำฝุ่นออกหมดแล้ว ให้ปิดฝากล่องเก็บ ฝุ่น (9) จะได้ยินเสียงคลิก
4. สอดกล่องเก็บฝุ่น (9) เข้าไปในตำแหน่งเดิมโดย ถือกล่องเก็บฝุ่นจากด้านบน

4.2 การล้างแผ่นกรองฝุ่น



คำเตือน: อย่าใช้เครื่องดูดฝุ่นเป่าลมร้อน เช่น ใช้เป็นเครื่องเป่าผมหรือให้ ความร้อนเพื่อให้แผ่นกรองแห้ง



คำเตือน: อย่าติดตั้งแผ่นกรองโดยไม่ได้ให้แห้งสนิทก่อน มิฉะนั้นอาจเกิดกลิ่น อับชื้นขณะใช้งานได้ และน้ำอาจจะซึมจาก หลังเครื่องหรือแผ่นกรองอาจได้รับความเสียหายได้



คำเตือน: ประกอบแผ่นกรองในจุดที่ถูกต้องเมื่อแผ่นกรองแห้งแล้ว

4.2.1 แผ่นกรองป้องกันมอเตอร์

แผ่นกรองนี้วางอยู่ใกล้กับกล่องเก็บฝุ่น (9)

5. ดึงปุ่มปลดล๊อคกล่องเก็บฝุ่น (10) เข้าหาตัวเองเพื่อถอดกล่องเก็บฝุ่น (9)
6. ถอดตัวกรอง HEPA และตัวกรองป้องกันมอเตอร์ บริเวณด้านหลังของกล่องเก็บฝุ่น (12)
7. หลังจากล้างแผ่นกรองฟองน้ำป้องกันมอเตอร์ โดยใช้น้ำไหลผ่านแล้ว, ให้บีบแผ่นกรองเล็กน้อย เพื่อให้ น้ำออกบางส่วนแล้วปล่อยให้แห้ง (เป็น เวลาอย่างน้อย 24 ชั่วโมง)

8. เขย่าแผ่นกรองฝุ่นเข้าชนิด HEPA เพื่อขจัดฝุ่นบน แผ่นกรอง หลังจากนั้น คุณสามารถล้างแผ่นกรอง โดยจับด้านที่สะอาดโดยใช้น้ำไหลผ่าน

9. หากคุณล้างแผ่นกรองชนิด HEPA, ปล่อยให้แห้ง ที่อุณหภูมิห้อง (เป็นเวลาอย่างน้อย 24 ชั่วโมง) อย่าใช้แผ่นกรองจนกว่าจะมั่นใจว่าแผ่นกรองแห้งสนิทแล้ว

4.2.2 แผ่น กรองชนิด HEPA

แผ่นกรองฝุ่นออกชนิด HEPA วางอยู่ส่วนด้านท้าย ของเครื่องดูดฝุ่น

1. ถอดตัวกรอง HEPA ออกโดยดึงออกจากตัวเครื่อง
2. เขย่าแผ่นกรองฝุ่นเข้าชนิด HEPA เพื่อขจัดฝุ่นบน แผ่นกรอง หลังจากนั้น คุณสามารถล้างแผ่นกรอง โดยจับด้านที่สะอาดโดยใช้น้ำไหลผ่าน
3. หากคุณล้างแผ่นกรองชนิด HEPA, ปล่อยให้แห้ง ที่อุณหภูมิห้อง (เป็นเวลาอย่างน้อย 24 ชั่วโมง) อย่าใช้แผ่นกรองจนกว่าจะมั่นใจว่าแผ่นกรองแห้งสนิทแล้ว

4.3 การจัดเก็บ

หากคุณไม่ต้องการใช้เครื่องเป็นระยะเวลานาน ให้เก็บเครื่องดูดฝุ่นอย่างระมัดระวัง

- ถอดปลั๊กเครื่องดูดฝุ่น
- เก็บเครื่องดูดฝุ่นให้พ้นมือเด็ก

4.4 การถือและขนย้ายเครื่องดูดฝุ่น

- ในระหว่างการจัดการและการเคลื่อนย้าย ให้ใส่เครื่องใช้ไว้ในกล่องบรรจุภัณฑ์ กล่องบรรจุภัณฑ์จะปกป้องเครื่องใช้จากความเสียหายทางกายภาพได้
- ห้ามวางวัสดุมีน้ำหนักบนเครื่องใช้หรือกล่องบรรจุภัณฑ์เครื่องใช้ อาจชำรุดได้
- การรื้อวงหล่นของเครื่องอาจทำให้เครื่องไม่ทำงาน หรือทำให้เกิดความเสียหายถาวรได้

